

A212

**Wall Mounted Speaker
Quick Installation Guide**



① Package Contents



A212 Wall Mounted Speaker



Connector



Quick Installation Guide



Mounting Template





Screw and tool

② Physical specification


Size Description	184.85 X 276.74 X 124.77mm
------------------	----------------------------

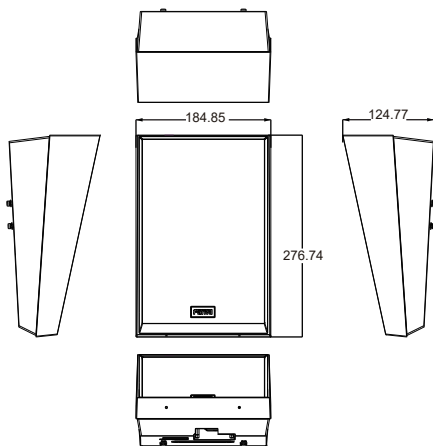


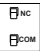


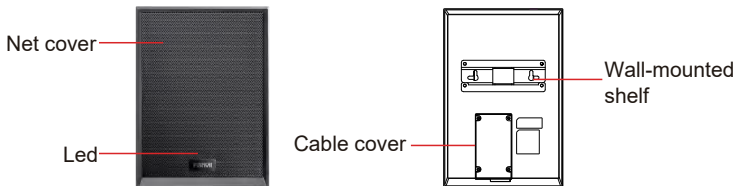1) Wall mounted speaker



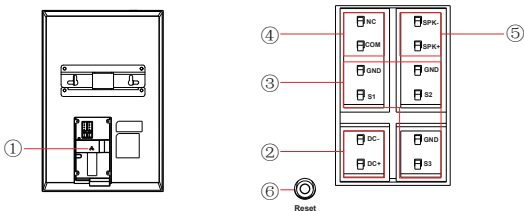


2) Interface description



Serial number	Description	Wiring port description
①	Ethernet interface: standard RJ45 interface, 10/100M adaptive, support PoE powered, it is recommended to use CAT5 or CAT5E network cable.	
②	Power interface: DC 24V/2A input.	
③	3 set of short-circuit input interface: input devices for connecting switches, infrared sensor, door sensor, vibration sensors etc.	
④	1 set of short-circuit output interface: corresponding to the short-circuit input interface, login device web page settings, can be connected to electric locks, etc.	
⑤	1 set of SPK interface: supports connecting 8Ω15W passive speakers. (Standard DC24V/2A power supply support, do not use POE power supply!)	
⑥	Reset button , supports the following functions: Report the IP address: Long press reset button for 3 seconds, and when the speaker beeps rapidly, press reset button again quickly, the beeps stop ,the speaker will report the IP address by itself. Switch IP address acquisition mode: Long press reset button for 3 seconds, and when the speaker beeps rapidly, press reset button three times, after the success of the system automatically broadcast the current IP address. Factory reset: Long press reset button for 10 seconds, the device will be restored to factory settings.	

3) External device connection diagram

Model 1: DC Power

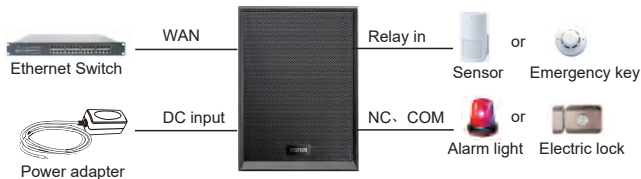

Model 2: PoE




Risk warnings and precautions

- Do not connect an external passive speaker with PoE power supply!
- If use the PoE switch (IEEE 802.3af, class 3), the device can not work fully, and the speaker sound becomes smaller


3 Installation Diagram(two installation methods)

1) Wall-mounted installation


Drill holes on the wall to be installed, the hole spacing is 80mm. And then drive the rubber plug into the wall, and use the two screws provided with the equipment to drive the hole into the wall.

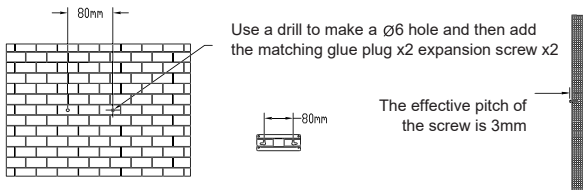

B. Open the cable cover of the speaker, connect the network cable, if you need to connect other input and output devices, you can access the corresponding interface of the speaker, lead out the cable from the bottom, cover the cable cover.

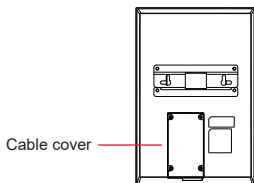

 
C. Align the hole of the wall hanging bracket at the back of the speaker with two screws, and clamp it to fix it without shaking.




D. Power on the device, if it works normally, the installation is complete.

2) Universal bracket installation(option)


A. Drill holes on the wall to be installed, the hole spacing is 60mm. And then drive the rubber plug into the wall, and use the two screws provided with the equipment to drive the hole into the wall.

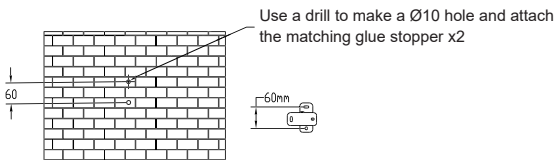


B. Install the universal bracket on the wall.

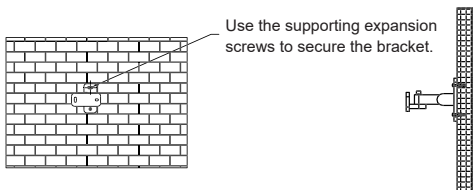

C. Open the cable cover of the speaker, connect the network cable, if you need to connect other input and output devices, you can access the corresponding interface of the speaker, lead out the cable from the bottom, cover the cable cover.

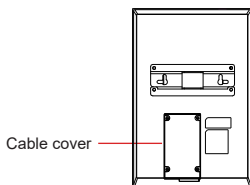

D. Use the hex wrench to lock the speaker on the universal bracket.

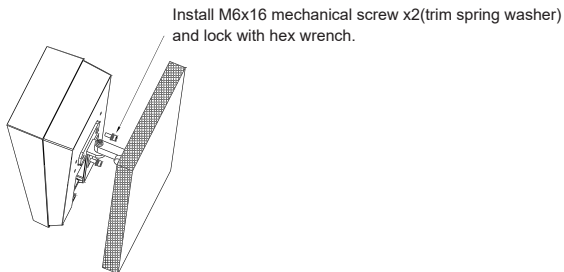

E. Power on the device, if it works normally, the installation is complete.

4 Searching IP address


The default WAN mode is DHCP, Querying the IP address with the Device Manager:

MAC	IP Address	Model	Version	Version Status	Description
00a8:59:efe0:e1	172.18.26.15	V67	2.6.6.261		--
0c:38:3e:59:bccb	172.18.26.8	W710H	T2.17.1		--
0c:38:3e:54:60:2b	172.18.26.5	i56	T0.0.17		i56
0c:38:3e:5c0e0f	172.18.26.12	W710D	1.0.0		--
0c:38:3e:18:59:57	172.18.26.3	A212	T2.12.45.7.6		--
0c:38:3e:5fdcd7	172.18.26.6	W710D	1.0.0		--
08:01:82:03:05:05	172.18.26.2	W710H	T2.14.8		--
0c:38:3e:1bccc5	172.18.26.8	X4	2.13.0.7372		--
00d8:4a:03:dcfb	172.18.26.7	FH-501	T2.12.44.12.2		FH-501
00a8:59:fd:52:0e	172.18.26.10	IP Phone	2.6.10.220		--
0c:38:3e:48:bf:e6	192.168.0.110	H3W	2.4.4.1		--
0c:38:3e:16:8e:5c	172.18.200.58	H5W	2.4.4.1		--
0c:38:3e:51:81:1c	172.18.200.192	X305	2.12.1.1		--
0c:38:3e:15:e8:f9	172.18.201.47	IP Phone	X1W_Fix_Wi6_Capture		--

5 Wall Mounted Speaker setting

Step 1: Log in the web setting page of ceiling speaker
Input IP address of indoor station (e.g. http:// 172.18.26.3) into the address bar of PC's web browser.

The default user name and password are both admin.

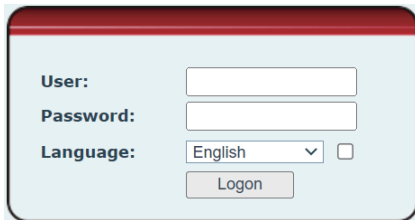


The screenshot shows a login form with the following fields and controls:

- User:** A text input field.
- Password:** A text input field.
- Language:** A dropdown menu currently set to "English" and a checkbox to its right.
- Login:** A button below the language selection.

Step 2: Add the SIP account

Set SIP server address, port, user name, password and SIP user with assigned SIP account parameters. Select "Activate", and then click Apply to save this setting.

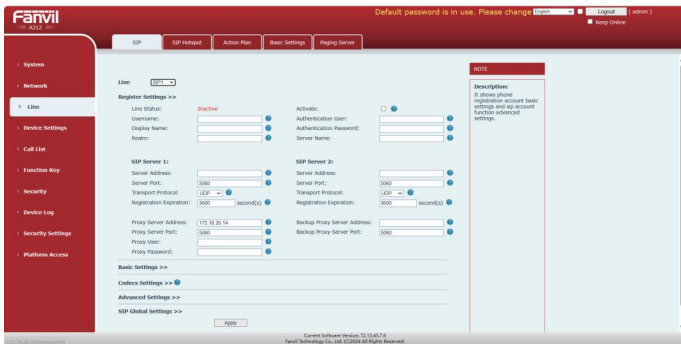

The screenshot displays the Fanvil web interface for SIP account configuration. The interface includes a navigation menu on the left and a main configuration area. The "SIP" tab is selected, and the "Basic Settings" sub-tab is active.

Basic Settings:

- User:** A dropdown menu set to "user".
- Registrar Settings >>**
 - Line Status: **Inactive** (with a refresh icon).
 - Username: [] (with a refresh icon).
 - Display Name: [] (with a refresh icon).
 - Realm: [] (with a refresh icon).
- SIP Server (1):**
 - Server Address: [] (with a refresh icon).
 - Server Port: 5060 (with a refresh icon).
 - Transport Protocol: UDP (with a refresh icon).
 - Registration Expiration: 3600 seconds (with a refresh icon).
- SIP Server (2):**
 - Server Address: [] (with a refresh icon).
 - Server Port: 5060 (with a refresh icon).
 - Transport Protocol: UDP (with a refresh icon).
 - Registration Expiration: 3600 seconds (with a refresh icon).
- Proxy Server Address:** 172.18.26.14 (with a refresh icon).
- Proxy Server Port:** 5060 (with a refresh icon).
- Proxy User:** [] (with a refresh icon).
- Proxy Password:** [] (with a refresh icon).


Backup Settings >>

- Backup SIP Server (1):**
 - Server Address: [] (with a refresh icon).
 - Server Port: 5060 (with a refresh icon).
 - Transport Protocol: UDP (with a refresh icon).
 - Registration Expiration: 3600 seconds (with a refresh icon).
- Backup SIP Server (2):**
 - Server Address: [] (with a refresh icon).
 - Server Port: 5060 (with a refresh icon).
 - Transport Protocol: UDP (with a refresh icon).
 - Registration Expiration: 3600 seconds (with a refresh icon).
- Backup Proxy Server Address:** [] (with a refresh icon).
- Backup Proxy Server Port:** 5060 (with a refresh icon).

Buttons: "Apply" (bottom center), "Logout" (top right), "Keep Online" (top right).

Footer: "Current Software Version: 2.1.0.46.7.6", "Fanvil Technology Co., Ltd. ©2008 All Rights Reserved."

Step 3: Feature Setting

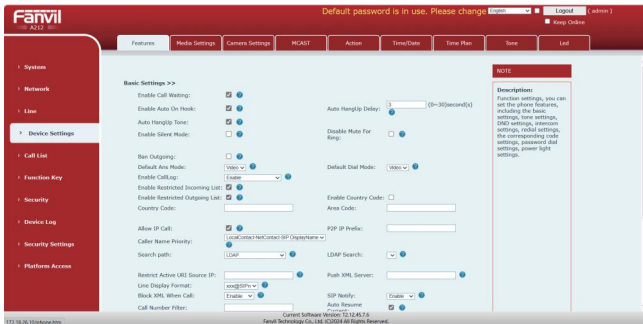

Step 4: Security Settings

If you need to connect other input and output devices, please set the Input and Output setting in the Security Settings:

