

2N Access Unit Installation Manual



Content:

- 1. Product Overview
 - 1.1 Components and Associated Products
 - 1.2 Terms and Symbols
- 2. Description and Installation
 - 2.1 Before You Start
 - 2.2 Mechanical Installation
 - 2.2.1 One Module Box
 - 2.2.2 Two Module Box
 - 2.2.3 Module dimensions
 - 2.3 Electric Installation
 - 2.3.1 Overvoltage Protection
 - 2.4 Extending Module Connection
 - 2.5 Mounting Completion
- 3. Maintenance
- 4. Technical Parameters
 - 4.1 General drawings
- 5. Supplementary Information
 - 5.1 Troubleshooting
 - 5.2 Directives, Laws and Regulations
 - 5.3 Other Countries' Legislation
 - 5.4 General Instructions and Cautions

1. Product Overview

Here is what you can find in this section:

- [1.1 Components and Associated Products](#)
- [1.2 Terms and Symbols](#)

Basic Properties

2N Access Unit is an elegant and reliable access IP system equipped with a number of useful functions, which are not always common in devices of this category.

2N Access Unit is a modular access system that meets all individual user needs. Unlike other access systems available on the market, **2N Access Unit** is not a single-module system with a fixed functionality, but a user friendly modular system, allowing the user to assemble required modules and accessories on a “plug and play” basis. This approach provides individual configuration options and increase in functionality as necessary.

Keypad is a numeric keypad module that allows you to use the device for code lock switch activation.

Integrated card reader module provides the RFID card access control functionality. With additional software settings, you can control more functions than the door lock using the card.

Electric lock switch – this switch can be controlled via a numeric keypad or Automation actions. The switch can be completed with additional output modules if necessary. A wide range of the switch mode settings provide an infinite number of applications.

Resistance – **2N Access Unit** is designed as a robust, mechanically resistant access system, which withstands any weather conditions without requiring additional accessories.

Installation of 2N Access Unit is very easy. All you have to do is assemble the required modules and connect the system to your LAN via a mains cable. Being of the “plug and play” type, the modules need not be configured individually. Feed the intercom either from a 12 V power supply or directly from your PoE-supporting LAN.

To configure 2N Access Unit, you need a PC equipped with any Internet browser. To manage extensive intercom installations easily, use the **2N Access Commander**.

Advantages of Use

- Elegant design
- Weather resistance
- Variable mounting options (brick/plasterboard flush mounting, wall mounting)
- Optional numeric keypad with backlight
- Use of multiple modules of the same type – e.g. building entrance/exit card reader

- Integrated electronic lock switches with wide setting options
- Integrated RFID card reader module, Bluetooth module, fingerprint reader module or touch keypad module
- LAN (PoE) or external 12 V power supply
- Configuration via web interface
- HTTP server for configuration
- SNTP client for server time synchronisation
- SMTP client for e-mail sending
- TFTP/HTTP client for automatic configuration and firmware update

1.1 Components and Associated Products

Basic Units

<p>2N Part No. 9160341</p> 	<ul style="list-style-type: none"> • 2N® Access Unit 2.0 125 kHz • The card reader provides you with access control via contactless cards or keyfobs. The module supports the 125 kHz EM4xxx.
<p>2N Part No. 9160341US Axis Part No. 02137-001</p> 	<ul style="list-style-type: none"> • 2N® Access Unit 2.0 125 kHz • The card reader provides you with access control via contactless cards or keyfobs. The module supports the 125 kHz EM4xxx. • Reads HID Proximity

<p>2N Part No. 9160342 Axis Part No. 02143-001</p> 	<ul style="list-style-type: none"> • 2N[®] Access Unit 2.0 13.56 MHz, NFC ready • The card reader module provides you with access control via contactless cards or keyfobs. The module supports the following 13.56 MHz cards or other carriers (only card serial number is read): <ul style="list-style-type: none"> • ISO14443A (MIFARE DESFire) • PicoPass (HID iClass) • FeliCa • ST SR(IX) • 2N[®] Mobile Key
<p>2N Part No. 9160342-S Axis Part No. 02142-001</p> 	<ul style="list-style-type: none"> • 2N[®] Access Unit 2.0 13.56 MHz, secured NFC ready • The card reader module provides you with access control via contactless cards or keyfobs. The module supports the following 13.56 MHz cards or other carriers (only card serial number is read): <ul style="list-style-type: none"> • ISO14443A (MIFARE DESFire) • PicoPass (HID iClass) • FeliCa • ST SR(IX) • 2N[®] Mobile Key • HID SE (Seos, iClass SE, MIFARE SE)
<p>2N Part No. 916013 Axis Part No. 01368-001</p> 	<ul style="list-style-type: none"> • 2N[®] Access Unit Bluetooth • The Bluetooth reader is used for reading users secure ID numbers from the 2N[®] Mobile Key application of smart phones Android and iOS.

<p>2N Part No. 916031 Axis Part No. 02263-001</p> 	<ul style="list-style-type: none"> • 2N[®] Access Unit 2.0 Fingerprint reader • The Fingerprint reader is used for verification of human fingers for access control and intercom control.
<p>2N Part No. 916032 Axis Part No. 02262-001</p> 	<ul style="list-style-type: none"> • 2N[®] Access Unit 2.0 Touch keypad • The numeric touch keypad module helps you control the lock and use other code-accessible functions. The keypad digits and symbols are backlit.
<p>2N Part No. 9160344 Axis Part No. 02138-001</p> 	<ul style="list-style-type: none"> • 2N[®] Access Unit 2.0 RFID – 125 kHz, 13.56 MHz, NFC • The card reader provides you with access control via contactless cards or keyfobs. The module supports the 125 kHz EM-41xx. • The card reader module provides you with access control via contactless cards or keyfobs. The module supports the following 13.56 MHz cards or other carriers (only card serial number is read): <ul style="list-style-type: none"> • 125 kHz <ul style="list-style-type: none"> • EM4xxx • 13.56 MHz <ul style="list-style-type: none"> • ISO14443A (MIFARE DESFire) • PicoPass (HID iClass) • FeliCa • ST SR(IX) • 2N[®] Mobile Key

2N Part No. 9160344-S
Axis Part No. 02146-001



- **2N[®] Access Unit 2.0 RFID – 125 kHz, secured 13.56 MHz, NFC**
- The card reader provides you with access control via contactless cards or keyfobs. The module supports the 125 kHz EM-41xx.
- The card reader module provides you with access control via contactless cards or keyfobs. The module supports the following 13.56 MHz cards or other carriers (only card serial number is read):
 - **125 kHz**
 - EM4xxx
 - **13.56 MHz**
 - ISO14443A (MIFARE DESFire)
 - PicoPass (HID iClass)
 - FeliCa
 - ST SR(IX)
 - **2N[®] Mobile Key**
 - HID SE (Seos, iClass SE, MIFARE SE)

2N Part No. 9160345



- **2N[®] Access Unit 2.0 Bluetooth & RFID – 125 kHz, 13.56 MHz, NFC**
- The combined Bluetooth & card reader module provides access control using an access code, the **2N[®] Mobile Key** application in your smartphone or an access card. The module supports the following 125 kHz and 13.56 MHz cards or other carriers (only card serial number is read):
 - **125 kHz**
 - EM4xxx
 - **13.56 MHz**
 - ISO14443A (MIFARE DESFire)
 - PicoPass (HID iClass)
 - FeliCa
 - ST SR(IX)
 - **2N[®] Mobile Key**

obj. č. 9160345-S

- **2N[®] Access Unit 2.0 Bluetooth & RFID – 125 kHz, secured 13.56 MHz, NFC**
- The combined Bluetooth & card reader module provides access control using an access code, the **2N[®] Mobile Key** application in your smartphone or an access card. Modul podporuje karty nebo jiné nosiče frekvence 125 kHz a 13.56 MHz standardů.
 - **125 kHz**
 - EM4xxx
 - **13.56 MHz**
 - ISO14443A (MIFARE DESFire)
 - PicoPass (HID iClass)
 - FeliCa
 - ST SR(IX)
 - **2N[®] Mobile Key**
 - HID SE (Seos, iClass SE, MIFARE SE)

2N Part No. 9160336**Axis Part No. 02546-001**

- **2N[®] Access Unit 2.0 Touch keypad & RFID – 125 kHz, 13.56 MHz, NFC**
- The touch keypad and card reader module provides you with access control via contactless cards or keyfobs. The module supports the following 125 kHz and 13.56 MHz cards or other carriers (only card serial number is read):
 - **125 kHz**
 - EM4xxx
 - **13.56 MHz**
 - ISO14443A (MIFARE DESFire)
 - PicoPass (HID iClass)
 - FeliCa
 - ST SR(IX)
 - **2N[®] Mobile Key**

2N Part No. 9160346



- **2N[®] Access Unit 2.0 Touch keypad & RFID – 125 kHz, 13.56 MHz, NFC**
- The touch keypad and card reader module provides you with access control via contactless cards or keyfobs. The module supports the following 125 kHz and 13.56 MHz cards or other carriers (only card serial number is read):
 - **125 kHz**
 - EM4xxx
 - **13.56 MHz**
 - ISO14443A (MIFARE DESFire)
 - PicoPass (HID iClass)
 - FeliCa
 - ST SR(IX)
 - **2N[®] Mobile Key**

2N Part No. 9160336-S
Axis Part No. 01852-001



- **2N[®] Access Unit 2.0 Touch keypad & RFID – 125 kHz, secured 13.56 MHz, NFC**
- The touch keypad and card reader module provides you with access control via contactless cards or keyfobs. The module supports the following 125 kHz and 13.56 MHz cards or other carriers (only card serial number is read):
 - **125 kHz**
 - EM4xxx
 - **13.56 MHz**
 - ISO14443A (MIFARE DESFire)
 - PicoPass (HID iClass)
 - FeliCa
 - ST SR(IX)
 - **2N[®] Mobile Key**
 - HID SE (Seos, iClass SE, MIFARE SE)

2N Part No. 9160346-S



- **2N[®] Access Unit 2.0 Touch keypad & RFID – 125 kHz, secured 13.56 MHz, NFC**
- The touch keypad and card reader module provides you with access control via contactless cards or keyfobs. The module supports the following 125 kHz and 13.56 MHz cards or other carriers (only card serial number is read):
 - **125 kHz**
 - EM4xxx
 - **13.56 MHz**
 - ISO14443A (MIFARE DESFire)
 - PicoPass (HID iClass)
 - FeliCa
 - ST SR(IX)
 - **2N[®] Mobile Key**
 - HID SE (Seos, iClass SE, MIFARE SE)

2N Part No. 9160347



- **2N[®] Access Unit 2.0 Touch keypad & Bluetooth & RFID - 125 kHz, 13.56 MHz, NFC**
- The combined keypad & Bluetooth & card reader module provides access control using an access code, the **2N[®] Mobile Key** application in your smartphone or an access card. The module supports 125 kHz and 13.56 MHz cards or other carriers of the same frequencies:
 - **125 kHz**
 - EM4xxx
 - **13.56 MHz**
 - ISO14443A (MIFARE DESFire)
 - PicoPass (HID iClass)
 - FeliCa
 - ST SR(IX)
 - 2N[®] Mobile Key**

2N Part No. 9160347-S



• **2N® Access Unit 2.0 Touch keypad & Bluetooth & RFID - 125kHz, secured 13.56 MHz, NFC**

The combined keypad & Bluetooth & card reader module provides access control using an access code, the **2N® Mobile Key** application in your smartphone or an access card. The module supports 125 kHz and 13.56 MHz cards or other carriers of the same frequencies:

- **125 kHz**
EM4xxx
- **13.56 MHz**
ISO14443A (MIFARE DESFire)
PicoPass (HID iClass)
FeliCa
ST SR(IX)
- **2N® Mobile Key**
HID SE (Seos, iClass SE, MIFARE SE)

✓ **Tip**

- **Supported auxiliary modules: 2N® IP Verso modules are supported** – RFID card reader (125 kHz; 13.56 MHz), keypad, 5-button module, Wiegand, etc.

License

<p>2N Part No. 916012</p> <p>Axis Part No. 01369-001</p>	<ul style="list-style-type: none"> • 2N Access Unit license
<p>2N Part No. 9160401</p>	<ul style="list-style-type: none"> • 2N Access Unit Lift module license

Frames

<p>2N Part No. 9155011 Axis Part No. 01278-001</p> 	<ul style="list-style-type: none"> • Flush mounting frame, 1-module • Covering frame for the 1-module brick/plasterboard flush mounting box. This 1-module frame is used for connection of an OUT card reader or keypad, for example. Remember to order the frame when you order a 1-module flush mounting box, Part No. 9155014.
<p>2N Part No. 9155011B Axis Part No. 01279-001</p> 	<ul style="list-style-type: none"> • Flush mounting frame, 1-module • Covering frame for the 1-module brick/plasterboard flush mounting box. This 1-module frame is used for connection of an OUT card reader or keypad, for example. Remember to order the frame when you order a 1-module flush mounting box, Part No. 9155014.
<p>2N Part No. 9155012 Axis Part No. 01281-001</p> 	<ul style="list-style-type: none"> • Flush mounting frame, 2-module • Covering frame for the 2-module brick/plasterboard flush mounting box. Remember to order the frame when you order a 2-module flush mounting box, Part No. 9155015.

<p>2N Part No. 9155012B Axis Part No. 01282-001</p> 	<ul style="list-style-type: none"> • Flush mounting frame, 2-module • Covering frame for the 2-module brick/plasterboard flush mounting box. Remember to order the frame when you order a 2-module flush mounting box, Part No. 9155015.
<p>2N Part No. 9155021 Axis Part No. 01287-001</p> 	<ul style="list-style-type: none"> • Wall mounting frame, 1-module • Covering frame for wall (surface) mounting. This 1-module frame is used for connection of an OUT card reader or keypad, for example.

2N Part No. 9155021B
Axis Part No. 01288-001




- Wall mounting frame, 1-module
- Covering frame for wall (surface) mounting. This 1-module frame is used for connection of an OUT card reader or keypad, for example.

2N Part No. 9155022
Axis Part No. 01289-001



- Wall mounting frame, 2-module
- Covering frame for wall (surface) mounting.

2N Part No. 9155022B
Axis Part No. 01290-001

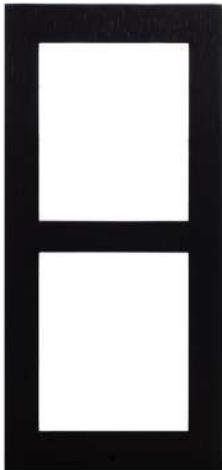

- Wall mounting frame, 2-module
- Covering frame for wall (surface) mounting.

✔ **Tip**

- The 1-module frame is used when an auxiliary module from **2N® IP Verso** is mounted onto an extended interconnecting cable, for an OUT card reader or keypad, for example.

✔ **Tip**

- Remember to order the flush mounting frame when you order a brick/plasterboard flush mounting box:
 - 1-module frame, Part No. **9155011** – 1-module flush mounting box, Part No. **9155014**.
 - 2-module frame, Part No. **9155012** – 2-module flush mounting box, Part No. **9155015**.

Extending Modules

<p>2N Part No. 916020 Axis Part No. 01371-001</p> 	<ul style="list-style-type: none"> • RJ-45 adapter
<p>2N Part No. 9155032 Axis Part No. 01255-001</p> 	<ul style="list-style-type: none"> • 2N® IP Verso – RFID Reader, 125 kHz • The card reader module works with 2N Access Unit as an OUT card reader. The module supports cards, key fobs and/or other 125 kHz standard carriers: EM4xxx.

<p>2N Part No. 9155040 Axis Part No. 01262-001</p> 	<ul style="list-style-type: none"> • 2N[®] IP Verso – RFID Reader NFC/HCE support, 13.56 MHz • The card reader module works with 2N Access Unit as an OUT card reader. The module supports cards, key fobs and/or other 13.56 MHz standard carriers (only card serial number is read): <ul style="list-style-type: none"> • ISO14443A (MIFARE DESFire) • PicoPass (HID iClass) • FeliCa • ST SR(IX) • 2N[®] Mobile Key
<p>Part No. 9155082</p> 	<ul style="list-style-type: none"> • 2N[®] IP Verso – Bluetooth & RFID reader 125 kHz, 13.56 MHz, NFC/HCE • The bluetooth and card reader module works with 2N Access Unit as an OUT card reader. The module supports cards, key fobs and/or other 125 kHz and 13.56 MHz standard carriers (only card serial number is read): <ul style="list-style-type: none"> • 125 kHz <ul style="list-style-type: none"> • EM4xxx • 13.56 MHz <ul style="list-style-type: none"> • ISO14443A (MIFARE DESFire) • PicoPass (HID iClass) • FeliCa • ST SR(IX) • 2N[®] Mobile Key

Part No. 9155084



- **2N[®] IP Verso** – Bluetooth & RFID reader 125 kHz, secured 13.56 MHz, NFC/HCE
- The bluetooth and secured card reader module works with **2N Access Unit** as an OUT card reader. The module supports cards, key fobs and/or other 125 kHz and 13.56 MHz standard carriers (only card serial number is read):
 - **125 kHz**
 - EM4xxx
 - **13.56 MHz**
 - ISO14443A (MIFARE DESFire)
 - PicoPass (HID iClass)
 - FeliCa
 - ST SR(IX)
 - **2N[®] Mobile Key**
 - HID SE (Seos, iClass SE, MIFARE SE)

Part No. 9155081



- **2N[®] IP Verso** – Touch keypad & RFID reader 125 kHz, 13.56 MHz, NFC/HCE
- The touch keypad and card reader module works with **2N Access Unit** as an OUT card reader. The module supports cards, key fobs and/or other 125 kHz and 13.56 MHz standard carriers (only card serial number is read):
 - **125 kHz**
 - EM4xxx
 - **13.56 MHz**
 - ISO14443A (MIFARE DESFire)
 - PicoPass (HID iClass)
 - FeliCa
 - ST SR(IX)
 - **2N[®] Mobile Key**

Part No. 9155083



- **2N[®] IP Verso** – Touch keypad & RFID reader 125 kHz, secured 13.56 MHz, NFC/HCE
- The touch keypad and secured card reader module works with **2N Access Unit** as an OUT card reader. The module supports cards, key fobs and/or other 125 kHz and 13.56 MHz standard carriers (only card serial number is read):
 - **125 kHz**
 - EM4xxx
 - **13.56 MHz**
 - ISO14443A (MIFARE DESFire)
 - PicoPass (HID iClass)
 - FeliCa
 - ST SR(IX)
 - **2N[®] Mobile Key**
 - HID SE (Seos, iClass SE, MIFARE SE)

2N Part No. 9155031

Axis Part No. 01253-001



- **2N[®] IP Verso** – Keypad
- The numeric keypad module helps enter a numeric entrance code. Use the keypad for departures or double entrance authentication. The keypad digits and symbols are backlit.

2N Part No. 9155031B

Axis Part No. 01254-001



- **2N[®] IP Verso** – Keypad
- The numeric keypad module helps enter a numeric entrance code. Use the keypad for departures or double entrance authentication. The keypad digits and symbols are backlit.

2N Part No. 9155047

Axis Part No. 01277-001



- **2N[®] IP Verso** – Touch keypad
- The numeric keypad module helps you dial users via their phonebook positions or phone numbers, control the lock and use other code-accessible functions. The keypad digits and symbols are backlit.

2N Part No. 9155036

Axis Part No. 01275-001



- **2N[®] IP Verso** – Touch Display
- Touchscreen module allowing visitors to dial users in a smartphone-like way. In addition to a structured phonebook it also features a keypad.

⚠ Caution

- This module is only supported by 2N Access Unit 2.0.

2N Part No. 9155037

Axis Part No. 01259-001



- **2N[®] IP Verso** – Wiegand
- The Wiegand module helps you interconnect your system with other systems (security) via the Wiegand interface. The module is installed under another module, i.e. cannot be installed directly into the **2N Access Unit** (must be mounted outside).

2N Part No. 91550371

Axis Part No. 02577-001



- **2N[®] IP Verso** – OSDP module
- The OSDP module provides communication between a connected device (control panel, door controller) and **2N[®] IP Verso** via the OSDP. The module is installed under another module, i.e. needs no separate position.
- **Compatible** with **Access Unit 2.0** models only

2N Part No. 9155034

Axis Part No. 01257-001



- **2N[®] IP Verso** – I/O
- The logic input/output module helps you integrate various sensors and control doors or other equipment. The module is installed under another module, i.e. cannot be installed directly into the **2N Access Unit** (must be mounted outside).

<p>2N Part No.9155030 Axis Part No. 01252-001</p> 	<ul style="list-style-type: none"> • 2N[®] IP Verso – Info panel • The Infopanel module helps you add your company logo, opening hours and similar information to the access unit. The Infopanel has software-controlled backlight.
<p>Part Numbers: 9155050, 01267-001 9155054, 01268-001 9155055, 01269-001</p> 	<ul style="list-style-type: none"> • 1 m Interconnecting cable • 3 m Interconnecting cable • 5 m Interconnecting cable

Mounting Accessories

<p>2N Part No. 9155014 Axis Part No. 01284-001</p> 	<ul style="list-style-type: none"> • Flush mounting box, 1-module • The box is designed for brick/plasterboard flush mounting of a 1-module installation. Supplied including accessories for multiple box assemblies.
--	---

**2N Part
No. 9155015**

**Axis Part No.
01285-001**



- Flush mounting box, 2-module
- The box is designed for brick/plasterboard flush mounting of a 2-module installation. Supplied including accessories for multiple box assemblies.

**2N Part No.
9155061**

**Axis Part No.
01293-001**



- Backplate, 1 module
- A backplate for glass or uneven surface mounting.

<p>2N Part No. 9155062</p> <p>Axis Part No. 01294-001</p> 	<ul style="list-style-type: none"> • Backplate, 2 modules • A backplate for glass or uneven surface mounting.
--	---

Choose the appropriate mounting frame and box if necessary for the **2N Access Unit** installation. The **2N Access Unit** is designed for outdoor applications and requires no additional roof.

Electric Locks

<p>Part No. 932071E</p> 	<ul style="list-style-type: none"> • BEFO 11211 • 12 V / 230 mA DC • low consumption
--	---

Part No. 932081E



- BEFO 11221 with momentum pin
- 12 V / 230 mA DC
- low consumption
- For opening of the lock a short electrical impuls is sufficient, which unlocks the lock. Lock is then open until someone closes the door.

Part No. 932091E



- BEFO 11211MB with mechanical blocking
- 12 V / 230 mA DC
- low consumption
- Enables mechanically close or open the lock. When opened, the lock is open all the time. When closed, it behaves as standart electrical lock.

<p>Part No. 932061E</p> 	<ul style="list-style-type: none"> • 211211 door signalling, low consumption • 12 V / 230 mA • A regular lock with a built-in contact to indicate whether the door is open or closed.
<p>Part No. 932072E</p> 	<ul style="list-style-type: none"> • 31211 fail-safe • 12 V / 170 mA DC • The failsafe lock is closed when electricity is switched on. When electricity is interrupted, the lock is opened.
<p>Part No. 932062E</p> 	<ul style="list-style-type: none"> • 321211 fail-safe, door signalling • 12 V / 170 mA • The failsafe lock is closed when electricity is switched on. When electricity is interrupted, the lock is opened. • It contains a built-in contact to indicate whether the door is open or closed.

✓ Tip

- FAQ:Electric locks – Differences between locks for 2N IP intercoms


Power Supply

<p>Part Numbers: 91378100E 91378100US, 01403-001</p> 	<ul style="list-style-type: none"> • PoE injector – with EU cable • PoE injector – with US cable • For intercom power supply via an Ethernet cable where the PoE switch is unavailable.
<p>Part No. 91341482E 91341482US</p> 	<ul style="list-style-type: none"> • Stabilized 12 V / 1 A power supply needs to be used where no PoE is available.
<p>Part No. 932928</p> 	<ul style="list-style-type: none"> • For external power supply of the lock with 12 V AC voltage.

Additional Modules

<p>2N Part No. 9159010 Axis Part No. 01386-001</p> 	<ul style="list-style-type: none"> • Security relay • A simple, security enhancing add-on. Prevents lock tampering. Installed between the intercom, from which it is also supplied, and the lock to be controlled.
<p>Part No. 9159013</p> 	<ul style="list-style-type: none"> • Departure button • Connects the logic input for door unlocking from inside the building.
<p>2N Part No. 9159012 Axis Part No. 01388-001</p> 	<ul style="list-style-type: none"> • Magnetic door contact • A door installation set for door opening status identification. Used for door protection, open door or violent door opening detection.

<p>2N Part No. 9134173 Axis Part No. 01384-001</p> 	<ul style="list-style-type: none">• RFID card, type MIFARE Classic 1k, 13.56 MHz
<p>2N Part No. 9134174 Axis Part No. 01385-001</p> 	<ul style="list-style-type: none">• RFID fob, type MIFARE Classic 1k, 13.56 MHz
<p>2N Part No. 9134165E Axis Part No. 01395-001</p> 	<ul style="list-style-type: none">• RFID card, type EM4100, 125 kHz
 
<p>2N Part No. 9134166E Axis Part No. 01396-001</p> 	<ul style="list-style-type: none"> • RFID fob, type EM4100, 125 kHz
<p>2N Part No. 11202601 Axis Part No. 02787-001</p> 	<ul style="list-style-type: none"> • 2N[®] RFID card Mifare Desfire EV3 4K 13.56MH 10 pcs • 10 pcs per package • MIFARE DESFire EV3 (ISO/IEC14443A) • Suitable for data encryption in 2N[®] PICard Commander.
<p>2N Part No. 11202602 Axis Part No. 02788-001</p> 	<ul style="list-style-type: none"> • 2N[®] RFID fob Mifare Desfire EV3 4K 13.56MHz 10 pcs • 10 pcs per package • MIFARE DESFire EV3 (ISO/IEC14443A) • Suitable for data encryption in 2N[®] PICard Commander.

2N Part No. 9137420E
Axis Part No. 01399-001



- External RFID card reader for connection to PC using a USB interface.
- Suitable for system administration and adding of 125 kHz EM41xx cards using a web interface or **2N® Access Commander**.

2N Part No. 9137421E
Axis Part No. 01400-001



- **Ext. RFID Reader 13.56 MHz, 125 kHz + NFC/HCE (USB interface)**
- External RFID card reader for PC connection using a USB interface. Suitable for system administration and adding of 13.56 MHz, 125 kHz cards and Android platform devices supporting NFC/HCE using the **2N IP intercom** web interface or **2N® Access Commander**. Suitable for MIFARE DESFire card upload to the **2N® PICard Commander** encryption application. It reads the same types of cards and devices as card readers in the **2N IP intercoms**.
 - [13.56 MHz/ISO/IEC 14443A](#) MIFARE Classic 1k & 4k, MIFARE DESFire EV1, Mini, Plus S&X, Ultralight, Ultralight C
 - [13.56 MHz/ISO/IEC 14443B](#) CEPAS, HID iCLASS (CSN only)
 - [13.56 MHz/JIS X 6319](#) Felica
 - [125 kHz](#) EM4xxx
 - [ISO/IEC 18092](#) SmartPhone with NFC/HCE support, since Android version 6.0 Marshmallow (**2N® Mobile Key** app required)
 - EMarine

Part No. 9137424E



- **Ext. secured RFID Reader 13.56 MHz, 125 kHz + NFC/HCE (USB interface)**
- External secured RFID card reader for PC connection using a USB interface. Suitable for system administration and adding of 13.56 MHz, 125 kHz cards and Android platform devices supporting NFC/HCE using the **2N IP intercom** web interface or **2N® Access Commander**. Suitable for MIFARE DESFire card upload to the **2N® PICard Commander** encryption application. It reads the same types of cards and devices as card readers in the **2N IP intercoms**.
 - 13.56 MHz/ISO/IEC 14443A MIFARE Classic 1k & 4k, MIFARE DESFire EV1, Mini, Plus S&X, Ultralight, Ultralight C
 - 13.56 MHz/ISO/IEC 14443B CEPAS, HID iCLASS (CSN or PAC ID)
 - 13.56 MHz/JIS X 6319 Felica
 - 125 kHz EM4xxx, HID Prox
 - ISO/IEC 18092 SmartPhone with NFC/HCE support, since Android version 6.0 Marshmallow (**2N® Mobile Key** app required)
 - EMarine

2N Part No. 9137423E

Axis Part No. 01401-001



- **2N IP intercom** – External fingerprint reader (USB interface)

2N Part No. 9137410E
Axis Part No. 01397-001



- External IP relay – 1 output
- A stand-alone IP device, which can be controlled from an IP intercom via HTTP commands. Helps control a device remotely.

2N Part No. 9137411E
Axis Part No. 01398-001



- External IP relay – 4 outputs, PoE
- A stand-alone IP device, which can be controlled from an IP intercom via HTTP commands. Helps control a device remotely.

Part No. 9159014EU/US/UK



- **2N[®] 2Wire**
 - (set of 2 adapters plus EU/US/UK power supply)
 - Converter **2N[®] 2Wire** helps you connect any IP device to your existing two-wire cabling from the original door bell/phone without reconfiguring. All you have to do is have one
 - **2N[®] 2Wire** unit at each end of the cable and connect one of them at least to the power supply.
- The **2N[®] 2Wire** unit then provides PoE supply not only to the other converter, but also to all the IP terminal equipment connected.

2N Part No. 9159030
Axis Part No. 01389-001



- External 125 kHz RFID card reader
- Secondary reader for connection to an internal reader. Allows for control of card entry from both sides of the door. IP67 cover, also suitable for exteriors. Reads EM4100 and EM4102 cards.

<p>2N Part No. 9159031 Axis Part No. 01390-001</p> 	<ul style="list-style-type: none"> • External 13.56 MHz MIFARE RFID card reader, Wiegand • Secondary reader for connection to an internal reader. Allows for control of card entry from both sides of the door. IP68 cover, also suitable for exteriors. Reads MIFARE cards.
<p>Part No. 9160501</p> 	<ul style="list-style-type: none"> • AXIS A9188 Network I/O relay module • Lift control relay module for up to 8 floors

License

<p>Part No. 9137909</p>	<ul style="list-style-type: none"> • Gold • Includes Enhanced Video, Enhanced Integration and Lift Control licenses
--------------------------------	--

Part No. 9137910 Axis Part No. 01381-001	<ul style="list-style-type: none">• InformaCast
---	--

 **Tip**

- Refer to the local 2N distributor for more accessories and recommendations please.

1.2 Terms and Symbols

The following symbols and pictograms are used in the manual:

 **Safety**

- **Always abide** by this information to prevent persons from injury.

 **Warning**

- **Always abide** by this information to prevent damage to the device.

 **Caution**

- **Important information** for system functionality.

 **Tip**

- **Useful information** for quick and efficient functionality.

 **Note**

- Routines or advice for efficient use of the device.

2. Description and Installation

Here is what you can find in this section:

- [2.1 Before You Start](#)
- [2.2 Mechanical Installation](#)
- [2.3 Electric Installation](#)
- [2.4 Extending Module Connection](#)
- [2.5 Mounting Completion](#)

2.1 Before You Start

Product Completeness Check

Check your **2N Access Unit** package for completeness before installation.

- **1x 2N Access Unit**
- 1x Hex key
- 1x Certificate of ownership
- 1x Brief manual

2.2 Mechanical Installation

Mounting Types Overview


Refer to the table below for a list of mounting types and necessary components. You can assemble multiple units in all the mounting types.

Flush mounting – classic bricks

- incl. hollow bricks, thermally insulated walls, etc.

What you need for mounting:


- a properly cut hole as instructed in the box package
- plaster, mounting glue, mounting foam or mortar as necessary
- **2N Access Unit**
- flush mounting box and frame
 - 1 module: box Part No. **9155014**, frame part No. **9155011**
 - 2 modules: box Part No. **9155015**, frame part No. **9155012**

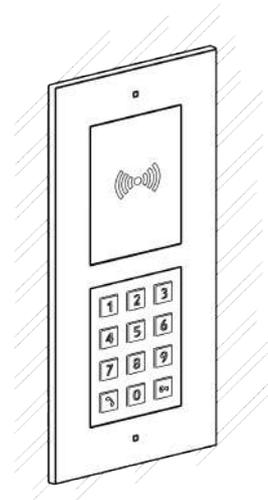

Flush mounting – plasterboard

What you need for mounting:

- a properly cut hole as instructed in the box package
- **2N Access Unit**
- flush mounting box and frame
 - 1 module: box Part No. **9155014**, frame part No. **9155011**
 - 2 modules: box Part No. **9155015**, frame part No. **9155012**

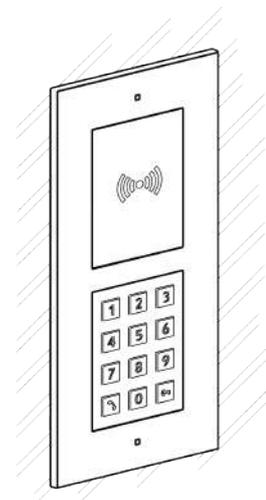


Wall (surface) mounting

- (concrete and steel structures, entry barrier columns, interiors, etc.)

What you need for mounting:

- **2N Access Unit**
- a proper frame
- 1 module: frame Part No. **9155021**
- 2 modules: frame Part No. **9155022**

For uneven surfaces use a backplate for the required count of modules, Part Nos. **9155061–9155062**.

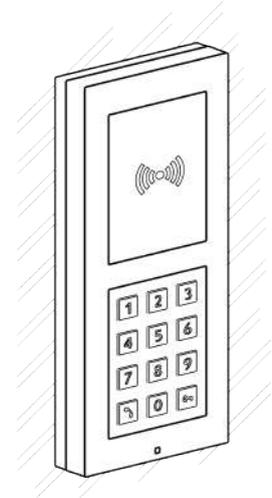

⚠ Caution

- Before starting the mechanical installation on a selected place, make sure carefully that the preparations connected with it (drilling, wall cutting) cannot damage the electrical, gas, water and other existing wires and pipes.
- The warranty does not apply to the product defects and failures arisen as a result of improper mounting (in contradiction herewith). The manufacturer is neither liable for damage caused by theft within an area that is accessible after the attached electric lock is switched on. The product is not designed as a burglar protection device except when used in combination with a standard lock, which has the security function.
- When the proper mounting instructions are not met, water might get in and destroy the electronics. It is because the intercom circuits are under continuous voltage and water infiltration causes an electro-chemical reaction. The manufacturer's warranty shall be void for products damaged in this way!


General Mounting Principles

✔ Tip

- Select flush mounting where possible to make your product elegant looking, more vandal resistant and more secure.
- You are advised to buy the flush mounting box in advance and commission a building company to do the masonry for you, for example. The mounting box also helps you put your intercom exactly in the vertical position.

⚠ Caution

- Make sure that the diameter of the dowel holes is accurate to avoid falling out of the dowels! Use the mounting glue to secure the dowels if necessary.
- Make sure that the depth of the dowel holes is accurate!
- Do not use low-quality dowels to avoid falling out of the dowels of the wall!
- Having removed the front panel, make sure that no dirt gets inside the product (especially onto the sealing surface).
- Never turn an assembly of **2N Access Unit** devices after mounting. Make sure that the flush mounting boxes have been installed accurately.
- Check the plasterboard wall and room interior pressure values. If the difference between the values is too great (as a result, e.g., of overpressure ventilation), separate the intercom using, for example, the mounting box enclosed and seal the cable passage.
- Surface mounting may cause problems on places exposed to potential vandalism (such as public garages, etc.). In this case, use steel anchoring elements instead of the dowels and screws included in the delivery.
- The wall mounting surface must be flat with the maximum inequality of 0.5 mm (e.g. prefabricated boards, glass, cut stone, etc.). If the surface is uneven, use flush mounting and a backplate, **Part Nos. 9155061–9155062**, or equalise the wall surface.

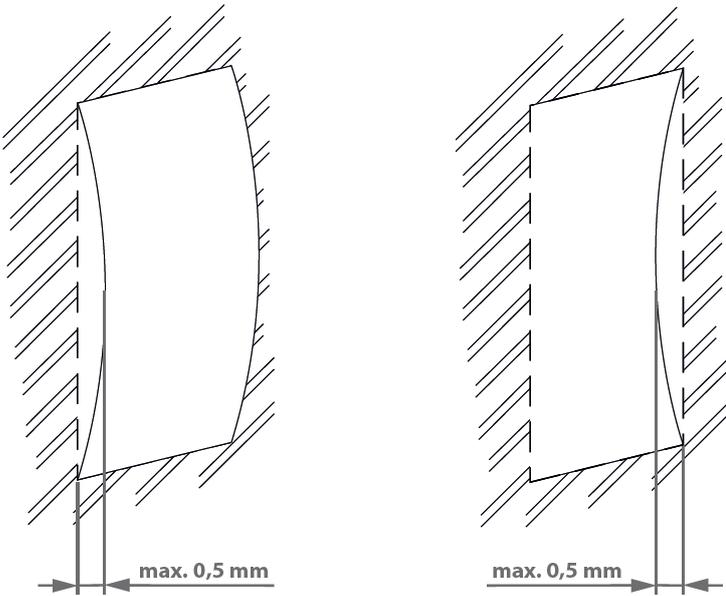

 **Risk of personal injury**

- Eliminate the risk of personal injury! Wall mounting is not recommended for narrow passages or places where people's attention is distracted by something else. The manufacturer shall not be liable for injuries in such cases!

Module Installation


- [2.2.1 One Module Box](#)
- [2.2.2 Two Module Box](#)
- [2.2.3 Module dimensions](#)


2.2.1 One Module Box

⚠ Caution


- The one-module box is designed for stand-alone installations of extending modules such as departure readers. A two-module box is required for the main unit installation.

Flush mounting – classic bricks

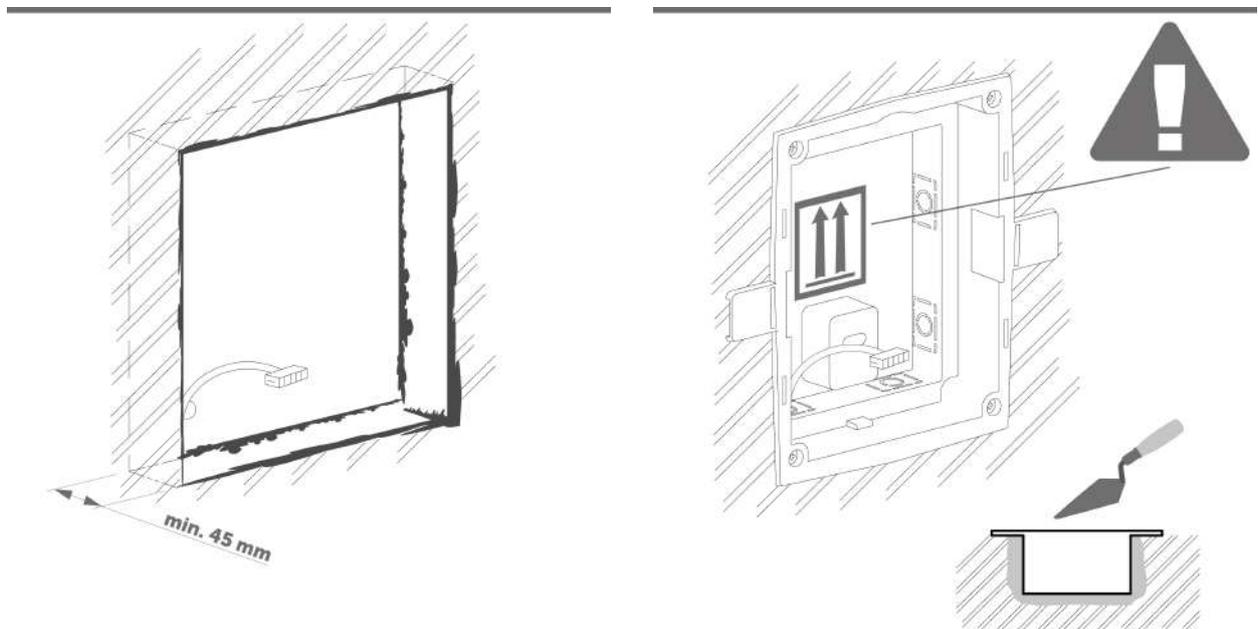

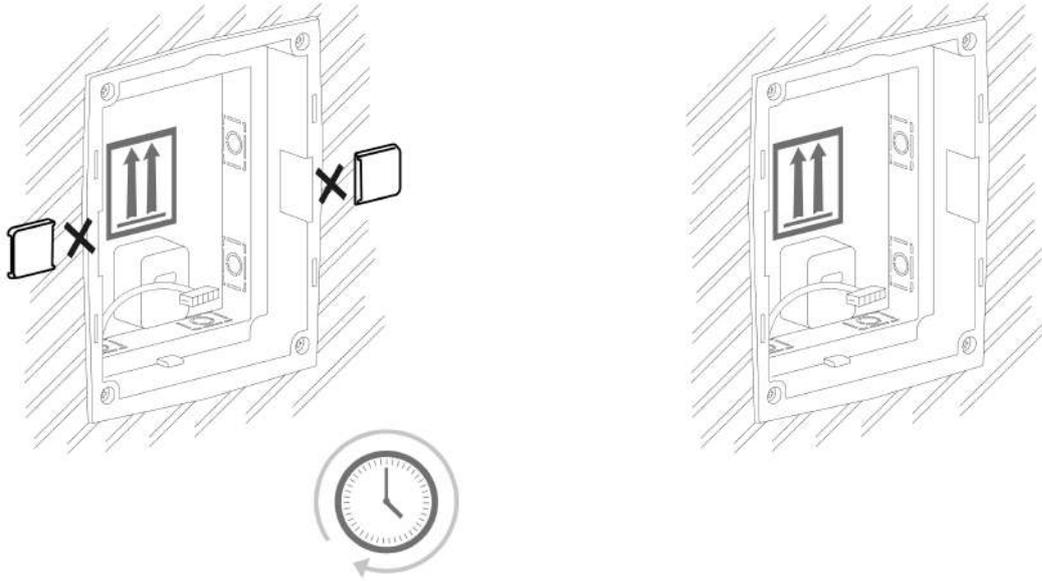


Warning

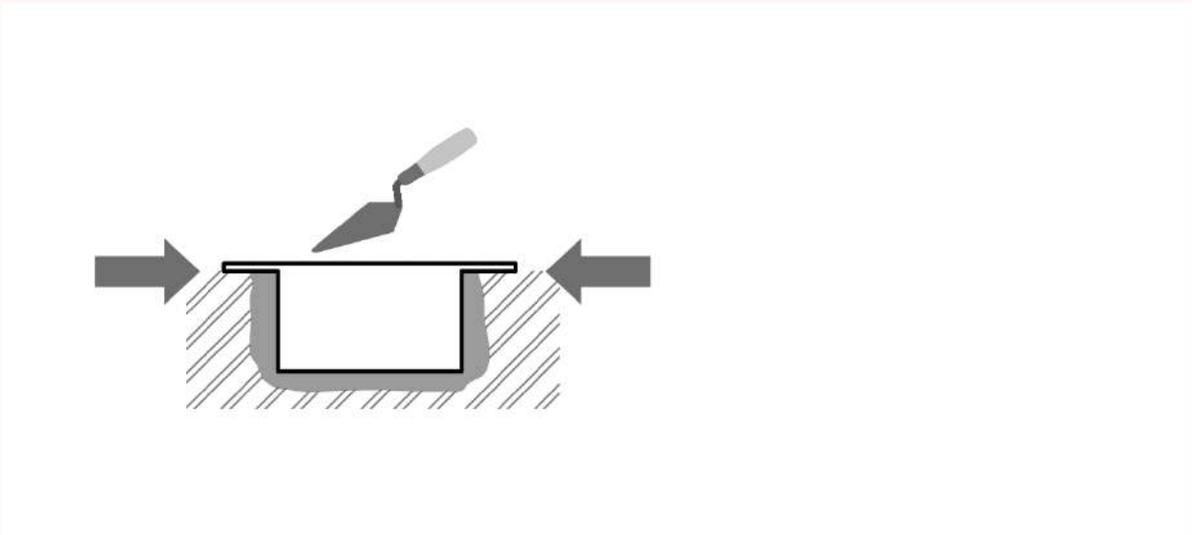

- Make sure that the flush mounting box is slightly above the wall surface not aligning with the wall. A wrong installation may lead to water penetration and subsequent damage of the device. Use the side protrusions to achieve the proper flush mounting.


⚠ Caution

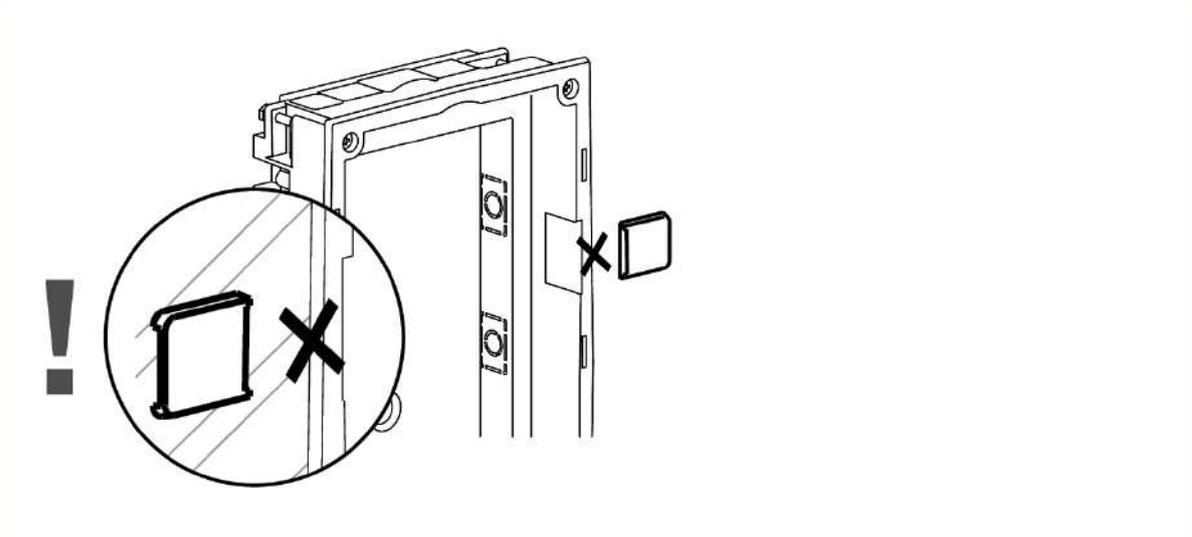




- Break off the side protrusions when the walling material has hardened.



Flush mounting – plasterboard

1x


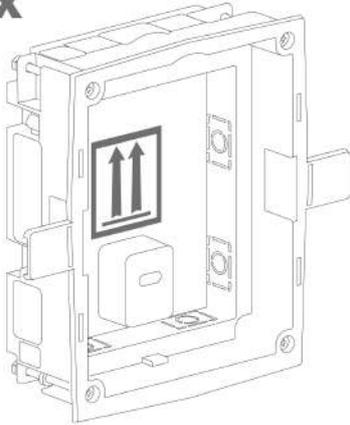






min 108(W) x 136(H)


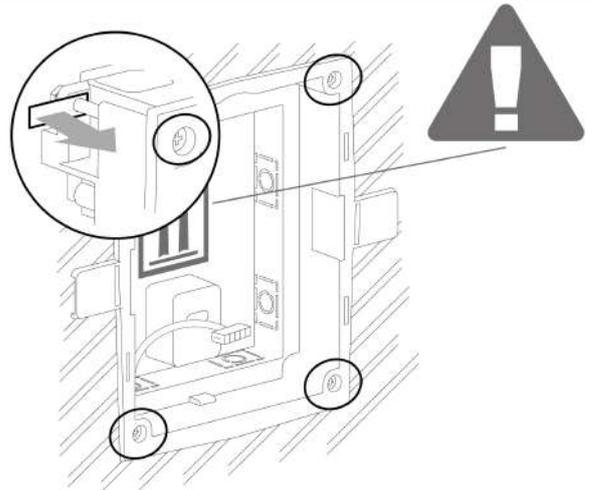
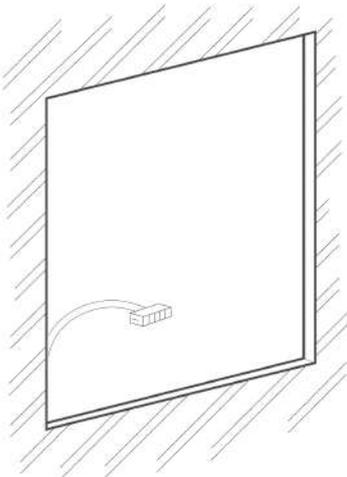
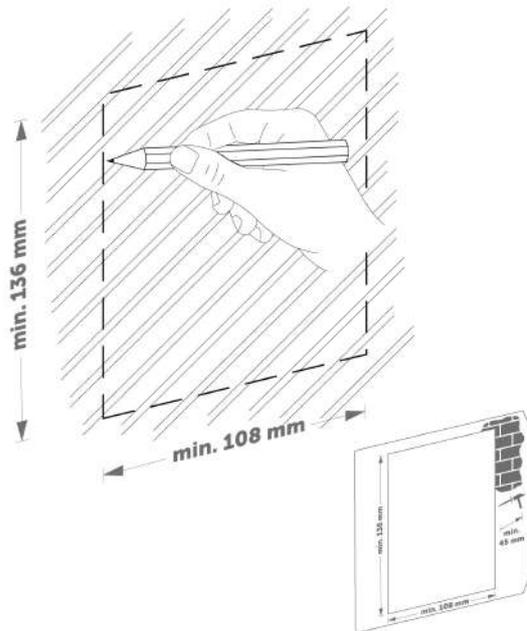


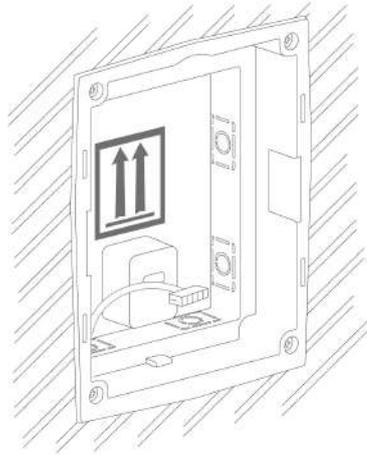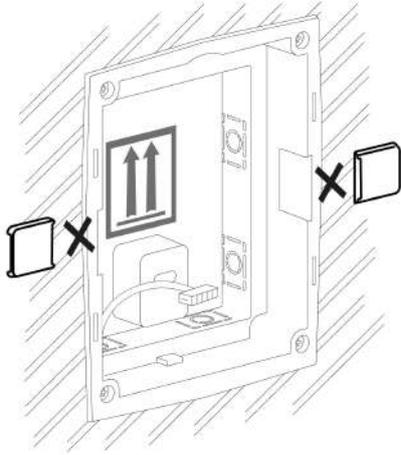


Module flush mounting


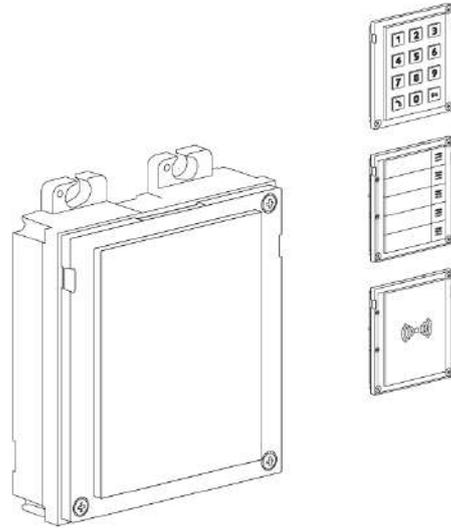
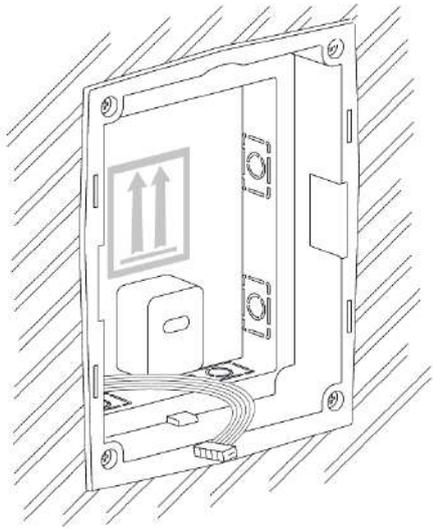


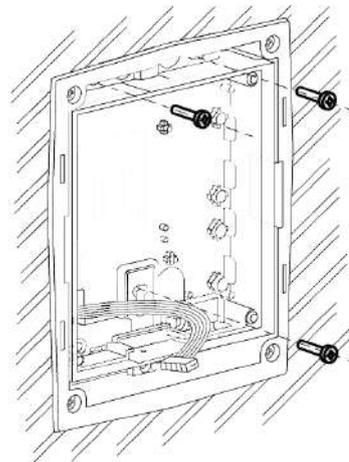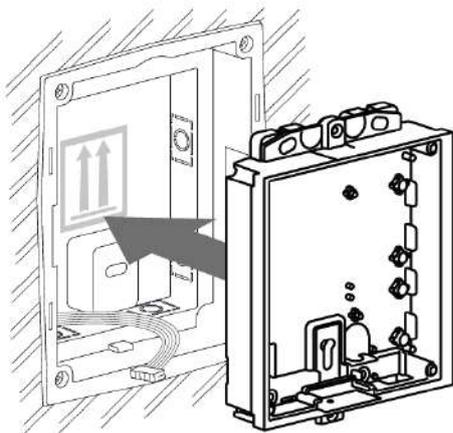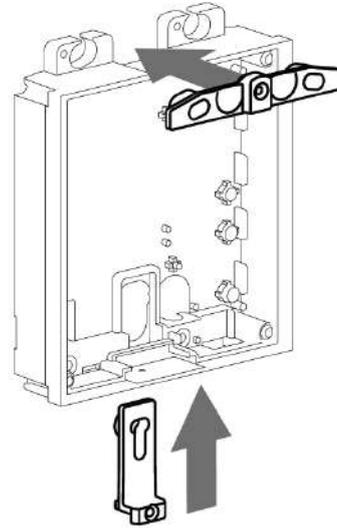
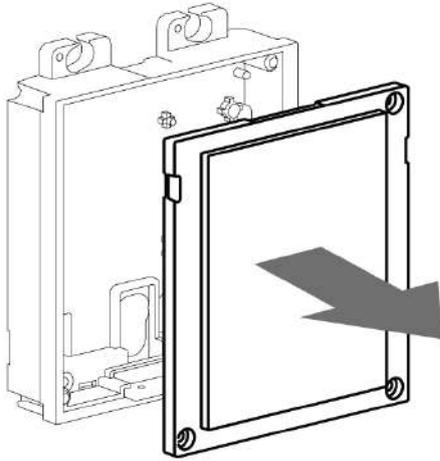


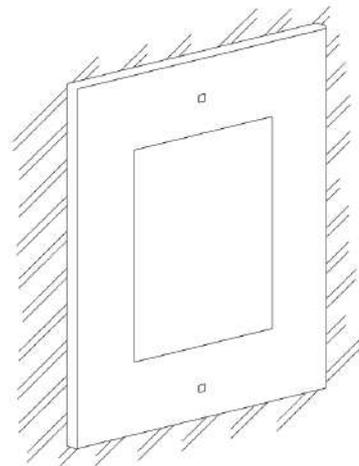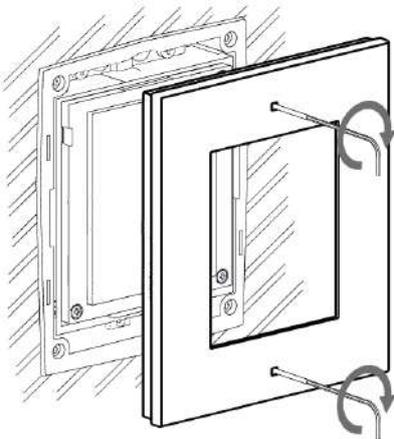
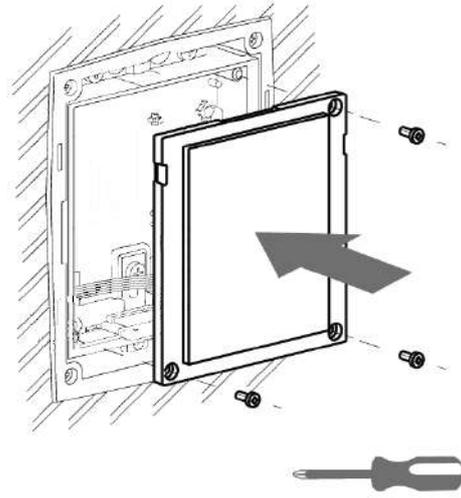
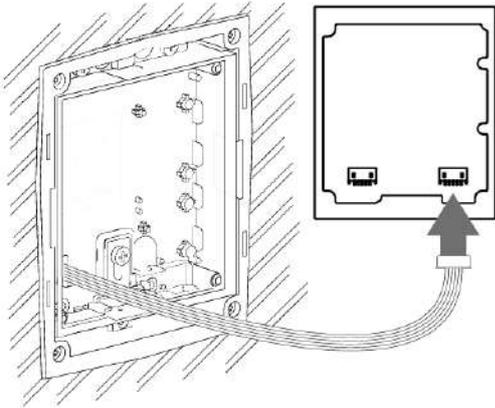


Wall (surface) mounting

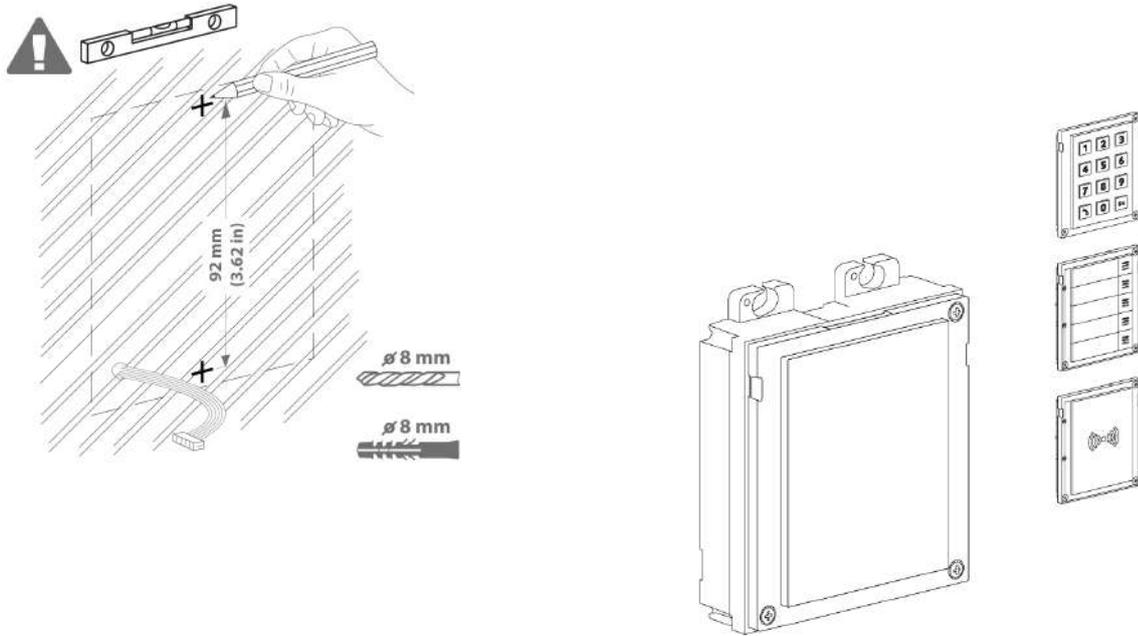

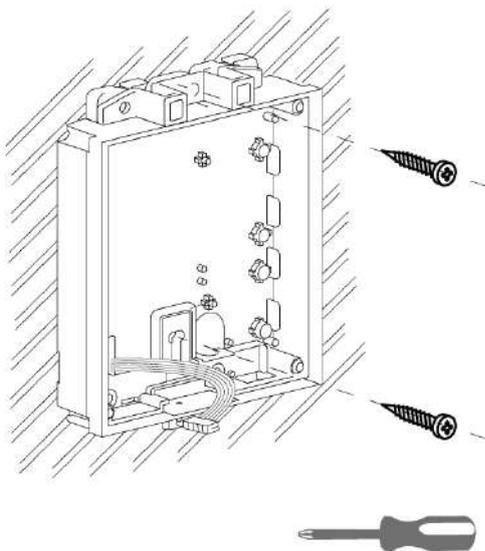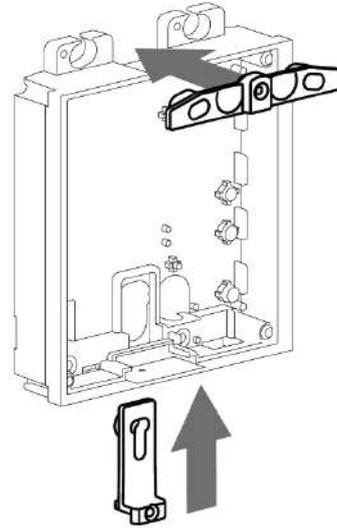
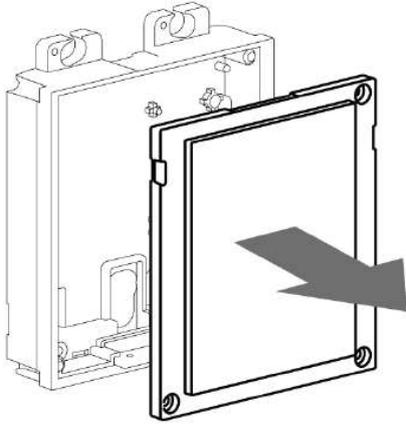




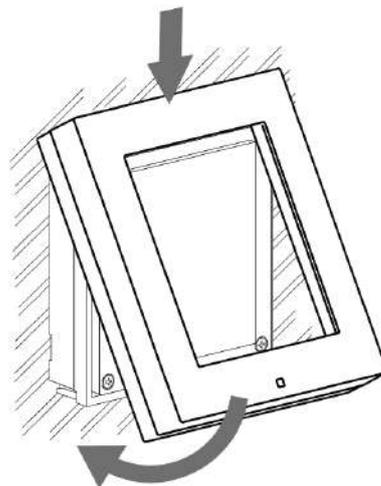
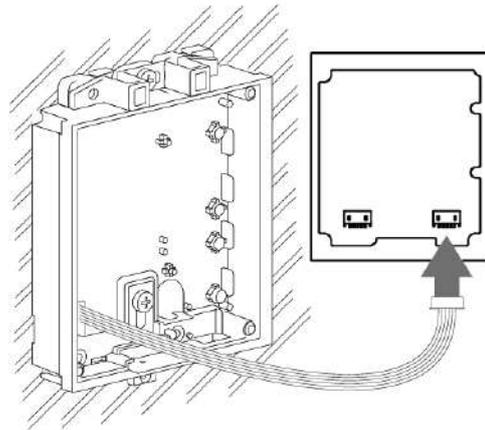


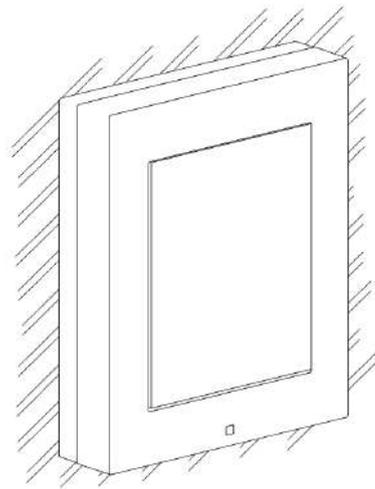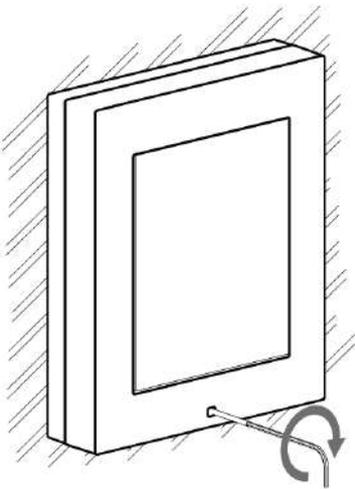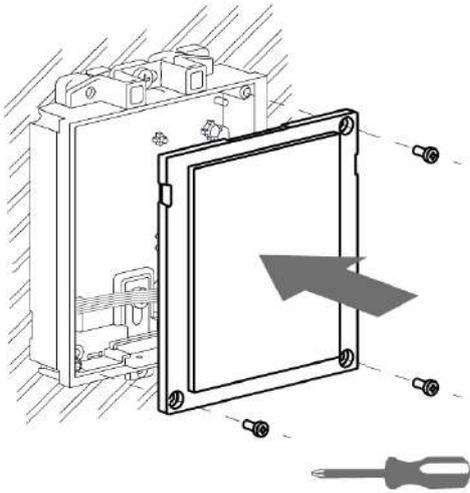



2.2.2 Two Module Box

Flush mounting – classic bricks

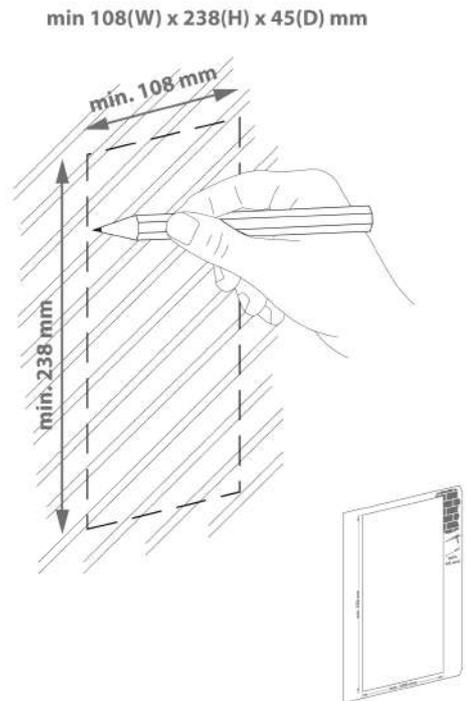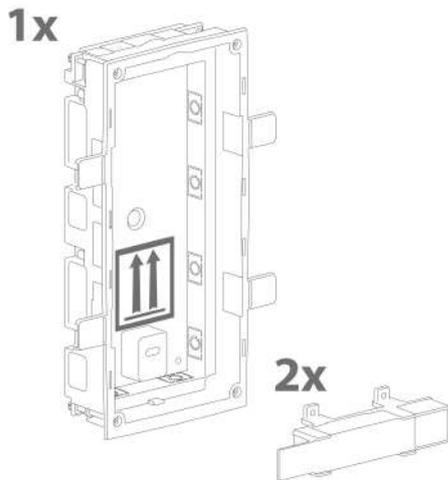


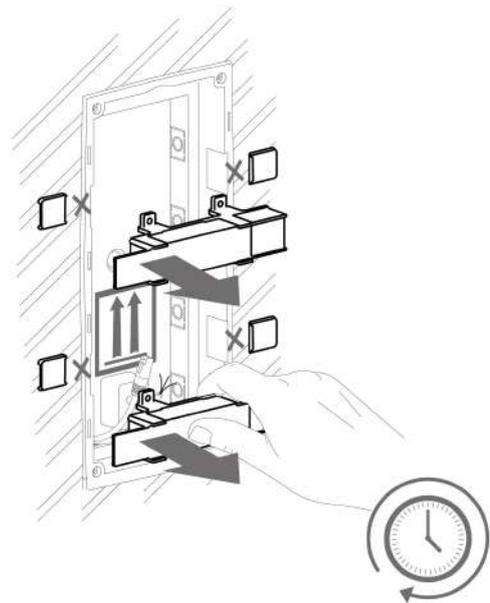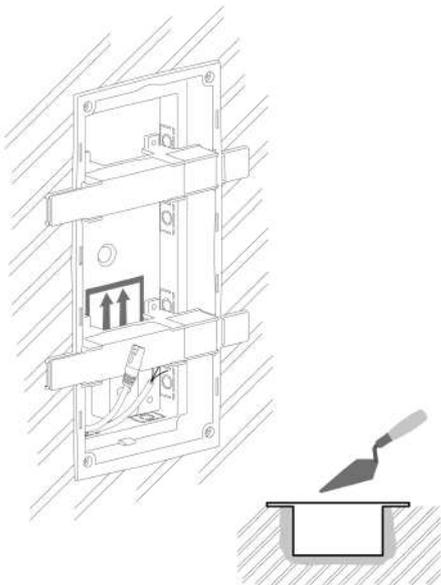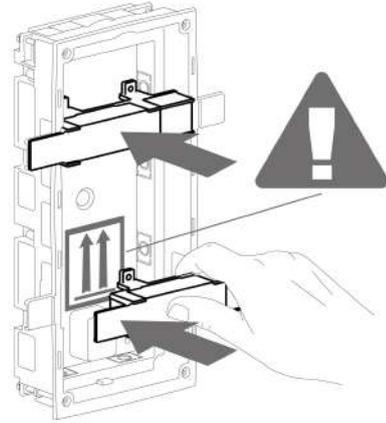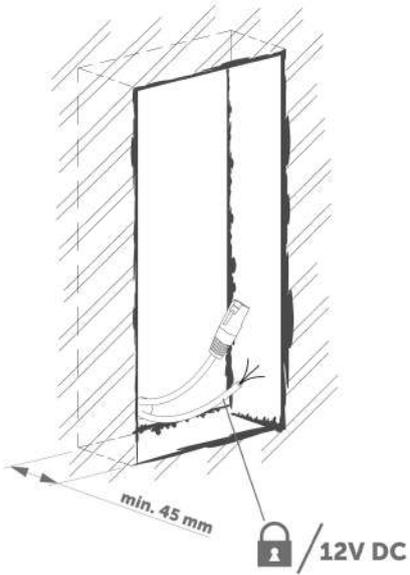

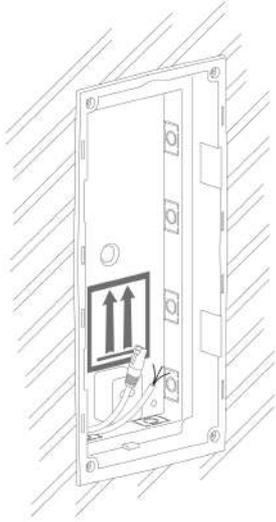

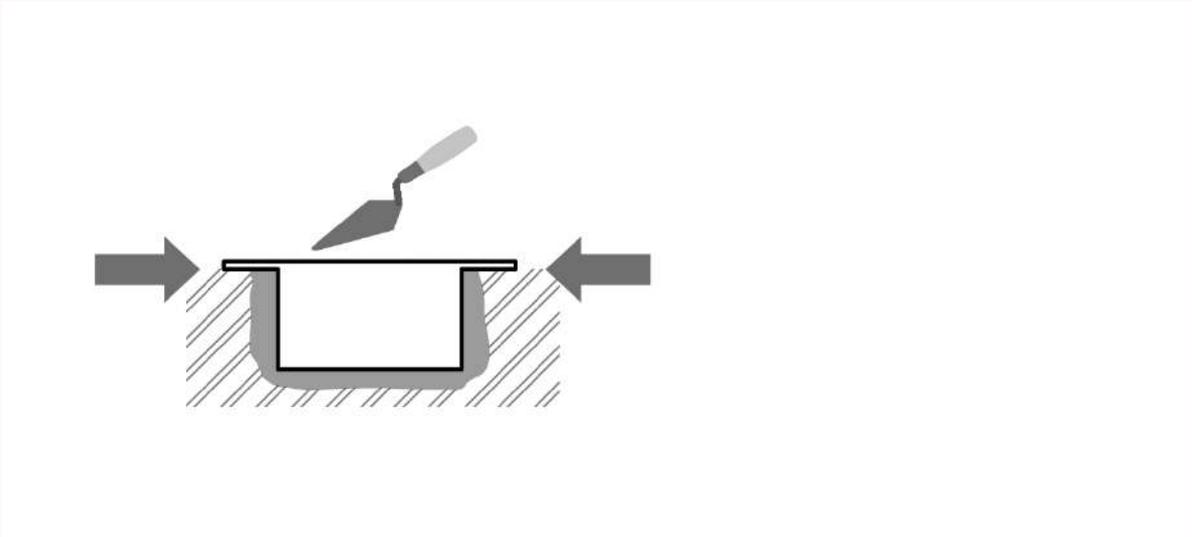Warning


- Make sure that the flush mounting box is slightly above the wall surface not aligning with the wall. A wrong installation may lead to water penetration and subsequent damage of the device. Use the side protrusions to achieve the proper flush mounting.

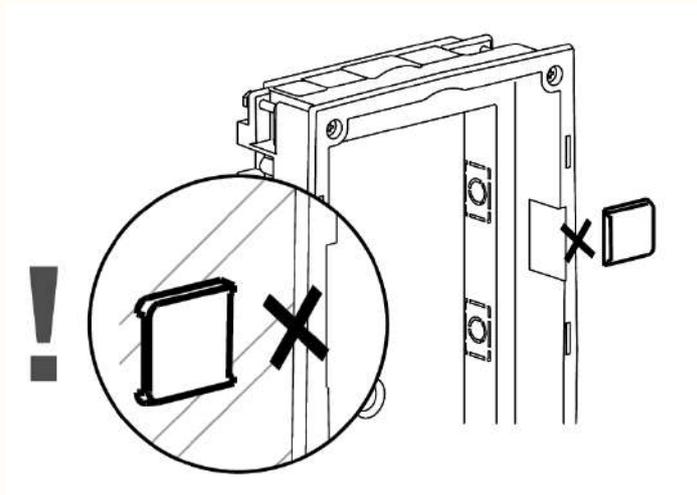Caution


- Break off the side protrusions when the walling material has hardened.





Flush mounting – plasterboard

1x


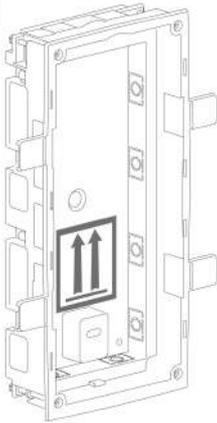





min 108(W) x 238(H) mm


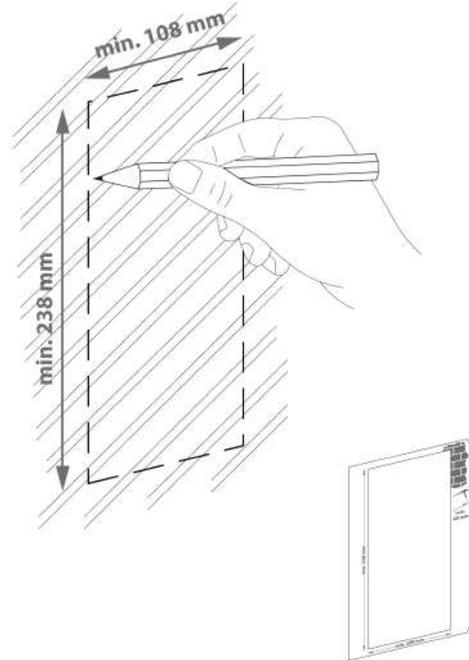


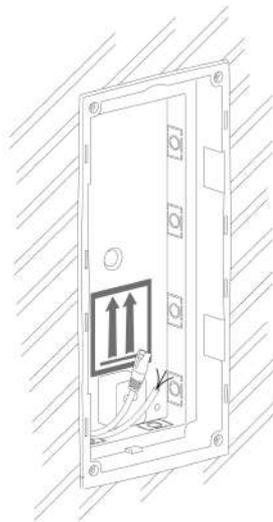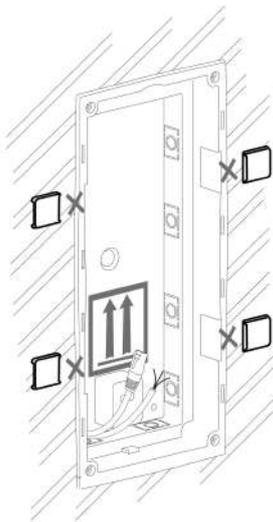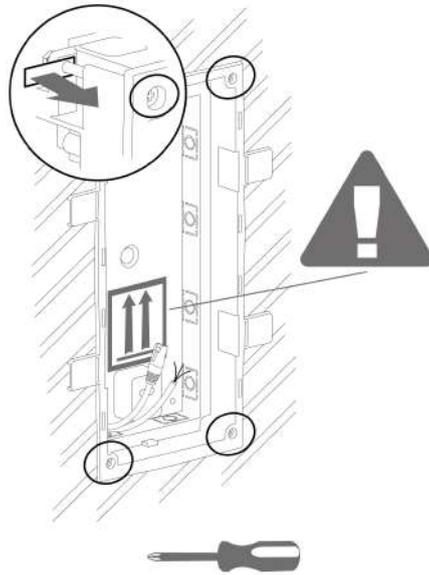
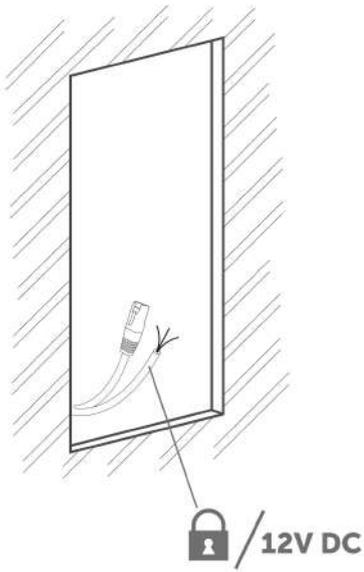


Module flush mounting

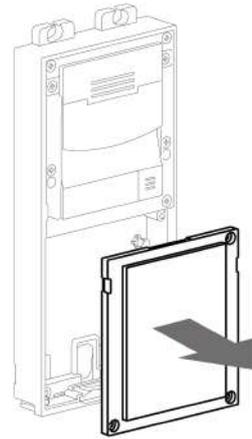
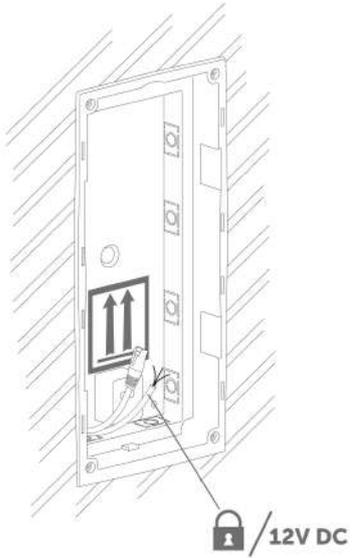



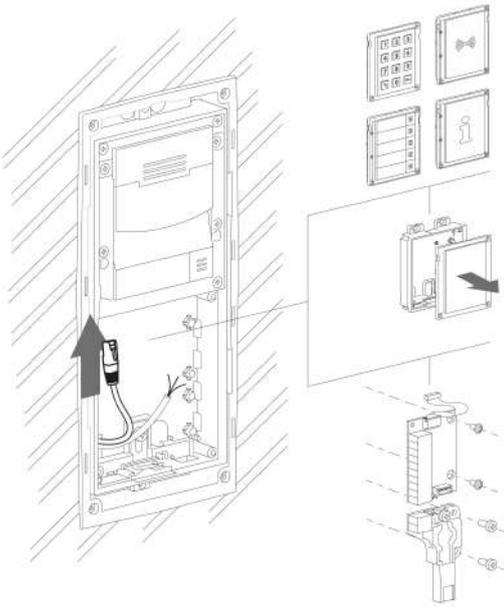
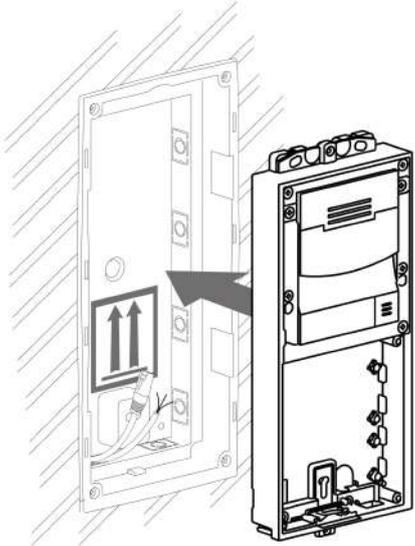
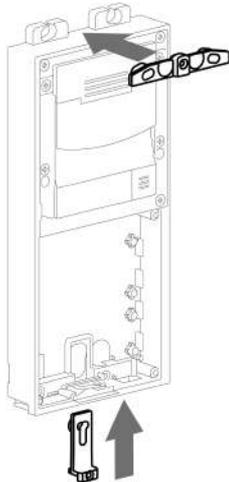


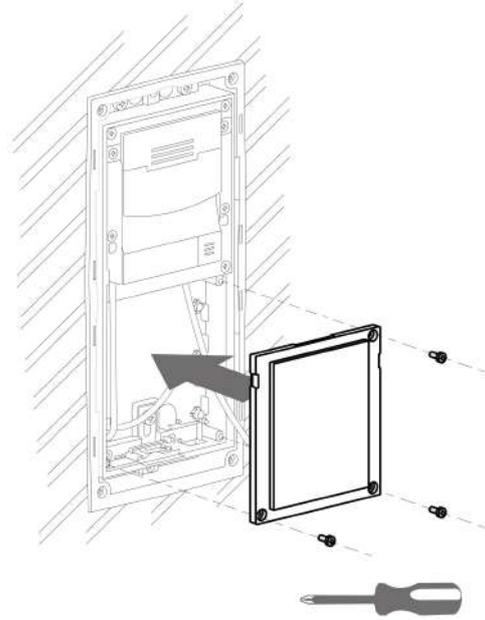
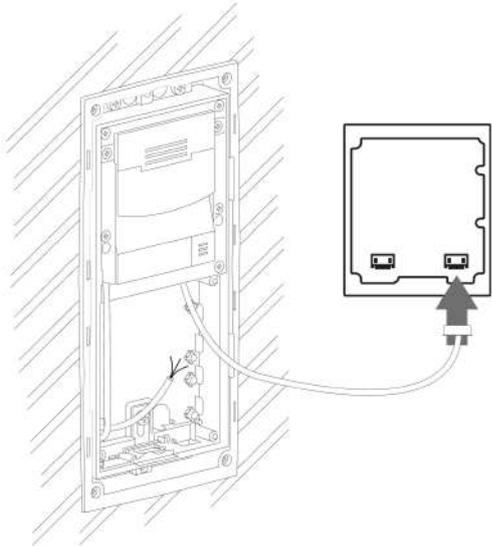


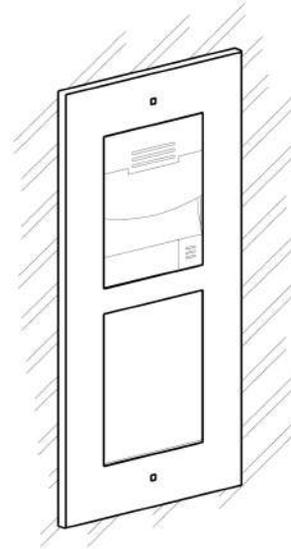
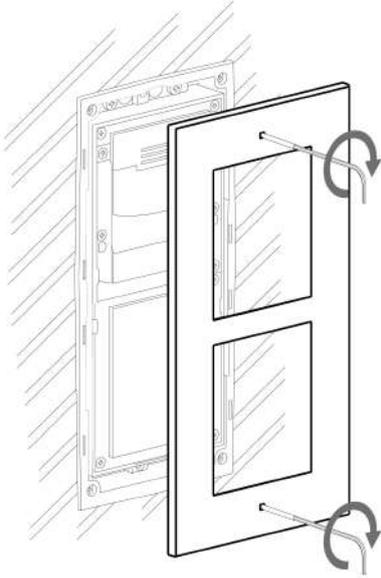


Wall (surface) mounting

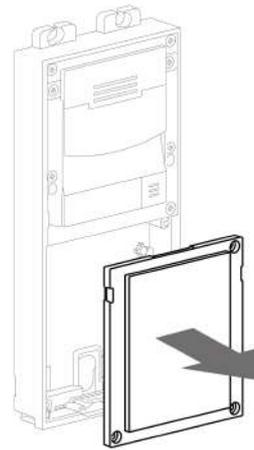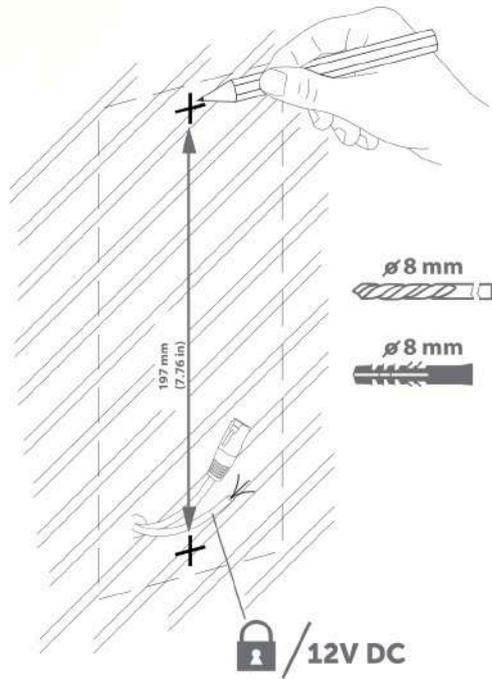

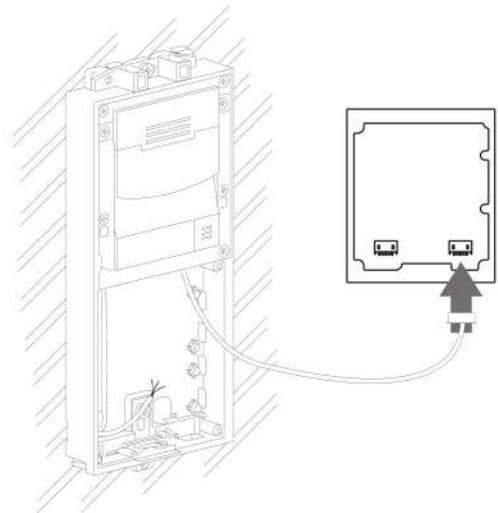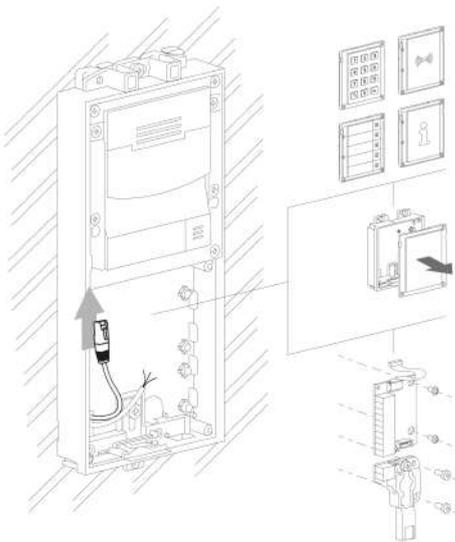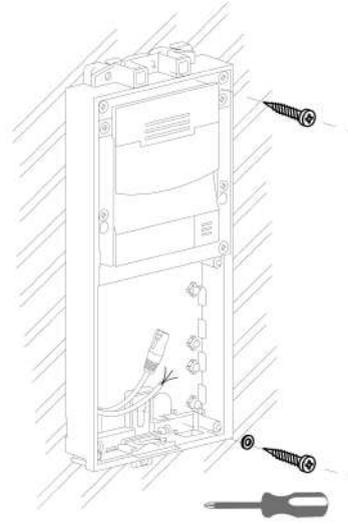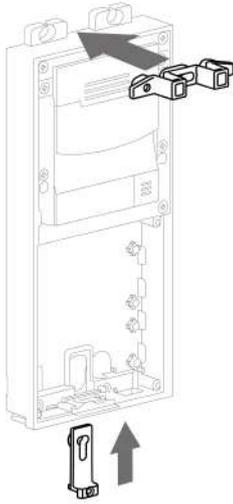

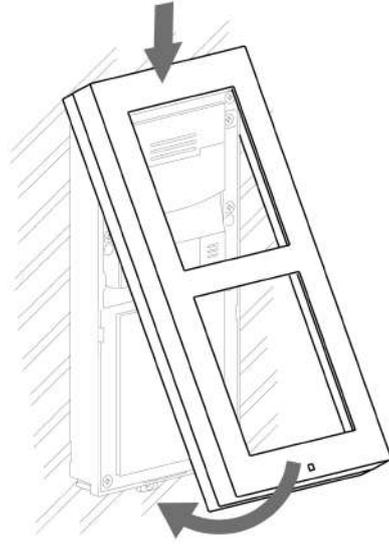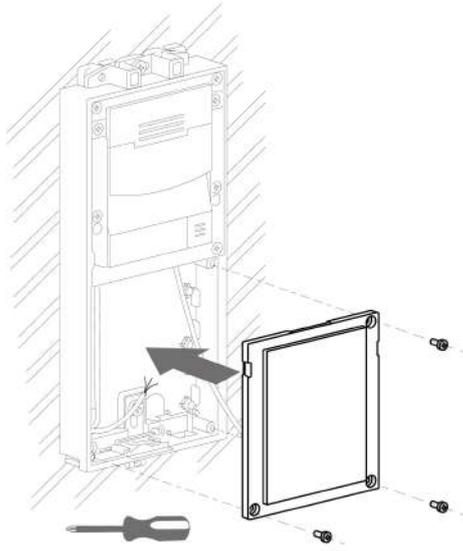

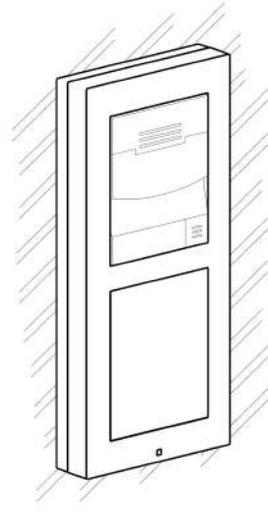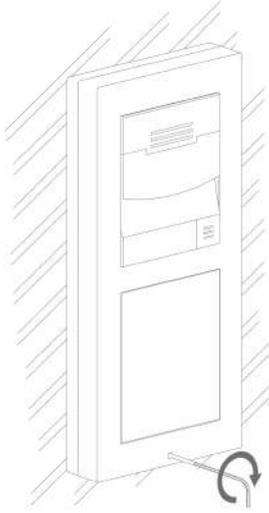

2.2.3 Module dimensions

Frames

- [9155011](#) – Flush mounting frame, 1 module
- [9155012](#) – Flush mounting frame, 2 modules
- [9155021](#) – Surface mounting frame, 1 module
- [9155022](#) – Surface mounting frame, 2 modules

Backplates

- [9155061](#) – 1 module
- [9155062](#) – 2 modules

2.3 Electric Installation

This subsection describes how to install the modules and connect the **2N Access Unit** to the power supply and LAN and how to connect other elements.

Version A – Stand-alone Access Unit

1. Place the **2N Access Unit** on the flush mounting box / pre-drilled holes with dowels and pull the cables through the bottom holes. Pull the Ethernet cable through the bottom hole to the left if necessary.
2. Insert the metal fitting elements up and down and screw the access unit tight. You can level the unit slightly in this mounting type.

Version B – Access Unit with additional module

1. Unscrew the upper part of the additional base – keypad, RFID reader, etc.
2. Use a flat screwdriver to take the upper part out.
3. Slide the additional module to the access unit. Secure its position with small side wedges and screws.
4. Place the assembled modules on the flush mounting box / predrilled holes with dowels and pull the cables through the access unit bottom holes. Feed the Ethernet cable without the connector from the additional module to the access unit base if necessary.

Warning

- With **2N Access Unit 2.0**, modules can be exchanged arbitrarily within a unit. With earlier versions (**2N Access Unit 1.0**), however, the whole unit must be replaced.

2N Access Unit

Power Supply Connection

2N Access Unit can be powered either from an external 12 V / 1 A DC source or directly from the LAN equipped with PoE 802.3af supporting network elements.

External power supply

For reliability reasons, use a 12 V \pm 15 % SELV supply dimensioned to the current consumption as required for feeding of the access unit and connected modules.

Current consumption [A]	Part No.	Available power output [W]
1	91341482E, 91341482US	12

PoE power supply

2N Access Unit is compatible with PoE 802.3af (Class 0–12.95 W) and can be fed directly from the LAN via the compatible network elements. If your LAN does not support this technology, insert a PoE injector, Part No. 91378100, between **2N Access Unit** and the nearest network element. This power supply provides **2N Access Unit** with 12 W for feeding of itself and the connected modules.

Combined power supply

2N Access Unit can be fed from an external power supply and PoE at the same time. In this configuration, the maximum power for the connected modules is available.

LAN Connection

2N Access Unit is connected to the Local Area Network (LAN) via the UTP/STP cable (Cat 5e or higher) terminated with a terminal board as shown in the figure below. As the device is equipped with the Auto-MDIX function, either the straight or crossed cable can be used.

Caution

- We recommend the use of a LAN surge protection.
- We recommend the use of a shielded SSTP Ethernet cable.

⚠ Caution


There may be connectivity problems in **2N Access Unit** version 586v2 if a cable longer than 30 m is used for LAN connection. If this happens, we recommend you to:

- integrate another network element (switch) to shorten the jump
- feed the device from an external 12 V supply
- change the PoE phantom supply (typically TP-LINK) to spare-pair supply – Phihong injector, **Part No. 91378100**
- change the Ethernet bitrate to Half Duplex – 10 mbps


⚠ Warning

- This product cannot be connected directly to the telecommunications lines (or public wireless LANs) of any telecommunication carriers (e.g. mobile communications carriers, fixed communications carriers, or internet providers). In the case of connecting this product to the Internet, be sure to connect it via a router.

UTP Cable Connection to 2N Access Unit 2.0 Terminal Board

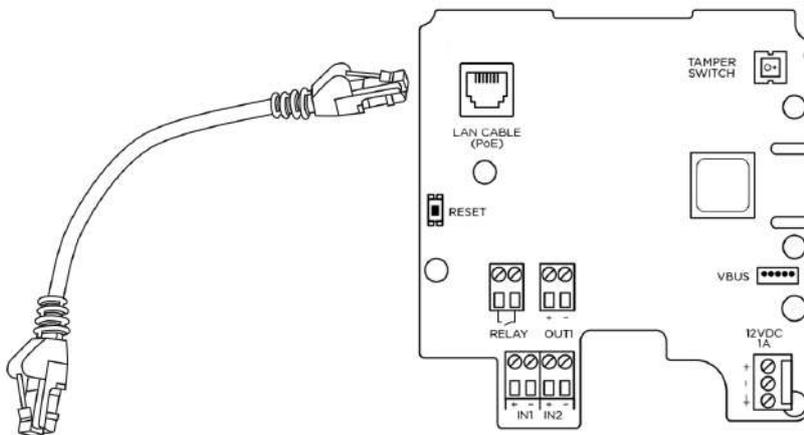

UTP Cable Connection to 2N Access Unit Terminal Board

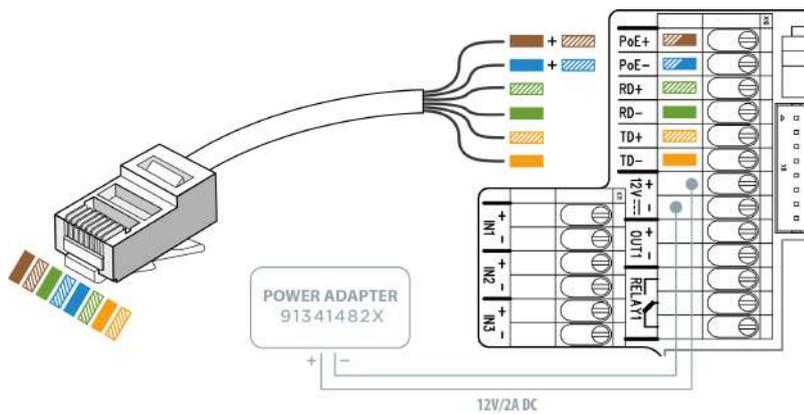


Legend to Figure


PoE, RD, TD	LAN (PoE according to 802.1af) terminals
IN1, IN2, IN3	<p>IN1, IN2 and IN3 (available for 2N Access Unit 1.0 only) terminals used as an input in the passive/active mode (-30 V to $+30\text{ V DC}$) for departure button, open door sensor, ESS etc. connection</p> <ul style="list-style-type: none"> • OFF = open OR $U_{IN} > 1.5\text{ V}$ • ON = closed contact OR $U_{IN} < 1.5\text{ V}$

OUT1	OUT1 active output terminals for connection of 2N® IP Security Relay or electric lock: 8 up to 12 V DC depending on power supply (PoE: 10 V; adapter: power supply voltage minus 2 V), up to 600 mA
RELAY1	<p>PCB version 599v6 and higher:</p> <ul style="list-style-type: none"> RELAY1 terminals with accessible 30 V / 1 A AC/DC NO contact. <p>PCB version 599v3 and 599v4:</p> <ul style="list-style-type: none"> RELAY1 terminals with accessible 30 V / 1 A AC/DC NO/NC contact. Used for connection of non-critical devices only (lights, e.g.). <p>PCB version 586v2 and higher:</p> <ul style="list-style-type: none"> RELAY1 terminals with accessible 30 V / 1 A AC/DC NO/NC contact. Used for connection of non-critical devices only (lights, e.g.).
12 V / 1 A	External supply terminals for 2N Access Unit – 12 V / 1 A
RESET	RESET / FACTORY RESET button
RJ-45	RJ-45 adapter connector – no need to use the PoE, RD and TD terminals for this connector


- Output wiring diagram for Relay terminals

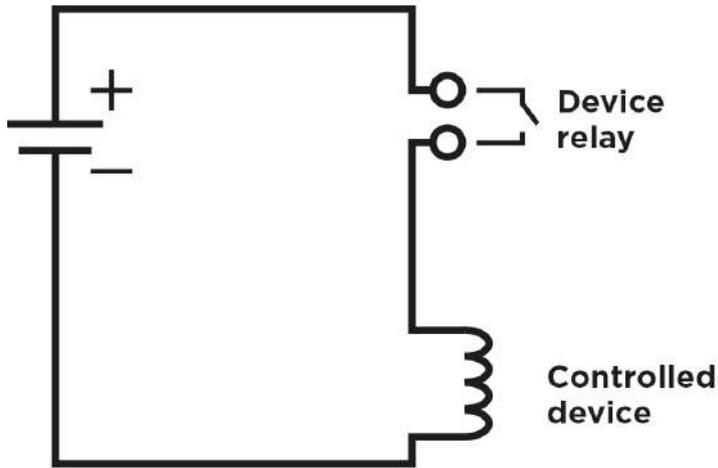

Electric circuit closing diagram for controlled devices with PCB version 599v6 and above

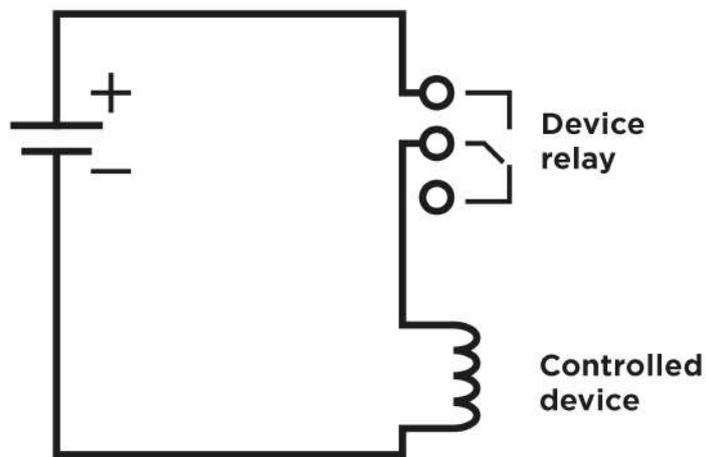


Electric circuit closing diagram for controlled devices with PCB version 586v2 and below

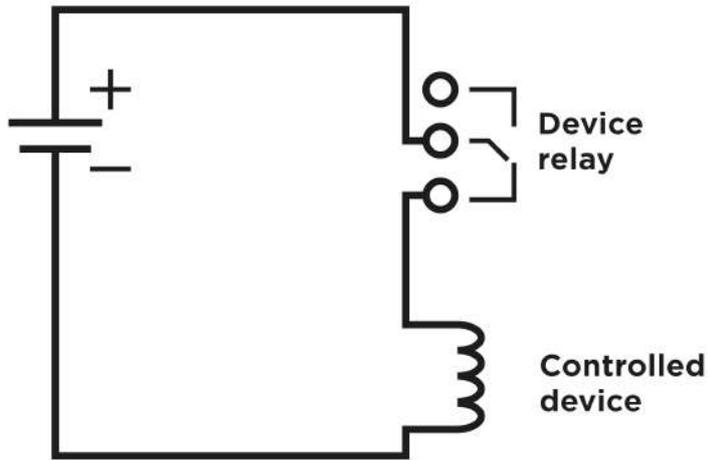


Electric circuit opening diagram for controlled devices with PCB version 586v2 and below

✓ **Tip**

- Wiring diagram of IN1, IN2 and IN3 terminals in active mode

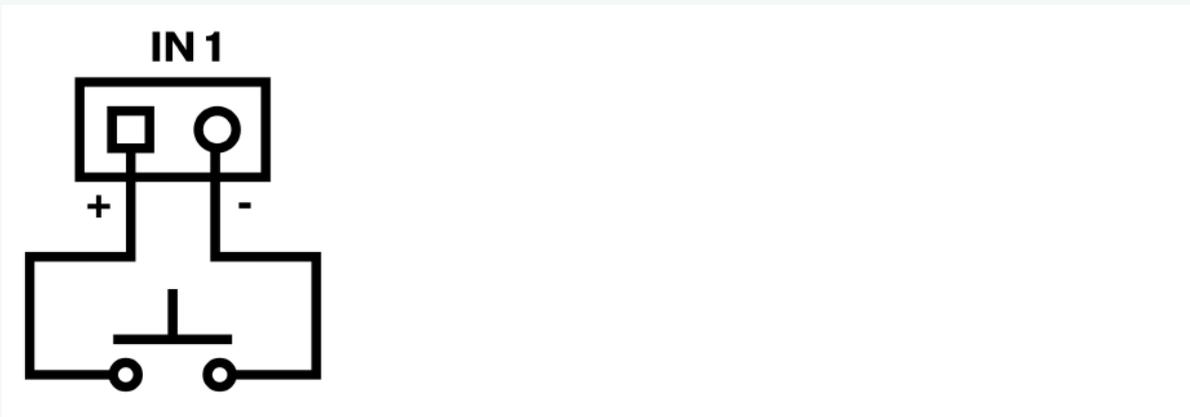

- Wiring diagram of IN1, IN2 and IN3 terminals in passive mode

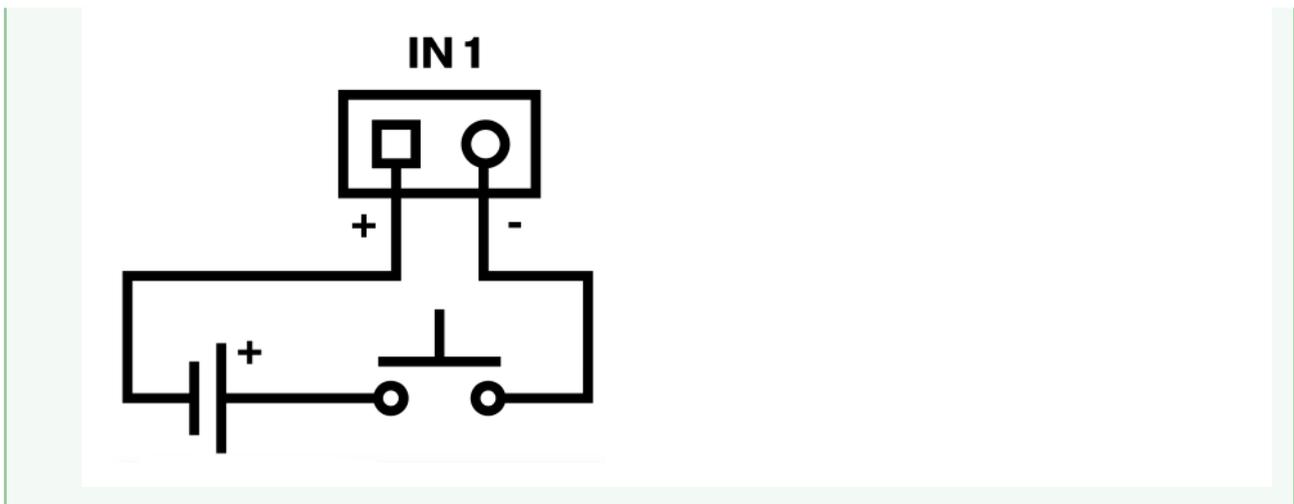


Reset Button

Located among the main unit connectors, the Reset button helps you reset the factory default values, restart the device, find the device IP address and switch the static/dynamic mode.

IP Address Retrieval

Follow the instructions below to **retrieve the current IP address**:

- Press and hold the RESET button.
- Wait until the red and green LEDs go on simultaneously on the device and the acoustic signal  can be heard (approx. 15–35 s).
- Release the RESET button.
- The device automatically announces the current IP address.

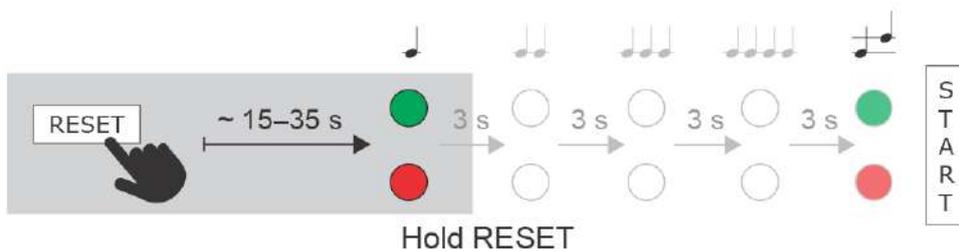

Note

- The delay after pressing RESET till the first light and sound signalling is set to 15–35 s depending on the 2N IP intercom/answering unit model used.
 - 42 s is a valid value for **2N Access Unit**, 15 s is a valid value for **2N Access Unit 2.0**.


Static IP Address Setting

Follow the instructions below to switch on the **Static IP address** mode (DHCP OFF):

- Press and hold the RESET button.
- Wait until the red and green LEDs go on simultaneously on the device and the acoustic signal  can be heard (approx. 15–35 s).
- Wait until the red LED goes off and the acoustic signal  can be heard (approx. for another 3 s).
- Release the RESET button.

The following network parameters will be set after restart:


- IP address: 192.168.1.100
- Network mask: 255.255.255.0
- Default gateway: 192.168.1.1

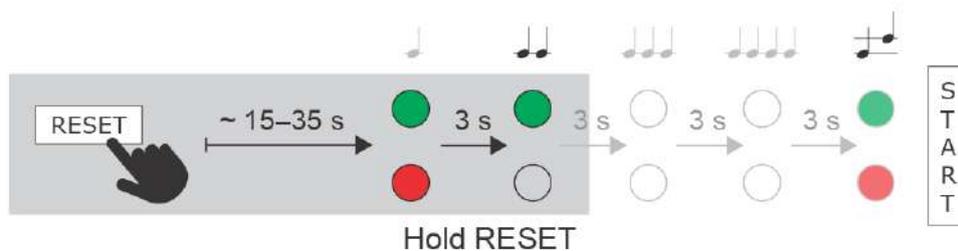

Dynamic IP Address Setting

Follow the instructions below to switch on the **Dynamic IP address** mode (DCHP ON):


- Press and hold the RESET button.
- Wait until the red and green LEDs go on simultaneously on the device and the acoustic signal  can be heard (approx. 15–35 s).

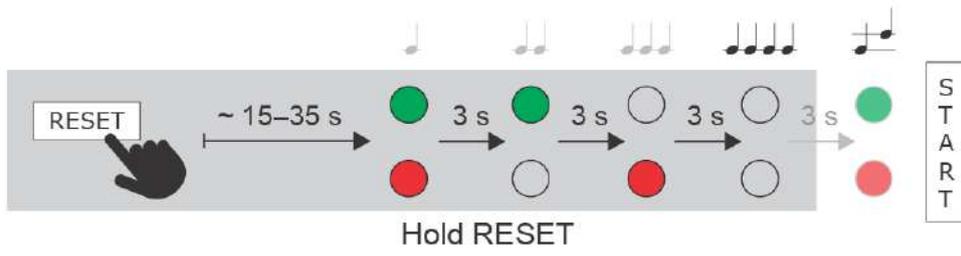

⚠ Caution

- In case of resetting the factory default settings on a device with a firmware version 2.18 or higher, it is necessary to reprogram the **2N® Security Relay** using the instructions from Subsection 2.4.

2N Access Unit is equipped with a **RESET** button. The button is located **in the left-hand part** below the LAN connector in PCB version 599v6, between the **LED indicators** (LED1 and LED2 below) **in the right-hand upper part of the unit** in version **586v2** and **in the middle of the lower part** in version **586v4**. Press the button shortly (< 1 s) to restart the system without changing configuration.

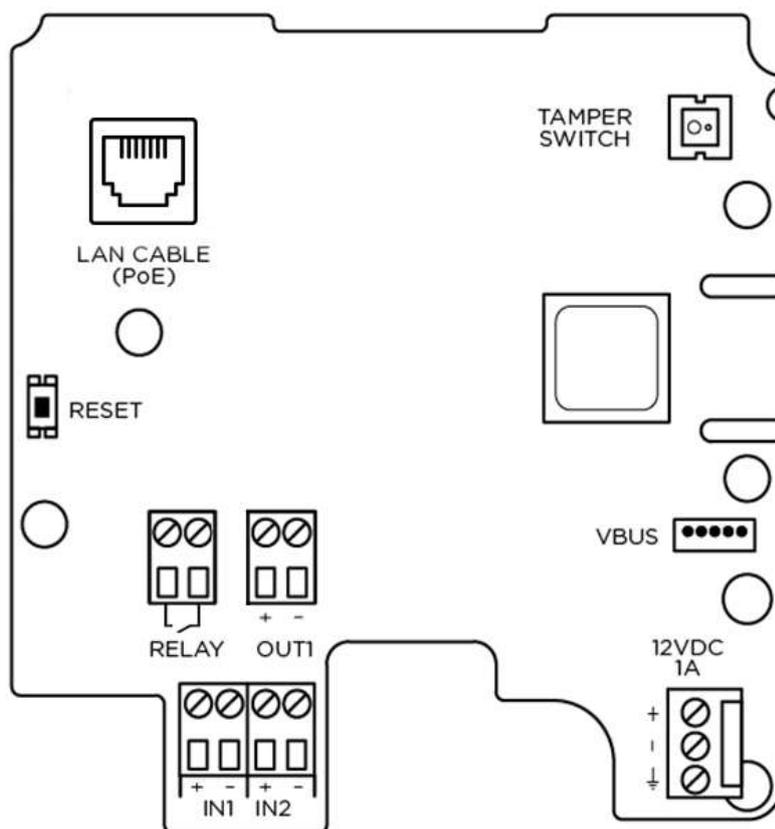


2N Access Unit 2.0 Connectors, PCB Version 599v6


⚠ Caution

- The order of the power supply connector terminals has been changed on and a small grounding plate has been added to the PCB (version **599v6**).


⚠ Warning

- Do not remove the small metal plate under the power supply connector. The plate is necessary for a proper metal frame grounding and its absence may compromise the resistance against electrostatic discharge.

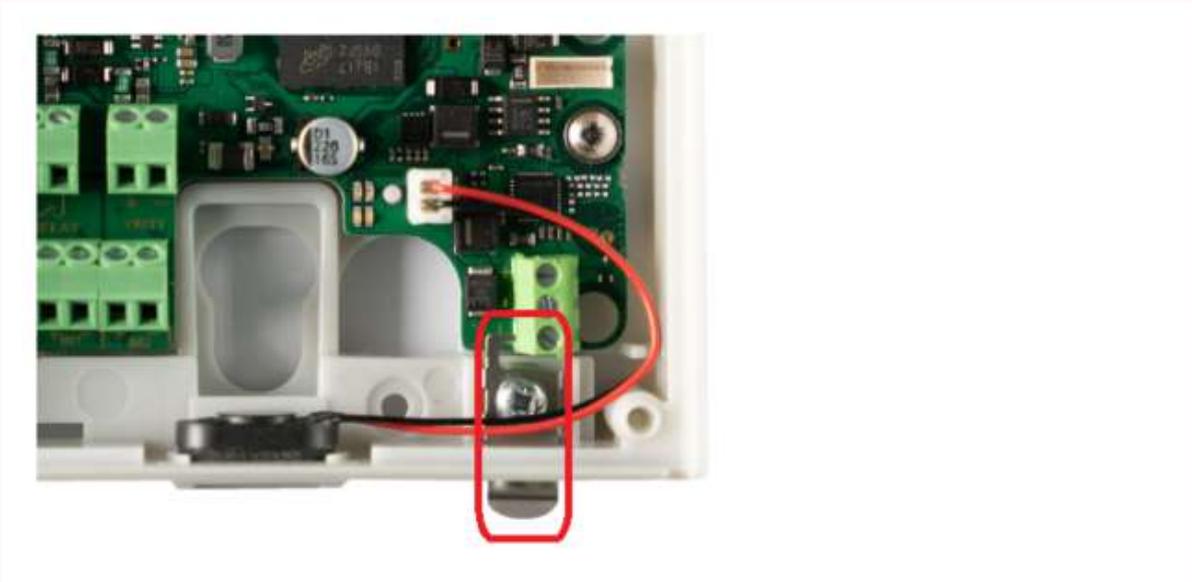


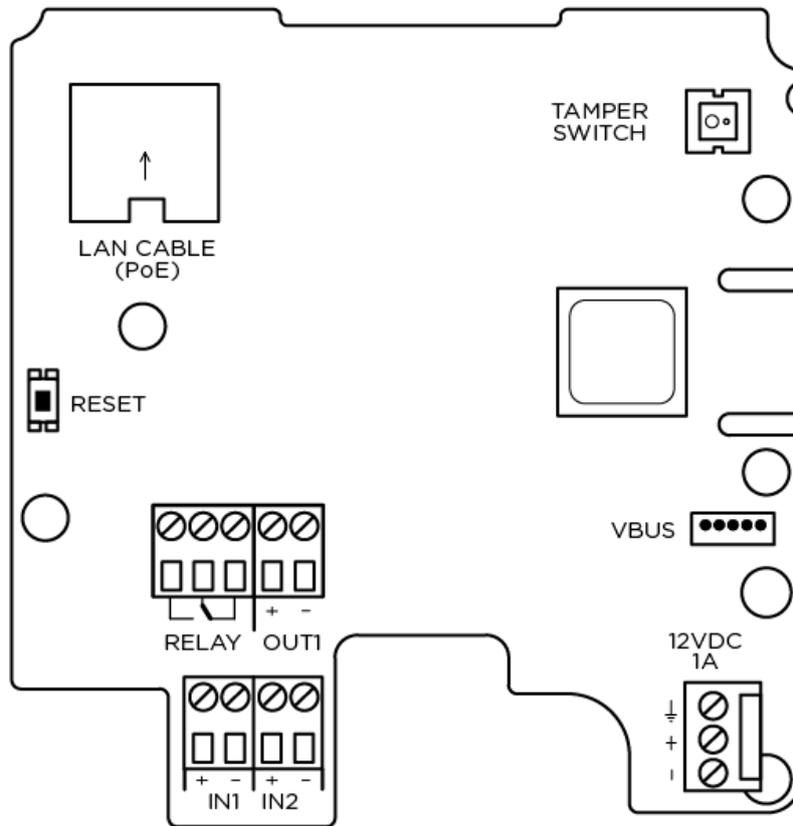

2N Access Unit Connectors, PCB Version 599v3 and 599v4

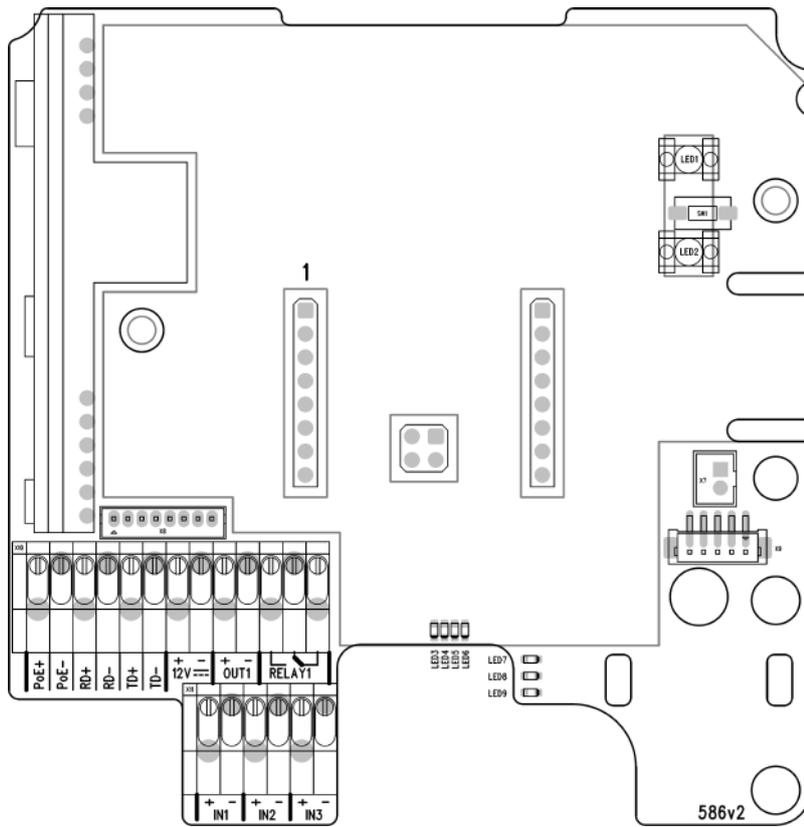

2N Access Unit Connectors, PCB Version 586v2

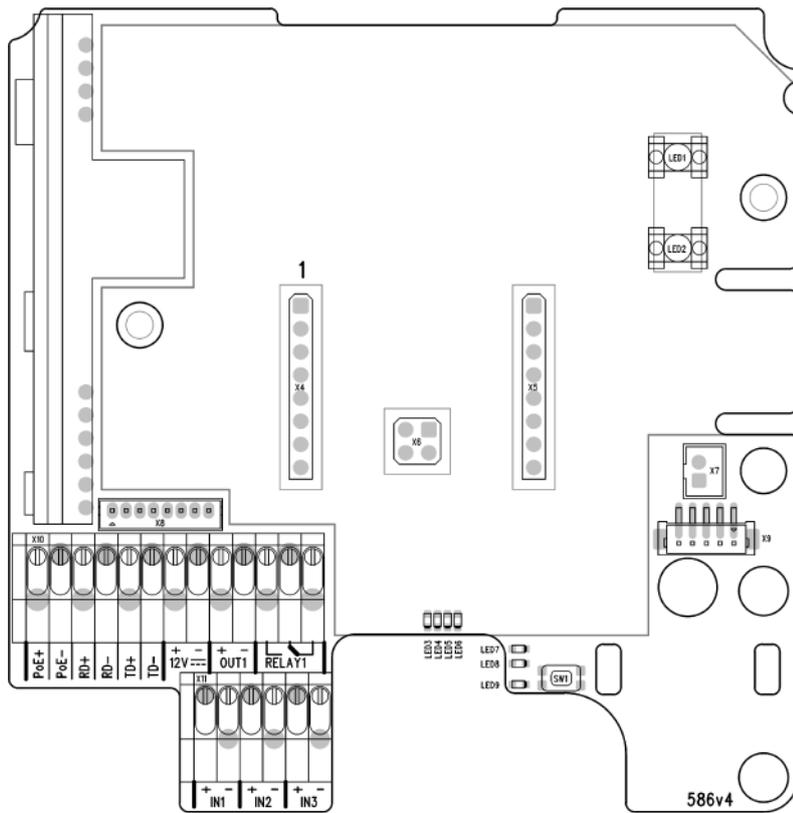

2N Access Unit Connectors, PCB Version 586v4

Device Restart

Press the RESET button shortly (< 1 s) to restart the system without changing configuration.

Note

- The time interval between the short press of RESET and reconnection after restart is 49 s for **2N Access Unit**, 14 s for **2N Access Unit 2.0**.

Available Switches

Location	Name	Description
Basic unit	Relay 1	<p>PCB Version 599v6 and higher:</p> <ul style="list-style-type: none"> • Passive switch: NO contact, up to 30 V / 1 A AC/DC. Used for connection of non-critical devices only (lights, e.g.). <p>PCB Version 599v3 and 599v4:</p> <ul style="list-style-type: none"> • Passive switch: NO/NC contact, up to 30 V / 1 A AC/DC. Used for connection of non-critical devices only (lights, e.g.). <p>PCB Version 586v2 and higher:</p> <ul style="list-style-type: none"> • Passive switch: NO/NC contact, up to 30 V / 1 A AC/DC. Used for connection of non-critical devices only (lights, e.g.).
	Output 1	<p>Active switch output: 8 up to 12 V DC depending on power supply (PoE: 10 V; adapter: power supply voltage minus 2 V), up to 600 mA</p>
	Tamper switch	<p>Helps to secure the system against tampering. The information about unauthorised manipulation with the device can be used in the menu Hardware / Digital Inputs / Tamper Switch, in Automation a it is also logged in the Events.</p>

 **Security**

- The 12V output is used for lock connection. If, however, the unit (2N IP Intercom, 2N Access Unit) is installed where unauthorized tampering may happen, we strongly recommend that the 2N[®] Security Relay (Part No. 9159010) be used for enhanced installation security.

Warning

When you connect a device containing a coil, such as a relay or an electromagnetic lock, it is necessary to protect the intercom output against voltage peak while switching off the induction load. For this way of protection we recommend a 1 A / 1000 V diode (e.g., 1N4007, 1N5407, 1N5408) connected antiparallel to the device.



2.3.1 Overvoltage Protection

Recommendations for Additional Overvoltage Protector Installation


If running:

- a) outside a building,
- b) on/in an outer wall or roof,


the 2N device wiring may be exposed to atmospheric effects resulting in overvoltage that may subsequently damage any devices installed outside the building, on its outer wall or roof. Overvoltage may damage devices connected to these wires and installed inside the building as well. Therefore, we recommend that additional surge protectors be installed on all the wires leading outside buildings, on outer walls or roofs, namely:

- a) as close as possible to the device installed outside the building or on its outer wall/roof,
- b) as close as possible to the point where the wires leave the building.

Examples of overvoltage protection:

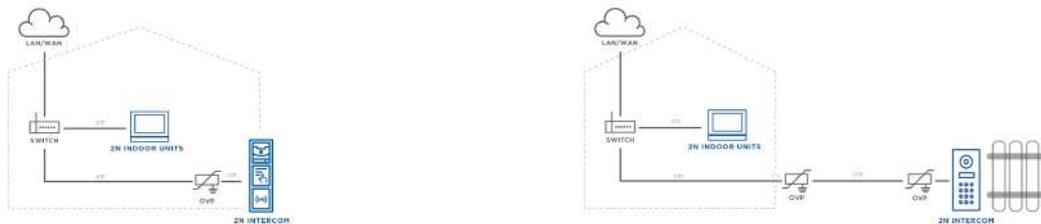

OVP = overvoltage protection

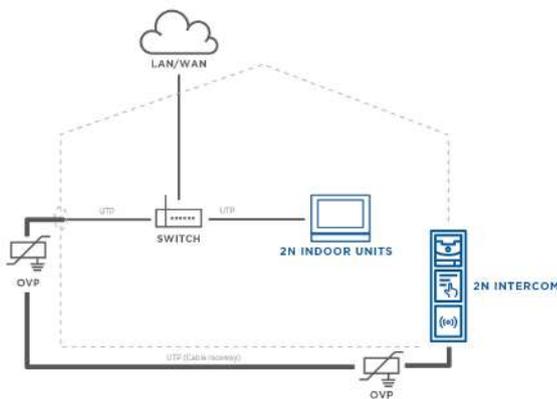

2.4 Extending Module Connection

2N Access Unit allows to connect following extending modules:

- 5 Buttons
- Keypad
- Touch Keypad
- Touch Display
- 125 kHz RFID Card Reader
- 13.56 MHz RFID Card Reader
- 13.56 MHz RFID Card Reader, NFC supporte
- Bluetooth & RFID Reader 125 kHz, 13.56 MHz, NFC
- Bluetooth & RFID Reader 125 kHz, secured 13.56 MHz, NFC
- Touch Keypad & RFID Reader 125 kHz, 13.56 MHz, NFC
- Touch Keypad & RFID Reader 125 kHz, secured 13.56 MHz, NFC
- Bluetooth Reader
- Fingerprint Reader
- I/O Module
- Infopanel
- Wiegand
- Security Relay

Module Bus Interconnection

All the modules that can be connected to **2N Access Unit** are interconnected via a bus. The bus starts on the basic unit and goes over all the modules. The order of modules on the bus is irrelevant. And it also irrelevant which bus connector on the module is used as the input and which is used as the output.

The modules include a 220 mm long bus interconnecting cable; **Part No. 9155037** Wiegand modules and **Part No. 9155034** I/O modules include an 80 mm long bus cable. These two modules can be hidden inside one of the modules described below (Infopanel, Keypad, RFID card reader, Bluetooth) and/or placed freely behind a standalone access unit (in a mounting box, e.g.).

It is possible to order separate bus cables of the lengths of 1 m, 3 m, or 5 m (**Part Nos. 9155050/9155054/9155055**), which are designed for remote **2N Access Unit** module installations. Typically, they are used for an RFID card reader mounted on a wall opposite to the **2N Access Unit** installation. The cable may be used only once on the bus. In extensive installations, the total bus cable length may not exceed 7 m.

Module Power Supply

All the modules connected to **2N Access Unit**, except for the Tamper Switch, are powered from the bus. The available bus power output depends on the power supply type. The basic unit can use a 2 A power supply to increase the bus power available to the modules connected.

Power supply	Specification	Available power output
External supply	12 V ±15% / 1 A	12 W
PoE	802.3af (Class 0–12.95 W)	12 W

The count of modules on the bus is limited by the available power supply output. The maximum count of the modules on the bus is 30.

Basic unit (571v3)	Consumption [W] (Maximum value)		
At relax	1.2		
OUT 1	4.8		
Total	6		

Module	Idle consumption [W] (Minimum value)	Full load [W] (Maximum value)	Special elements[W]
Basic unit (586v3)	1.2	6	
Infopanel (580v2)	0.17	0.64	
Keypad (579v2)	0.20	1.55	
125 kHz RFID card reader (584v2)			
13.56 MHz RFID card reader (583v2)	0.42	0.89	
Bluetooth module (2271v2)	0.15	0.3	
I/O module (577v2)	0.35	0.66	Closed relay 0.13
Wiegand module (581v1)			

Specimen configuration consumption computation:

Module	Minimum consumption [W]	Maximum consumption [W]
Basic unit	1.2	6

Module	Minimum consumption [W]	Maximum consumption [W]
13.56 MHz RFID card reader (583v2)	0.42	0.89
I/O module (577v2)	0.35	0.66
Tamper switch	0	0
Wiegand module (581v1)	x	x
Total	2.07	7.55

It is obvious from the specimen configuration that all the modules have sufficient outputs when an external power supply is used. When a PoE supply is used, the power output is insufficient for all the modules, which results in automatic decrease in backlight level, active output current supply, volume and LED intensity.

Some modules need a specific power output for their specific activities: the I/O module, e.g., requires 0.13 W for relay closing (not included in the minimum consumption).

5 Buttons Module

The Buttons module (**Part No. 9155035**) is used for dialling selected Automation functions.

- The module contains two bus connectors for **2N Access Unit**.
- These two connectors are fully interchangeable and can be used either as inputs from the basic unit or outputs to other modules.
- If this module is the last one on the bus, one of the connectors remains unconnected.
- The module package includes a 220 mm long interconnecting cable.

Keypad Module

The Keypad module (**Part No. 9155031**) is used for a numeric access to the system.

- The module contains two bus connectors for **2N Access Unit**.
- These two connectors are fully interchangeable and can be used either as inputs from the basic unit or outputs to other modules.
- If this module is the last one on the bus, one of the connectors remains unconnected.
- The module package includes a 220 mm long interconnecting cable.

Touch Keypad

The Touch keypad (**Part No. 9155047**) provides a numerical input in the system.

- The module contains two **2N Access Unit** bus connectors.
- These two connectors are fully interchangeable and can be used both as inputs from the main unit and outputs to other modules.

- If this module is the last one on the bus, one of the connectors remains unconnected.
- The module package includes a 220 mm long interconnecting cable.

Touch Display

The **Touch display (Part No. 9155036)** can be used as:

- Infopanel module – displays user defined image sequences
- Keypad module – virtual touch keypad
- Button module – virtual phone directory

Module connection options:

- The module contains two **2N Access Unit.** bus connectors.
- These two connectors are fully interchangeable and can be used both as inputs from the basic unit and outputs to other modules.
- If this module is the last one on the bus, one of the connectors remains unconnected.
- The module package includes a 220 mm long interconnecting cable.

Technical specification:

- Resolution: 320 px x 214 px H x V
- Resolution slideshow: 214 px x 214 px
- Contrast ratio: 400
- Brightness: 350 cd/m²
- Weight: 280 g
- Working temperature: -20 °C – 60 °C
- Resistance level: IK07

Caution

- The display is not supported on Access Unit 1.0 from FW version 2.27.

125 kHz RFID Card Reader Module

The 125kHz RFID card reader module (**Part No. 9155032**) is used for reading RFID card Ids in the 125 kHz band.

- The module contains two bus connectors for **2N Access Unit**.
- These two connectors are fully interchangeable and can be used either as inputs from the basic unit or outputs to other modules.
- If this module is the last one on the bus, one of the connectors remains unconnected.
- The module package includes a 220 mm long interconnecting cable.

The following RFID cards can be read:

- EM4xxx

13.56 MHz RFID Card Reader, NFC support

The 13.56 MHz RFID card reader (**Part No. 9155040**) is used for reading RFID card Ids in the 13.56 MHz band.

- The module contains two bus connectors.
- These two connectors are fully interchangeable and can be used both as inputs from the main unit and outputs to other modules.
- If this module is the last one on the bus, one of the connectors remains unconnected.
- The module package includes a 220 mm long interconnecting cable.

The following RFID cards can be read (only the card serial number is read):

- ISO14443A (Mifare, DESFire)
- PicoPass (HID iClass)
- FeliCa
- ST SR(IX)
- **2N[®] Mobile Key**

Bluetooth & RFID Reader 125 kHz, 13.56 MHz, NFC

Bluetooth with a combined 125 kHz and 13.56 MHz card reader module (**Part No. 9155082**) is used for Smartphone/2N[®] Mobile Key tablet/card access control, making user calls and/or other functions.

- NFC – a licensed function, for 2N[®] Mobile Key for Android only.
- The module contains two bus connectors.
- These two connectors are fully interchangeable and can be used either as inputs from the basic unit or outputs to other modules.
- If this module is the last one on the bus, one of the connectors remains unconnected.
- The module package includes a 220 mm long interconnecting cable.

The following RFID cards can be read:

- **125 kHz**

- EM4xxx
- **13.56 MHz**
 - ISO14443A (Mifare, DESFire)
 - PicoPass (HID iClass)
 - FeliCa
 - ST SR(IX)
 - **2N[®] Mobile Key**

 **Tip**

- To accelerate card reading, you are recommended to select the card types used by the user in the module settings.

Bluetooth & RFID Reader 125 kHz, secured 13.56 MHz, NFC

Bluetooth with a combined 125 kHz and secured 13.56 MHz card reader (**Part No. 9155084**) is used for Smartphone/2N[®] Mobile Key tablet/card access control, making user calls and/or other functions.

- NFC – a licensed function, for 2N[®] Mobile Key for Android only.
- The module contains two bus connectors.
- These two connectors are fully interchangeable and can be used either as inputs from the basic unit or outputs to other modules.
- If this module is the last one on the bus, one of the connectors remains unconnected.
- The module package includes a 220 mm long interconnecting cable.

The following RFID cards can be read:

- **125 kHz**
 - EM4xxx
- **13.56 MHz**
 - ISO14443A (Mifare, DESFire)
 - PicoPass (HID iClass)
 - FeliCa
 - ST SR(IX)
 - **2N[®] Mobile Key**
 - HID SE (Seos, iClass SE, Mifare SE)

 **Tip**

- To accelerate card reading, you are recommended to select the card types used by the user in the module settings.

Touch Keypad & RFID Reader 125 kHz, 13.56 MHz, NFC

The touch keypad with a combined 125 kHz and 13.56 MHz card reader (**Part No. 9155081**) is used for code/card access control, making user calls and/or other functions. The keypad surface is very sensitive yet weatherproof at the same time.

- NFC – a licensed function, for 2N[®] Mobile Key for Android only.
- The module contains two bus connectors.
- These two connectors are fully interchangeable and can be used either as inputs from the basic unit or outputs to other modules.
- If this module is the last one on the bus, one of the connectors remains unconnected.
- The module package includes a 220 mm long interconnecting cable.

The following RFID cards can be read:

- **125 kHz**
 - EM4xxx
- **13.56 MHz**
 - ISO14443A (Mifare, DESFire)
 - PicoPass (HID iClass)
 - FeliCa
 - ST SR(IX)
- **2N[®] Mobile Key**

✓ Tip

- To accelerate card reading, you are recommended to select the card types used by the user in the module settings.

Touch Keypad & RFID Reader 125 kHz, secured 13.56 MHz, NFC

The touch keypad with a combined 125 kHz and secured 13.56 MHz card (**Part No. 9155083**) reader is used for code/card access control, making user calls and/or other functions. The keypad surface is very sensitive yet weatherproof at the same time.

- NFC – a licensed function, for 2N[®] Mobile Key for Android only.
- The module contains two bus connectors.
- These two connectors are fully interchangeable and can be used either as inputs from the basic unit or outputs to other modules.
- If this module is the last one on the bus, one of the connectors remains unconnected.
- The module package includes a 220 mm long interconnecting cable.

The following RFID cards can be read:

- **125 kHz**
 - EM4xxx
- **13.56 MHz**

- ISO14443A (Mifare, DESFire)
- PicoPass (HID iClass)
- FeliCa
- ST SR(IX)
- **2N[®] Mobile Key**
- HID SE (Seos, iClass SE, Mifare SE)

 **Tip**

- To accelerate card reading, you are recommended to select the card types used by the user in the module settings.

Touch Keypad & Bluetooth & RFID Reader 125 kHz, 13.56 MHz, NFC

The touch keypad with Bluetooth and a combined 125 kHz and secured 13.56 MHz card reader (**Part No. 91550947**) is one of the **2N[®] IP Verso** intercom elements and is used for code/card access control using a smartphone or tablet with the **2N[®] Mobile Key** application, making user calls and/or control of other functions. The keypad surface is very sensitive yet weatherproof at the same time.

- NFC – a licensed function, for **2N[®] Mobile Key** for Android only.
- The module contains two bus connectors.
- These two connectors are fully interchangeable and can be used either as inputs from the main unit or outputs to other modules.
- If this module is the last one on the bus, one of the connectors remains unconnected.
- The module package includes a 220 mm long interconnecting cable.

The following RFID cards can be read:

- **125 kHz**
 - EM4xxx
- **13.56 MHz**
 - ISO14443A (Mifare, DESFire)
 - PicoPass (HID iClass)
 - FeliCa
 - ST SR(IX)
 - **2N[®] Mobile Key**

Touch Keypad & Bluetooth & RFID Reader 125kHz, Secured 13.56 MHz, NFC

The touch keypad with Bluetooth and a combined 125 kHz and secured 13.56 MHz card reader (**Part No. 91550947-S**) is one of the **2N[®] IP Verso** intercom elements and is used for code/card access control using a smartphone or tablet with the **2N[®] Mobile Key** application, making user

calls and/or control of other functions. The keypad surface is very sensitive yet weatherproof at the same time.

- NFC – a licensed function, for **2N® Mobile Key** for Android only.
- The module contains two bus connectors.
- These two connectors are fully interchangeable and can be used either as inputs from the main unit or outputs to other modules.
- If this module is the last one on the bus, one of the connectors remains unconnected.
- The module package includes a 220 mm long interconnecting cable.

The following RFID cards can be read:

- **125 kHz**
 - EM4xxx
- **13.56 MHz**
 - ISO14443A (Mifare, DESFire)
 - PicoPass (HID iClass)
 - FeliCa
 - ST SR(IX)
 - **2N® Mobile Key**
 - HID SE (Seos, iClass SE, Mifare SE)

Caution

Press the button with a key symbol on the reader (without entering numbers before) of the touch keypad & Bluetooth & RFID reader module to start Bluetooth authentication.

Bluetooth Reader

The Bluetooth reader module (**Part No. 9155046**) helps authenticate and subsequently open doors using Android and iOS based smartphones via the Bluetooth protocol 4.0 as RFID card replacement. Install the **2N[®] Mobile Key** application from [Google Play](#) and [Appstore](#) to make authentication work properly. The application requires phones with Android OS 6.0 Marshmallow and higher and iOS 12 and higher.

- The module contains two **2N Access Unit** bus connectors.
- The two connectors are fully interchangeable and can be used both as inputs from the main unit or outputs to other modules.
- If this module is the last one on the bus, one of the connectors remains unconnected.
- The package includes a 220 mm long interconnecting cable.
- The module uses the 2.4 GHz frequency.

IDs from the following smart phones can be read:

- **Android 6.0 and higher**
- **iPhone 4S and higher with iOS 12 and higher**

Fingerprint Reader

The **Fingerprint reader** is used for automated verification of human fingers for access control and intercom control.

- The module contains two **2N Access Unit** bus connectors.
- These two connectors are fully interchangeable and can be used both as inputs from the main unit and outputs to other modules.
- If this module is the last one on the bus, one of the connectors remains unconnected.
- The module package includes a 220 mm long interconnecting cable.

Important module properties:

- FBI PIV and Mobile ID certification – FAP20
- Durable glass touch surface
- Rejects spoof fingerprints
- -20 to 55 °C operating temperature range
- 0–90% relative humidity, noncondensing

Warning

- The fingerprint reader is not intended for direct sunlight installation sites. Installation at such places may result in erroneous behavior.


Note

- A higher moisture may deteriorate finger papillary line scanning. You are advised to dry your finger and the reader scanning surface for successful authentication.
- Fingerprint scanning can be rather difficult with older persons whose papillary lines are no so distinct (lower finger elasticity due to age requires a higher pressure for scanning and the fingerprint might be blurred).

I/O Module

The I/O module (**Part No. 9155034**) is used for extending of the number of inputs and outputs.

- The module contains two bus connectors for **2N Access Unit**.
- These two connectors are fully interchangeable and can be used either as inputs from the basic unit or outputs to other modules.
- If this module is the last one on the bus, one of the connectors remains unconnected.
- The module package includes an 80 mm long interconnecting cable.
- The inputs / outputs are addressed as follows: **<module_name>.<input/output_name>**, e.g. module5.relay1. Configure the module name in the Module name parameter in the Hardware / Extenders menu.

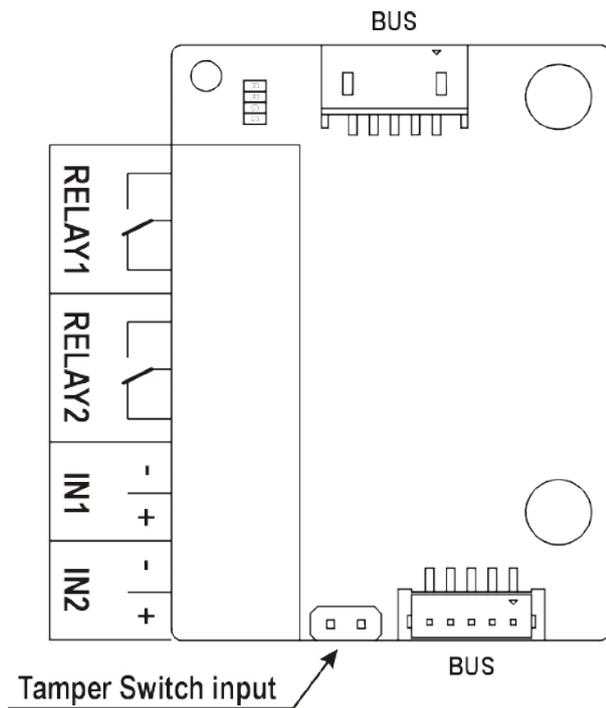

RELAY1	RELAY1 terminals with accessible 30 V / 1 A AC/DC NO/NC contact
--------	---

RELAY2	RELAY2 terminals with accessible 30 V / 1 A AC/DC NO/NC contact
IN1	IN1 terminals for input in passive/ active mode (-30 V to +30 V DC) OFF = open or $U_{IN} > 1.5 \text{ V}$ ON = short-circuit or $U_{IN} < 1.5 \text{ V}$
IN2	IN2 terminals for input in passive/active mode (-30 V to +30 V DC) OFF = open or $U_{IN} > 1.5 \text{ V}$ ON = short-circuit or $U_{IN} < 1.5 \text{ V}$
TAMPER	Tamper switch input, Part No. 9155038

Infopanel Module

The Infopanel module (**Part No. 9155030**) is used for inserting and backlighting of printed information.


- The module contains two bus connectors for **2N Access Unit**.
- These two connectors are fully interchangeable and can be used either as inputs from the basic unit or outputs to other modules.
- If this module is the last one on the bus, one of the connectors remains unconnected.
- The module package includes a 220 mm long interconnecting cable.
- Name tag dimensions: 69.2 (W) x 86.7 (H) mm (dimensional tolerance: +0; -0.5 mm).
- For the printing template refer to www.2n.cz

Wiegand Module

The Wiegand module (**Part No. 9155037**) helps connect an external Wiegand device (RFID card reader, fingerprint or other biometric data reader) and/or connect **2N Access Unit** to an external security exchange. All the inputs and outputs are galvanically isolated from **2N Access Unit** with the insulation strength of 500 V DC.

- The module contains two bus connectors for **2N Access Unit**.
- These two connectors are fully interchangeable and can be used either as inputs from the basic unit or outputs to other modules.
- If this module is the last one on the bus, one of the connectors remains unconnected.
- The module package includes an 80 mm long interconnecting cable.
- Configure the module name in the Module name parameter in the Hardware / Extenders menu.


- The LED IN input is addressed as follows: **<module_name>.<input1>**, e.g. module2.input1.
- The Tamper input is addressed as follows: **<module_name>.<tamper>**, e.g. module2.tamper.
- The LED OUT (negated) output is addressed as follows: **<module_name>.<output1>**, e.g. module2.output1.

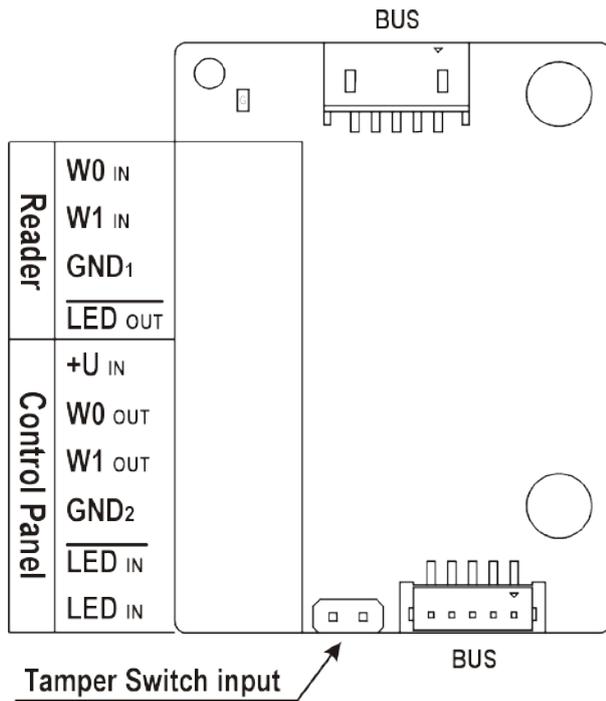


Reader	W0 IN, W1 IN, GND1	Isolated 2-wire WIEGAND IN
	LEDOUT	Isolated open LED OUT switched against GND1(up to 24 V / 50 mA)
Control Panel	+UIN	+U (5 to 15 V DC) WIEGAND OUT power supply input
	W0OUT, W1 OUT, GND2	Isolated 2-wire WIEGAND OUT
	LEDIN (negated)	Isolated input for open LED IN, input activated by GND ₂

	LEDIN	Isolated input for open LED IN, input activated by +U
	G	active supply LED indicator +UINWIEGAND OUT
	TAMPER	Tamper switch input, Part No. 9155038

Wiegand Input Technical Parameters	
Current	5 mA
Input resistance	680 Ohm
Pulse length	50 μ s
Delay between pulses	approx. 2 ms

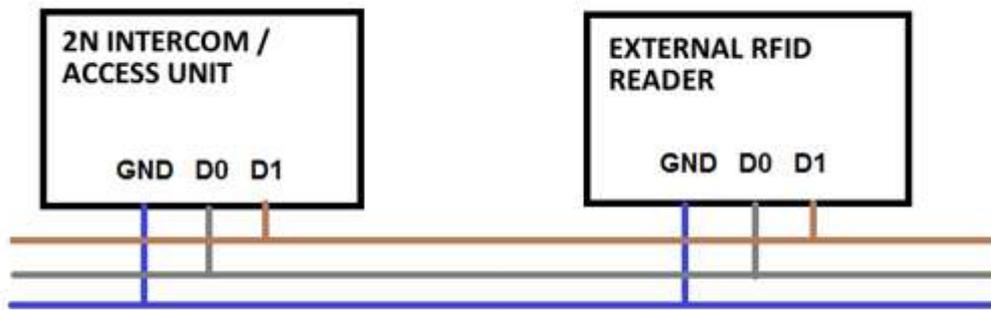

Recommended Wiring Diagram for Reader with Bus Driver

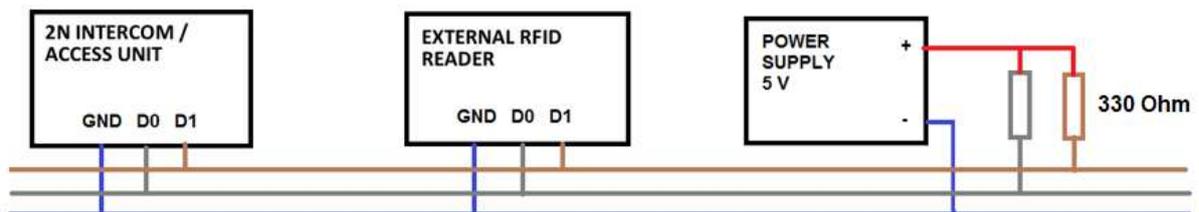

Recommended Wiring Diagram for Reader with Open Collector (OC) Output

2N[®] IP Security Relay

The **2N[®] IP Security relay (Part No. 9159010)** is used for enhancing security between the access unit and the connected electric lock. It significantly enhances security of the connected electric lock as it prevents unlocking by forced opening of the **2N Access Module**.



Function:

The **2N[®] IP Security relay** is a device installed between the access unit (outside the secured area) and an electric lock (inside the secured area). The **2N[®] IP Security relay** includes a relay that can only be activated if the valid opening code is received from the access unit.

Specifications:

Passive switch: NO and NC contacts, up to 30 V / 1 A AC / DC

Switched output:

- Where the security relay is fed from the intercom, 9 to 13 V DC is available on the output depending on the power supply (PoE: 9 V; adapter: source voltage of minus 1 V) / 400 mA DC.
- Where the security relay is fed from an external power supply, 12 V / 700 mA DC is available on the output.

Dimensions: (56 x 31 x 24) mm

Weight: 20 g

Installation:

The **2N[®] IP Security relay** is installed onto a two-wire cable between the access unit and the electric lock inside the area to be secured (typically behind the door). The device is powered and

controlled via this two-wire cable and so can be added to an existing installation. Thanks to its compact dimensions, the device can be installed into a standard mounting box.

Connection:

Connect the **2N® IP Security relay** to the **2N Access Unit** as follows:

To the active output (OUT1)

Connect the electric lock to the **2N® IP Security relay** as follows:

- To the switched output.
- To the passive output in series with the external power supply.

The device also supports a Departure button connected between the 'PB' and '- HeliosIP/2N IP intercom' terminals. Press the Departure button to activate the output for 5 seconds.

Status signalling

Green LED	Red LED	Status
flashing	off	Operational mode
on	off	Activated output
flashing	flashing	Programming mode – waiting for initialisation
on	flashing	Error – wrong code received

Configuration:

Connect the **2N® IP Security relay** to the properly set access unit security output. For settings refer to the **2N Access Unit Configuration Manual** is installed. Make sure that one LED at least is on or flashing.

Press and hold the **2N® IP Security relay** Reset button for 5 seconds to put the device in the programming mode (both the red and green LEDs are flashing).

Activate the output switch using the keypad, telephone, etc. The first code sent from the intercom will be stored in the memory and considered valid. After code initialisation, the **2N® IP Security relay** will pass into the operational mode (green LED flashing).


⚠ Caution

In case of resetting the factory default settings on a device with a version of firmware 2.18 or higher, it is necessary to reprogram the **2N® IP Security Relay** using the instructions above.

✔ Tip

FAQ: [2N® IP Security Relay device description and use with 2N IP intercom](#)

Connection:

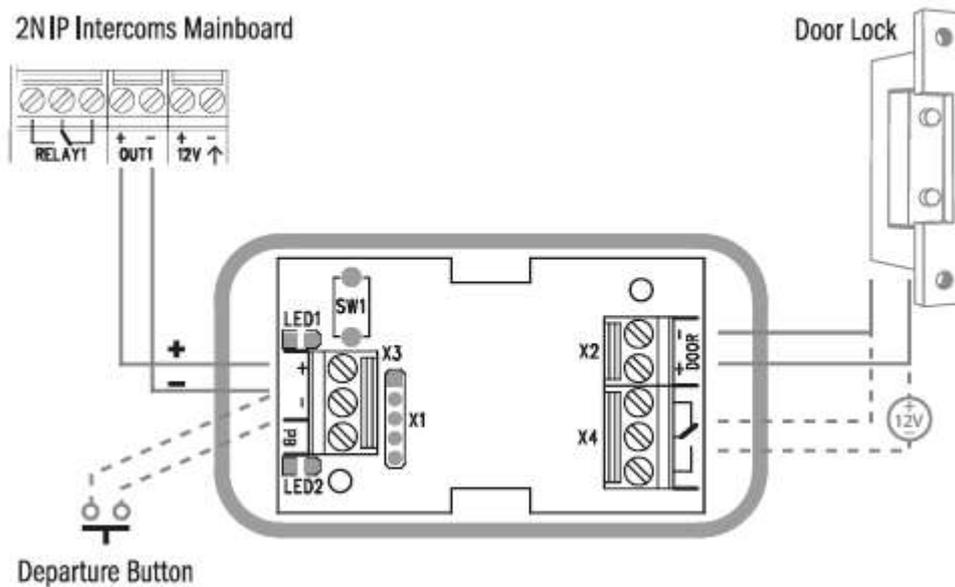

✔ Tip

IP Intercom Security Relay Installation and Setup



Sorry, the widget is not supported in this export.
But you can reach it using the following URL:
<https://www.youtube.com/watch?v=ardukvQzw5A>

2.5 Mounting Completion

Mounting Completion

Check the connection of all wires and the RJ-45 plug to the pigtail (adapter) connected to the motherboard.

Caution

- Make sure that the terminals of all the unused connectors are tightened properly to avoid sound vibrations.

Frame Mounting

Check the frame sealing before fitting the frame.

Version A

Screw the flush mounting frame in the upper and bottom parts.

Version B

Hang the wall mounting frame on the hook in the upper part and then screw it tight in the bottom part.

Caution

- Improper mounting may deteriorate the **2N Access Unit** waterproofness. Water infiltration may damage the electronic part.
- Make sure that all the holes are filled with some waterproof material – the top part, around the cables and the screws.
- Use silicone or some other sealant to seal the box against the wall if uneven to avoid water leakage and wall damping.


Most Frequent Mounting Errors


At first, mount the metal bolts, level the bases on an even surface and tighten the screws.

⚠ Caution

- Make sure that the bases are levelled properly to avoid water leakage and electronic damage.

The examples in the figures below show incorrectly assembled bases. This happens, in particular, where the screws are tightened first.

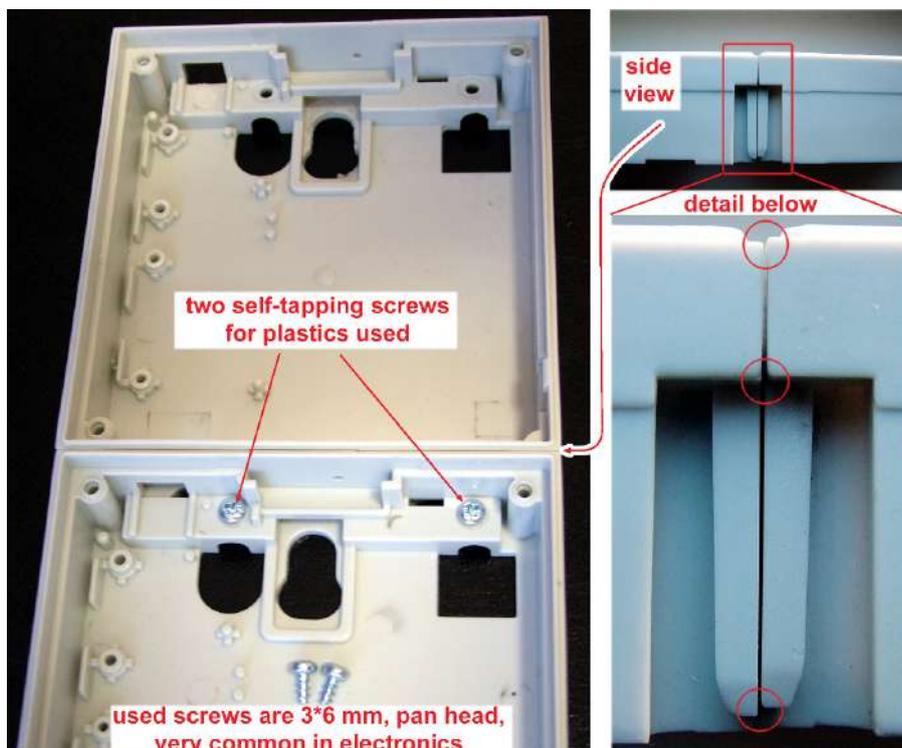

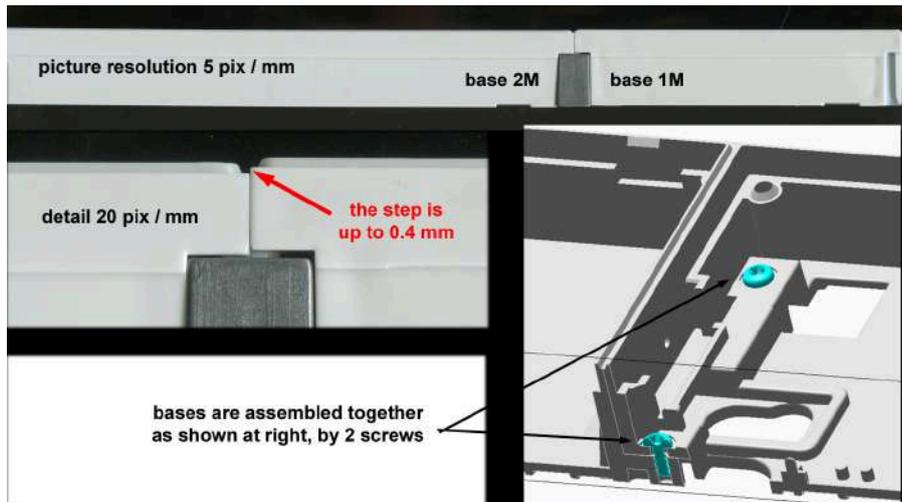

3. Maintenance

Cleaning

If used frequently, the device surface, the keypad in particular, gets dirty. Use a piece of soft cloth moistened with clean water to clean the device. You are recommended to follow the principles below while cleaning:

- Do not use aggressive detergents (such as abrasives or strong disinfectants).
- Clean the device in dry weather in order to make waste water evaporate quickly.

Warning

- Prevent water from getting inside the access unit.
- Do not use Alcohol-based cleaners.

4. Technical Parameters

Audio

- **Speaker:** 0.8 W / 8 Ω

Interface

- **Power supply:** 12 V \pm 15 % / 1 A
- **PoE:** PoE 802.3af (Class 0–12.95 W)
- **LAN:** 10/100BASE-TX with Auto-MDIX, RJ-45
- **Recommended cabling:** Cat-5e or higher
- **Supported protocols:** DHCP opt. 66, SMTP, 802.1x, TFTP, HTTP, HTTPS, Syslog
- **Passive switch:** make and break contact, up to 30 V / 1 A AC/DC
- **Active switch output:** 8 to 12 V DC according to power supply (PoE: 10 V; adapter: source voltage minus 2 V), up to 600 mA
- **Tamper switch** is part of the **2N Access Unit**
- **Inputs: passive / active mode (–30 V to +30 V DC)**
 - OFF = open or $U_{in} > 1.5$ V
 - ON = short-circuit or $U_{in} < 1.5$ V

RFID card reader

- **Frequency:** 13.56 MHz & 125 kHz
- **Supported 13.56 MHz cards (only card serial number is read):**
 - ISO14443A (MIFARE DESFire)
 - PicoPass (HID iClass)
 - FeliCa
 - ST SR(IX)
 - **2N[®] Mobile Key**
 - HID SE ((Seos, iClass SE, MIFARE SE) valid for secured cards)
- **Supported 125 kHz cards:** EM4100, EM4102

2N[®] IP Verso – Bluetooth module



- Bluetooth 4.0 Compliant (Bluetooth Low Energy, BLE)
- **Security:** asymmetric RSA-1024 and symmetric AES-128 encryption
- **RX sensitivity:** up to –93 dBm
- **Range:** adjustable (short ~ 0.5m, medium ~ 2m, long ~ up to 10m)
- **Power consumption:** 20mA at 12V DC
- **Operational temperature range:** –40°C ~ +60°C
- **Storage temperature range:** –40°C ~ +70°C
- **Dimensions:** 97 x 105 x 30mm
- Compatible with 2N[®] IP Verso, 2N[®] LTE Verso and 2N Access Unit
- Mobile app. support: Android 6.0 Marshmallow and higher, iOS 12.0 and higher

Mechanical properties



- **Cover:** robust zinc casting with surface finish (minor surface shade nuances are acceptable)
 - **91550XX – NICKEL**
 - Material – Zamak 410 – Zn95Al4Cu1
 - Surface treatment – Zn/Cu20/Ni25b max. 80 µm
 - **91550XXB – BLACK**
 - Material – Zamak 410 – Zn95Al4Cu1
 - Surface treatment – Cataphoretic coating Black 30 µm, RAL 9004 – Signalschwarz (colour is not guaranteed – it is cataphoretic)
- **Operating temperature:** –40 °C to 60 °C
- **Operating relative humidity:** 10 % – 95 % (non-condensing)
- **Maximum altitude for intended use:** 2000 m a.s.l.
- **Storage temperature:** –40 °C to 70 °C
- **Dimensions:**
 - Wall (surface) mounting frame:
 - 1 module: 107 (W) x 130 (H) x 28 (D) mm
 - 2 modules: 107 (W) x 234 (H) x 28 (D) mm
 - Flush mounting frame:
 - 1 module: 130 (W) x 153 (H) x 5 (D) mm
 - 2 modules: 130 (W) x 257 (H) x 5 (D) mm
 - Flush mounting box (minimum hole dimensions):
 - 1 module: 108 (W) x 131 (H) x 45 (D) mm
 - 2 modules: 108 (W) x 238 (H) x 45 (D) mm
- **Weight:** Max net weight: 2 kg / max. gross weight: 0.5 kg – based on configuration
- **Cover rating:** IP54

4.1 General drawings

Surface mounting

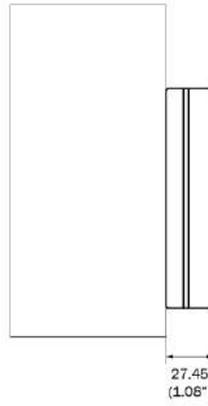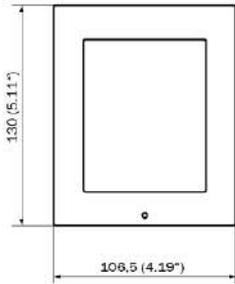

Flush mounting

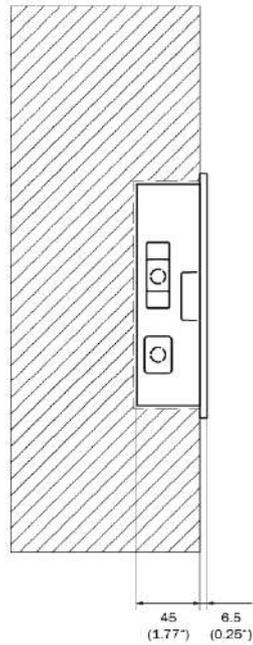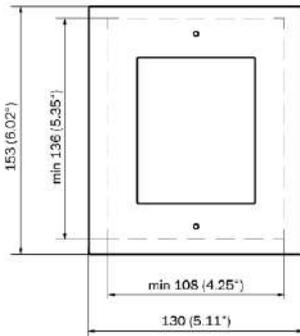

5. Supplementary Information

Here is what you can find in this section:

- [5.1 Troubleshooting](#)
- [5.2 Directives, Laws and Regulations](#)
- [5.3 Other Countries' Legislation](#)
- [5.4 General Instructions and Cautions](#)

5.1 Troubleshooting



For the most frequently asked questions refer to faq.2n.cz.

5.2 Directives, Laws and Regulations

2N Access Unit conforms to the following directives and regulations:

- 2014/53/EU for radio equipment
- 2011/65/EU on the restriction of the use of certain hazardous substances in electrical and electronic equipment
- 2012/19/EU on waste electrical and electronic equipment

Industry Canada

This Class A digital apparatus complies with Canadian ICES-003/NMB-003.

FCC

This equipment has been tested and found to comply with the limits for a Class A digital device, pursuant to part 15 of the FCC Rules.

NOTE: These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications.

However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna
- Increase the separation between the equipment and receiver
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected
- Consult the dealer or an experienced radio/TV technician for help

Changes or modifications to this unit not expressly approved by the party responsible for compliance could void the user's authority to operate this equipment.

⚠ Caution**Warning**

In order to ensure the full functionality and guaranteed performance, we strongly recommend that the topicality of the product / device version in use be verified as early as in the installation process. The customer hereby acknowledges that the product / device can achieve the guaranteed performance and full functionality pursuant to the manufacturer's instructions only if the latest product / device version is used after having been tested for full interoperability and not having been determined by the manufacturer as incompatible with certain versions of other products, and only in conformity with the manufacturer's instructions, guidelines or recommendations and in conjunction with suitable products and devices of other suppliers. The latest versions are available at https://www.2n.com/cs_CZ/ or can be updated via the configuration interface if the devices are adequately technically equipped. Should the customer use a product / device version other than the latest one or a version determined by the manufacturer as incompatible with certain versions of other products, or should the customer use the product / device in contradiction to the manufacturer's instructions, guidelines or recommendations or in conjunction with unsuitable products / devices of other suppliers, the customer is aware of and agrees with all functionality limitations of such a product / device if any as well as with all consequences incurred as a result thereof. Using a product / device version other than the latest one or a version determined by the manufacturer as incompatible with certain versions of other products, or using the product / device in contradiction to the manufacturer's instructions, guidelines or recommendations or in conjunction with unsuitable products / devices of other suppliers, the customer agrees that the 2N TELEKOMUNIKACE a.s. company shall not be held liable for any functionality limitation of such a product or any damage, loss or injury related to this potential functionality limitation.

5.3 Other Countries' Legislation

<p>Thailand</p>	<div style="border: 1px solid black; padding: 10px;"> <p style="text-align: center;">เครื่องโทรคมนาคมและอุปกรณ์นี้ มีความสอดคล้องตามมาตรฐานหรือข้อกำหนดทางเทคนิคของ กสทช.</p> <hr/> <div style="text-align: center;">  <p>nans.</p> </div> <p>เครื่องวิทยุคมนาคมนี้ ได้รับยกเว้น ไม่ต้องได้รับใบอนุญาตให้มี ใช้ซึ่งเครื่องวิทยุคมนาคมหรือตั้งสถานีวิทยุคมนาคมตามประกาศ กสทช. เรื่อง เครื่องวิทยุคมนาคม และสถานีวิทยุคมนาคมที่ได้รับยกเว้นไม่ต้องได้รับใบอนุญาตวิทยุคมนาคมตามพระราชบัญญัติวิทยุคมนาคม พ.ศ. 2498</p> <div style="display: flex; justify-content: space-between; align-items: center;">  <div style="text-align: right;"> <p>nans. โทรคมนาคม</p> <p>กำกับดูแลเพื่อประชาชน</p> <p>Call Center 1200 (InSW)</p> </div> </div> </div>
------------------------	---

5.4 General Instructions and Cautions

Please read this User Manual carefully before using the product. Follow all instructions and recommendations included herein.

Any use of the product that is in contradiction with the instructions provided herein may result in malfunction, damage or destruction of the product.

The manufacturer shall not be liable and responsible for any damage incurred as a result of a use of the product other than that included herein, namely undue application and disobedience of the recommendations and warnings in contradiction herewith.

Any use or connection of the product other than those included herein shall be considered undue and the manufacturer shall not be liable for any consequences arisen as a result of such misconduct.

Moreover, the manufacturer shall not be liable for any damage or destruction of the product incurred as a result of misplacement, incompetent installation and/or undue operation and use of the product in contradiction herewith.

The manufacturer assumes no responsibility for any malfunction, damage or destruction of the product caused by incompetent replacement of parts or due to the use of reproduction parts or components.

The manufacturer shall not be liable and responsible for any loss or damage incurred as a result of a natural disaster or any other unfavourable natural condition.

The manufacturer shall not be held liable for any damage of the product arising during the shipping thereof.

The manufacturer shall not make any warrant with regard to data loss or damage.

The manufacturer shall not be liable and responsible for any direct or indirect damage incurred as a result of a use of the product in contradiction herewith or a failure of the product due to a use in contradiction herewith.

All applicable legal regulations concerning the product installation and use as well as provisions of technical standards on electric installations have to be obeyed. The manufacturer shall not be liable and responsible for damage or destruction of the product or damage incurred by the consumer in case the product is used and handled contrary to the said regulations and provisions.

The consumer shall, at its own expense, obtain software protection of the product. The manufacturer shall not be held liable and responsible for any damage incurred as a result of the use of deficient or substandard security software.

The consumer shall, without delay, change the access password for the product after installation. The manufacturer shall not be held liable or responsible for any damage incurred by the consumer in connection with the use of the original password.

The manufacturer also assumes no responsibility for additional costs incurred by the consumer as a result of making calls using a line with an increased tariff.

Electric Waste and Used Battery Pack Handling



Do not place used electric devices and battery packs into municipal waste containers. An undue disposal thereof might impair the environment!

Deliver your expired electric appliances and battery packs removed from them to dedicated dumpsites or containers or give them back to the dealer or manufacturer for environmental-friendly disposal. The dealer or manufacturer shall take the product back free of charge and without requiring another purchase. Make sure that the devices to be disposed of are complete.

Do not throw battery packs into fire. Battery packs may not be taken into parts or short-circuited either.

