



Voyager Surround 85 UC Bluetooth headset with Poly wireless charge stand User Guide

SUMMARY

This guide provides the end-user with task-based user information for the featured product.

Table of contents

| | |
|--|-----------|
| 1 Overview | 1 |
| Headset | 1 |
| Be safe | 2 |
| Charge stand | 2 |
| USB Bluetooth adapter | 2 |
| 2 Connect and pair | 4 |
| Pair to mobile device | 4 |
| Connect to PC | 4 |
| Configure USB adapter for streaming media | 5 |
| Pair BT700 USB adapter again | 5 |
| 3 Fit | 7 |
| 4 Charge | 8 |
| Charge | 8 |
| Check headset battery status | 8 |
| 5 Load software | 10 |
| Update your Poly device | 10 |
| 6 The basics | 11 |
| Power on/off | 11 |
| Adjust volume | 11 |
| Adjust headset microphone volume (softphone) | 11 |
| Play or pause audio | 11 |
| Track forward | 12 |
| Track backward | 12 |
| ANC and Transparency Mode | 13 |
| ANC and Transparency Mode settings | 13 |
| Voice assistant (smartphone feature) | 14 |
| Use sensors | 14 |
| 7 Make/Take/End Calls | 15 |
| Make a call | 15 |
| Answer or end a call | 15 |
| Hold call | 15 |
| Switch between calls (flash) | 15 |

| | |
|--|-----------|
| Mute | 16 |
| Redial last outgoing call (smartphone feature) | 16 |
| Launch Microsoft Teams (Teams model only) | 16 |
| Raise hand in Microsoft Teams meeting (Teams model only) | 16 |
| 8 More Features | 17 |
| Customize your headset | 17 |
| Corded mode (audio over USB) | 17 |
| 9 What's in the box | 19 |
| 10 Troubleshooting | 21 |
| 11 Support | 23 |


1 Overview








Your new headset system includes:

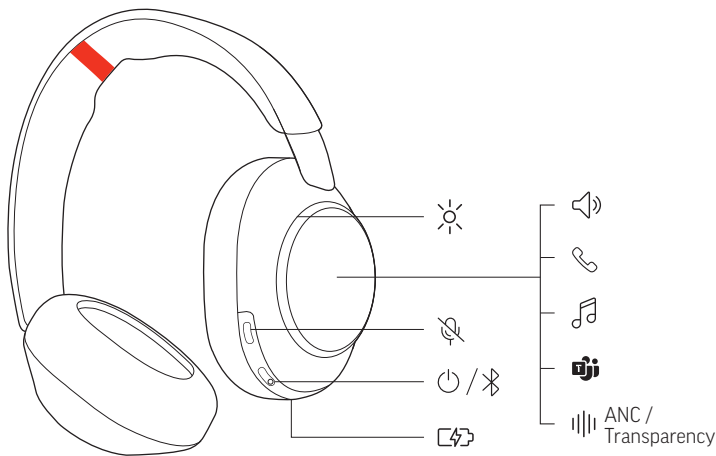


- Bluetooth headset
- Charge stand
- USB Bluetooth adapter


Headset

Your headset has touch control on the right earcup. Use touch gestures for call and media control.



| Icon | Headset control |
|---|---|
|  | Volume control <ul style="list-style-type: none">• Swipe up/down to adjust volume |
|  | Call control <ul style="list-style-type: none">• Tap to answer• Press to end |
|  | Audio control* <ul style="list-style-type: none">• Tap to play/pause• Swipe to track forward/backward |
|  | Interact with Microsoft Teams (Teams model only, Teams app required) |
|  | ANC (Active Noise Canceling) and Transparency Mode |
|  | LEDs/Online indicator |
|  | Mute/unmute |

| Icon | Headset control |
|---|--------------------|
|  | Power |
|  | Bluetooth® pairing |
|  | Charge port |


 **NOTE:** *Functionality varies by application. May not function with web-based apps.

Be safe

Please read the safety guide for important safety and regulatory information before using your new device.


Charge stand


Your charge stand plugs into a computer or wall charger's USB-C port. The charge cable is stored on the bottom of the charge stand and is approximately 1.5 meters in length.

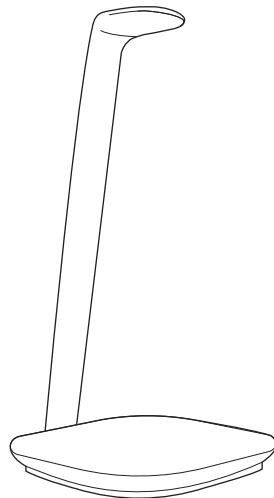

USB Bluetooth adapter

 Your high-fidelity Bluetooth USB adapter comes pre-paired to your Poly device. Plug it into your computer to connect to high-fidelity computer audio.



 **NOTE:** Adapter's USB connection and design may vary, but function is the same.

Standard LEDs

USB LEDs**What they mean**

Flashing red and blue

Pairing

Solid blue

Device connected

Flashing blue

On a call

Solid red

Mute active

Flashing purple

Streaming media from computer

LEDs when Microsoft Teams* is detected

USB LEDs**What they mean**

Flashing red and blue

Pairing

Solid purple

Microsoft Teams connected

Flashing blue

On a call

Solid red

Mute active

Pulsing purple

Microsoft Teams notification


**NOTE:** *Requires Microsoft Teams desktop application.

2 Connect and pair

Connect and pair your headset to your mobile phone and computer.

Pair to mobile device

Pair your headset to your mobile device.

1. To put your headset in pair mode, slide and hold the Power  switch away from the off position until you hear "pairing" and the headset LEDs flash blue and white.



2. Activate Bluetooth on your phone and set it to search for new devices.

- *iPhone* **Settings > Bluetooth > On***
- *Android* **Settings > Bluetooth On > Scan for devices***



NOTE: *Menus may vary by device.

3. Select "Poly VSurround 85."

Once successfully paired, you hear "pairing successful" and the headset LEDs stop flashing.




NOTE: Your headset can pair with up to 8 devices but only maintain 2 connections simultaneously; this includes the Bluetooth adapter.

Connect to PC

Your Bluetooth USB adapter provides the best connection, softphone functionality and acoustic sound quality through your headset. The adapter comes pre-paired to your headset.

1. Turn on your headset and insert the Bluetooth USB adapter into your laptop or PC.

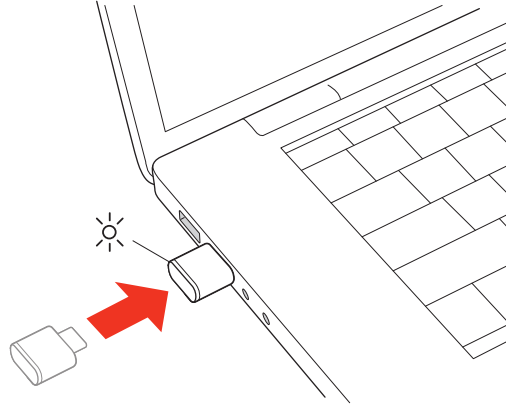

2. The USB adapter LED flashes and then turns solid to indicate the headset is connected to the USB adapter. If you are wearing your headset you hear “PC connected” to indicate the connection has been established. When on a call, the LED on the USB adapter flashes blue. When not on a call the LED is solid.
3. Load Poly Lens Desktop App by visiting poly.com/lens. This allows you to customize your headset behavior through advanced settings and options.

Configure USB adapter for streaming media

Your high-fidelity Bluetooth USB adapter comes ready to take calls. To stream media, configure your Bluetooth USB adapter.

Windows

1. To configure your Bluetooth USB adapter for streaming media in your PC, go to **Start menu > Control Panel > Sound > Playback tab**. Select Poly BT700 set it as the Default Device and click OK.
2. To pause music when you place or receive calls, go to **Start menu > Control Panel > Sound > Communications tab** and select the desired parameter.

 
Mac

- To configure your Bluetooth USB adapter for streaming media on your Mac, go to **System Preferences > Sound**. On both the Input and Output tabs, select **Poly BT700**.

Pair BT700 USB adapter again

Typically, your USB Bluetooth adapter is pre-paired to your Poly audio device. In the event that your adapter is disconnected or bought separately, you will need to pair the adapter to your Poly device.

Your USB adapter requires Poly Lens Desktop App to pair to a Poly audio device.
Download: poly.com/lens.



NOTE: Adapter design varies by USB connection.


1. Insert the high-fidelity Bluetooth USB adapter into your laptop or computer and wait for your computer to recognize it.
2. Put your Poly audio device in pair mode.
3. Launch Poly Lens Desktop App and navigate to Poly BT700.
4. Put your Bluetooth USB adapter into pair mode by selecting "Pair new device" on the adapter's main page or overflow menu. Your adapter flashes red and blue.


Pairing is successful when you hear "pairing successful" and "PC connected" and the Bluetooth USB adapter LED is solid.

3 Fit

For best call audio, ensure your headset is worn correctly.

- Wear your headset with your earcups on the correct ears.

 **IMPORTANT:** Headset microphones are on the front of your earcups.

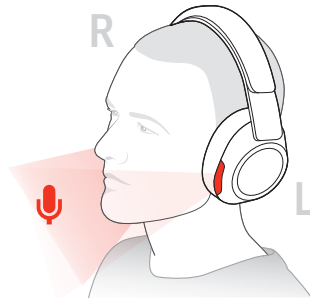


4 Charge


Your headset has up to 24 hours of listening time.

Charge


Charge your headset using the Poly wireless charge stand.


1. Place the headset on the charge stand.

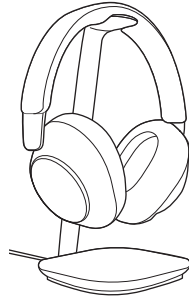

 **NOTE:** The charge stand plugs into a computer or wall charger's USB-C port.


2. Charge stand LED pulses when charging and turns off when the headset is fully charged. Headset LEDs flash when charging and turn off once charging is complete. It takes approximately 5 hours to fully charge your headset.

 **NOTE:** You can also charge your headset using the USB-C cable. Headset LEDs flash when charging and turn off once charging is complete.

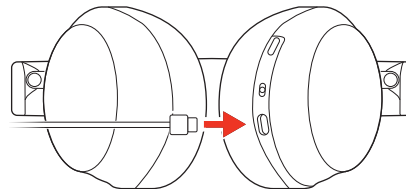

Check headset battery status

 Check your headset battery status.

- Do one of the following:
 - With your headset inactive, slide and release the Power  switch away from the off position. Listen to the voice alert or observe the headset LEDs.
 - Power on your headset and listen to the voice alert.
 - View headset battery level in Poly Lens App .

| Voice alert | Headset LEDs | Talk time |
|--------------------|--------------|-----------------------|
| "Battery high" | ○○○○-○○○○○ | 12 hours or more |
| "Battery medium" | ○○-○○○ | 2 to 12 hours |
| "Battery low" | ● | 30 minutes to 2 hours |
| "Battery critical" | ⦿ | Less than 30 minutes |

5 Load software

Download Poly Lens App to get the most out of your device. Some softphones require the installation of Poly software to enable device call control(answer/end and mute) functionality.

- Download Poly Lens Desktop App at poly.com/lens.
- Download Poly Lens Mobile App at poly.com/lens, the App Store or Google Play.



| | Poly Lens Mobile App | Poly Lens Desktop App |
|--|-------------------------------|-----------------------|
| Configure call control for softphones | available for some softphones | √ |
| Change headset language | √ | √ |
| Enable features | √ | √ |
| Battery meter | √ | √ |
| Update device firmware | √ | √ |
| Manage notifications and alerts | √ | √ |
| Schedule health and wellness reminders | √ | √ |
| View user guide | √ | √ |
| FindMyHeadset | √ | |

Update your Poly device

Keep your firmware and software up-to-date to improve performance and add new features to your Poly device.

Update your device using Poly Lens App . Download at poly.com/lens.

6 The basics

Use your headset system.

Power on/off


Power on your headset.

- Slide the Power  switch to power on the headset.

Adjust volume

Swipe the earcup to adjust your volume.

- Swipe up on the right earcup to increase the volume. Swipe down to decrease the volume. Each swipe changes the volume one level.

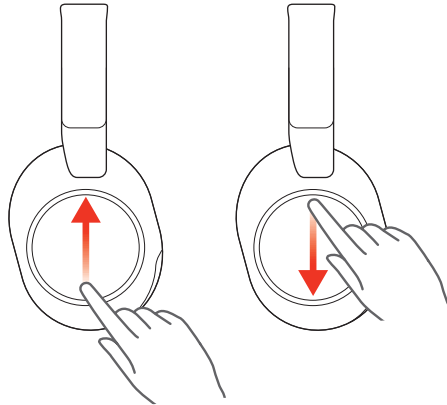

Adjust headset microphone volume (softphone)


Adjust your headset volume for softphone calls.

- Place a test softphone call and adjust softphone volume and PC sound volume accordingly.

Play or pause audio

Tap the right earcup to control audio.


- Tap the center of the right earcup to play or pause audio.

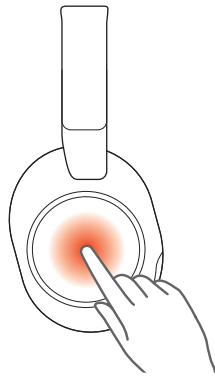

Track forward

Play the next track while streaming audio.


- Swipe forward on the right earcup to play the next track.

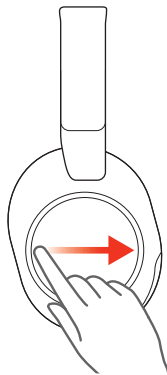

Track backward

Play the previous track while streaming audio.

- Swipe backwards on the right earcup to play the previous track.

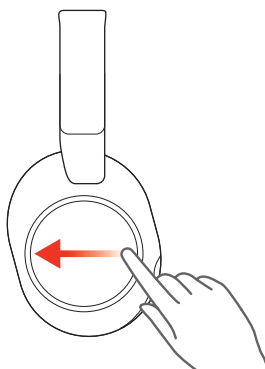

ANC and Transparency Mode

Active Noise Canceling (ANC) reduces external noise and enhances your music and sound quality. Transparency Mode allows you to hear your surroundings while wearing your headset.

ANC/Transparency mode is the default custom button feature. For more, see [Customize your headset on page 17](#).

1. Tap the Custom button with two fingers for 2 seconds to toggle between modes.



NOTE: Your headset's Custom button is located in the center of the right earcup.



2. Swipe up/down on the right earcup to adjust Transparency Mode level when active.

ANC and Transparency Mode settings

Choose your preferred settings for ANC and Transparency Mode in Poly Lens App .

| Category | Setting | Description |
|-------------------|-----------------------|--|
| ANC | Adaptive (default) | <ul style="list-style-type: none">• Detects differences in user fit or movement while wearing and automatically adjusts to provide the best ANC experience |
| ANC | Standard | <ul style="list-style-type: none">• Optimized for office• Provide a more natural audio experience and enhanced sidetone comfort |
| ANC | Off | <ul style="list-style-type: none">• ANC powered off |
| Transparency Mode | Environment (default) | <ul style="list-style-type: none">• Best for busy streets• Optimized to hear your surroundings |
| Transparency Mode | Speech | <ul style="list-style-type: none">• Optimized for face-to-face communication |
| Transparency Mode | Off | <ul style="list-style-type: none">• Transparency Mode powered off |

Voice assistant (smartphone feature)

Use your headset to communicate with your smartphone voice assistant.

- **Siri, Google Assistant™, Cortana** To activate your smartphone's default voice assistant, do one of the following:
 - Press and hold the center of the right earcup for 2 seconds. Wait for the phone prompt to activate voice dialing, search, and other smartphone voice controls.
 - Tap the Custom button with two fingers for 2 seconds to activate your smartphone's default voice assistant. Wait for the phone prompt to activate voice dialing, search, and other smartphone voice controls.



NOTE: Ensure Voice Assistant is the assigned Custom button setting in Poly Lens App . For more, see [Customize your headset on page 17](#).

Use sensors

Smart sensors respond when you put on or take off your headset. Customize in Poly Lens App . Below describes default settings.

| With active sensors | putting on the headset will: | taking off the headset will: |
|-----------------------------------|---|-------------------------------------|
| Mobile/softphone call | answer the call | keep call in headset |
| Music/media | resume music/media (if playing previous to taking off)* | pause music/media (if playing)* |
| Mute (activate in Poly Lens App) | unmute if on an active call | mute if on an active call |



NOTE: *Functionality varies by application. May not function with web-based apps.

7 Make/Take/End Calls

Manage calls with your headset.

Make a call


Place a softphone or mobile call.

- Dial using your softphone application or mobile phone.

Answer or end a call



Use your headset call button to answer and end calls.

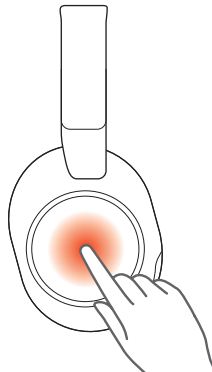- Tap the center of the right earcup to answer call. Press to end a call.



Hold call

Use the headset mute button to place calls on hold.

1. Press and hold the Mute  button for 2 seconds to hold the call. The LEDs flash red.
2. To resume call, hold the Mute  button for 2 seconds. The LEDs returns to pulsing red.

Switch between calls (flash)

Use your headset call button to switch between 2 active softphone calls.

- To switch between calls, press the headset Call button for 2 seconds.



NOTE: Available for softphone calls only. Does not work with mobile calls.

Mute

Use the headset mute button to silence your mic during calls.

- During an active call, press the Mute  button to mute or unmute your headset.

Redial last outgoing call (smartphone feature)

Use your headset to redial from your smartphone.

- Tap the Custom button with two fingers for 2 seconds to redial the last outgoing mobile call.





NOTE: Ensure Redial is the assigned Custom Button setting in Poly Lens App. For more, see [Customize your headset on page 17](#).

Launch Microsoft Teams (Teams model only)

Tap your headset Teams button to quickly open and use the Microsoft Teams desktop app.



NOTE: Your headset's Teams  button is located in the center of the right earcup.


- When not on a call, tap your Teams  button to view Microsoft Teams app on your computer.
- When your connected USB adapter LED pulses purple, tap your Teams button to view Teams notifications.



NOTE: Teams model and Teams desktop application required. Teams mobile application is not supported.

Raise hand in Microsoft Teams meeting (Teams model only)

Use your headset to raise your hand in a Microsoft Teams meeting.

- Press your headset Teams  button for 2 seconds to raise your hand during an active Teams meeting.

8 More Features

Configure and use additional headset features.

Customize your headset

Configure your Custom button feature in Poly Lens App . Download: poly.com/lens.

ANC/Transparency mode is the default feature when you tap the right earcup with two fingers for 2 seconds.

Choose from:

- ANC/Transparency mode (default)
- Check device status
- **Mobile calls only:** Redial
- **Mobile calls only:** Launch default voice assistant (Siri, Google Assistant)



Corded mode (audio over USB)

If your headset battery is depleted or a corded connection is required and/or preferred, use one of the supplied USB cables to stream audio to your headset.

Your headset is supplied with the following USB cables:

- USB-C cable
- USB-C to 3.5mm



NOTE: Your headset battery charges while in corded mode when connected with the USB-C cable. The 3.5mm cable does not charge your headset battery.

1. Disconnect your Bluetooth USB adapter from your computer if connected.

2. Connect your headset directly to your computer with one of the provided USB cables.
3. Power off your headset to use density-friendly corded mode.

9 What's in the box

Contents may vary by product.

Figure 9-1 Bluetooth headset

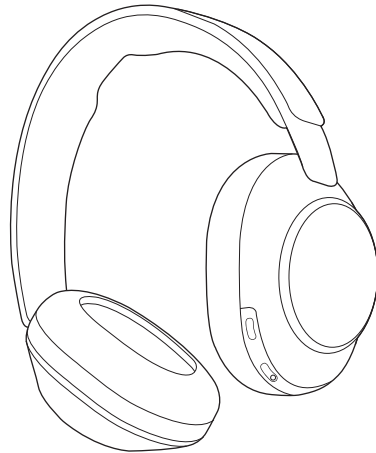


Figure 9-2 Poly wireless charge stand

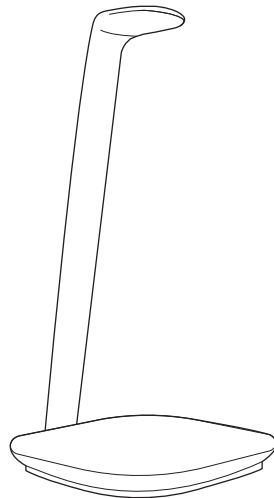


Figure 9-3 Bluetooth USB-C Adapter

 


Figure 9-4 USB-C to USB-A adapter

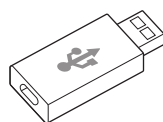


Figure 9-5 USB-C cable



Figure 9-6 USB-C to 3.5mm cable



Figure 9-7 Headset carrying case

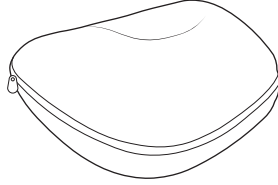




Figure 9-8 Quick start guide



10 Troubleshooting

Resolve your headset issues.

| Issue | Resolution |
|--|--|
| During a call, my voice sounds muffled or far away to other callers. | You may be wearing your headset backwards. Headset microphones are on the front of your earcups. For best call audio, ensure that left and right earcups are on the correct ear. |
| Can I control features using either earcup? | No, only the right earcup has touch control. |
| I want to customize my headset features. | Customize your device settings with Poly Lens App . Download: poly.com/lens |
| How do I pair my headset to a mobile device? | See Pair to mobile device on page 4 . |
| How do I pair my headset to a computer or laptop? | Plug in the USB Bluetooth adapter to your computer or laptop. The adapter is paired to your headset and connects to computer audio. See Connect to PC on page 4 . |
| Why should I use the USB Bluetooth adapter instead of my computer's Bluetooth? | Your USB Bluetooth adapter provides the best connection, softphone functionality and acoustic sound quality through your headset. See Connect to PC on page 4 , Configure USB adapter for streaming media on page 5 . |
| How do I pair my USB Bluetooth adapter to another supported Poly audio device? | Poly Lens App is required to pair your BT700 USB Bluetooth adapter to another device. Your Bluetooth adapter remembers up to 2 supported Poly audio devices, but connects to only one at a time. See Pair BT700 USB adapter again on page 5 . |
| How do/why should I use the USB-C to USB-A adapter? | The USB-C to USB-A adapter is designed to connect your BT700C adapter to USB-A ports if available. Use if you do not have USB-C ports available on your PC/ device. |
| Can I connect my headset to a mobile phone and computer at the same time? | Yes, your headset can connect to mobile and PC. Your headset remembers up to 8 devices, but connect to up to 2 devices at a time. That includes the USB Bluetooth adapter. |
| The headset audio is not working as expected when connected to my computer. <ul style="list-style-type: none">• During a call, nobody can hear me• During a call, I can't hear anybody• Music is not coming through my headset• When I play music and a call comes in, the music is too loud or doesn't pause | Check the following: <ul style="list-style-type: none">• To configure the headset sound on your computer, see Configure USB adapter for streaming media on page 5, Load software on page 10.• Ensure that only one softphone application is opened at a time.• For best performance, ensure your headset firmware is up-to-date. See Update your Poly device on page 10. |

| Issue | Resolution |
|--|---|
| My headset call control is not working as expected when on a softphone call. | <p>Check the following:</p> <ul style="list-style-type: none"> ● For best performance, ensure your headset firmware is up-to-date. See Update your Poly device on page 10. ● Ensure that only one softphone application is opened at a time. ● If required to enable headset control (answer/end and mute) functionality, ensure you have Poly Lens App installed. See Load software on page 10. ● Select your softphone application in Poly Lens App . |
| (Teams model only) How do I interact with Microsoft Teams using my headset? | <ul style="list-style-type: none"> ● Tap the headset Call  button to quickly open and use Microsoft Teams. See Launch Microsoft Teams (Teams model only) on page 16. ● Set your target softphone by going to Poly Lens App . |
| (Teams model only) Does my Microsoft Teams-enabled headset work with other softphones? | <p>Yes, while your headset is optimized for Microsoft Teams, it can be configured to use with other supported softphones. Set your target phone by going to Poly Lens App .</p> <p>When you configure another softphone, the Call  button:</p> <ul style="list-style-type: none"> ● doesn't interact with Teams ● doesn't go to Teams notifications ● will not launch Cortana |
| The headset audio is cutting out during softphone calls. | You may be experiencing Bluetooth density issues. Use density-friendly corded mode. See Corded mode (audio over USB) on page 17 . |
| The headset sensors are not working as expected. | If your headset sensors are not working as expected, you may need to reset the sensors. Reset sensors by going to Poly Lens App . |
| <ul style="list-style-type: none"> ● A call is not automatically answered when I put on my headset ● Mute/unmute is not working when I take on/off my headset during a call ● During a call, mute unexpectedly turns on | |
| I want to use my headset as a USB corded headset with my computer. | Your headset can be used in corded mode. See Corded mode (audio over USB) on page 17 . |
| Can I use my headset while charging it? | Your headset charges while in corded mode. See Corded mode (audio over USB) on page 17 . |

11 Support

NEED MORE HELP?

poly.com/support

HP Inc.

1501 Page Mill Road
Palo Alto, CA 94304, U.S.A.
650-857-1501

HP REG 23010, 08028

Barcelona, Spain

HP Inc UK Ltd

Regulatory Enquiries, Earley West
300 Thames Valley Park Drive
Reading, RG6 1PT
United Kingdom

台灣惠普資訊科技股份有限公司

臺北市南港區經貿二路 66 號 10 樓
電話: 02-37899900

© 2023 Poly. Bluetooth is a registered trademark of Bluetooth SIG, Inc. All trademarks are the property of their respective owners.

RMN (Regulatory Model Number): VS85T, CBVS1, BT700C