




doro 760X

DORO

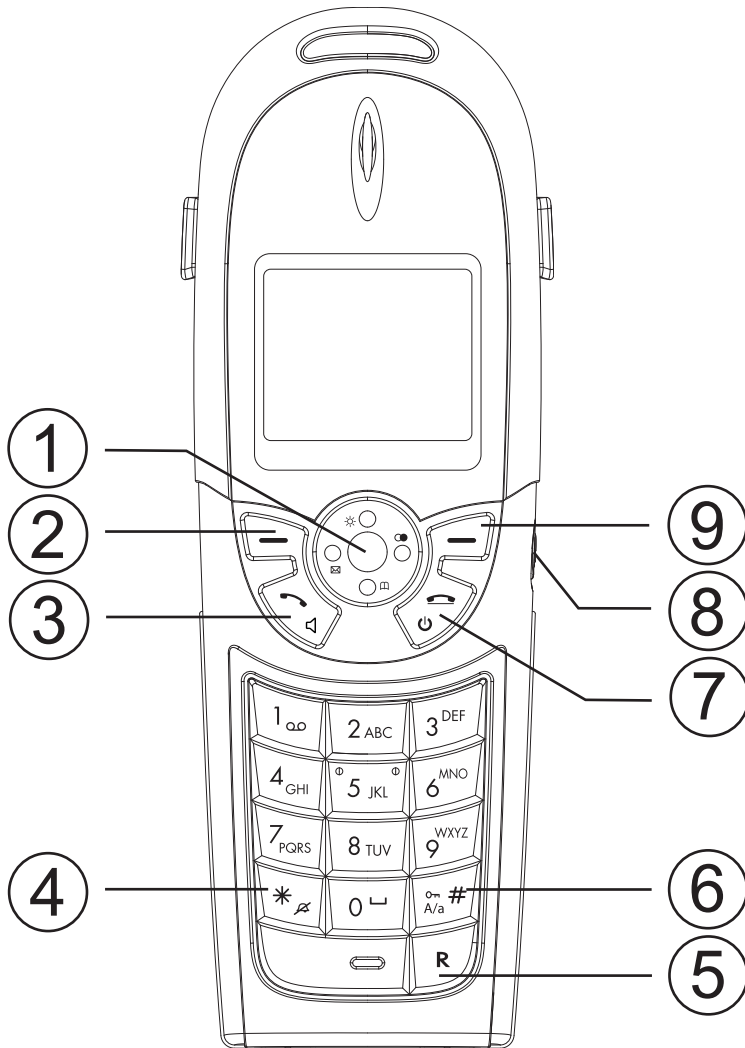

English





- | | | | | | |
|---|---------------------|---|-----------------------|---|----------------------------------|
| 1 | Scroll button | 5 | Flash | 8 | Headset connector |
| 2 | Left menu button/OK | 6 | [Grid] and key lock | 9 | Right menu key/
Delete/Redial |
| 3 | Line/Speaker button | 7 | Disconnect and Off/On | | |
| 4 | * and ringer off/on | | | | |

Connection	1	Key lock.....	4	Signals and display.....	11
The display.....	2	Speaker/Group listening	4	System settings.....	12
Base unit indicators	2	Paging	4	Call barring.....	13
Area of use	3	Phonebook	5	Net. Provider.....	13
Battery.....	3	Incoming numbers (caller ID)6		Expanded system (+1).....	14
Coverage	3	SMS messages	7	Specific absorption rate (SAR).....	14
Making a call.....	3	Network services	9	Declaration of conformity	14
Receiving a call	3	Date/Time/Alarm.....	9	Troubleshooting	15
Volume control	4	Other settings.....	10	Guarantee.....	15
Turning the handset Off/On..	4	Cordless Baby Monitor.....	10		
Redialling	4	Country Code.....	11		
Temporary silent mode	4	Register.....	11		


Connection

1. Connect mains adapter and phone cable to respective wall sockets.
2. To charge and power up your handset please pull the label from the bottom of the handset to connect the batteries.
3. Charge the handset with the keypad facing outwards (for 24 hours the first time).
4. Select language/date by following the instructions below.


Language

5. Press  to illuminate the display.
6. Press **Menu**.
7. Scroll to **Setting** with the scroll button (/). Press **OK**.
8. Scroll to **Handset Set**. Press **OK**.
9. Scroll to **Language**. Press **OK**.
10. Scroll to required setting. Press **OK**.
11. Hold down  to return to standby.

Date/Time

12. Press **Menu**. Scroll to **Date/Time**. Press **OK**.
13. Scroll to **Date/Time**. Press **OK**.
14. Set date (DD.MM.YY). Press **OK**.
15. Enter time of day (HH MM). Press **OK**.
16. Hold down  to return to standby.

The display

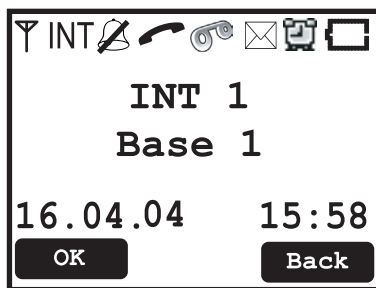

Indicator



Function

Shown within range of the base unit. Flashes when out of range.

INT

Internal call.



Ring signal turned off with the ***M** key.



Handset is connected (during calls).



Message indication*.



Caller ID/New SMS received*.



Alarm activated.



Battery charge indicator.

INT 1

Handset number (when using more than one handset).

Base 1

The handset is connected to base unit 1.

Press 19

Key lock activated.

OK

Function description for the key shown below the text, e.g. OK to confirm.

* Only functions in certain countries.

To conserve battery power the display is very dark in standby mode, press  to illuminate.

Base unit indicators

Illuminated on standby, flashes when telephone rings.

Area of use

The handset is intended for indoor and outdoor use. It is shock resistant and is protected against water and dust (IP53), but it must not be immersed in fluid, treated violently or carelessly.

The base unit and extra charger (+1 only) are intended for indoor use only.

If the handset is damp it should be wiped dry before it is charged!

If the batteries need to be changed, ensure the battery door is properly closed with screws tightened to ensure water and dust resistance.

Battery

Because batteries only have a certain lifespan it is quite normal that call time and standby time will decrease somewhat compared to the specifications when the telephone is used regularly.

Fully-charged batteries (10 hours charging) will last for approx. 120 hours standby time or approx. 10 hours call time. These operation times apply at normal room temperature.

Full battery capacity will not be reached until the batteries have been charged 4-5 times.

The base unit has an automatic charging mechanism that prevents the batteries from being overcharged or damaged due to prolonged charging.

The display is unlit during charging, to check battery level press  or lift the handset.

Please note!

The base unit should not be located close to other electrical equipment, in direct sunlight or near any other strong heat source! This is to minimize the risk of interference.

It is normal for the device to become warm during charging and is not dangerous.

Use only DORO original batteries. The guarantee does not cover any damage caused by incorrect batteries.



Coverage

The telephone's coverage will vary normally between 40 and 300 metres, depending on whether the radio waves carrying the conversation are blocked by obstacles in their path.



Coverage can be improved by turning ones' head so that the handset is aligned with the base unit.

Sound quality declines as the limit is reached until the call is finally interrupted.

Making a call

1. Enter the required number.
2. Press , and the number will be dialled. Press  to terminate the call.

Receiving a call

1. Wait for the handset to ring.
2. Answer the call by pressing . Terminate the call with .

Please note!

*You can press **Menu** during a call to access certain functions. See Operator Services for more information. When the battery is low or when there is too great a distance to the base unit the telephone will be unable to connect to a line.*

Volume control

Adjust the volume during a call with the scroll button.

Turning the handset Off/On

Press and hold the  button for a few seconds to turn the handset off or on.

Redialling

Press **Redial** and scroll through the 10 last dialled numbers. Press .

In order to protect codes, e.g. for Internet banking, only numbers shorter than 18 digits are saved.

Temporary silent mode

When someone calls, you can press **Silent** to turn off the handset ring signal.

Key lock



Lock the keypad by pressing  until **Press 19** is displayed.

Unlock keypad by pressing  **19**.

The keypad will be unlocked if the handset is placed in the base unit.

Speaker/Group listening




The handset can be placed on the table, leaving your hands free. Group listening means that you hold the handset to your head in the usual way, but the call will be heard through the speaker if you want other people in the room to listen.

1. Once the call has been connected, press  several times to switch between group listening, speaker mode and handset mode.
2. Press  to terminate call.

Please note!

Please remember that in handsfree speaker mode, it is only possible for one person at a time to talk.

Paging

The handset will ring when  on the base unit is pressed. The signal will stop automatically after a while or if the  button on the handset or the  button on the base unit is pressed.

Phonebook

The phonebook can store 100 names and telephone numbers.

If you subscribe to a caller ID service the name in the phonebook will be shown for incoming calls.

It is possible to choose between various ring signals (VIP) for the numbers saved in the phonebook (only functions if you subscribe to a caller ID service).

You can select the desired VIP melody, see the *Signals chapter*.

However, the first signal can sound normal before the number is compared with the phonebook.



Letters

Each number key has been allocated certain letters. The phone book is arranged according to the order of the buttons, which is not the same for all languages.

0 [Space]

..... Change between upper/lower case

Store name/number in handset

1. Press **☰**. Press **Option**.
2. Scroll to **Add Entry**. Press **OK**.
3. Press equivalent digit key one or more times for desired name.
4. Scroll to **<Number>**. Enter the telephone number, including the area code. Press **OK**.

*You can insert a space in the telephone number by pressing and holding **R**.*

Dialling from the phonebook

1. Press **☰**.
2. Scroll among the entries. It is also possible to make a quick search in the phonebook by pressing the equivalent numeral button for the first letter one or more times.
3. Press **☎**, and the number will be dialled.

Changing telephone numbers/names


1. Press **☰**. Scroll to desired entry. Press **Option**.
2. Scroll to **Edit Entry**. Press **OK**.
3. Edit the name/number. Press **OK**.

Deleting entries

1. Press **☰**. Scroll to desired entry. Press **Option**.
2. Scroll to **Delete Entry** or **Delete List**. Press **OK**.
3. Confirm by pressing **OK**.

Copying to/from SIM card

Development of SIM cards is very rapid, and therefore we cannot guarantee that all available cards on the market will function.

1. Insert the SIM card into the base unit.
2. Press . Press **Option**.
3. Scroll to **Copy from/to SIM**. Press **OK**. Some SIM cards are protected by a PIN code.
4. After a short time you can scroll to required entry. Press **Option**.
5. Scroll to **Copy Entry** or **Copy All**. Press **OK**.
6. Downloading may take a few minutes. You can then remove the SIM card.

From SIM card


Check that the phonebook has been properly stored on the SIM card. Refer to the mobile phone user manual. Check that the correct country code has been saved, see Other Settings. A maximum of 14 letters and 20 digits can be copied per entry. The phonebook has a maximum size which cannot be exceeded. Entries are copied according to position, which may not be in alphabetical order.

To SIM card

You can also add an area code when copying entries to the SIM card.

Incoming numbers (caller ID)

The display shows you who is calling and the 50 most recent incoming numbers.

New SMS message/Caller ID is indicated by  in standby mode.



If the same number calls in more than once it will be saved as only one entry.



Please note!

This function requires a subscription from your service provider.

Retrieving and dialling incoming numbers

1. Press . Scroll to **Caller list**. The number of new calls is displayed. Press **OK**.
2. Select **New Calls** or **All Calls**. The number of received calls is displayed. Press **OK**.
3. Scroll to selected entry. Press  to dial number or press **Back**.

Caller identification messages

-- -- --:-- Date/time not set.

Unavailable No information received, e.g. an international call.

Withheld Number cannot be shown. Possibly a call from a telephone exchange.

Deleting a number

1. Scroll to required entry according to description above.
2. Press **Option** and scroll to **Delete** or **Delete List**. Press **OK**.
3. Confirm by pressing **OK**.

Storing a number in the phone book

1. Scroll to required entry according to description above.
2. Press **Option** and scroll to **Copy to Phone**. Press **OK**.
3. Enter names in the same way as for the phonebook.

SMS messages



This feature requires a current Caller Id subscription to be in place and only applies to text message users (SMS). Please remember individual SMS features are country dependent and will vary or be unavailable. Further details regarding the SMS text message service are available from your local network provider.

Maximum 160 signs per message. The memory can store up to 30 messages.

New SMS message/Caller ID is indicated by ☒ in standby mode.

Australia only

Short Message Service (SMS) facilities have been automatically activated for most Telstra® telephone services across Australia. SMS services may not be available to, or between, other service providers networks. A description of the SMS service provided by Telstra® can be found at: <http://www.telstra.com.au/talkingtext>

There is no need to register your telephone with the Telstra® fixed line SMS service as your DORO telephone is supplied pre-configured. When you send your first text message the Telstra® network will automatically accept and deliver it (providing the destination offers a compatible service).

Settings for your Telstra® fixed line SMS service can be changed by calling 0198 339 999 and following the prompts.

UK only

- Program the correct SMS Center numbers as described on next page under the section *Entering the telephone numbers in SMS centre/operator*.
E.g. for BT:
Send: 14701709400
Receive: 080058752
Terminal No.: 9
- To register for the SMS text messaging service you can either send a text message to another telephone number, or text REGISTER to 00000.
- Should you wish to reset your SMS settings text RESET to 00000.
- You can also request a delivery report by entering * 0 # prior to any SMS message.
- An SMS message can also be sent to a telephone number that does not support this feature, and will be received as a voice message.
- Not all networks (ie mobile, cable) are compatible.


Please note!

The available functions/services vary depending on service provider. It may not be possible for all service providers to offer sending/receiving SMS messages on all types of units.




Some operators offer a service where you can send an SMS message to someone who does not have SMS equipment. The message will then be read by a computer voice.

Failed SMS messages are stored in the outbox.

Read new SMS/inbox

1. Press . **SMS** is displayed. Press **OK**.
2. Scroll to **Inbox**. The display shows the number of messages. Press **OK**.
3. Scroll to selected entry. Press **Read**. Read your message.
4. Press **Option**. Scroll to the required selection:
 - **Use** (reply/forward)
 - **Delete**
 - **Delete list**
 - **Copy to Phoneb**
5. Press **OK** and follow the instructions in the display.


Write new SMS message

1. Press . **SMS** is displayed. Press **OK**.
2. Scroll to **Write Message**. Press **OK**.
3. Select if your message is to be sent as SMS (most usual) or e mail*. Press **OK**.
4. Press the equivalent number key for the desired text.
 -  switch between upper/lower case **A/a**
 -  insert a space or special character
5. Press **Option**. Scroll forward to send or store the message. Press **OK**.
6. Enter the telephone number, or press **Option** to retrieve the telephone number from the telephone book.
7. Press **Option**.
8. Scroll to **Send**. Press **OK**.
9. The display shows if the SMS has been sent successfully or not. If no error report is shown, the message has been sent successfully.

*Requires special subscription. Remember to store special numbers in the service centre for E mail below.

Entering the telephone number in SMS centre/operator


Check that the correct number (without the terminal number) for your operator has been programmed. See details for UK/Australia on the previous page.

1. Press . **SMS** is displayed. Press **OK**.
2. Scroll to **Service centre**. Press **OK**.
3. Scroll to selected entry. Press **OK**.
4. Enter number. Press **OK**.

*Remember to enter the correct terminal number as well, e.g. 0.
The available functions/services vary depending on service provider.*

First ring signal

It may be a good idea to turn off the first ring signal if you are subscribing to an SMS service, in order to avoid any ring signal for incoming SMS.

1. Press . **SMS** is displayed. Press **OK**.
2. Scroll to **Set First Ring**. Press **OK**.
3. Scroll to required setting. Press **OK**.




Network services

Most usual operator/extra services can be accessed via the menu or with the menu buttons during a call. Some functions are pre-programmed but is not certain that all functions will work on delivery as this will depend on the country of installation/operator. You can change the codes that are sent, see *Other Settings*.

Please note!

You may have to pay extra for some services, contact your service provider for more information. Some services will not work unless you have contacted your service provider to activate them.

Via the menu

1. Press **Menu**. Scroll to **Net Services**. Press **OK**.
2. Scroll to required service.
 - **Withhold No** Withhold your number from recipient. The code for this service must be programmed manually, see *Other Settings*.
 - **Call Divert** Incoming calls are always diverted to another number.
 - **Call Waiting** Function off/on. This is a practical function for avoiding problems with temporary modem connections.
 - **Wake up** Enter the time when you wish to receive your wake up alarm call. HH:MM.
3. Press **OK**. Follow the instructions on the handset/display.
4. Press  to terminate call.


During a call/On-line Menu

1. Connect an external call. Press **Menu**. Scroll to desired service (e.g.):
 - **Insert Pause** May be required when dialling via PBX exchange.
 - **Mute** to enable/disable the microphone.
 - **Make 2nd Call** Dial a second number, e.g. to use in a conference or three-way call (=R).
 - **Ringback** When the number is free you will hear a quick ring signal (=5).
 - **Phonebook** To search the phonebook.
 - **INT Call** Call another handset (+1...).
 - **Tone** Temporary change to tone dialling.
 - **Notebook** Store a number temporarily in the redial memory.
 - **Reject Call** Reject an incoming call (=R 0).
 - **End Current** Toggle between calls/End current call (=R 1).
 - **Toggle** Toggle between calls/Answer incoming waiting call (=R 2).
 - **Conference** Conference/Three-way call (=R 3).
2. Press **OK**.

Date/Time/Alarm

1. Press **Menu**. Scroll to **Date/Time**. Press **OK**.
2. Scroll to required setting. Press **OK**.

Alarm Clock

An activated alarm is indicated in standby mode by . When the alarm goes off, an audio signal is heard for 60 seconds. Press any key on the handset to turn off. The volume is determined by the set ring signal level. If the symbol is not illuminated in standby mode, the reason may be that the clock is not set.



Date/Time

Setting of date/time is described in *Connection*.



Other settings

1. Press **Menu**.
2. Scroll to **Setting**. Press **OK**.
3. Scroll to **Handset**. Press **OK**.
4. Scroll to required function e.g. **Language**. Press **OK**.
5. Scroll to required setting. Press **OK**.

Auto Answer	The handset answers incoming calls when it is lifted from the base unit.
Vibrator	The vibrator that is activated when the phone rings can be turned off/on.
Select Base	Only used in systems with more than one base unit.
Language	Language setting is explained in <i>Connection</i> .
Country code	See separate description for programming country codes.
Baby Monitor	Cordless baby monitor, see separate description.
Abbr number	Programming of speed dial numbers. To call one of these, press down the corresponding button 1-3 .
Network	It is possible to change the codes for operator services (CF=Call Forwarding).
Register	To register a new handset, see separate description.
Handset PIN	You can change the pin code (0000 on delivery).
Default Set	Resetting the handset.

Cordless Baby Monitor

If you place the handset near the child (but out of reach), then you will receive a call if the sound from the child's room exceeds a set sensitivity level. You will then be able to hear the child for one minute.

1. Access **Baby Monitor** according to instructions on previous page.
2. Scroll to desired setting as below with scroll button.

Activ.	Activate function off/on.
Call to Level	Select internal call (applies to +1...) or external call.
Level	Setting of sensitivity level.

3. Press **OK**. The display shows **Baby Monitor On**.
4. Test the setup before use by shouting into the handset which is to be placed near the child, and have someone listen to the other unit.
5. To avoid disturbing the child with incoming calls, you can turn off the ring signal by pressing and holding the **✖** key.
6. Turn off the function by selecting **OFF**.

Important!

The Baby Monitor is a useful help, but it is obviously not a replacement for regular baby care.

Ensure the equipment is always out of the child's reach. Never place the handset in the cot.

We recommend activating the Call Waiting function on the receiving unit, e.g. a mobile phone, to avoid missing a call.

Country Code

To copy entries from the SIM card using “+”, it is often necessary to enter certain information.

Telephone numbers on the SIM card that have been stored with the international dialling code 00 followed by the country code will also be changed. Example of settings for UK:

Country code (domestic): 44


International prefix: 00

National prefix: 0

Register

Every new handset must be registered in order to use a base unit. Every base unit can manage up to 6 different handsets.

See *Expanded Systems* for more information.

1. Access **Register** according to instructions on previous page.
2. Scroll to required base unit ($\sqrt{}$ =previous reg). Press **OK**.
3. Enter the base unit PIN code (0000 on delivery). Press **OK**.
4. Press down the  search button on the base unit until the indicator flashes.
5. After a few seconds (max 60) any unused handset number will be displayed. Select one of these by pressing the corresponding key.

Signals and display

1. Press **Menu**.
2. Scroll to **Ringer Set** or **Display**. Press **OK**.
3. Scroll to desired function, e.g. **Contrast**. Press **OK**.
4. Scroll to required setting. Press **OK**.

Signals

Ringer Volume/ Ringer Melody

The handset's ring signal can be adjusted.

VIP Melody

Select melody for VIP numbers in phonebook.

Key Beep

Heard when buttons are pressed.

SMS Alert

Heard when a new SMS message is received.



Display

Contrast

The contrast in the display can be adjusted to several levels.

Wallpaper

The background image in the display can be changed.

Colour Scheme

The colour of the menus can be changed.

Handset Name

The text shown on standby can be altered.





System settings

System PIN is 0000 on delivery.

1. Press **Menu**. Scroll to **Setting**. Press **OK**.
2. Scroll to **Base Set**. Press **OK**.
3. Scroll to desired function e.g. **Access Code**. Press **OK**.
4. Scroll to required setting. Press **OK**.

Ring Priority

You can decide whether all handsets should ring at once when there is an incoming call, or if one handset should start ringing before the others. You can set the number of ring signals for this function as well.

Care dial

The CARE memory is used to store e.g. a security number. The call will be connected via the speaker function by pressing the line key for about a second.

Call barring

Different types of outgoing calls are blocked, see separate description.

Net. Provider

Settings to use different service providers, see separate description.

Dial Set

Settings for advanced installations, see separate description.

Deregister

To deregister a handset from a base unit.

Base PIN

You can change the pin code (0000 on delivery).

Default Set

Reset base unit.

Dial settings

These settings are usually not changed. System PIN is 0000 on delivery.

1. Press **Menu**. Scroll to **Setting**. Press **OK**.
2. Scroll to **Base Set**. Press **OK**.
3. Scroll to **Dial Set**. Press **OK**.
4. Scroll to desired function e.g. **Access Code**. Press **OK**.
5. Scroll to required setting. Press **OK**.

Access Code

Enter the digit that obtains an external line and the telephone will insert a pause automatically when a number starts with that digit.

Recall Time

Only for adaptation to international company switchboards. The UK setting is 98 ms. (600 ms in New Zealand).

Emergency No

Emergency numbers are excluded from call blocking functions.

Dialling Mode

The dial mode setting for UK must be Tone (Europe only).

Call barring

The telephone can block certain types of outgoing calls.

System PIN is 0000 on delivery.

1. Access **Call Barring** according to description on previous page.
2. Scroll to selected handset. Press **OK**.
3. Scroll to **Barring Mode**. Press **OK**.
4. Scroll to required setting. Press **OK**.

INT call Only allows internal calls. Blocks all outgoing calls.

Barred no. Blocks the numbers you select, see below.

Setting barred numbers

Enter the sequence of digits for the type of call to be barred. Example: select 00 to block international calls. Three different bars of up to eight digits each may be used.

1. Access **Call Barring** according to description on previous page.
2. Scroll to selected handset. Press **OK**.
3. Scroll to **Barring Number**. Press **OK**.
4. Scroll to selected entry. Press **OK**.
5. Enter required digits (max 8). Press **OK**.
6. Activate the **Barred no.** setting according to description on top of page.

Net. Provider

To choose a certain service provider, one would usually dial a prefix code before the actual phone number.

This function will automatically select the telephone network provider, e.g.:

Provider X (prefix 9301) for dialling international calls. Set up the LCR so that all phone numbers starting with 00 will be changed to 930100. System PIN is 0000 on delivery.

1. Access **Net. Provider** according to description on previous page.
2. Scroll to the required preselection. Press **OK**.
3. Enter sequence to be sensed/exchanged (up to 5 digits, e.g. 00).
4. Scroll to **<Number>**. Enter sequence to be added (up to 10 digits, e.g. 930100).
5. Scroll to required setting **Off/ On**. Press **OK**.

Please note!

To place your call with a certain network provider, you must be a registered subscriber.

The display always shows the entered number (not the number actually being dialled).

You can have up to four Net Provider options simultaneously.

If the number sensing option is not selected, the digits will be added to every call.

Expanded system (+1)

All handsets included in the package are registered to the base unit already. The handset number used for internal calls is shown in the display on standby.

The base unit should be positioned centrally so that the coverage area is roughly equal for all handsets.

You can register up to 6 handsets to one base unit.


This model is GAP (Generic Access Profile) compatible, which means that the handset and the base unit can both be used with most other GAP compatible units irrespective of manufacturer. However the GAP protocol cannot guarantee that all functions may be accessed.

INT calls

1. Press **Menu**.
2. Scroll to **INT Call**. Press **OK**.
3. Press **All** or enter the handset number **1-6** for the handset you wish to call.

A tone will be heard if an external call comes in while an internal call is in progress. Answer the external call by pressing **Accept**.

Conference/Transferring calls between handsets

1. While an external call is connected on line.
2. Initiate an internal call as described above.
3. Press  to transfer the call or press **Conf** for conference.

Specific absorption rate (SAR)

This device meets approved international safety requirements for exposure to radio waves.

This telephone measures 0.1 W/kg (measured over 10g tissue).

The max. limit according to WHO is 2W/kg (measured over 10g tissue).

Declaration of conformity

Doro hereby declares that the Doro 760X conforms to the essential requirements and other relevant regulations contained in the Directives 1999/5/EC and 2002/95/EC.

A copy of the manufacturers' declaration is available at www.doro.com/dofc

Troubleshooting

Check that the telephone cord is undamaged and properly plugged in. Disconnect any additional equipment that may be connected, e.g. extension cords and other phones. If the problem is resolved, the fault is with the other equipment.

Test the equipment on a known working line (e.g. at a neighbour's). If the product works then the fault is with your telephone line. Please inform your local telephone company.

No number shown when ringing

- This function requires a subscription from your service provider.
- A switchboard cannot usually pass on incoming numbers.

Warning signal while talking/Cannot connect

- The batteries may be running low (recharge the hand unit).
- The hand unit may be (nearly) out of range. Move closer to a base unit.

Telephone does not work

- Check that the adapter and telephone cord are connected to the base unit and to their respective wall sockets.
- Check that you have selected Tone Dial, see *System Settings/Dial*.
- Check the charge status of the handset batteries.

The telephone continues to ring

- The telephone's ring signals do not follow the line signal, which means that the signal may continue for up to 10 seconds after answering a call.

SMS does not work

- In order for this feature to function, you must subscribe to the SMS service from your network provider.
- Check that the correct telephone number is stored for each service.

If the telephone still does not work, contact the place of purchase. Don't forget the receipt or copy of the invoice.

UK

If you cannot resolve the fault using the faultfinder section, technical support is available by email on: tech@doro-uk.com Further contact details are available on our website: www.doro-uk.com



Guarantee

This product is guaranteed for a period of 12 months from the date of purchase. In the unlikely event of a fault occurring during this period, please return the item with a copy of the purchase receipt to your place of purchase. Proof of purchase is required for any service or support required during the guarantee period.

This guarantee shall not apply to a fault caused by an accident or a similar incident or damage, liquid ingress, negligence, abnormal usage, non-maintenance or any other circumstances on the user's part. Furthermore, this guarantee shall not apply to a fault caused by a thunderstorm or any other voltage fluctuations. (As a matter of precaution, we recommend disconnecting the telephone during a thunderstorm.)

This guarantee does not in any way affect your statutory rights. Batteries are consumables and are not included in any guarantee. This guarantee does not apply if other batteries than DORO original batteries have been used.

Australia and New Zealand

Products permitted for connection to the telephone network are marked with  in Australia and  **TELEPERMIT** in New Zealand. These marks indicate the products comply with the regulations and can be used without concern in the country of purchase.

If you believe this product is malfunctioning, please refer to the relevant section and/or consult the troubleshooting guide in this manual to ensure that you have followed the instructions carefully. As an alternative you can visit our web site for FAQ's or send an e-mail for a prompt reply.

Electro Magnetic Radiation (EMR)

This telephone complies with applicable safety requirements for exposure to radio waves.

The mean power of this telephone is not greater than **14** mW.

This is below the 20mW limit at which testing is required.

Guarantee

This product is guaranteed for a period of 12 months from the date of purchase.

Should you experience difficulties with the product, please contact us for assistance. If the product is then found to be faulty you will be asked to return it directly to us with a copy of the purchase receipt. This guarantee shall not apply to a fault caused by an accident or a similar incident or damage, liquid ingress negligence, abnormal usage, not reasonably maintained or any other circumstances on the purchaser's part. Furthermore, this guarantee shall not apply to a fault caused by a thunderstorm or lightning, excessive or any other voltage fluctuations or faults on the telephone line. (As a matter of precaution, we recommend disconnecting the telephone during a thunderstorm).

This guarantee does not affect your statutory rights.

AUSTRALIA

DORO Australia Pty Ltd
PO Box 6760
Baulkham Hills BC NSW 2153
Australia

Consumer Support

Ph: Ph: 1300 885 023
Fax: (02) 8853-8489
Email: support@doro.com.au
Web site: www.doro.com.au

NEW ZEALAND

Atlas Gentech (NZ) Limited
Private Bag 14927
Panmure
Auckland
New Zealand
Consumer Support
Ph: 0900-500-25 (Toll Call)
Fax: (09) 574-2722
Email: support@atlasgentech.co.nz

REN (RN for New Zealand)

The REN (Ringer Equivalence Number) or (RN) is of significance only if you wish to connect more than 1 telephone to your telephone line. A standard telephone line has a maximum REN capacity of 3 (RN of 5). It is possible to connect 3 devices with a REN of 1 (RN of 1) with no degradation to the product's performance. Exceeding this limit may cause the volume of the ringer in any phone to decrease or not ring at all.

ALL PRODUCTS

The grant of a Telepermit for any item of terminal equipment indicates only that Telecom has accepted that the item complies with the minimum conditions for connection to its network. It indicates no endorsement of the product by Telecom, nor does it provide any sort of warranty. Above all, it provides no assurance that any item will work correctly in all respects with another item of Telepermitted equipment of a different make or model, nor does it imply that any product is compatible with all of Telecom's network services.

This equipment shall not be set to make automatic calls to the Telecom "111" Emergency Service.

This equipment may not provide for the effective hand-over of a call to another device connected to the same line.

This equipment should not be used under any circumstances that may constitute a nuisance to other Telecom Customers.

CND PRODUCTS

If a charge for local calls is unacceptable, the "DIAL" button should NOT be used for local calls. Only the 7 digits of the local number should be dialled from your telephone. DO NOT dial the area code digit or the "0" prefix.

English

Version 1.0

www.doro.com

