

Documentation

HiPath 4000

OpenStage SL4 professional
on HiPath Cordless Enterprise

Operation

Siemens Enterprise Communications
www.siemens-enterprise.com

SIEMENS

Safety notes

Handset



Danger:

- Do not use the handset in potentially explosive atmospheres.
 - To avoid mutual interference, do not operate the handset in the vicinity of electronic equipment.
 - Do not use the handset in wet rooms! Devices are not splash-proof.
 - A transmitter signal is emitted by your handset. Please observe safety procedures for your area.
-



Caution:

The ringing tone, signal tones and handsfree talking (speakerphone mode) are played over the loudspeaker. Do not hold the telephone to your ear when it is ringing or if speakerphone mode is switched on. Otherwise you risk serious and permanent damage to your hearing.



Caution:

- Information for hearing aid users: Radio signals may interfere with hearing aids.
 - If you give your handset to someone else, please include the operating instructions with it.
-

Batteries



Danger:

- Only use the approved battery.
 - Avoid contact with fire and water.
 - Only use the approved power supply unit to operate the charging shell.
-

WEEE mark

**Caution:**

- All electrical and electronic products should be disposed of separately from the municipal waste stream via designated collection facilities appointed by the government or the local authorities.
- Proper disposal and separate collection of your old appliance will help prevent potential damage to the environment and human health. It is a prerequisite for reuse and recycling of used electrical and electronic equipment.
- For more detailed information about disposal of your old appliance, please contact your city office, waste disposal service, the shop where you purchased the product or your sales representative.
- The statements quoted above are only fully valid for equipment which is installed and sold in the countries of the European Union and is covered by the European Directive 2002/96/EC. Countries outside the European Union may impose other regulations regarding the disposal of electrical and electronic equipment.




Operating instructions

These operating instructions describe your handset and its functions on your communications system.

All functions that can be performed via your handset are described here. If some of the required functions are not available on your handset, it may be due to one of the following:

- The function is not configured for you or your handset - please contact your system administrator.
- Your communications platform does not feature this function - please contact your Siemens contract partner to upgrade.

Overview of handset

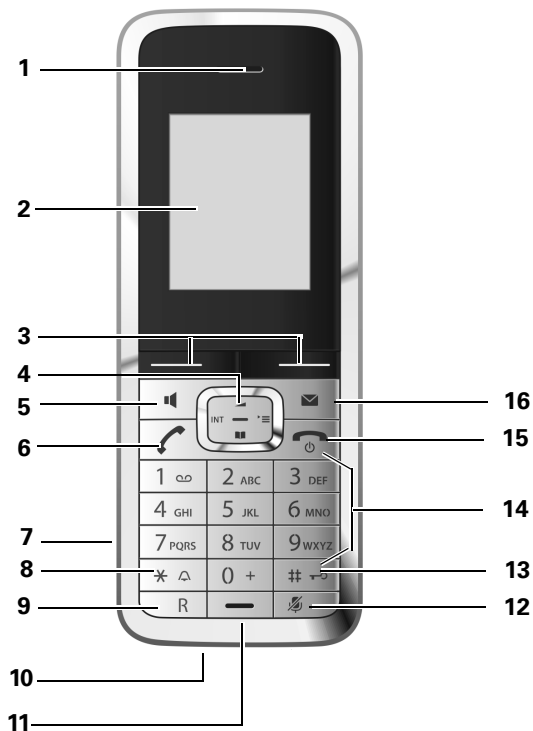

- | | | | |
|---|--------------------|----|------------------------|
| 1 | Earpiece | 10 | Mini USB connection |
| 2 | Display | 11 | Microphone |
| 3 | Display keys | 12 | Mute key |
| 4 | Control key | 13 | Hash key |
| 5 | Speakerphone key | 14 | Number keys |
| 6 | Talk key | 15 | On-hook and on/off key |
| 7 | Headset connection | 16 | Message key |
| 8 | Star key | | |
| 9 | R key | | |

How to use the keys: → Page 9

Contents

Safety notes	2
Handset	2
Batteries	2
WEEE mark	3
Operating instructions	3
Overview of handset	4
Description of controls	9
Function keys	9
R key	10
Control key	10
Display keys	11
Menu icons in the main menu	12
Putting the handset into service	14
Removing the protective cover	14
Installing the charger	14
Inserting the battery	15
Charging and using the battery	17
Fitting the attachment clip	18
Connecting the USB data cable	18
Connecting the headset	18
Setting the handset display language	19
Setting the handset	20
Setting the speaker volume	20
During a call	20
In idle status	21
Setting a handsfree profile	21
Setting advisory tones	23
Activating/deactivating the vibration alert	24
Setting the ringer	25
Setting ringing tones and pictures with resource directory	27
Viewing screensavers and caller pictures / Playing sounds	27
Deleting/renaming a picture/sound	28
Checking the available memory	29
Activating or deactivating the ringer	30

Activating or deactivating the alerting tone	30
Activating/deactivating automatic call answering	31
Setting the date and time	32
Setting the display	33
Setting the conversion list for vCard transfer	36
Setting the menu view	37
Resetting the defaults	38

Conducting calls – the basic functions 40

Activating/deactivating the handset	41
First seize the line, then dial	42
Dial first, then seize the line	43
Manual redial	44
Callback	45
Consultation	46
Activating and deactivating the microphone	48
Answering or rejecting a call	49
Ending a call	50
Activating or deactivating the keypad lock	50
After leaving the radio network	50

Conducting calls – enhanced functions 51

Speakerphone mode	51
Conducting calls with the headset	52
Corded headset	52
Cordless headset	52
Switching to mute	54
Number redial	55
Automatic redial	55
Deleting a redial entry or list	55
Adding a telephone number to the redial list	56
The handset's phonebook	57
Saving an entry	58
Finding and dialling an entry	59
Dialling an entry with the speed dialling digit	60
Viewing an entry	60
Changing an entry	60
Deleting an entry or phonebook	61
Displaying available memory	61
Sending an entry or phonebook to the handset or system	62
Central directories (group directory)	64
Making calls using project assignment (cost billing)	65
Using a different telephone in the same way as your own	66
Caller ID suppression	67
Activating/deactivating do not disturb	68

Call tracing	69
Call forwarding	70
Using call forwarding	70
Delayed call forwarding	79
Forwarding calls for a different terminal	79
Entering commands via tone dialling (DTMF suffix dialling)	81
Parking/activating calls	81

Conducting calls – with multiple users 83

Call waiting	83
Busy override	84
Transferring a call	85
Toggling (switching between calls)	85
Conducting a conference	86
Setting up a conference	87
Expanding a conference	88
Transferring the conference	90
During the conference	90
Using the camp-on function	91

Message functions 93

Using the mailbox	93
Using the missed call list	94
Using the HiPath Xpressions mailbox function (optional)	95

Additional functions 96









Handset alarm clock function	96
Handset appointment reminder function	98
System appointment function	101
Selecting a base	103
Setting the base	104
Speed dialling	105
Speed access to functions	106
Data communication with the PC	107
Bluetooth interface	108
Activating/deactivating Bluetooth mode	108
Registering Bluetooth devices	109
Editing the list of known (trusted) devices	110
Phonebook transfer	112
System-wide speaker call	113

Telephone blocking	115
Handset telephone lock.....	115
Locking the telephone line to prevent misuse.....	116
Accessing system functions	118
Appendix	119
Troubleshooting.....	119
Cleaning the handset.....	121
Documentation.....	122
General specifications.....	122
DECT.....	122
Bluetooth.....	123
Battery.....	123
Handset operating times/charging times.....	124
Charging shells.....	124
Accessories.....	125
EU guidelines.....	125
Writing and editing text.....	126
Setting upper/lower case or digits.....	126
Writing names.....	127
Accessing additional functions via the PC interface.....	127
Declaration of conformity.....	127
Index	129

Description of controls

  Function keys

The following function keys are available:

Key	Name	Usage
	On-hook and on/off key	<ul style="list-style-type: none"> • End a call • Cancel functions • Go back to the next menu level up • Activate or deactivate the handset
	Talk key	<ul style="list-style-type: none"> • Answer a call • Dial a phone number • Open the redial list • Access telephone system functions
	Speakerphone key	<ul style="list-style-type: none"> • Answer a call • Dial a phone number • Toggle between handset and speakerphone mode • Access telephone system functions
	Message list	Access message lists
	Star key	Activate/deactivate the ringer
	Hash key	Activate/deactivate keypad lock
	Mute key	Mute the microphone
	R key	R key function → Page 10





R key

Pressing the R key briefly allows different functions to be performed depending on the current operating mode, for example:

- When dialling: insert a pause (for example, between the prefix and the phone number, or when checking a mailbox)
- When conducting a call: end the call
- When conducting a consultation call: end the consultation call.
- When conducting a consultation call, initiating a conference or forwarding a call: terminate the connection to a mailbox


Control key

The control key is assigned different functions depending on the operating situation:

Situation	 Press top of key	 Press bottom of key	 Press left side of key	 Press right side of key
In idle status	Call volume	Open the handset's phonebook	Communication system menu	Open the handset's main menu
During a call	Call volume	Open the handset's phonebook	Communication system menu	Select "Loudspeaker Vol", "GAP DTMF", "Base Settings"
In the main menu	Select a menu icon	Select a menu icon	Select a menu icon	Select a menu icon
In lists and menus	Next-higher item in the list	Next-lower item in the list	Next menu level up, cancel	Select an entry (OK)
In the input field	Move the cursor up one line	Move the cursor down one line	Move the cursor to the left	Move the cursor to the right
Change values	-	-	Reduce value	Increase value

Display keys

The handset has two display keys, each with one or two functions. When the key is allocated two functions, press the right or left side of the key to select the corresponding functions. The display key assignment depends on the operating status.

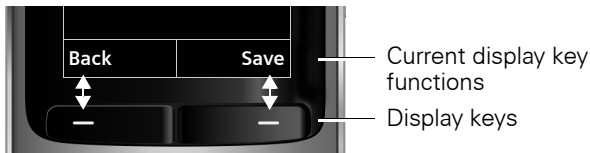

Some important display keys include:

Icon	Usage
Options	Open a context-specific menu
OK	Confirm your selection
< C	Delete character by character/word by word from right to left
Back	Go back one menu level/cancel operation
Save	Save input
→→	Open redial list

Menu icons in the main menu












The handset's main menu can be opened by right-clicking the control key.








The menu icons are selected by pressing the left/right and top/bottom of the control key.

Alternatively, you can also press one of the numerical keys, e. g. **4** for "Alarm Clock" or **9** for "Settings".

Menu options that are only available in expert mode are marked with the  icon. Expert mode can be set by switching the menu view from simplified to complete. To set, see → Page 37.

Icon	Name	Usage
	Resource Directory	Manage images and tones: <ul style="list-style-type: none"> • Screensavers • Caller Pictures • Sounds • Capacity
	Bluetooth	Configure Bluetooth interface: <ul style="list-style-type: none"> • Activation • Search for Headset • Search Data Device • Known Devices • Own Device
	Additional Features	see Resource Directory
	Alarm Clock	Configure alarm call function.
	Call Lists	Open call list if calls are available.
	Voice Mail	Call mailbox if voicemail calls are available on the network answering machine.
	Organizer	Manage appointments: <ul style="list-style-type: none"> • Calendar • Missed Alarms
	Directory	Manage phonebook.

Icon	Name	Usage
	Settings	Configure handset: <ul style="list-style-type: none"> • Date/Time • Audio Settings <ul style="list-style-type: none"> – Handset Volume – Freisprechprofile –  Advisory Tones – Silent Alert – Ringtones(Handset) • Display + Tastatur <ul style="list-style-type: none"> – Screensaver – Large Font – Colour Schemes –  Display-Beleucht. – Tastatur-Beleucht. • Language • Registration <ul style="list-style-type: none"> – Register Handset – De-reg. Handset – Select Base •  Telephony <ul style="list-style-type: none"> – Auto Answer – Area Codes •  System <ul style="list-style-type: none"> – Handset PIN – Handset Reset – Base Reset • Menu View <ul style="list-style-type: none"> – Simplified – Complete

Putting the handset into service

Removing the protective cover



Remove the protective cover from the display before putting the handset into service.

Installing the charger


The charger is designed for operation in closed, dry rooms within a temperature range of +5 °C to +45 °C.

Install the charger on a level, non-slip surface.

The phone's feet do not usually leave any marks on surfaces. However, due to the multitude of different varnishes and polishes used on today's furnishings, the occurrence of marks on the surfaces cannot be completely ruled out.


Please note:

- Never expose the telephone to the influence of heat sources, direct sunlight or other electrical devices.
- Protect your OpenStage SL4 professional from moisture, dust, corrosive liquids and fumes.

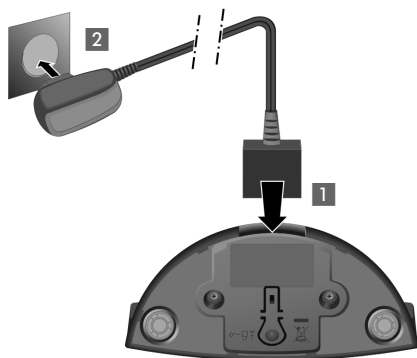

- Connect the flat plug from the power adapter **1**.
- Plug the power adapter into the plug socket **2**.

To disconnect the plug from the charger, press the release button **3** and disconnect the plug **4**.

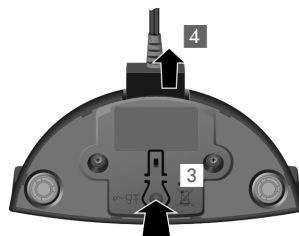

Inserting the battery

The handset is supplied with an approved battery. The battery is not charged when supplied. It is first charged in the handset.




Caution:

- Please observe the safety notes → Page 2!
- Only use approved batteries → Page 123!
- Open the battery compartment in a dust-free environment only.
- Your phonebook entries and all settings remain stored even if you remove the battery. The date and time settings will be reset.
- Only remove the battery if it is defective. The battery's life diminishes each time it is removed.

1. If installed: Remove the attachment clip


Insert a screwdriver between the attachment clip and the battery cover (1) and force the attachment clip outward (2) until it dislodges.

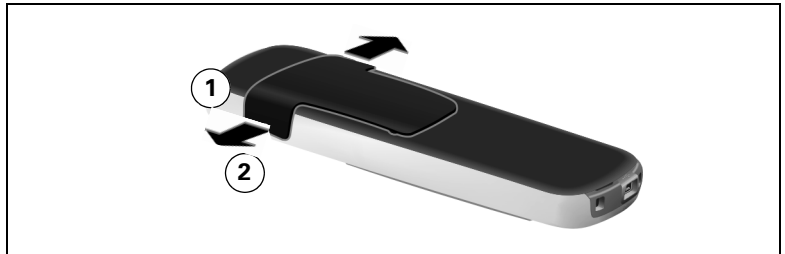

Likewise dislodge the clip on the opposite side and then remove it.


2. Open the battery compartment

Reach into the cavity on the housing and lift up the battery cover.

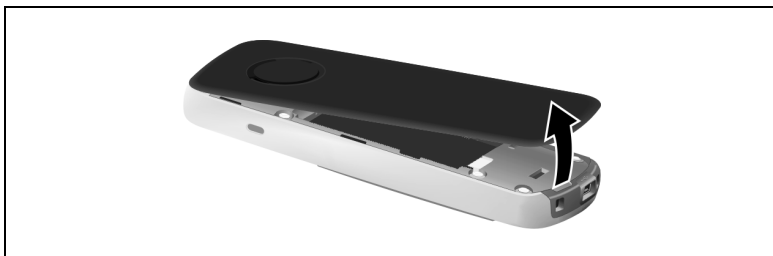


3. Insert the battery

Insert the battery ensuring that the contacts meet.

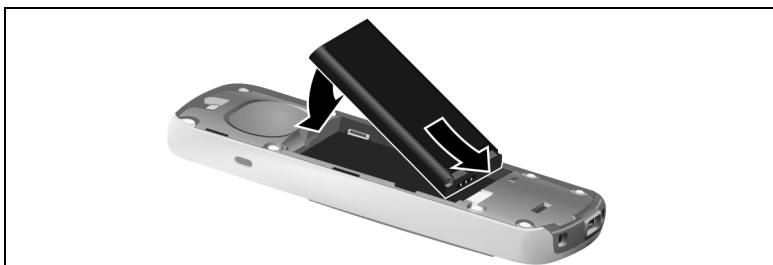

4. Close the battery compartment

First, align the protrusions on the side of the battery cover with the notches on the inside of the casing. Then press the cover until it clicks into place.

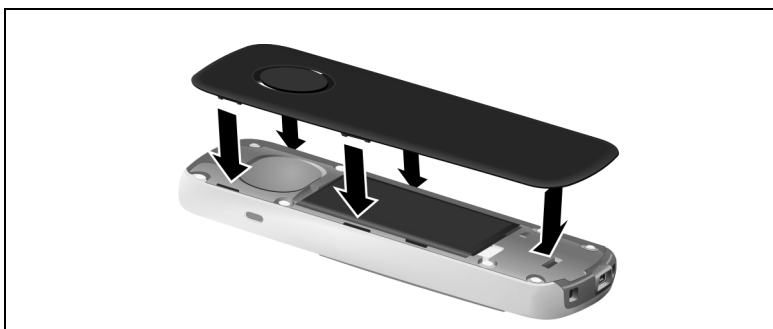







Charging and using the battery

To charge the battery, insert the handset into the charging shell with the keypad facing forwards.

Important:

Only use the relevant approved power supply units for operating the charging shell (for order numbers see → Page 122).

The charging status is indicated by the charge status display:


	lighting white: charged over 66%
	lighting white: charged between 34% and 66%
	lighting white: charged between 11% and 33%
	lighting red: charged below 11%
	flashing red: battery almost empty (less than 10 minutes talktime)
	lighting white: battery being charged

Note:

- Initial charging: Charge the battery for at least 3 hours without a break, regardless of the charging status icon. Without replacing it in the charging shell, use the handset until the "battery low" beep is heard. This action aligns the charge status display with the operating times of the battery.
- To attain full operating and charging times: After charging, remove the handset from the charger and only replace it when the battery is fully discharged.
- For future charging: you can replace your handset in the charging shell each time it has been used. Charging is electronically controlled which ensures that the battery is charged optimally.

Fitting the attachment clip


Press the belt clip onto the back of the handset until the tabs on the clip engage in the recesses on the phone.

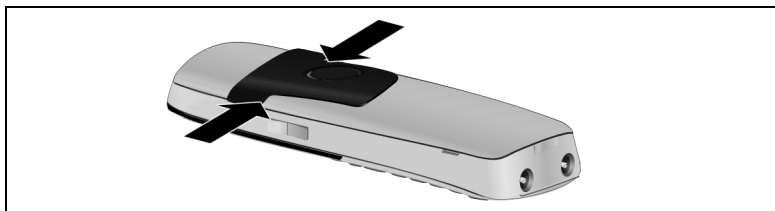

Connecting the USB data cable

You can connect a standard USB data cable with a mini-B connector to the underside of your handset in order to synchronise your handset with a PC → Page 107.

Connect the USB data cable to the USB jack (1).

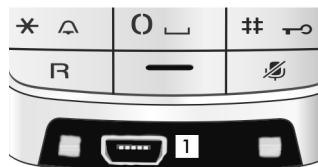

Connecting the headset



You can connect a headset with a 2.5 mm jack plug to the left side of your handset.

The headset volume corresponds to the setting for the ear-piece volume → Page 20.

Step by Step

Setting the handset display language

If your preferred language for handset display texts is not set as the default, you can set this yourself. The language of communication system display texts can only be set by the administrator.

Opening the main menu



Open the handset's main menu.

Opening the first submenu



Settings



Select the menu icon and confirm.

Opening the second submenu



Language



Select the menu item and confirm.

Selecting a language



Deutsch
English
Francais
Italiano
Español
Portugues
Nederlands
Dansk
Norsk
Svenska
Suomi
Cesky
Polski
Turkce
Ellinika
Magyar
Russkij
Hrvatski
Slovenscina
Romana
Srpski
Catalan
Bulgarski
Bosanski
Ukrayinska
Arabic



Select and confirm the language you require.



Press the On-hook key to end the operation.



Caution:

- If you inadvertently set a display language that you do not understand, press "
- If you want to reset the default display language: → Page 38.

Step by Step

Setting the handset

You can change the standard settings of the handset if you are not happy with them.

Setting the speaker volume

During a call

You can adjust the speaker volume during a call via the earpiece or speakerphone using a menu function. The relevant volumes are adjustable depending on whether you are conducting the call via the earpiece or speakerphone.



You are conducting a call.



Press the control key to open the **Handset Volume** menu.



Adjust the earpiece or speakerphone volume.



Save

Save the settings.

or


 
 
 
The setting will be saved automatically after approx. 3 seconds.

Step by Step

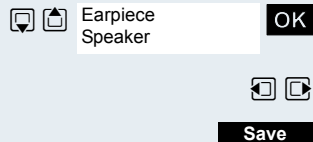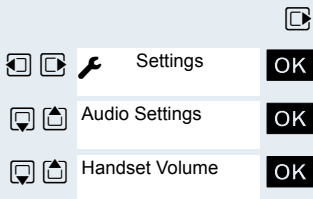

 


In idle status

You can change the speaker volume via the menu in idle mode.

-  Open the handset's main menu.
-  Select the menu icon and confirm.
-  Select the menu item and confirm.
-  Select the menu item and confirm.



-  Select the required menu item.
-  Define the setting.
-  Press the display key.

Setting a handsfree profile

- Profile 1
The optimum setting for most connections and therefore set by default.
- Profile 2
Optimum volume in handsfree mode. However, this means that the participants cannot speak at the same time as the person speaking is given preferential transmission (making two-way conversations difficult).
- Profile 3
Optimises two-way conversations, both callers can hear each other, even if they talk at the same time.

Step by Step

- Profile 4
Optimised for special connections. If the default setting (profile 1) does not provide optimum sound, please give this a try.

In idle status



Open the handset's main menu.



Settings



Select the menu icon and confirm.



Audio Settings



Select the menu item and confirm.



Freisprechprofile



Select the menu item and confirm.



Select handsfree profile (1 to 4).



Press the display key to save the setting.

Step by Step


Setting advisory tones

**Caution:**

Can only be set if this menu item is visible. To set, see → Page 37.

The advisory tones have the following meaning:

Advisory	Explanation
Key Tones	Every key press is confirmed.
Confirmation	<ul style="list-style-type: none"> Confirmation tone when saving inputs/settings and when placing the handset in the charging shell Error beep (decreasing tone sequence) to signal incorrect inputs End-of-menu beep at the menu end
Battery	The batteries must be charged.

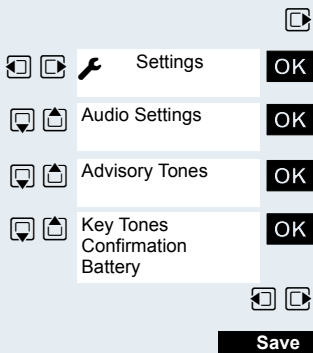

Open the handset's main menu.



Settings



Select the menu icon and confirm.



Audio Settings



Select the menu item and confirm.



Advisory Tones



Select the menu item and confirm.



Key Tones
Confirmation
Battery



Select the required menu item.



Activate or deactivate.

Save

Save the settings.

Step by Step

Activating/deactivating the vibration alert

Incoming calls and other messages are indicated by a silent alert.



Open the handset's main menu.



Settings



Select the menu icon and confirm.



Audio Settings



Select the menu item and confirm.



Silent Alert

Select the menu item and confirm.

Edit

Press the display key.




Activate or deactivate.

Step by Step

Setting the ringer

Tones and melodies are saved on your handset. If you select the menu items **Volume** and **Melodies**, the ring-tone sounds at the current setting.

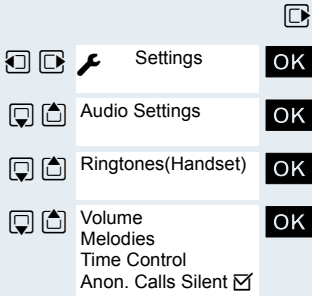

Open the handset's main menu.

Select the menu icon and confirm.

 
Select the menu item and confirm.

Select the menu item and confirm.

Select the required menu item and confirm.

Caution:



The "Anon. Calls Silent" function is not available on your communication system.



Select the menu item and confirm.

You can choose between three ringer volumes, as well as a crescendo ring (volume increases gradually).

Setting the volume

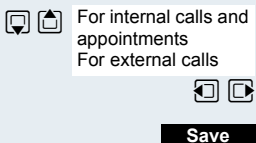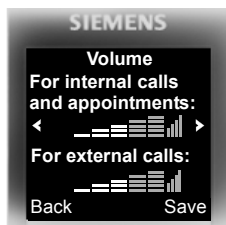


Select the required menu item.

Define the setting.

Press the display key.

Setting melodies

 You can set ringing tones differently on your handset for different calls to help you differentiate between calls and appointments:



Select the menu item and confirm.

Step by Step



For internal calls
For external calls

Select the required menu item.



Define the setting.

Save

Press the display key.

Setting time control for external calls

Specify a time period when you do not want the telephone to ring, for example during the night.



Time Control

OK

Select the menu item and confirm.



Specify **On** or **Off**.

If active:



Suspend ring. from
Suspend ring. until

Select the required menu item.



Enter the time.

Save

Save the settings.

Step by Step

Setting ringing tones and pictures with resource directory


The resource directory on the handset manages sounds that you can use as ringing tones and pictures that you can use as caller pictures or screensavers. Calling Line Identification Presentation (CLIP). The resource directory can manage the following media types:

Type	Format
Sounds: Ringtones Monophonic Polyphonic Imported sounds	Internal Internal Internal WMA, MP3, WAV
Pictures: Caller picture Screensaver	BMP, JPG, GIF 128 x 86 pixels 128 x 160 pixels

Your handset comes with a number of mono- and polyphonic sounds and pictures pre-installed. You can listen to the available sounds and display the pictures.

You can download pictures and sounds from a PC → Page 107. If there is not enough memory available, you must first delete one or more pictures or sounds.

Viewing screensavers and caller pictures / Playing sounds

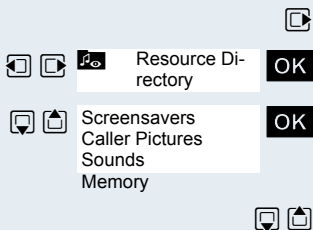

1. Open the handset's main menu.



2. Resource Directory



2. Select the menu icon and confirm.



3. Screensavers
Caller Pictures
Sounds
Memory



3. Select the required menu item and confirm.



4. Select the entry.

Step by Step

Show



Press the display key.

Toggle between the pictures.

If you have saved a picture in an invalid file format, you will see an error message after selecting the entry.



Press to exit the menu level.

Sounds

The selected sound is played immediately.



Toggle between the sounds.

You can set the volume during playback.

Options

Press the display key.



Loudspeaker Vol

OK

Select the menu item and confirm.



Adjust the volume.

Save

Save setting.

Deleting/renaming a picture/sound

You selected an entry.



Open the handset's main menu.



Resource Di-
rectory

OK

Select the menu icon and confirm.



Screensavers
Caller Pictures
Sounds
Memory

OK

Select the required menu item and confirm.



Select the entry.

Options

Press the display key. If a picture/sound is blocked (🔒), the options are not available.



Rename

OK

Select the menu item and confirm. The name of the entry can be modified. Length: up to 15 characters. Then confirm your entry.

or



Delete Entry

OK

Select the menu item and confirm. The entry is deleted.

Step by Step

Checking the available memory

You can show how much memory is left.



Open the handset's main menu.



Resource Di-
rectory



Select the menu icon and confirm.



Available Memory




Select the menu item and confirm.

Step by Step

Activating or deactivating the ringer

Deactivating the ringer



Hold down the key until a confirmation tone is emitted. The  icon appears on the display.

Activating the ringer



Hold down the key until a confirmation tone is emitted.

Deactivating the ringer for the current call

Silence

Press the display key.

Activating or deactivating the alerting tone

You can activate an alerting tone instead of the ringing tone. A short beep sounds for a call instead of the ringing tone.

If the handset is in a call pickup group, a pickup call is also signalled by the alerting tone.

Activating the alerting tone



Hold down the key until a confirmation tone is emitted.

Beep on

Press the display key within three seconds.



The alerting tone is activated. The volume of the alerting tone is coupled with the volume of the external ringer.

Deactivating the alerting tone



Hold down the key until a confirmation tone is emitted.

Step by Step


Activating/deactivating automatic call answering



Caution:

Can only be set if this menu item is visible. To set, see → Page 37.

This function allows you to accept calls by removing the handset from the charging shell.

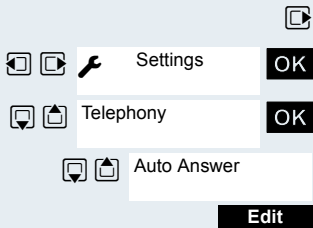

Open the handset's main menu.

Select the menu icon and confirm.

Select the menu item and confirm.

Select the menu item.

Press the display key. The activated function is ticked (☑) and can be deactivated by selecting it once more.

Step by Step

Setting the date and time

The date and time setting can be used to ensure that the date and time are assigned correctly to incoming calls and in order to use the alarm.

The handset date and time are automatically set when you set up a call to another station. If your communication system does not support this function, you can set the date and time manually.

Either:



Open the handset's main menu.



Settings



Select the menu icon and confirm.



Date/Time



Select the menu item and confirm.

or:

If the date and time have not yet been set:

Time

Press the display key.

then:



Enter the date, for example 22.09.2007 = 22092007.



Move the cursor down one line.



Enter the time, for example 19:05 = 1905.

Save

Save the settings.



Caution:

If your communication system does not automatically set the date and time, you must check the setting from time to time and if necessary, correct it.

Step by Step


Setting the display

A number of options are available for setting the display. You can set the screensaver (screen picture), the colour scheme, the font size and the display lighting. You can also change the name displayed for the base station.

Screensaver

A picture from the resource directory → Page 27 or the time can be displayed as a screensaver when the handset is idle. This will replace the idle status display. The calendar, date, time and name are covered as a result.

The screensaver is not displayed in certain situations, for example during a call or if the handset is signed off.

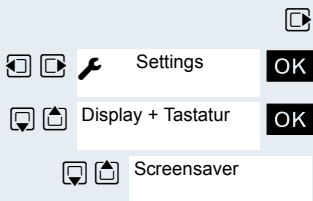

Edit

Open the handset's main menu.

Select the menu icon and confirm.

Select the menu item and confirm.

Select the menu item.

Press the display key.

Activation:



Activate or deactivate.

Selection:



Move the cursor down one line.



Select the required entry. **Digital Clock** and **Analog Clock** show the current time as a screensaver in large digits on the display.

View


The selected screensaver is displayed.

or

Save

Save the settings.


Step by Step

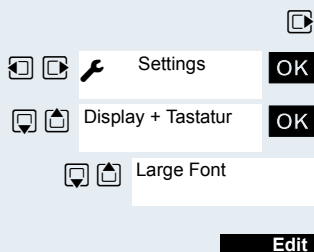

 Open the handset's main menu.



 Select the menu icon and confirm.



Select the menu item and confirm.



Select the menu item.




Press the display key.

(= on).

Colour scheme

Five colour schemes are saved on your handset. By selecting a colour scheme you define the colours to be used for the font, menu items and background.

If you change to a different colour scheme during a setting, it is immediately previewed to show how it will appear later for all menus.

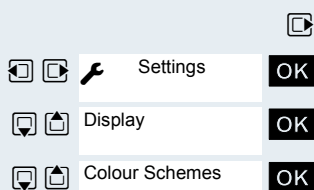


 Open the handset's main menu.



Select the menu icon and confirm.



 Select the menu item and confirm.



Select the menu item and confirm.



Select the entry.



Press the display key.


Lighting

Caution:

Can only be set if this menu item is visible. To set, see → Page 37.

You can set whether the display should light up when the handset is in or out of the base/charging shell. If it is activated, the display stays dimmed. When the display backlight is disabled, the display lights up again the next time any key is pressed. The key has no other function in this case.

Step by Step

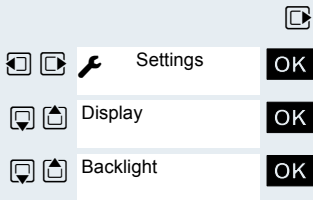


Open the handset's main menu.



Select the menu icon and confirm.



 Select the menu item and confirm.



Select the menu item and confirm.

In Charger:



Activate or deactivate.

Out of Charger:



Move the cursor down one line.




Activate or deactivate.



Save setting.

Setting keypad illumination


The brightness of the keypad illumination can be set to one of five levels.

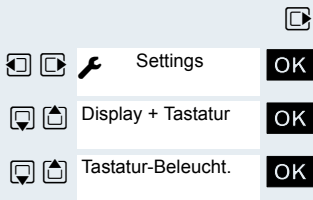


Open the handset's main menu.



 Select the menu icon and confirm.



Select the menu item and confirm.

 

Select the menu item and confirm.



Select 1 (darkest) to 5 (brightest).



Save setting.

Step by Step

Setting the conversion list for vCard transfer



Caution:

Can only be set if this menu item is visible. To set, see → Page 37.

See also **Gigaset QuickSync** → Page 107.

Phone numbers are usually specified as follows in e-mail programs, such as Microsoft Outlook for example: +49 (05251) 820776. The handset is unable to use this format, however, to dial the phone number. If the phone number above is a local fixed network number, it is converted to 0820776, for instance, when dialled. The conversion pairs are defined in the conversion table and can be modified if they deviate from the default values.

Consult your system administrator about the conversion rules that apply to your handset.



Open the handset's main menu.



Settings



Select the menu icon and confirm.



Telephony



Select the menu item and confirm.



Area Codes



Select the menu item and confirm. The conversion table is displayed.



Change entry

Press the up/down control key to navigate to another input field; Press the left/right control key to move the cursor within an input field.

Save

Save setting.




Press the On-hook key to end the operation.

Step by Step

Setting the menu view

You can decide whether only a selection of the most important menu items or all menu items are to be shown in the menus.

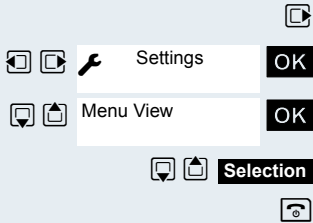

Open the handset's main menu.



Settings

OK

Select the menu icon and confirm.



Menu View

OK

Select the menu item and confirm.



Selection

Select and set **Simplified** or **Complete**.



Press the On-hook key to end the operation.

Step by Step

Resetting the defaults



Caution:

Can only be set if this menu item is visible. To set, see → Page 37.

This function allows you to reset your mobile phone to the defaults, for example, if you want to pass it on to someone else or reset it.

The handset features are handled as follows:

Feature	Action
Sound settings	are reset
Select and confirm the language	set to English
System registration	is retained
Phonebook	is retained
Redial list	is retained
Date and time	is retained
Entries in the calendar	are retained
Content of resource directory	is retained

Resetting



Open the handset's main menu.



Settings



Select the menu icon and confirm.



System



Select the menu item and confirm.



Handset Reset



Select the menu item and confirm. A security check question appears.

Yes

Confirm the security check question. The handset is returned to the default.



Caution:

For information about deleting the phonebook see: → Page 57.

Default settings

Setting	Explanation/notes	Levels	Default state
Tones and signals	Ringer volume	5	5
	Ringer melody, external	22	01
	Ringer melody, internal	22	03
	Alerting tone	-	off
	Earpiece volume	5	3
	Volume in speakerphone mode	5	3
	Timed reminder		
	Melody	22	1
	Volume	5	Crescendo
	Key tones, audible each time a key is pressed	-	on
	Warning tone, audible approximately five minutes before the battery expires	-	on
	Confirmation tone, indicates whether actions were successful or unsuccessful	-	on
Auto. answer	Call is automatically accepted by removing the handset from the charging shell	-	on
Select base	Select the base	4	retained
Lighting	Display lighting	-	in charging shell: on/out of charging shell: off
Screen picture	Display in idle status	-	on, analogue clock
Character set	Available character set	-	Standard
Select and confirm the language	Select different languages	26	English
Bluetooth	Bluetooth activation	-	off

Step by Step

Conducting calls – the basic functions

You can use your handset to make both internal and external calls.

Internal calls are calls that

- you make within the range of a communication system, for example, within your company,
- you make between networked communication systems, for example, to different company locations.

External calls are calls that you conduct with users of the public telephone network.

Step by Step

Activating/deactivating the handset



Press the On-hook key until the activation or deactivation is confirmed by a signal.

PIN

If the default PIN has not been changed (0000), the handset is ready for operation as soon as it is switched on. If a PIN was set, it must be entered before the handset can be operated.

Please enter PIN:



Enter the PIN.



Confirm your entry. The handset is ready to use.

Displaying the connection quality

The strength of the incoming signal is displayed by the "receive field strength" icon in idle status:

	Flashing, no reception
	Low receive field strength
	50% receive field strength
	75% receive field strength
	100% receive field strength

The radio range is different indoors and outdoors → Page 122. Please consult your system administrator in the event of range problems.

Charging the battery

You may only use the charging shell provided for the handset.

The handset charges when sitting in the charging shell, even when deactivated. If the handset is active, the charging status display flashes on the display.

If the handset deactivates because the battery is flat, it automatically reactivates and is ready for operation as soon as you place it in the charging shell. The charging operation starts. If a PIN was set, it must be entered first to allow charging to start.

Step by Step

Select and confirm the language

If your preferred language for the display texts is not set, you can set this yourself → Page 19.

First seize the line, then dial



When the handset is in idle status: Press and hold the Talk or Speakerphone key.



Enter the number you wish to dial. The user will be called.

Typing errors cannot be corrected. In case of typing errors: Press the On-hook key.

Either:



The station answers. You are conducting the call.

or:

CALLBACK



The user is busy. You can save a callback request → Page 45.



Press the On-hook key to end the operation.

Step by Step

Dial first, then seize the line

Dialling preparation



and possibly



Enter the required phone number and correct individual characters as necessary using the "Delete" Display key.

If necessary



 
Insert a dial pause. A "P" appears between the digits entered. You may have to insert a pause, for example, between the prefix and the phone number or when checking a mailbox.



Caution:

The dialling preparation function is also available with number redial and when dialling from the handset's phonebook ().

Dialling



or



Press the Talk or Speakerphone key. The user will be called.

Either:



The station answers. You are conducting the call.

or:

CALLBACK



The user is busy. You can save a callback request → Page 45.



Press the On-hook key to end the operation.

Step by Step

Manual redial

The last 20 phone numbers dialled are saved in the redial list. A phone number that was dialled several times is only saved once.



When the handset is in idle status. Press the Talk or Speakerphone key briefly. The redial list is displayed.



Select the required telephone number.

if nec. Show

If you want to see details of the selected phone number: Press the display key.

Either:



Press the Talk or Speakerphone key briefly. The connection is set up.

or:

Options

Open the redial menu. The menu contains the following functions → Page 55:

- Copy to Directory
- Automatic Redial
- Display Number
- Delete Entry
- Delete all



 
Display Number

OK

Select the menu item and confirm.



Change or complete the phone number, for example, with DDIA.



Press the Talk or Speakerphone key briefly. The connection is set up.

Step by Step

Callback

This function enables you to call a user who does not answer or whose line is busy. The Callback function enables you to contact him as soon as he hangs up or reuses his telephone. Please note that a line is signalled as busy when it is being called by another user. You can continue to use your handset without restriction when a callback has been booked.

Booking a callback



The number is dialled. You hear the busy tone or the user does not answer.

CALLBACK

OK



Save the callback request.

Press the On-hook key to end the operation.

You receive a callback

You are then called back:

- as soon as the selected user terminates his or her call, or
- the first time the user uses his or her handset, or
- as soon as the other party checks his or her mailbox and responds to your callback request → Page 93.



or



Press the Talk or Speakerphone key briefly. The connection is set up.



Caution:

Callbacks are repeated until a connection is established or until the callback is deleted. A handset can initiate up to five callbacks and can be the destination for up to five callback requests. If these conditions are met, any further callbacks are rejected.

Step by Step

The screenshot shows a sequence of menu screens. The first screen has a 'CALLBACK' option with 'OK' and arrow keys. The second screen shows 'MUELLER MOBILE TH 06.02 09:23' with 'OK' and arrow keys. The third screen has 'NEXT' with 'OK' and arrow keys. The fourth screen has 'DELETE' with 'OK' and arrow keys, followed by a confirmation message 'Callback deleted.'. The fifth screen has 'CANCEL' with 'OK' and arrow keys, followed by a handset icon. The sixth screen has 'CONSULT' with 'OK' and arrow keys, followed by a keypad icon and a handset icon.

Deleting a callback request



Open the system menu.

↓ ↑ CALLBACK OK

Select the menu item and confirm.

↓ ↑ MUELLER MOBILE TH 06.02 09:23 OK

The oldest entry is displayed first.

↓ ↑

Select the required command.

Displaying the next entry:

↓ ↑ NEXT OK

Select and confirm the command to view the next entry.

Deleting an entry that is displayed:

↓ ↑ DELETE OK

Select and confirm the command.

Callback deleted.

You receive confirmation: "Callback deleted".

Terminating callback display:

↓ ↑ CANCEL OK

Select and confirm the command.



Press the On-hook key to end the operation.

Consultation

You interrupt your call to consult with a user (including external users) and then resume the original call.



You are conducting a call.

Activating and conducting an enquiry/consultation call

↓ ↑ CONSULT OK

Activate enquiry. The current call is placed "on hold", so that the first user waits.



Enter the phone number for the consultation call.



The number is dialled. The station answers. The consultation starts.

Step by Step

 
The second user is busy or does not answer

During the consultation you can:

- book a callback → Page 45,
- activate call waiting → Page 83 or
- busy override → Page 84.

Ending a consultation call and returning to the waiting call

Either:




If the consultation call/enquiry function was activated but a number was not yet entered: Select the menu item and confirm.



Select the menu item and confirm.

You will be connected to the first party again. The second partner hears the busy tone and hangs up; an OpenStage handset hangs up automatically.

 Or



The second user hangs up. By pressing "TO WAIT. CALL", you are reconnected with the first party again.

You can also:

- toggle between the partners → Page 85,
- set up a conference → Page 87 or
- transfer the waiting partner to the second partner → Page 85.

Step by Step

 
Activating and deactivating the microphone

You can temporarily deactivate the handset microphone if you want to consult with someone else in the room, for example, without the other person on the telephone hearing you.




You are conducting a call.

Deactivating the microphone



Confirm the message on the display during the call. The microphone is deactivated. You can now consult with someone else in the room, for example.

 Activating the microphone



Confirm the display message to re-activate the microphone.

Step by Step

 
Answering or rejecting a call

Accepting a call

Your handset rings → Page 31. The caller information appears on the display. The name and/or telephone number of the caller can be displayed. You have the following options for answering a call:



The handset is in the charging shell: Remove the handset from the charging shell (only works if "Auto Answer" is active, → Page 31).



The handset is not in the charging shell. Press the Talk key or Speakerphone key.

When you have accepted the call you can:

- transfer the call → Page 85,
- place the call on hold and consult with someone else in the room → Page 84,
- place the call on hold and call a second partner → Page 46 in order to forward → Page 85 or toggle the call → Page 85 or to set up a conference → Page 87.

 
Deactivating the ringer for the current call:

If you are currently in a meeting, for example, and want to leave the room before accepting the call:

TURN RING OFF

OK

Confirm the display message. The ringer is deactivated for the current call.



Press the Talk key or Speakerphone key. The call is accepted.

Step by Step



Ending a call

Press the On-hook key briefly or place the handset in the charging shell.

The call charges are displayed, depending on the communication system.

Activating or deactivating the keypad lock

This feature protects against accidentally pressing buttons when the handset is in a pocket, for example. The keypad lock turns off automatically when a call comes in and turns back on when the call has ended.



Press the hash key until the activation or deactivation is confirmed by a crescendo tone sequence.

A key icon on the display indicates that the keypad lock is active.

After leaving the radio network

The message "No base" flashes on the display. The handset repeatedly attempts to synchronise with a base. The intervals between synchronisation attempts increase on account of the integrated power saving function.

You can switch off your handset to save the battery.

Step by Step

Conducting calls – enhanced functions

Speakerphone mode

Features

Speakerphone mode offers you the following advantages:

- Other persons can listen to and participate in the call.
- Your hands are free.
- When dialling, you can hear the ring tone, for example, without having to lift the handset to your ear.

Speakerphone mode can be used effectively up to a background noise level of 50 dB (A).

Activating speakerphone mode

Speakerphone mode can be activated during a call, when dialling or when answering a call:



Press the speakerphone key. Inform the other party when you want to activate the speakerphone to let others listen in.



Caution:

Make sure you switch back to handset mode before you return the telephone directly to your ear. In this way you can avoid causing damage to your hearing.

Switching between speakerphone and handset mode



Press the speakerphone key. The handset switches from speakerphone to handset mode or vice versa.



Caution:

If you wish to replace the handset in the charging shell during a call, for example, because the battery is flat, hold down the Speakerphone key to prevent the call from being cleared down.

Step by Step

Setting the speakerphone volume

The volume can be set during a call → Page 20.

Conducting calls with the headset

The handset can be used with a corded and cordless headset.

Corded headset

You can connect a corded headset via the jack on the side of the handset. The headset must have a (2.5 mm) jack plug.

The earpiece and microphone functions are activated on the headset once it is connected.

Cordless headset

You can use a cordless Bluetooth headset with your handset. This means your hands are free while making calls and there are no annoying cables, for example, when you are working at your computer or when you are on the road.

Your Bluetooth headset must be registered on your handset before you can use it for the first time. After this, you can continue to use your Bluetooth headset until you decide to deregister it.



Caution:

- Theoretically, third parties can tap Bluetooth connections.
 - To improve protection against unauthorised tapping, deregister any Bluetooth devices you no longer require.
-

During a call, a second caller is not signalled at the Bluetooth headset.

Step by Step

Registering a Bluetooth headset at the handset



Set the headset to login mode (see the user manual supplied with your headset).



Open the handset's main menu.



Bluetooth



Select the menu icon and confirm.



Search for Headset



Select the menu item and confirm. The handset searches for a Bluetooth headset and sets up a wireless connection. The names of the devices found are displayed.



Found Devices
S55 Headset

Select the required headset.

Options

Press the display key.



Trust Device



Select the menu item and confirm.



agreed PIN:



If necessary, enter and confirm the Bluetooth PIN for your headset (see the user manual supplied with your headset). The device is saved in the list of known devices.

Activation

The Bluetooth interface is automatically activated on your handset. The active Bluetooth function is ticked.

Conducting calls via the Bluetooth headset

Activating the Bluetooth headset during a call



If a Bluetooth headset is registered at the handset, the Bluetooth headset is activated immediately upon dialling.

Step by Step



Accepting a call on the Bluetooth headset

The headset uses a call tone to signal an incoming call. Press the Talk key on the Bluetooth headset (see the user manual supplied with your headset).

Switching from the Bluetooth headset to the earpiece or speakerphone during a call

You are conducting a call via the Bluetooth headset.



Press the Talk key or Speakerphone key on the handset. The Bluetooth headset is disconnected. You can continue the call directly on the handset.

Deregistering the Bluetooth headset at the handset

To improve protection against unauthorised tapping, deregister the Bluetooth headset at the handset if you no longer wish to use it.



Open the handset's main menu.



 
Select the menu icon and confirm.



Select the menu item and confirm. The name of the registered or detected Bluetooth headset is displayed.

Options

Press the display key.



Select the menu item and confirm. The Bluetooth headset is deregistered and can no longer be detected by the handset.

Switching to mute

You can deactivate your headset's microphone during a call.



Press key to mute the headset. The display shows **Microphone is off**.

Press the key again to reactivate the microphone.

Step by Step

Number redial

The last 20 phone numbers dialled are saved in the redial list. A phone number that was dialled several times is only saved once.

If you tried to call a party from the handset's telephone directory, the name of the party is displayed in case of number redial. For information on manual number redial, see → Page 44.

Automatic redial

The phone number is automatically redialled ten times at 20-second intervals. Speakerphone mode is automatically activated, the Speakerphone key flashes. The function is deactivated after ten unsuccessful attempts and when a call is made in the interim.



Press the Talk key briefly. The redial list is displayed.



Select the required telephone number.

Options

Press the display key.



Automatic Redial

OK

Select the menu item and confirm. Automatic redial is activated.

Either:



The user answers and you conduct the call.

or:

Off

If you wish to cancel the function: press the Display key or any key.

Deleting a redial entry or list



Press the Talk key briefly. The redial list is displayed.



 
Select the required telephone number.

Options

Press the display key.


Step by Step

Either:



Select the menu item and confirm. The telephone number is deleted.

 or:



Select the menu item and confirm. The redial list is deleted.



Press the On-hook key to end the operation.

Adding a telephone number to the redial list

During dial preparation, you can add a number from your handset's redial list to your phonebook.



Press the Talk key briefly. The redial list is displayed.



 
Select the required telephone number.

Options

Press the display key.



Select the menu item and confirm. The phonebook is displayed.



Select the menu item and confirm. The following selection mask appears:



- 1 Phone (Mobile)
- 2 Phone (Office)
- 3 Phone (Home)



Select the icon for the required phone number type under which the phone number is to be added.

OK

Confirm your entry.



Enter the remaining contact information, such as the first name and surname. For further information, see → Page 57 and → Page 58.

Step by Step

The handset's phonebook

You can save contact information for frequent call partners in the phonebook. Once a phone number has been saved in this way you no longer have to enter it in full when you want to call someone. All you have to do is select the required phonebook entry.

You can save a total of 500 entries at most in the phonebook.


Gigaset QuickSync → Page 107 is a software application for transferring data between your cordless OpenStage phone and your PC. You can use it at your phone to load data from your PC to your OpenStage over a data cable or Bluetooth and synchronise contacts with Microsoft Outlook, Microsoft Outlook Express and contacts in Microsoft Windows .

You can save the following contact information for every entry in the phonebook:


Information	Explanation
First Name*, Surname	A name must be entered in at least one of the fields. Each name can contain up to 16 characters.
Phone, Phone (Mobile)*, Phone (Office)*	A number must be entered in at least one of the fields. Each number can contain up to 32 digits.
E-Mail*	E-mail address with up to 60 characters. The special character "@" can be inserted after pressing the asterisk key.
Anniversary	You can select either "On" or "Off". If "On" is selected: <ul style="list-style-type: none"> • Anniversary (Date): Day/month/year, 8 digits* • Anniversary (Time): Hour/minute, 4 digits, for reminder call • Anniversary (Signal): Type of signalling, acoustic or visual (time specification not necessary)
Caller Melody (VIP)	Mark a directory entry as a VIP (Very Important Person) by assigning a specific ringtone to it.
CLIP picture*	Display a picture for an incoming call when CLIP is active. Caution: This function is not supported by the system and should therefore not be used.

* = new for vCard format

Step by Step

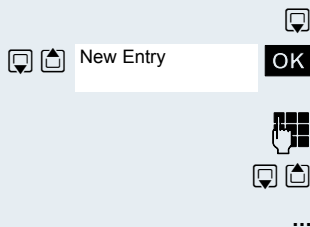

Saving an entry

 Open the phonebook.



Select the menu item and confirm. The input mask is displayed.



Enter the relevant information, see above.

 

 


Jump to the next line.

...

etc.

Functions for text input:

	<p>Switches mode from abc to Abc, from Abc to 123 and from 123 to abc</p> <p>If predictive text is off: press the key briefly. If predictive text is on: press and hold down the key.</p>
	<p>Deletes the letter to the left of the cursor.</p>
	<p>Opens the table of special characters.</p>

Save

Save the settings.



Press the On-hook key to end the operation.

Step by Step

Changing the sequence of entries:

The phonebook entries are generally sorted in alphabetical order by surname. Spaces and digits have first priority here. If the phonebook only contains a subscriber's first name, this is listed instead of the surname in the sequence.

The sort sequence is as follows:

1. Space
2. Digits (0 - 9)
3. Letters (alphabetical)
4. Other characters

If you want to change the sequence of entries in the alphabetical list, you could insert a space or a digit before the first letter of the surname. These entries then move to the top of the phonebook. Names preceded by an asterisk are listed at the end of the phonebook.

Finding and dialling an entry



Open the phonebook.



or



You can scroll to the required entry or enter the first letter of the relevant entry.

If necessary, press a key several times in succession to enter the required letter.

Either:



Press the Talk key. The assigned phone number is dialled.

or:

Options

Open the menu.



Display Number



Select the menu item and confirm. The number is displayed.



Change or complete the phone number, for example, with DDIA.



Press and hold down the Talk key.

Step by Step

Dialling an entry with the speed dialling digit

You can call up and dial the phone number associated with an entry to which you assigned a speed dialling digit by simply pressing this speed dialling digit
→ Page 105.



Press and hold down the required speed dialling digit. The assigned phone number is shown on the display.



Press and hold down the Talk key. The assigned phone number is dialled.

Viewing an entry



Open the phonebook.



You can scroll to the required entry or enter the first letter of the relevant entry. If necessary, press a key several times in succession to enter the required letter.

Show

Press the display key. The entry's data is displayed.

Changing to the list

Select

or



Press the On-hook key to return to the list.

Changing an entry



Open the phonebook.



You can scroll to the required entry or enter the first letter of the relevant entry. If necessary, press a key several times in succession to enter the required letter.

Either:

Show

Change

Press the display keys one after the other. The entry's data is displayed.

or:

Options

Open the menu.

Step by Step



Edit Entry

OK

Select the menu item and confirm. The entry's data is displayed.

then:



Enter changes.

Save

Press the display key.



Press the On-hook key to return to the list.

Deleting an entry or phonebook



Open the phonebook.



Select the entry you want.

Options

Press the display key.

Either:



Delete Entry

OK

Select the menu item and confirm. The telephone number is deleted.

or:



Delete List

OK

Select the menu item and confirm. A security check question appears.

Yes

Confirm the security check question. The phonebook is deleted.



Press the On-hook key to end the operation.

Displaying available memory



Open the phonebook.



Select any entry.

Options

Press the display key.



Available Memory

OK

Select the menu item and confirm. The amount of memory used and available is displayed.



Press the On-hook key to end the operation.

Step by Step

Sending an entry or phonebook to the handset or system

You can send individual entries or the entire phonebook to other handsets or to the communication system.

For phonebook transfer in vCard format via Bluetooth see → Page 108.

If your handset and the recipient's handset have phone numbers between 1 and 99, you can send or receive a list or entry directly from one handset to the other. If the handsets' phone numbers start at 100, you must first send the list or entry to the communication system. The recipient can then use his or her handset to download the list or entry from the communication system.

Restrictions when copying over the communication system

The entries in the handset's phonebook are stored in vCard format → Page 57. The communication system, however, uses another format. This can cause loss of phonebook entry information. The features that are new for the vCard format are indicated in the table → Page 57 by "new for vCard format". The phone numbers are not affected.

Sending a list/entry



Open the phonebook.



Select the entry you want.

Options

Press the display key.

Either:



Copy All



Select the menu item and confirm.

or:



Copy Entry



Select the menu item and confirm.

then:



Enter the station number. The following phone numbers are possible:

- 1... 98 – the list or entry is sent directly to the recipient's handset.
- 00 – the list or entry is sent to the communication system and can then be downloaded by any handset.

Step by Step

- 99 – The list or entry is sent to the communication system and can then only be downloaded by your handset.



OK

Confirm your entry. The list or entry is sent.

If a phone number from 1 to 98 was dialled, the list or the entry is automatically received by the recipient's handset.

Loading a list or entry from the communication system

Prerequisite: You sent an entry or list to the communication system by dialling the phone number 00 or 99.

 or 

Press and hold the Talk key or press and hold the Speakerphone key.

Menu

Open the system menu.

Service?

OK

Select the menu item and confirm.

Load list buffer?

OK

Select the menu item and confirm. The handset starts to load the list/entry.




Press the On-hook key to end the operation.

Deleting a list or entry in the communication system

Prerequisite: A currently unused list or entry is saved on the communication system.

If the handset with phone number 00 was used to send the list or entry to the communication system, any handset can be used to delete this list or entry. If the list or entry was sent by the handset with the phone number 99, the list or entry can only be deleted by the handset that sent it.

 or 

Press and hold the Talk key or press and hold the Speakerphone key.

Menu

Open the system menu.

Service?

OK

Select the menu item and confirm.

Erase list buffer?

OK

Select the menu item and confirm. The handset starts to delete the list/entry.



Press the On-hook key to end the operation.

Step by Step

Central directories (group directory)

 
You can save your private phonebook that is saved on your handset to a central server and add group phonebooks that are saved on this server to your private phonebook.

To protect phone numbers in your private phonebook from being modified when a group phonebook is added, we recommend first saving your private phonebook using the function "Send List" → Page 62.

If the number of group directory entries exceeds the volume of memory available in your private phonebook, the transfer operation terminates as soon as the memory capacity limit is reached.



Open the system menu.



Select and confirm the phonebook.

Either:

Deleting the private phonebook

 


Select the menu item and confirm.

The following message appears:
PHONEBOOK DELETED

or:


Loading the private phonebook



Select the menu item and confirm.

or:

 Loading the group directory



Select the menu item and confirm.



Select and confirm the group directory.



Press the On-hook key to end the operation.

Step by Step

Making calls using project assignment (cost billing)

You can assign external calls to certain projects.

Prerequisite: Project numbers (from 1 to 5) have been configured for certain projects and you have an account code (ACCT) for the project.



Open the system menu.



BASIC SERVICE



Select and confirm the basic service.

Either:



Enter a service code between 61 (for project number 1) and 65 (for project number 5).



Enter the PIN.

or:



PIN / COS?



Select the menu item and confirm.



PIN 1?



Select the required PIN and confirm.

...

then:



Enter the external phone number.

Then make your phone call as usual → Page 43.



A time limit is applied to project assignment. It is automatically deactivated if you have not used your handset for a period of more than five minutes, for instance.

Step by Step

Using a different telephone in the same way as your own

You can log on to another telephone belonging to the HiPath 4000 system via a personal identification number or PIN (this includes telephones of networked HiPath 4000 systems, for example, at other branches of your company). At the other telephone you can then:

 
- make calls and assign the charges to cost centres,
- make calls and assign the charges to specific projects,
- check your mailbox,
- set appointments.

Using an internal PIN, you can have your calls diverted to a telephone in the office or department where you will be for a temporary period (call forwarding - "follow me").

Prerequisite: You have been assigned a PIN by System Support. You require an internal PIN for calls within your own HiPath 4000 system, while for calls involving other HiPath 4000 systems in the integrated network you require a network-wide PIN.



Open the system menu.



Select and confirm the basic service.

Either:

 


Enter the service code (61 for PIN 1, 62 for PIN 2 etc.).

or:



Select the menu item and confirm.



Select the menu item and confirm.

If you have several PINs and wish to use another one, select the other PIN.

then:

You are prompted to enter the PIN by the message "Enter station no." or "Enter ID" on the display.

The following applies within the actual HiPath 4000 system:



Enter the internal PIN.

Step by Step

Entering the PIN for your own and another HiPath 4000-system within the integrated network:



Enter the 2-digit node code for your own HiPath 4000 system (consult System Support).



Enter your own number and press the hash key.



Enter the network-wide PIN and press the hash key.

Dialling after (successful) identification:

You will hear the dialling tone. The following appears on the display:
"Please dial".

 


Enter a phone number.

Call forwarding - follow me after successful identification:



Select the menu item and confirm.




Confirm the option shown. Call forwarding is activated immediately.

Caller ID suppression

The call ID display can only be suppressed for one subsequent call and the setting is not saved if the number is redialled.



 Open the system menu.




Select and confirm the basic service.

Either:



Enter the service code.

 or:



Select the menu item and confirm.



Select the menu item and confirm.

then:



Enter the phone number of the user. If the extension accepts the call, your phone number will not be displayed.

Step by Step

 
Activating/deactivating do not disturb

If you do not wish to take calls, you can activate do not disturb. Internal callers will hear the ringing tone and the announcement "Do Not Disturb"; external calls will be diverted to the attendant. System Support can also set up call forwarding destinations for the Do Not Disturb function, to which you can forward your internal and external calls.

Prerequisite: System Support has enabled the Do Not Disturb function for all extensions.



Open the system menu.




Select and confirm the basic service.

Either:




Enter the service code.

 or:




Select the menu item and confirm.

 


Select the menu item and confirm. The display indicates whether Do Not Disturb is activated or not.

 then:



 Confirm the display if "Do Not Disturb" should be activated.



Confirm the display if "Do Not Disturb" should be deactivated.

Caution:

A tone reminds you that Do Not Disturb is activated when you seize the trunk.

The attendant can circumvent the Do Not Disturb function and reach you anyway.

If System Support has locked the Do Not Disturb function for all users, the item "Do Not Disturb" will not appear on the service menu.

Step by Step

Call tracing

You can identify malicious external callers. You can record the caller's phone number during a call or up to 30 seconds after a call. In this case, you should not hang up.



During the call.



Open the system menu.



BASIC SERVICE

OK

Select and confirm the basic service.

Either:

8 TUV

3 DEF

Enter the service code.

or:



OTHER FUNCT.

OK

Select the menu item and confirm.



CALL TRACING

OK

Select the menu item and confirm.

Caution:

If the trace is successful, the transmitted data is stored by your network operator. Contact System Support.

Step by Step

Call forwarding

Using call forwarding

You can program two types of call forwarding:

- Fixed call forwarding and
- Variable call forwarding.

For fixed call forwarding, you programme a forwarding destination that will remain valid until you change or delete it. You can activate and deactivate this forwarding function.

For variable call forwarding, you can choose between six different forwarding types:

- Variable forwarding (unconditional forwarding)
- Forwarding for internal
- Forwarding for external
- Forwarding on busy
- Forwarding after timeout
- Fwd. on busy/after timeout

Call forwarding is activated when a forwarding destination is programmed.

When the phone is idle, active forwarding instructions are shown on the display, for instance, Forwarding: 47110 to 47200.

47110 --> 47200

You can use codes to activate and deactivate call forwarding → Page 77.

Step by Step

Fixed forwarding

If you have programmed a forwarding destination for fixed forwarding, you can activate and deactivate the forwarding facility in the service menu. The programmed forwarding destination remains valid until you change or delete it.

Programming and activating a forwarding destination



Open the system menu.



BASIC SERVICE



Select and confirm the basic service.



DESTINATIONS



Select the menu item and confirm.

FORWARD



Confirm the option shown. The display shows "Variable forwarding".

NEXT



Confirm the option shown. The display shows "Fixed forwarding". If forwarding has been programmed, the destination is displayed.



ENTER DESTIN.:



Select and confirm the option shown.



Enter the phone number for the forwarding destination. Any destination previously saved will be overwritten.

SAVE



Confirm when the complete number has been entered. Call forwarding to the programmed destination is active.

Activating and deactivating fixed forwarding

You can only activate and deactivate fixed forwarding if a destination number has been programmed.



Open the system menu.



BASIC SERVICE



Select and confirm the basic service.



DESTINATIONS



Select the menu item and confirm.

FORWARD



Confirm the option shown. The display shows "Variable forwarding".

NEXT



Confirm the option shown.

Step by Step

FWD-FIXED off

Deactivating

The display shows "Fixed forwarding".

↓ ↑ Deactivate OK

Select the menu item and confirm. Fixed forwarding is deactivated.

FWD-FIXED off

Activating

The display shows "Fixed forwarding".

↓ ↑ Activate OK

Select the menu item and confirm. Fixed forwarding is activated.

Deleting the destination for fixed forwarding

You can delete the destination for fixed forwarding.



Open the system menu.

↓ ↑ BASIC SERVICE OK

Select and confirm the basic service.

↓ ↑ DESTINATIONS OK

Select the menu item and confirm.

FORWARD

OK

Confirm the option shown. The display shows "Variable forwarding".

NEXT

OK

Confirm the option shown. The display shows "Fixed forwarding" and the forwarding destination.

FWD-FIXED off

The display shows "Fixed forwarding" and the forwarding destination when forwarding is activated.

↓ ↑ DELETE OK

Select and confirm the option shown. The forwarding destination is deleted. If fixed forwarding was activated it is now switched off.

Step by Step

Variable forwarding

For variable forwarding you can choose between six different call forwarding types:

- Variable forwarding (unconditional forwarding)
- Forwarding for internal
- Forwarding for external
- Forwarding on busy
- Forwarding after timeout
- Fwd. on busy/after timeout

Rem.: The various forwarding types must be configured for the user.

The forwarding types are mutually exclusive except for "forwarding for internal" and "forwarding for external". You can program a forwarding destination for each of the two exceptions and activate them both.

Example:

You have activated variable forwarding. If you now program and thus activate forwarding after timeout, variable forwarding will be automatically deactivated and its forwarding destination will be deleted.

Selecting a variable forwarding type

Select Destinations and Forwarding in the service menu.



Open the system menu.

↓ ↑ BASIC SERVICE OK

Select and confirm the basic service.

↓ ↑ DESTINATIONS OK

Select the menu item and confirm.

FORWARD OK

Confirm the option shown. "Variable forwarding" will be offered first.

FWD-VAR-ALL-BOTH

Output on first line.

↓ ↑ NEXT OK

Confirm to select the next forwarding type.

FWD-FIXED off

Output on first line.

↓ ↑ NEXT OK

Confirm to select the next forwarding type.

FWD-VAR-ALL-INT

Output on first line.

Step by Step

↓

↑

NEXT

OK

FWD-VAR-ALL-EXT

↓

↑

NEXT

OK

or

↓

↑

↓

↑

BASIC SERVICE

OK

↓

↑

DESTINATIONS

OK

FORWARD

OK

NEXT

OK

NEXT

OK

↓

↑

ENTER DESTIN.:

OK

↓

↑

SAVE

OK

Confirm to select the next variable forwarding type.

Output on first line.

Confirm to select the next variable forwarding type.

or

To edit the current variable forwarding type, select the required command.

Programming a forwarding destination



Open the System Menu.

Select and confirm the basic service.

Select the menu item and confirm.

Confirm the option shown. The display shows "Variable forwarding".

Confirm the option shown. The display shows "Fixed forwarding".

Confirm the option shown. The display shows "Forwarding for internal".

Select and confirm the option shown.



Enter the phone number for the forwarding destination. Any destination previously programmed will be overwritten.

Confirm when the complete number has been entered.

To select a different forwarding type, proceed as described on → Page 73.

If variable forwarding was previously programmed and activated, it is deactivated and the forwarding destination is deleted (for exception, see → Page 73). Fixed forwarding is deactivated.

Deleting a forwarding destination

A variable forwarding destination is automatically deleted when the forwarding type is deactivated.

Activating variable forwarding

Step by Step

Variable forwarding is automatically activated when the forwarding destination is programmed.

Deactivating variable forwarding

You can deactivate all variable forwarding types in the Service Menu (Basic Service).



Open the system menu.



BASIC SERVICE

OK

Select and confirm the basic service.



DESTINATIONS

OK

Select the menu item and confirm.

FORWARD

OK

Confirm the option shown. The display shows "Variable forwarding".

NEXT

OK

Confirm the option shown. The display shows "Fixed forwarding".

NEXT

OK

Confirm the option shown. The display shows "Forwarding for internal".



Deactivate

OK

Select and confirm the option shown. Variable forwarding is deactivated and the forwarding destination is deleted.

To select a different variable forwarding type, proceed as described on → Page 73.

Checking forwarding

To check up on the status of the forwarding types, proceed as described on → Page 73. The forwarding destination is shown in the second line if this variable forwarding type is activated.

Step by Step

Activating and deactivating forwarding by means of a switch

If a forwarding destination has been programmed for fixed forwarding, you can use the switch to activate and deactivate the forwarding facility. If variable forwarding is activated, it can only be deactivated with the switch.



Open the system menu.



BASIC SERVICE

OK

Select and confirm the basic service.



Feature settings

OK

Select and confirm the option shown.



FORWARD

OK

Select and confirm the option shown.



Activate

OK

Select the menu item and confirm. The call forwarding function is activated.



Deactivate

OK

Select the menu item and confirm. Call forwarding is deactivated. This deletes any destination number programmed for variable forwarding.

Automatic call forwarding

Forwarding of internal and external calls in the system can be configured and activated for your line by System Support. Calls can be rerouted:

- unconditionally
- when the line is busy
- when the call is not answered

Unconditional call forwarding should only be used if the line is for outgoing calls only (for example, in a lift).

If you have set up fixed or variable call forwarding, and if the manually programmed forwarding destinations are not obtainable (for example, because they are busy), then calls are automatically forwarded to the system forwarding destinations.

Step by Step

Call forwarding with codes

You can use codes to set up the following forwarding types:

Forwarding type	Code (example)
Program and activate fixed forwarding	* Δ 51
Activating fixed forwarding	* Δ 41
Delete (and deactivate) fixed forwarding	# ↵ 51
Deactivate fixed forwarding	# ↵ 41
Program and activate unconditional variable forwarding	* Δ 42
Program and activate variable forwarding for internal calls	* Δ 44
Program and activate variable forwarding for external calls	* Δ 43
Program and activate variable forwarding on busy	* Δ 45
Program and activate variable forwarding after timeout	* Δ 46
Program and activate variable forwarding on busy / after timeout	* Δ 47
Deactivate variable and fixed forwarding	# ↵ 41
Deactivate variable forwarding for internal calls	# ↵ 44
Deactivate variable forwarding for external calls	# ↵ 43
Activate system call forwarding	* Δ 90
Deactivate system call forwarding	# ↵ 90

The display messages for activating and deactivating call forwarding can be found on → Page 70.

Step by Step

Programming and activating call forwarding



Press the Talk key.



Enter the code, for example, *51 (ask your System Support). You will hear the dialling tone.



Enter the destination number.



Enter the termination character. You will hear a confirmation beep and call forwarding is activated.



Press the On-hook key.

Activating fixed forwarding



Press the Talk key.



Enter the code, for example, *41 (ask your System Support). You hear a confirmation tone.



Press the On-hook key.

Deactivating call forwarding



Press the Talk key.



Enter the code, for example, #41 (ask your System Support). You hear a confirmation tone.



Press the On-hook key.

Cancelling fixed forwarding



Press the Talk key.



Enter the code, for example, #51 (ask your System Support). You will hear a confirmation beep and call forwarding is cancelled.



Press the On-hook key.

Step by Step

Delayed call forwarding

This is configured for the entire system by System Support.

Prerequisite: The second call function must be activated → Page 91.

If "Forwarding on busy / after timeout" or "Forwarding after timeout" is activated on your handset → Page 73 and a second call comes in, you will automatically hear the camp-on tone and see the details of the caller on the display. This gives you the chance to accept this call before it is forwarded (you may be urgently awaiting this call, for instance).

The caller hears the ringing tone and is not forwarded to another extension until after a certain timeout.

Forwarding calls for a different terminal

You can save, activate, check and deactivate call forwarding for another telephone, fax machine or PC from your own handset. To do so, you need to know the PIN for this terminal or you must have the "Call forwarding for remote terminal" class of service. Your System Support can help you in both cases.

Storing a destination for another telephone/ activating call forwarding



Open the system menu.



BASIC SERVICE



Select and confirm the basic service.



DESTINATIONS



Select the menu item and confirm.



FORWARD NUMBER



Select the menu item and confirm.

VARY FORWARD



Confirm the option shown.



Enter the number of the other telephone.

FINISHED?



Confirm the option shown.




 









 
 

 





 
Enter the PIN (only if your own station does not have the "Call forwarding for remote terminal" class of service).

FINISHED?



Confirm the option shown.

Step by Step

		Enter the destination number.
SAVE		Confirm the option shown. Call forwarding is activated immediately.
Deactivating/checking call forwarding for another telephone		
		Open the system menu.
 	BASIC SERVICE	 Select and confirm the basic service.
 	Feature settings	 Select the menu item and confirm.
 	FORWARD NUMBER	 Select the menu item and confirm.
	VARY FORWARD	 Confirm the option shown.
		Enter the number of the other telephone.
	FINISHED?	 Confirm the option shown.
		Enter the PIN (only if your own station does not have the "Call forwarding for remote terminal" class of service).
	FINISHED?	 Confirm the option shown.
Deactivating or checking:		
	Deactivate	 Confirm or:
 	INTERROGATE?	 Select the menu item and confirm.
	3428----->8968	Example of display: calls for station 3428 are redirected to station 8968.

Changing call forwarding for a different terminal

Proceed in the same way as for saving/activating:
→ Page 79.

Step by Step

Entering commands via tone dialling (DTMF suffix dialling)

After dialling a phone number, you can activate DTMF tone dialling (dual-tone multifrequency signalling) in order to operate devices, such as answering machines or automatic directory enquiry and switching systems by means of command inputs.



You are connected.



Open the system menu.



BASIC SERVICE



Select and confirm the basic service.

Either:



Enter the service code.

or:



OTHER FUNCT.



Select the menu item and confirm.



DTMF DIALING



Select the menu item and confirm.

You can now enter commands with the keys 0 to 9, the star key and the hash key.



Caution:

Ending the call also deactivates DTMF suffix dialling.

Depending on the system configuration, "DTMF DIALING" may be displayed immediately after the number has been entered. In this case, you can enter commands immediately after dialling a phone number.

Parking/activating calls

You can park up to 10 internal and/or external calls and resume them at another telephone.

Calls cannot be parked if:

- All parking positions are busy.
- The parking position you have selected is busy.
- The user is the attendant console.
- The call is a consultation call.
- The call is part of a conference.

Step by Step

Parking and resuming a call

You can park a call to your handset in a free parking position and resume it at your own telephone or another one. This function can also be performed at telephones which do not have a display.



You are conducting a call.



Enter the system parking code (consult System Support if you need help).

1 ... 9

Enter and note a parking position number between 1 and 9.

The call is parked.



Press the On-hook key.

Resuming a parked call



or



The handset is not in the charging shell. Press the Talk key or Speakerphone key.



Enter the system parking code (consult System Support if you need assistance).

1 ... 9

Enter the parking position number between 1 and 9 that you have noted and continue your call.

Parking is not possible

If all parking positions or the selected one are busy, or if call parking is not available for some other reason, you will receive both an acoustic and a visual message.

If the selected parking position is occupied, you will receive a display message and hear the busy tone.

Either:

TO WAIT. CALL



Confirm and continue the call.

or:



Press the On-hook key. You receive a recall from the call on hold.

Conducting calls – with multiple users

Call waiting

You need to speak to a user in your communication system urgently, even though his line is busy. You can send a call waiting signal during his call to let him know you want to talk to him. The user either answers immediately or you will be automatically connected to him when he has finished his call.

This function is only available if it has been configured by the service engineer.

The user is busy. You want to use call waiting.

Select the menu item, confirm and wait briefly.



Caution:

To camp on, you must have the appropriate class of service.

Camp-on is not possible if the called party is protected by the camp-on security function.

You receive a call waiting signal (second call)

You are still available to other callers, even though you are on the telephone. The call waiting signal informs you of the second call while you are conducting a call. You can answer this call without ending the first call.



You are on a call and hear a call waiting signal.

If you want to answer the second call, you can either place the first call on hold (the first caller waits) or end the first call.

Step by Step

Pickup

Placing the first call on hold and answering the second call

Answer the second call.

Talk to the second caller. The first caller waits. His call is on hold. You can now:

- toggle between the two callers → Page 85 or
- set up a conference → Page 86.

Ending the second call



Press the On-hook key. Your handset rings.



Press the Talk key to talk to the first caller again.

Ending the first call



Press the On-hook key. The first call is ended. Your telephone rings.



Press the Talk key and answer the second call.

Busy override

You need to speak to an internal user urgently, even though his line is busy. The "Override" function allows you to interrupt the ongoing call to pass on a message.



The user is busy.



VERRIDE



Select the menu item and confirm.

Both the colleague and the other party hear a warning tone.

You can now start talking.

Caution:

To override, you must have the appropriate class of service.

 
Override is not possible if the called party is protected by the Privacy function.

Step by Step

Transferring a call

If the person you are conversing with wishes to be forwarded to one of your colleagues, you can transfer the call.

Transferring the call with prior announcement:



Select the menu item and confirm.

 


Enter the number of the party to which you want to transfer the call.
Inform him or her that the waiting user wishes to be put through.



Press the On-hook key. The person you were speaking with is now connected to the desired party.

Transferring the call without prior announcement:



Select the menu item and confirm.



Enter the number of the party to which you want to transfer the call.



Press the On-hook key.

Caution:

 
If a connection is not set up between the other two parties within 40 seconds, you will be re-called. You will be connected to the first party again.

toggling (switching between calls)

The Toggle function allows you to switch between two users without allowing them to speak to each other directly. The two users can be either external or internal users. You can also start a conference.



You are conducting a call.



Press the display key. The current call is placed "on hold", the user waits.



Enter the phone number of the second user.



The second user answers.

Step by Step

↓ ↑ TOGGLE OK

↓ ↑ RETURN OK

↓ ↑ CONFERENCE OK

Switching to the caller on hold

Press the Display key to switch between the two calls.

Ending the present call – returning to the other call

Select the menu item and confirm.

Setting up a three-way conference

Select the menu item and confirm.

A warning tone advises you that a conference is now in place between all three users.

Conducting a conference

In a system-supported conference you can include up to 8 internal and external users. Users with system telephones can execute and/or use all functions listed below at the same time. ISDN telephones and external users are passive users and can only be added to the current conference.

You can include users and conferences from a remote system in your own conference. The remote stations can set up a conference of their own and extend it. The members of this conference are included in your current conference – but they cannot perform or use the following functions.

The following functions are supported for all conference members with a system telephone:

- Setting up a conference when calling a user or receiving a call or making a consultation call or receiving a second call.
- Accepting a waiting call and including the caller in the conference.
- Toggling between the conference and a consultation call or waiting call.
- Holding a consultation call during a conference and adding it to the conference.
- Interconnecting conference members from two independent conferences via a remote network.
- Putting the conference on hold, if line keys are installed.
- Viewing all the conference members.
- Transferring the conference to a new user.

Step by Step

These functions can be carried out by all conference members at the same time.

Setting up a conference

You can set up a conference from any of the following types of connection:

 
- Single call
- Consultation call
- Second call

Starting a conference from a single call

You want to set up a conference.



You are conducting a call.



START CONF.



Select the menu item and confirm.



Call the second user.

Announce that a conference is to be set up.



CONFERENCE



Select the menu item and confirm. You will briefly see the message: "1 is your position".

Conf.
EXPAND CONF.

Setting up a conference from a consultation call



You are connected to one user and you call a second user.

CONSULT



Confirm the option shown.



Call the second user. The second user answers, you announce the conference.



CONFERENCE



Select the menu item and confirm. You will briefly see the message: "1 is your position".

Step by Step



Setting up a conference from a second call

You are connected to one user and receive a second call, which is signalled by a warning tone.



Pickup

OK

Select and confirm the option shown. You are immediately connected to the second caller. The other party is placed on hold.



CONFERENCE

OK

Select the menu item and confirm. You will briefly see the message: "1 is your position". All members are connected in a conference call.

Expanding a conference

Any member of the system conference can expand the conference by:

- calling another user and adding this person to the conference,
- adding a user to the conference from a consultation call,
- accepting a second call and adding the caller to the conference.

Calling and adding another user

You intend to call another user and to add this person to the conference.



EXPAND CONF.

OK

Select the menu item and confirm.



Call the new party.
Announce that a conference is to be set up.

CONFERENCE

OK

Confirm the option shown.
The user is added to the conference.

If the new user does not answer:

TO CONFERENCE

OK

Confirm the option shown.

Expanding the conference from a consultation call

You wish to make a consultation call during the conference.



CONSULT

OK

Select the menu item and confirm. The conference is placed on hold.



Call a user. Make the consultation call.

Step by Step

Either:

↓ ↑ CONFERENCE OK

Select the menu item and confirm to add the user from the consultation call to the conference.

or:

↓ ↑ TOGGLE OK

Toggle between the conference and the consultation call.

or:

↓ ↑ RETURN OK

Select the menu item and confirm to release the consultation call and return to the conference.

Accepting a second call and adding it to the conference

If you receive a second call during the conference (the second call function is activated), you can add this user to the conference.

An alerting tone is audible.

↓ ↑ Pickup OK

Select and confirm the option shown. You are immediately connected to the second caller. The conference is placed on hold.

Either:

↓ ↑ CONFERENCE OK

Select and confirm to add the second caller to the conference.

or:

↓ ↑ TOGGLE OK

Toggle between the conference and the second call.

or:

↓ ↑ RETURN OK

Select and confirm to release the second call and return to the conference.



 
Step by Step

Transferring the conference

Any member can transfer the conference to a third party whom he has called by using the consultation or "expand conference" functions. The new user is not yet a member of the conference. The conference cannot be transferred to a second call.

You are taking part in a conference

Either:

  CONSULT 

Select and confirm the option shown. The conference is placed on hold.



Call a user.



 
or:

EXPAND CONF. 

Select and confirm the option shown.



Call a user.

  CONF. TRANSFER 

Select and confirm the option shown.
You are disconnected from the conference.



 


Press the On-hook key.

During the conference

You are taking part in a conference with 3 to 8 members and you wish to know about the other members or to disconnect a certain member or to disconnect the last member added to the conference.

Viewing member information and disconnecting members

  VIEW MEMBERS? 

Select and confirm the option shown.

Phone no. party 1
NEXT CONF PTY?

The display shows the phone number and possibly the name of the conference member with the lowest member number.



 
Either:

NEXT CONF PTY? 

Confirm to display the next member.




or:

Step by Step

  STOP VIEWING? 

Select and confirm to end the display.


or:

  RELEASE PARTY? 

Select and confirm to disconnect this member from the conference. If there were only three members, the conference is now ended.

Disconnecting the last member added

You wish to disconnect the last member added to the conference.

  REM LAST PTY? 

Select and confirm the option shown. The last member added is disconnected. If there were only three members, the conference is now ended.

Using the camp-on function

If you are expecting an important call, you should activate the camp-on function. A second call will then be signalled while a call is in progress. You can accept or ignore the second call.






Caution:

A second call is not signalled on the Bluetooth headset.



Open the system menu.

  BASIC SERVICE 



 
Select and confirm the basic service.

Either:


 

Enter the service code.

or:

  Feature settings 

Select the menu item and confirm.

 
  Camp-on 

Select the menu item and confirm.


then: **Activating or deactivating**

Activate 

Confirm one of the two displays.

Deactivate 

 Step by Step



Accepting a second call

Prerequisite: You are making a call. The camp-on function is activated.

You will hear a warning tone. The calling party will hear the ringing tone as though you were "free".

Select and confirm the option shown. You are immediately connected to the second caller. The first party is placed on hold.

Ending the second call, resuming the first call:



Replace the handset and lift it again.



Step by Step

Message functions

Using the mailbox

 
Callers who have tried to reach you during your absence can leave a callback request in your mailbox. In the mailbox you will also find voice or fax messages from the mail server (if this has been set up).

Viewing the mailbox/selecting a mailbox entry


An advisory message appears and the message key flashes when one or more information messages or voicemails have been received for you.



Open the system menu.




Select the menu item and confirm.

 


The first entry is displayed on the screen.



 Press to display the menu selection.



 
Select the menu item and confirm to select the next callback request.



The callback request is displayed.



 Press to display the menu selection.




Select and confirm the option shown. The station will be called.

Making a requested callback

The callback request is displayed.



 Press to display the menu selection.



Select and confirm the option shown. The station will be called.

Step by Step

MUELLER MOBILE
TH 06.02 09:23



DELETE



CANCEL



QUERY NO.



46068
34101



Deleting mailbox entries

Select the required entry → Page 93.

The required entry appears.

Press to display the menu selection.

Select and confirm to delete the entry.

Caution:

You cannot delete (new) voice messages to which you have not yet listened in full. To mark a message as "listened to", press 66 to jump to the end of the message. Callback requests must also be deleted from the missed call list → Page 95.

Ending mailbox viewing

Press to display the menu selection.

Select and confirm the option shown. Mailbox entries which have not been deleted remain saved.

Using the missed call list

Callers who have tried to reach you during your absence are saved in the missed call list. Callback requests → Page 93 are also recorded here.

Retrieving the caller list

An advisory message appears and the message key flashes when one or more information messages or voicemails have been received for you.

Either:



Press the message key.

or:



Open the system menu.

Select the menu item and confirm.

The phone number or names are displayed. Phone numbers that have been viewed are ticked.

Step by Step



Press to view the list of phone numbers (names).
Phone numbers (names) that have already been viewed are ticked.

Calling back a caller on the list



Press to select the required phone number (name).



Press to display the menu selection.



DIAL



Select and confirm the option shown.
The station will be called.

Deleting a caller from the list



Press to select the required phone number (name).



Press to display the menu selection.



DELETE



Select and confirm the option shown. The entry is deleted and the missed call list is displayed again.

Exiting the missed call list



Press to move up to the next or a higher level of the menu

or:



Press the on-hook key to return to the main menu.

Using the HiPath Xpressions mailbox function (optional)

Users with a mailbox (HiPath Xpressions) can dial the messaging phone number to use this system's features and thus configure call forwarding types or listen to available messages. User voice prompts explain how to obtain all the available functions. If call forwarding to the mailbox is activated, the messaging phone number is shown on the display → Page 70.

Step by Step

Additional functions

Handset alarm clock function

When the alarm clock is activated, it rings every day or every day from Monday to Friday at the set time. The alarm clock is deactivated during automatic number redial.

Caution:

The alarm will only sound with the set melody if the handset is in idle status. During a call, the alarm is only signalled by a short tone.

Prerequisite: The date and time must be set.

Setting the alarm clock

The handset is in idle status.




Open the handset's main menu.



Alarm Clock



Select the menu icon and confirm. The input mask for setting the alarm is displayed.

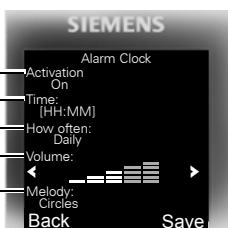

- 1
- 2
- 3
- 4
- 5

- 1 Alarm activation: On/off
- 2 Time in the format [HH:MM], for example 19:05 = 1905
- 3 Alarm rings every day or only Monday - Friday
- 4 Volume can be set to five different levels + crescendo ring
- 5 Adjustable melodies



Define the setting.



Move the cursor down one line.



Enter the time.



Move the cursor down one line.

...

etc.



Save the settings.




The alarm clock is activated.

Step by Step



Press the On-hook key to end the operation.

Deactivating an alarm/repeating after a pause

The alarm rings for 60 seconds. The  symbol appears on the display. If you do not press anything, the alarm repeats after five minutes and then deactivates.

During the alarm:

Either:

Off

Press the display key. The wake-up call is deactivated.

or:

Snooze

Press the display key or any key. The alarm deactivates and is repeated after five minutes. The alarm is repeated twice and then permanently deactivated.

Step by Step

Handset appointment reminder function

You can use your handset to remind yourself of up to 30 appointments. The handset must be in idle status at the time of the appointment reminder. The appointment reminder function is deactivated during automatic number redial. The volume is set under "Audio Settings" -> "Ringer Settings" -> "Für interne Anrufe und Termine" (For Internal Calls and Appointments). The date and time must be set.

Saving an appointment

The handset is in idle status.



Open the handset's main menu.



Organizer



Select the menu icon and confirm.



Calendar



Select and confirm the menu item. The current month's calendar is displayed with the current day marked.



Select and confirm the required day for the new appointment reminder. The input mask for entering a new appointment reminder appears.



<New Entry>



Select and confirm the menu item or select an existing appointment entry. The "New Entry" option only appears if an appointment entry already exists.



Activation < On >

Define the setting.



Move the cursor down one line.

Date



Enter the date, for example 11 November = 1111.



Move the cursor down one line.

Time



Enter the time, for example 19:05 = 1905.



Move the cursor down one line.

Text



Enter the name for the appointment reminder.



If applicable, delete the old text.



Move the cursor down one line.



Signal

Define a melody to signal appointments.

Save

Save the settings.

Step by Step

The appointment reminder function is activated. The check mark after the appointment indicates that the appointment is active.



Press the On-hook key to end the operation.

Confirming an appointment reminder call

An appointment reminder call is signalled in the same way as an incoming call.

Off

Press the display key during the appointment reminder call.

If you do not confirm the appointment reminder call, it will be stored in a missed dates list.

Deactivating an appointment reminder

The handset is in idle status.



Open the handset's main menu.



Organizer

OK

Select the menu icon and confirm.



Calendar

OK

Select the menu item and confirm. The calendar for the current month is displayed.



OK

Select and confirm the required day with at least one available appointment. The list of appointments is displayed.



<New Entry>
09:15 Meeting
18:00 Date

Select the appointment reminder that you want to deactivate.

Options

Open the additional menu.



Deactivate


OK

Select the menu item and confirm. The selected appointment reminder is deactivated (check mark removed).




Press the On-hook key to end the operation.

Step by Step

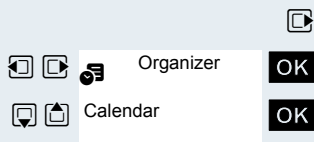

Options

 

Delete

Deleting an appointment

The handset is in idle status.



Open the handset's main menu.



Select the menu icon and confirm.



Select the menu item and confirm. The calendar for the current month is displayed.

Select and confirm the date you want. The list of appointments is displayed.

 
Select the appointment reminder that you want to delete.

Open the additional menu.

Select the menu item and confirm. The appointment is deleted.

Press the On-hook key to end the operation.

Displaying an unconfirmed appointment

If you have not confirmed an appointment reminder call, the  icon and the number of **new** entries are shown on the display. This unconfirmed appointment must also be saved in a missed dates list.



Open the handset's main menu.



Select the menu icon and confirm.



Select the menu item and confirm. The date and time of the unconfirmed appointment are displayed. If 10 entries are already stored in the list, the next appointment reminder will delete the oldest entry.

Delete entry manually from the list

Step by Step

System appointment function

You can arrange for the communication system to remind you of an appointment. For this to happen, you need to save the times at which you wish to be reminded. This is possible for a period of up to 24 hours in advance.

Saving an appointment



Open the system menu.



BASIC SERVICE

OK

Select and confirm the basic service.

Either:



Enter the service code.

or:



REMINDER

OK

Select and confirm the option shown. The display indicates whether any reminders are already saved.



NEW REMINDER

OK

Select the menu item and confirm.

then:



Enter the time as 3 or 4 digits, for example, 845 for 8.45 a.m. or 1500 for 3 p.m.

SAVE

OK

Confirm the option shown.

Deleting a saved appointment



Open the System Menu.



BASIC SERVICE

OK

Select and confirm the basic service.

Either:



Enter the service code.

or:



REMINDER

OK

Select and confirm the option shown. A saved reminder is displayed.



NEXT

OK

Confirm if you have saved several reminders.

Step by Step

then:



DELETE

OK

Select the menu item and confirm.



Press the On-hook key.

Using timed reminders

Prerequisite: You have saved an appointment. The saved time arrives.

The handset starts ringing.



Press the Talk key. The appointment time is displayed.



Press the On-hook key.




If you do not accept the reminder, the handset will ring a few more times and "Appoint." will be displayed before the reminder is deleted.

Step by Step

Selecting a base

If your handset is registered at multiple bases, then you can set a specific base or the base with the best reception as the base to be used. The handset then switches automatically to this base.

You can change the base name that is displayed on the handset at any time.

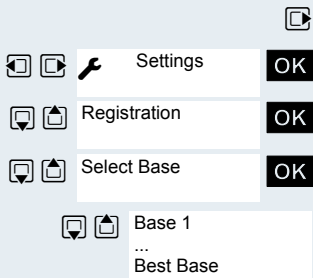

Open the handset's main menu.

Select the menu icon and confirm.

Select the menu item and confirm.

Select the menu item and confirm.

Select the required base.

Selection

Select base. The selected base is ticked:

- Base 1 - 4: Selecting base n defines one specific HiPath cordless system where the handset is registered.
- Best Base: If the handset is registered at multiple cordless systems, it automatically switches to one of these systems when it enters the relevant range. Example: The handset is registered at the Gigaset home base as well as at the cordless system in the company.

Changing the base station name

You can change the base station name that is displayed in idle status.



Name

Press the display key.



Delete text.



Enter the required text and correct individual characters as necessary using the "Delete" Display key.

Save

Save the settings.



Press the On-hook key to end the operation.

The new base station name is now displayed in idle status.

Step by Step

The Cordless system overwrites the display information "Name base station" with the own phone number as soon as an incoming or outgoing call is initiated. In this case, the name of the base station only reappears after the handset has been switched off and back on again.

Setting the base



Caution:

Can only be set if this menu item is visible. To set, see → Page 37.

You can configure individual settings on your system with your handset depending on how your system is configured.



Open the handset's main menu.



Settings



Select the menu icon and confirm.



System



Select the menu item and confirm.



Base Reset



Select the menu item and confirm.



Select the required menu item and confirm.

Step by Step

Speed dialling

You can program the number keys **0 +** and **2 ABC** to **9 WXYZ** with a phone number. You then dial the number by pressing the key.

Configuring speed dialling

0 +, **2 ABC** to **9 WXYZ**

Press the required number key **briefly**.

QuickDial

If this key is not already programmed with a function, the number key can be assigned a new phone number. Press the display key.

or

If the key is already programmed with a function, it appears on the left display key.

Change

Press the display key.

  **OK**

Select the required phone number and confirm.

Dial a phone number

0 +, **2 ABC** to **9 WXYZ**

Press and **hold** the number key programmed with the required phone number. The phone number is dialled.

If the number key has not been assigned a phone number, the list appears for you to select a phone number.

Step by Step

Speed access to functions

The display keys can be programmed with functions. The function is then started by pressing the key.

Configuring speed access

?

Press and **hold** the required display key.

A list of the functions that can be programmed on the key is displayed. The following functions are available for selection:

- INT
- Alarm Clock
- Calendar
- Bluetooth
- Redial

Calling the function

?

Press the required display key **briefly**.

The function is selected.

Step by Step

Data communication with the PC

To enable your handset to communicate with the PC, the **Gigaset QuickSync** program must be installed on your PC (free to download at http://wiki.siemens-enterprise.com/wiki/Gigaset_professional_accessory)

After installing "Gigaset QuickSync", connect the handset to your computer using Bluetooth → Page 108 or via a USB data cable → Page 18.

Transferring data

Start the "Gigaset QuickSync" program. You can now:

- Synchronise your handset's address book with Outlook
- Download caller pictures (.bmp) from the computer to the handset
- Download pictures (.bmp) as screensavers from the PC to the handset
- Download sounds (ringer melodies) from the PC to the handset

"Data Transfer" is shown on the display during data transfer between the handset and PC. During this time, the keypad is disabled and incoming calls are ignored.

**Caution:**

- If the USB data cable is plugged in, a Bluetooth connection cannot be established.
- If a USB data cable is plugged in during an existing Bluetooth connection, the Bluetooth connection is cancelled.

Step by Step

Bluetooth interface

Before you can use your Bluetooth device, activate Bluetooth, ensure the devices are visible and then register the handset.

You can register one Bluetooth headset to the handset. You can also register up to five data devices (PCs, PDAs and mobile phones) to send and receive address book entries as vCards or exchange data with the computer (→ Page 112).

To use the phone numbers, dialling codes (country and area code) must be stored in the directory (→ Page 36).

You will find a description of how to operate your Bluetooth devices in the user guides for these devices.



Caution:

Third parties can tap Bluetooth connections.

Activating/deactivating Bluetooth mode

You can deactivate the Bluetooth interface if you do not need it for extended periods of time. This increases your handset's standby time.



Open the handset's main menu.



Bluetooth



Select the menu icon and confirm.



Activation



Select the menu item and confirm.
The active Bluetooth function is ticked.

Confirm again to activate.

Step by Step

Registering Bluetooth devices

The distance between the handset in Bluetooth mode and the activated Bluetooth device (headset or data device) should be no more than 10 m.

To connect a Bluetooth headset, see → Page 52.

If the Bluetooth connection is not yet established between the handsets, perform the following steps:

Searching on your handset



Open the handset's main menu.



Bluetooth



Select the menu icon and confirm.



Search Data Device



Select the menu item and confirm. The handset searches for Bluetooth-enabled devices. This may take a few minutes. If devices are found, these will be shown in a list.



Select the required device, for example, the other handset.

Trusting the device

Options

Press the display key.



Trust Device



Select the menu item and confirm.



agreed PIN:



Enter the Bluetooth PIN and confirm (default: 0000). The device is saved in the list of known devices.

Cancelling/repeating current search

Cancel

Press the display key to cancel the search.

or

Options

Press the display key.



Repeat Search



 
Select and confirm the menu item in order to repeat the search.

Step by Step



Confirming the connection on the other device

Enter and confirm identical Bluetooth PINs within a few seconds (default: 0000). If you were not fast enough, repeat the previous steps.



Confirm the prompt.

The Bluetooth connection is established. The two devices can now exchange data in vCard format.

Editing the list of known (trusted) devices

Opening the list

 Open the handset's main menu.



Select the menu icon and confirm.




Select the menu item and confirm.

A corresponding icon appears next to each device name in the list displayed:

Icon	Explanation
	Bluetooth headset
	Bluetooth data device


Viewing entries

 Select the entry.

 
View Press the display key. Device name and address are displayed.

OK Press to switch back to the overview.

Deregistering Bluetooth devices


 Select the entry.

Options Press the display key.



Select the menu item and confirm.

Changing the name of a Bluetooth device

 Select the entry.

Step by Step

Options

Press the display key.



Edit Name

OK

Select the menu item and confirm.



Rename.

Save

Press the display key.

Rejecting/accepting an unregistered Bluetooth device

If a Bluetooth device that is not registered in the list of known devices tries to connect with the handset, you will be prompted on the display to enter the PIN for the Bluetooth device (bonding).

Rejecting



Press the On-hook key **briefly**.

Accepting



OK

Enter the PIN for the Bluetooth device **you want to accept** and confirm.

If you have accepted the device, you can use it temporarily (i.e. as long as it is within receiving range or until you deactivate the handset) or save it to the list of known devices.

Following PIN confirmation

Yes

Press the display key to add the device to the list of known devices.

or

No

Press the display key to use the device temporarily.

 
Step by Step



Changing the Bluetooth name of own handset

You can change the handset name used to identify it on the display of another Bluetooth device.

Select the menu icon and confirm.



Select the menu item and confirm.

Change

Press the display key.



Rename.

Save

Press the display key.

Phonebook transfer



To transfer the phonebook data between handsets or with the system without using Bluetooth, see → Page 62.

Prerequisite: The Bluetooth connection between the devices is established → Page 109.



 
Open the phonebook.



Select the entry.


Options

Press the display key.




Select the menu item and confirm.

 or



Select the menu item and confirm.

 

Select the menu item and confirm.



Select and confirm the target device or the other handset. The vCard data is sent to the target device.

Now follow the instructions on your handset display.

Step by Step

System-wide speaker call

You can set up a connection with an internal HiPath 4000 user by addressing him/her directly over the loudspeaker of his/her telephone. You can also start a speaker call from an enquiry.

To cancel a speaker call, replace the handset or - during an enquiry - resume the call that was in progress.

Caution:

For all functions, make sure that Speaker Calling is deactivated for the telephones concerned
→ Page 114.

If you make a direct call to a user who has activated call protect, the speaker call will be ignored and a normal call will be placed.

From your handset, you can directly call any internal user whose telephone has the speakerphone function or a loudspeaker.

A destination user is addressed via his internal phone number.

Speaker call



The handset is not in the charging shell. Press and hold the Talk key or press and hold the Speakerphone key.



Enter the code for "Speaker call" and



the user's phone number.

A connection to that user's loudspeaker will immediately be established if:

- the connection is not busy,
- the handset is not lifted,
- and call protection is not activated.

The caller will hear a tone to indicate when the connection has been established and he/she can start speaking.

The called party can accept the call by lifting the handset.

If the called party presses the speakerphone key or the Trunk key (if configured), the connection is cancelled.

Step by Step



Caution:

 
The number of possible speaker calls and normal calls is the same.

Activating/deactivating speaker calling

You can protect yourself against being directly addressed. Attempts to address you directly over the speakerphone will then become normal calls.




Open the system menu.




Select and confirm the basic service.

 Either:



Enter the service code.

 or:




Select the menu item and confirm.



Select the menu item and confirm.

then:

 Activating or deactivating



Confirm the menu item displayed.



Step by Step

Telephone blocking

Handset telephone lock


Caution:

Can only be set if this menu item is visible. To set, see → Page 37.

You can protect your handset against by entering a 4-digit numerical code to lock it.

The PIN is preset to "0000" (default). The handset does not prompt for a PIN in this setting. As soon as you have changed the PIN you will need to enter it when you turn on the handset.

Enter the value "0000" again to deactivate the PIN.


Important:

If you have forgotten your PIN, please contact Siemens Service. It will be reset at your own expense. The handset is returned to the default state (see → Page 38).

 
Entering a new PIN




Open the handset's main menu.



Select the menu icon and confirm.



Select the menu item and confirm.

 

Select the menu item and confirm.



Enter and confirm the old PIN. If a PIN has not yet been set, then enter "0000".



Enter and confirm the new PIN.



Press the On-hook key to end the operation.

Step by Step

Battery charging when PIN lock active

If the handset deactivates because the battery is flat, it automatically reactivates as soon as you place it in the charging shell. The charging operation starts. If you have already set a PIN, you must enter it so that the handset can receive calls.

Locking the telephone line to prevent misuse

You can prevent unauthorised persons from using your telephone (and the system directory) during your absence.

Prerequisite: You have been assigned a personal identification number (PI N) by System Support.

Caution:

As an alternative, however, you can lock your handset against misuse → Page 115.

Neither of these two locks may be active if you want to place a call.

The PINs for locking the telephone line and for the handset are not identical.

Locking the telephone line to prevent unauthorised dialling



Open the system menu.



BASIC SERVICE



Select and confirm the basic service.

Either:



Enter the service code.

or:



PIN / COS?



Select the menu item and confirm.



CHANGE COS



Select the menu item and confirm.

then:



Enter the PIN (code no.).

Step by Step

OK

Press this key. If the PIN is correct, it will be confirmed with: "carried out" on the display.

Enabling the telephone again:



Open the system menu.



BASIC SERVICE

OK

Select and confirm the basic service.

Either:

6 MNO

7 PGRS

Enter the service code.

or:



PIN / COS?

OK

Select the menu item and confirm.



CHANGE COS

OK

Select the menu item and confirm.

then:



Enter the PIN (code no.).

OK

Press this key. If the PIN is correct, it will be confirmed with: "carried out" on the display.

Step by Step

Accessing system functions

The system functions can be accessed via the Service menu. The following example shows how to select the "Camp-on" function.



Opening the Base menu.

↓ ↑ BASIC SERVICE ... OK

Select and confirm the basic service. The Service menu is displayed.


↓ ↑ Feature settings OK

Select the menu item and confirm (example).

↓ ↑ Camp-on OK

Select the menu item and confirm (example).

Structure of the service menu

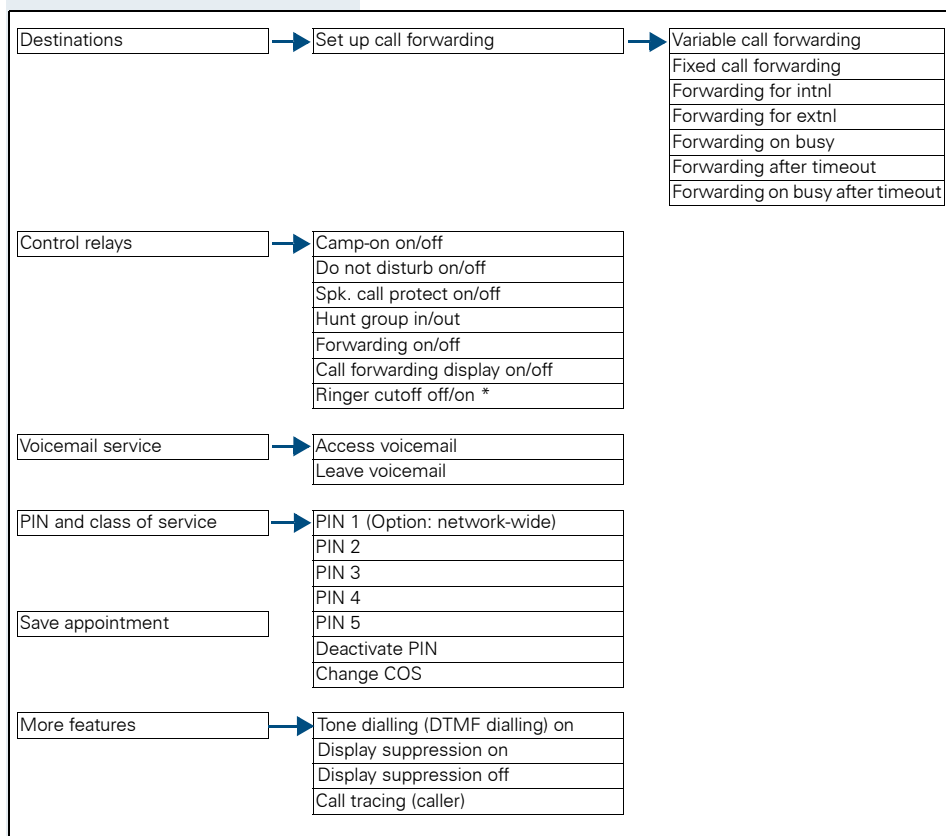

Appendix

Troubleshooting

Some malfunctions can be resolved without outside intervention. The following table provides a list of such malfunctions. All other malfunctions should be reported to the relevant service personnel.

Error	Possible cause	Remedy
No display.	The handset is not switched on.	Press the On-hook key until confirmation is received.
	Batteries are empty.	Charge or replace the batteries.
You cannot dial an external number.	The handset is locked.	Unlock the handset.
No reaction to keystroke.	Keypad lock activated.	Press the hash key until confirmation is received.
	The key is stuck.	Release the key.
De-crescendo tone sequence during input.	An incorrect entry was made.	Repeat key sequence while watching the display; where applicable, consult the operating instructions.
The line "Base n" flashes (n= 1 - 4).	The handset is outside the base radio range; radio signals too weak.	Come closer to the base radio range, change your position.
	Handset not registered.	Register the handset.
	Intervals between synchronisation attempts are too long.	Switch off the handset and switch it back on again.
No ringer on the handset.	The ringtone is deactivated.	Activate ringer.
	"Do Not Disturb" is activated.	Deactivate "Do Not Disturb".

Error	Possible cause	Remedy
The following, for example, appears: Base 1 Outgoing and incoming calls and activation/deactivation are not possible.	The handset is locked.	Remove the batteries from the handset and then re-insert them. Proceed as when loading batteries for first time → Page 17.
The following appears:	Maximum input time was exceeded. The On-hook key was not pressed.	Avoid long pauses between keystrokes. Press the On-hook key.
The following appears:	The communication system is overloaded.	Wait and try again later.
The following appears: Currently not accessible	Function is currently not available. No connection under the phone number dialled available.	Wait and try again later. Enter the phone number correctly or call the attendant console.
The following appears: Not possible Or: Incorrect input Or: Nothing stored	Speed-dial number not available, appointment entered incorrectly, entry blocked or not allowed, prerequisite not fulfilled (for example, if there is no second partner for toggling), number dialled was incomplete.	Correct your input, select a permitted option, enter the phone number in full.
The following appears: Not authorized	Blocked function was called.	Apply to the relevant service personnel for the COS for the blocked function.
The following appears: PIN Incorrect	Incorrect PIN was entered.	Enter the correct PIN.
The following appears: Not available	Phone number was not fully entered, the star or hash key was not pressed.	Enter the phone number correctly or as prescribed.
The following appears: Do not disturb	Data transfer is active.	Wait and try again later.

Cleaning the handset

Removing everyday dirt

To clean the handset and the charging shell, simply wipe them with a damp or anti-static cloth. Never use a dry cloth.

Do not use abrasive cleaning agents.

After contact with liquids

1. Deactivate the handset immediately. Do NOT activate it!
2. Remove the batteries immediately. Leave the battery compartment open.
3. Allow the liquid to drain off:
 - Hold the handset in a horizontal position with the open battery compartment facing down.
 - Hold the handset in a vertical position with the open battery compartment facing down. Shake the handset gently, slightly tilting it back and forth.
 - Dab all components dry and then leave the handset in a warm spot (other than a microwave, oven, etc...) for at least 72 hours with open battery compartment and keypad facing down.

When it has fully dried out, you will usually be able to use it again.

Storage

To avoid damage, the handset should not be stored with sharp objects, such as knives or tools, etc. We recommend using a protective pouch
→ Page 125.

Documentation

These operating instructions can be found in PDF format at the following URL:

<http://www.siemens-enterprise.com/de/ > Support > Download Manuals for Equipment and Phones > Gigaset>

To view or print the operating instructions in PDF format, you need a computer on which the free Adobe Acrobat Reader program is installed.

To view the operating instructions in HTML format, you need a computer with a Web browser, for example Microsoft Internet Explorer.

General specifications

Maximum sound pressure level according to TBR10, Annex D:	less than 118 dB (A)
Weight incl. battery:	approx. 100 g
Dimensions (W x H x D):	approx. 48 x 127 x 19 mm

DECT

DECT standard	Supported
GAP standard	Supported
No. of channels	60 duplex channels
Radio frequency range	1880-1,900 MHz
Duplex method	Time multiplex, 10 ms frame length
Pulse repetition rate	100 Hz
Pulse transmission length	370 μ s
Channel grid	1,728 kHz
Bit rate	1152 kbit/s
Modulation	GFSK
Language code	32 kbit/s

Transmission power	10 mW, average power per channel 250 mW pulse power
Range	Up to 300 m outdoors, up to 50 m indoors
Environmental conditions in operation	+5 °C to +45 °C, 20 % to 75 % relative humidity

Bluetooth

Radio frequency range	2402-2,480 MHz
Transmission power	4 mW pulse power

Battery

Technology:	Lithium ion (Li-Ion)
Voltage:	3.7 V
Capacity	750 mAh
Type	V30145-K1310-X445

The handset is supplied with the recommended battery. Only an original battery may be used.

The device is supplied with the recommended battery. Replacement batteries can be ordered if necessary from Siemens Enterprise Service.

Handset operating times/charging times

The operating time of your handset depends on the capacity and age of the battery and the way it is used. (All times are maximum possible times).

Stand-by mode (hours) ^a	190/85
Talktime (hours)	14
Operating time for 1.5 hrs of calls per day (hours) ^b	100
Charging time in charger (hours)	3

[a] without/with display backlight

[b] without display backlight

(Set the display backlight → Page 31)

Charging shells

European Union	S30852-H2352-R141
United Kingdom	S30852-H2352-L141
US (110V)	S30852-H2382-U241
Brazil	S30852-H2382-U341
Australia	S30852-H2382-C441

Accessories

Use only original accessories. This will avoid possible health risks and personal injury and also ensure that all the relevant regulations are complied with.

Source

For information on accessories (such as headsets, protective pouches), contact Siemens at the following address:

http://wiki.siemens-enterprise.com/wiki/Gigaset_professional_accessory

EU guidelines

The handset and accessories listed conform to the following EU guideline:
99/05/EC "Radio and Telecommunication Terminal Equipment"

Writing and editing text

- Each key between **0** and **9** is assigned several letters and characters.
- Control the cursor with **←**, **→**, **⏪**, **⏩**. Press and **hold** **←** or **→** to move the cursor **word by word**.
- Characters are inserted at the cursor position.
- Press the star key ***** to display the table of special characters. Select the required character and press the display key **Insert** to insert the character at the cursor position.
- Press and **hold** **0** to **9** to enter digits.
- Press display key **<C** to delete the **character** to the left of the cursor. Press and **hold** to delete the **word** to the left of the cursor.
- The first letter of the name of address book entries is automatically capitalised, followed by lower case letters.

Setting upper/lower case or digits

Repeatedly press the hash key **#** to change the text input mode.

123	Writing digits
Abc	Upper case ^a
abc	Lower case

[a] First letter in capitals, all others in lower case

The active mode is indicated at the bottom right of the screen.

Writing names

- Enter the individual letters/characters by pressing the corresponding key.
The characters assigned to the key are shown in a selection line at the bottom left of the screen. The selected character is highlighted.
- Briefly** press the key several times in succession to select the required letter/character.

Standard characters

	1x	2x	3x	4x	5x	6x	7x	8x	9x	10x
1 OP	1									
2 ABC	a	b	c	2	ä	á	à	â	ã	ç
3 DEF	d	e	f	3	ë	é	è	ê		
4 GHI	g	h	i	4	ï	í	ì	î		
5 JKL	j	k	l	5						
6 MNO	m	n	o	6	ö	ñ	ó	ò	ô	õ
7 PQRS	p	q	r	s	7	ß				
8 TUV	t	u	v	8	ü	ú	ù	û		
9 WXYZ	w	x	y	z	9	ÿ	ý	æ	ø	å
0 +	␣ ^a	.	,	?	!	← ^b	0			

[a] Space

[b] Line feed

Accessing additional functions via the PC interface

To enable your handset to communicate with the PC, the **Gigaset QuickSync** program must be installed on your PC (free to download at http://wiki.siemens-enterprise.com/wiki/Gigaset_professional_accessory)

Transferring data

After installing **Gigaset QuickSync**, connect the handset to your computer → Page 18 using Bluetooth → Page 108 or a USB data cable.



Caution:

- If the USB data cable is plugged in, a Bluetooth connection cannot be established.
- If a USB data cable is plugged in during an existing Bluetooth connection, the Bluetooth connection is cancelled.

Start the **Gigaset QuickSync** program. You can now synchronise your handset directory with Outlook; download caller pictures (.bmp) and images (.bmp) as a screensaver and sounds (ringtones) from the computer to the handset (and vice versa) (see also → Page 107.)

Declaration of conformity

Your handset is supplied for use within a specific country, which is displayed on the underside of the device. Country-specific requirements have been taken into consideration.

The device complies with the basic requirements of the R&TTE Directive and therefore displays the CE symbol.

Extract from original declaration

"We, Siemens Enterprise Communications GmbH & Co KG Hofmannstr. 51, D-80200 Munich/Germany declare that the product OpenStage SL4 professional S30852-H2352-R*-* to which this declaration relates, conforms to the following European Directives and European standards:

Directive 99/5/EEC: Radio and Telecommunication Terminal Equipment."

The Declaration of Conformity (DoC) has been signed. In case of need, a copy of the original DoC can be made available via the company hotline.

CE 0682

Index

A

Accessories	125
Activating	41
Advisory tones	23
Alarm clock	96
Alerting tone	30
Appointments	
~ on handset	98
~ on system	101
Activating	98
Confirming	99, 102
Deactivating	99, 101
Saving	101
Attachment clip	
Fitting	18
Audio functions	20
Auto. answer	31
Auto. redial	55
Automatic call forwarding	76
Available memory	61

B

Base	
Changing the name displayed	103
Selecting	103
Setting	104
Batteries	
Charging	17, 41
Inserting	15
Warning tone	39
Battery tone	
Function	39
Setting	23
Bluetooth	
Headset	52
Registering devices	109
Bluetooth interface	108
Busy override	84

C

Call	
Parking	82
Placing on hold	46
Transferring	85
Call forwarding	70
Activating/deactivating	76
Automatic	76
Changing for different terminal	80
Checking for another telephone	80
Fixed	71
For different terminal	79
Variable	73
With codes	77
Call waiting	83
Callback	45
Callback request	93
Caller list	94
Calls	
Accepting	49
Anonymous ~	67
Making	42
Changing a phone number	60
Charging status	17
Cleaning	121
Clip	
Fitting	18
Colour scheme, setting	34
Conducting calls with the headset	52
Conference phone	
Ending	91
Expanding	88
Managing	90
Setting up	87
Transferring	90
Viewing	90
Confirmation tone	
Function	39
Setting	23
Connecting the headset	18
Connection quality	41
Consultation (second connection)	46
Control key	4, 10
Converting prefixes	36
Copy All	62
Copy Entry	62
Copying the phonebook	62

Cost billing 65

D

Deactivating 41
 Declaration of conformity 128
 Default state 38
 Delayed call forwarding 79
 Deleting
 Entry 55, 61
 Phonebook 61
 Redial list 55
 Dialling
 A phonebook entry 59
 After line seizure 42
 Before line seizure 43
 Dialling a number 59
 Dialling preparation 43
 Different telephone 66
 Dimensions 122
 Directive 125
 Display 4
 Colour scheme 34
 Lighting 34
 Screensaver (screen picture) 33
 Setting 33
 Display keys 4, 11
 Display lighting 34
 Do not disturb 68
 DTMF suffix dialling 81

E

Earpiece 4
 EMC 2
 Entry
 Changing the 60
 Deleting 55, 61
 Dialling 44, 55, 59
 Saving 58
 Searching for 60
 Viewing 60
 EU directive 125
 Everyday dirt 121

F

Fax messages 93
 Fixed forwarding 71

Function keys 9
 Functions 118

H

Hash key 4, 9
 Headset 52
 Corded 52
 Cordless (Bluetooth) 52
 Headset connection 4
 Headset port 18
 Hold 46

I

Identification number 66
 Information message, viewing 93
 Interface 108
 Interference with electronic equipment ... 2

K

Key click
 Function 39
 Setting 23
 Keypad lock 50
 Keys
 Control key 10
 Display keys 11
 Function keys 9

L

Leaving the radio network/re-registering ... 50
 Line seizure 42, 43
 Liquids 121
 Locking/unlocking
 Handset 115
 System 116

M

Mailbox 66, 93, 95
 Deleting entries 94
 Viewing 93
 Making anonymous calls 67
 Making calls 42, 43
 Manual redial 44

- Memory 61
- Message key 4
- Message list 9
- Message, viewing 93
- Microphone 4, 54
- Activating/deactivating 48
- Mini USB connection 4
- Mute 54
- Mute key 4
- Muting 48
- N**
- Number
- Changing the 60
- Dialling 42
- Dialling from the phonebook 59
- Saving 58
- Suppressing 67
- Number keys 4
- Number, applying 59
- O**
- On/off key 4, 9
- On-hook key 4, 9
- Opening/closing battery compartment .. 16
- P**
- Parking a call 81, 82
- Parts of the device 4
- Phonebook
- ~ on handset 57
- Phonebook entries, sorting 59
- Phonebook, copying 62
- PIN 41, 115
- Programming keys
- Speed access to functions 106
- Speed dialling 105
- Project assignment 65
- Protective cover 14
- Protective pouch 121
- R**
- R key 4, 9, 10
- Radio range 41
- Range problems 41
- Redial
- Adding a phone number 56
- Automatic 55
- Deleting an entry/list 55
- List 44, 55
- Manual 44
- Registering devices (Bluetooth) 109
- Resetting 38
- Resource directory 27
- Ringing 25
- S**
- Saving a phone number 58
- Second call 91
- Second connection (enquiry) 46
- Sending
- Entry 62
- List 62
- Setting the date 32
- Setting the language
- Handset 19
- Setting the menu view 37
- Setting the ringer 25
- Setting the screen picture 33
- Setting the screensaver 33
- Setting the time 32
- Sorting phonebook entries 59
- Sound pressure level, maximum 122
- Speaker call 113
- Speaker calling 114
- Speaker volume 20
- Speakerphone key 4, 9
- Speakerphone mode 51
- Speed access to functions 106
- Speed dialling 105
- Dialling 60
- Hash key 4
- Star key 4, 9
- Storage 121
- Switching between calling partners 85
- System functions 118
- T**
- Talk key 4, 9
- Technical data 122

Telephone volume	20
Toggling	85
Tone dialling	81
Tones	23, 25
Trace call	69
Transferring	85
Transferring, call	85
Troubleshooting	119

U

USB connection	18
----------------------	----

V

Variable forwarding	73
vCard	57, 62
Converting prefixes	36
Viewing a message	93
Voicemail	93
Volume	20

Copyright © Siemens Enterprise
Communications GmbH & Co. KG 11/2011
Hofmannstr. 51, D-80200 München

Siemens Enterprise
Communications GmbH & Co. KG
is a Trademark Licensee of Siemens AG

Reference No.
A31003-S2000-U161-1-7619

The information provided in this document contains merely general descriptions or characteristics of performance which in case of actual use do not always apply as described or which may change as a result of further development of the products. An obligation to provide the respective characteristics shall only exist if expressly agreed in the terms of contract. Subject to availability. Right of modification reserved. OpenScape, OpenStage and HiPath are registered trademarks of Siemens Enterprise Communications GmbH & Co. KG. All other brand, product and service names are trademarks or registered trademarks of their respective owners.