

Engenius EP801

Instructions on how to increase the range of the cordless handsets

1. With the handset in idle (standby) mode, press the keypad in sequence as follows: **[MENU] [*] [*] [*] [*] [#]**
2. At the service 11 screen, scroll down twice until you see **PWLV control**. Select this.
3. Select handset, then scroll down to further select **Auto (Non-EU)**. When beep is heard, configuration is saved.
4. Next, scroll down and select your base. Your handset will now try to connect to the base station.
5. When prompted, scroll down to select **Auto (Non-EU)**. A beep should be heard from the base station to signify that configuration has been saved.
6. Press **END** to exit from the service menu.