

Panasonic[®]

Operating Instructions

Digital Cordless Phone

Model No. **KX-TG8051E**

Digital Cordless Answering System

Model No. **KX-TG8061E**

KX-TG8062E

KX-TG8063E



Model shown is KX-TG8051.

Before initial use, see "Getting Started" on page 11.

Thank you for purchasing a Panasonic product.

Please read these operating instructions before using the unit and save them for future reference.

This unit is compatible with Caller ID. You must subscribe to the appropriate service offered by your service provider/telephone company.

**Please access our online customer survey:
<http://panasonic.net/pcc/tel/q>**

Table of Contents

Introduction		Intercom/Locator	
Model composition	3	Intercom	40
Accessory information	4	Handset locator	40
General information	6	Transferring calls, conference calls	40
Important Information		Useful Information	
For your safety	7	Character entry	41
Important safety instructions	8	Error messages	43
For best performance	8	Troubleshooting	44
Other information	9	Belt clip	48
Specifications	10	Wall mounting	48
Getting Started		Conditions of guarantee	49
Setting up	11	Index	
Note when setting up	12	Index	50
Controls	13		
Display	14		
Screen saver mode	16		
Turning the power on/off	16		
Initial settings	16		
One touch eco mode	17		
Display mode	17		
Making/Answering Calls			
Making calls	18		
Answering calls	18		
Useful features during a call	19		
Key lock	20		
Phonebook			
Handset phonebook	21		
Copying phonebook entries	22		
Programming			
Programmable settings	24		
Special programming	28		
Registering a unit	30		
Caller ID Service			
Using Caller ID service	32		
Caller list	32		
Answering System			
Answering system	34		
Turning the answering system on/off	34		
Greeting message	35		
Listening to messages using the base unit	35		
Listening to messages using the handset	36		
Remote operation	37		
Answering system settings	38		
Voice Mail Service			
Voice mail service	39		

Introduction

Model composition

Series	Model No.	Base unit	Handset	
		Part No.	Part No.	Quantity
KX-TG8051 series	KX-TG8051	KX-TG8051	KX-TGA805	1
KX-TG8061 series	KX-TG8061	KX-TG8061	KX-TGA805	1
	KX-TG8062	KX-TG8061	KX-TGA805	2
	KX-TG8063	KX-TG8061	KX-TGA805	3

- The suffix (E) in the following model numbers will be omitted in these instructions:
KX-TG8051E/KX-TG8061E/KX-TG8062E/KX-TG8063E

Feature differences

Series	Answering system	Intercom
		Between handsets
KX-TG8051 series	–	●*1
KX-TG8061 series	●	●*1

*1 Single handset models: Intercom calls can be made between handsets by purchasing and registering one or more optional handsets (page 5).

Introduction

Accessory information

Supplied accessories

No.	Accessory item/Part number	Quantity		
		KX-TG8051 KX-TG8061	KX-TG8062	KX-TG8063
①	AC adaptor/PNLV226EZ	1	2	3
②	Telephone line cord/ PNJA1037Z (for U.K.)	1	1	1
③	Rechargeable batteries*1	2	4	6
④	Handset cover*2	1	2	3
⑤	Belt clip/PNKE1105Z1	1	2	3
⑥	Charger/PNLC1019ZB	—	1	2

*1 See page 4 for replacement battery information.

*2 The handset cover comes attached to the handset.



Additional/replacement accessories

Please contact your nearest Panasonic dealer for sales information.

Accessory item	Model number
Rechargeable batteries	HHR-4NGE (P03P) or HHR-4MRE (P03I)*1
	Battery type: – Nickel metal hydride (Ni-MH) – 2 x AAA (R03) size for each handset
Headset	KX-TCA94EX, RP-TCA400, RP-TCA430
DECT repeater	KX-A405

*1 Replacement batteries may have a different capacity from that of the supplied batteries.

Introduction

Expanding your phone system

You can expand your phone system by registering optional handsets (6 max.) to a single base unit.

- Optional handsets may be a different colour from that of the supplied handsets.

Handset (optional): KX-TGA806E



Sales and support information

Customer Communication Centre

- For customers within the U.K.: 0844 844 3898
- For customers within Ireland: 01289 8333
- Visit our website for product information: www.panasonic.co.uk
- E-mail: customer.care@panasonic.co.uk

Direct Sales at Panasonic U.K.

- Order accessory and consumable items for your product with ease and confidence by phoning our Customer Communication Centre Monday - Thursday 9:00am - 5:30pm, Friday 9:30am - 5:30pm (Excluding public holidays).
- Or go on line through our Internet Accessory ordering application at www.pas-europe.com
- Most major credit and debit cards accepted.
- All enquiries transactions and distribution facilities are provided directly by Panasonic U.K. Ltd.
- It couldn't be simpler!
- Also available through our Internet is direct shopping for a wide range of finished products, take a browse on our website for further details.



Introduction

General information

- This equipment is designed for use on the U.K. and Ireland analogue telephone network.
- In the event of problems, you should contact your equipment supplier in the first instance.

Declaration of Conformity:

- Panasonic System Networks Co., Ltd. declares that this equipment is in compliance with the essential requirements and other relevant provisions of Radio & Telecommunications Terminal Equipment (R&TTE) Directive 1999/5/EC.

Declarations of Conformity for the relevant Panasonic products described in this manual are available for download by visiting:

<http://www.doc.panasonic.de>

Contact to Authorised Representative:

Panasonic Testing Centre
Panasonic Marketing Europe GmbH
Winsbergring 15, 22525 Hamburg, Germany

For your future reference

We recommend keeping a record of the following information to assist with any repair under warranty.

 
Serial No.

Date of purchase

(found on the bottom of the base unit)

Name and address of dealer

Attach your purchase receipt here.



Important Information

For your safety

To prevent severe injury and loss of life/property, read this section carefully before using the product to ensure proper and safe operation of your product.

WARNING

Power connection

- Use only the power source marked on the product.
- Do not overload power outlets and extension cords. This can result in the risk of fire or electric shock.
- Completely insert the AC adaptor/power plug into the power outlet. Failure to do so may cause electric shock and/or excessive heat resulting in a fire.
- Regularly remove any dust, etc. from the AC adaptor/power plug by pulling it from the power outlet, then wiping with a dry cloth. Accumulated dust may cause an insulation defect from moisture, etc. resulting in a fire.
- Unplug the product from power outlets if it emits smoke, an abnormal smell, or makes an unusual noise. These conditions can cause fire or electric shock. Confirm that smoke has stopped emitting and contact an authorised service centre.
- Unplug from power outlets and never touch the inside of the product if its casing has been broken open.
- Never touch the plug with wet hands. Danger of electric shock exists.

Installation

- To prevent the risk of fire or electrical shock, do not expose the product to rain or any type of moisture.
- Do not place or use this product near automatically controlled devices such as automatic doors and fire alarms. Radio waves emitted from this product may cause such devices to malfunction resulting in an accident.

- Do not allow the AC adaptor or telephone line cord to be excessively pulled, bent or placed under heavy objects.

Operating safeguards

- Unplug the product from power outlets before cleaning. Do not use liquid or aerosol cleaners.
- Do not disassemble the product.
- Do not spill liquids (detergents, cleansers, etc.) onto the telephone line cord plug, or allow it to become wet at all. This may cause a fire. If the telephone line cord plug becomes wet, immediately pull it from the telephone wall jack, and do not use.
- The use of excessive sound volume through earphones, headphones, or headsets may cause hearing loss.
- Do not place a handset on the base unit with the headset jack cover opened.

Medical

- Consult the manufacturer of any personal medical devices, such as pacemakers or hearing aids, to determine if they are adequately shielded from external RF (radio frequency) energy. (The product operates in the frequency range of 1.88 GHz to 1.90 GHz, and the RF transmission power is 250 mW (max.)
- Do not use the product in health care facilities if any regulations posted in the area instruct you not to do so. Hospitals or health care facilities may be using equipment that could be sensitive to external RF energy.

CAUTION

Installation and location

- Never install telephone wiring during an electrical storm.
- Never install telephone line jacks in wet locations unless the jack is specifically designed for wet locations.
- Never touch uninsulated telephone wires or terminals unless the telephone line has been disconnected at the network interface.

Important Information

- Use caution when installing or modifying telephone lines.
- The AC adaptor is used as the main disconnect device. Ensure that the AC outlet is installed near the product and is easily accessible.
- This product is unable to make calls when:
 - the handset batteries need recharging or have failed.
 - there is a power failure.
 - the key lock feature is turned on.

Battery

- We recommend using the batteries noted on page 4. **USE ONLY rechargeable Ni-MH batteries AAA (R03) size.**
- Do not mix old and new batteries.
- Do not open or mutilate the batteries. Released electrolyte from the batteries is corrosive and may cause burns or injury to the eyes or skin. The electrolyte is toxic and may be harmful if swallowed.
- Exercise care when handling the batteries. Do not allow conductive materials such as rings, bracelets, or keys to touch the batteries, otherwise a short circuit may cause the batteries and/or the conductive material to overheat and cause burns.
- Charge the batteries provided with or identified for use with this product only, in accordance with the instructions and limitations specified in this manual.
- Only use a compatible base unit (or charger) to charge the batteries. Do not tamper with the base unit (or charger). Failure to follow these instructions may cause the batteries to swell or explode.

Important safety instructions

When using your product, basic safety precautions should always be followed to reduce the risk of fire, electric shock, and injury to persons, including the following:

1. Do not use this product near water for example, near a bathtub, washbowl,

2. kitchen sink, or laundry tub, in a wet basement or near a swimming pool.
2. Avoid using a telephone (other than a cordless type) during an electrical storm. There may be a remote risk of electric shock from lightning.
3. Do not use the telephone to report a gas leak in the vicinity of the leak.
4. Use only the power cord and batteries indicated in this manual. Do not dispose of batteries in a fire. They may explode. Check with local codes for possible special disposal instructions.

SAVE THESE INSTRUCTIONS

For best performance

Base unit location/avoiding noise

The base unit and other compatible Panasonic units use radio waves to communicate with each other.

- For maximum coverage and noise-free communications, place your base unit:
 - at a convenient, high, and central location with no obstructions between the handset and base unit in an indoor environment.
 - away from electronic appliances such as TVs, radios, personal computers, wireless devices, or other phones.
 - facing away from radio frequency transmitters, such as external antennas of mobile phone cell stations. (Avoid putting the base unit on a bay window or near a window.)
- Coverage and voice quality depends on the local environmental conditions.
- If the reception for a base unit location is not satisfactory, move the base unit to another location for better reception.

Environment

- Keep the product away from electrical noise generating devices, such as fluorescent lamps and motors.

Important Information

- The product should be kept free from excessive smoke, dust, high temperature, and vibration.
- The product should not be exposed to direct sunlight.
- Do not place heavy objects on top of the product.
- When you leave the product unused for a long period of time, unplug the product from the power outlet.
- The product should be kept away from heat sources such as radiators, cookers, etc. It should not be placed in rooms where the temperature is less than 0 °C or greater than 40 °C. Damp basements should also be avoided.
- The maximum calling distance may be shortened when the product is used in the following places: Near obstacles such as hills, tunnels, underground, near metal objects such as wire fences, etc.
- Operating the product near electrical appliances may cause interference. Move away from the electrical appliances.

Routine care


- **Wipe the outer surface of the product with a soft moist cloth.**
- Do not use benzine, thinner, or any abrasive powder.

Other information

Notice for product disposal, transfer, or return

- This product can store your private/confidential information. To protect your privacy/confidentiality, we recommend that you erase information such as phonebook or caller list entries from the memory before you dispose of, transfer, or return the product.

Information for Users on Collection and Disposal of Old Equipment and used Batteries

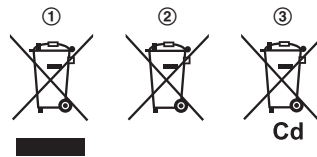

These symbols (①, ②, ③) on the products, packaging, and/or accompanying documents mean that used electrical and electronic products and batteries should not be mixed with general household waste.

For proper treatment, recovery and recycling of old products and used batteries, please take them to applicable collection points, in accordance with your national legislation and the Directives 2002/96/EC and 2006/66/EC. By disposing of these products and batteries correctly, you will help to save valuable resources and prevent any potential negative effects on human health and the environment which could otherwise arise from inappropriate waste handling.

For more information about collection and recycling of old products and batteries, please contact your local municipality, your waste disposal service or the point of sale where you purchased the items.

Penalties may be applicable for incorrect disposal of this waste, in accordance with national legislation.

For business users in the European Union

If you wish to discard electrical and electronic equipment, please contact your dealer or supplier for further information.

Information on Disposal in other Countries outside the European Union

These symbols (①, ②, ③) are only valid in the European Union. If you wish to discard these items, please contact your local authorities or

Important Information

dealer and ask for the correct method of disposal.

Note for the battery symbol

This symbol (②) might be used in combination with a chemical symbol (③). In this case it complies with the requirement set by the Directive for the chemical involved.

Specifications

- **Standard:**
DECT (Digital Enhanced Cordless Telecommunications),
GAP (Generic Access Profile)
- **Frequency range:**
1.88 GHz to 1.90 GHz
- **RF transmission power:**
Approx. 10 mW (average power per channel)
- **Power source:**
220–240 V AC, 50/60 Hz
- **Power consumption:**
Base unit^{*1}:
Standby: Approx. 0.4 W
Maximum: Approx. 2.3 W
Base unit^{*2}:
Standby: Approx. 0.5 W
Maximum: Approx. 2.4 W
Charger:
Standby: Approx. 0.1 W
Maximum: Approx. 1.8 W
- **Operating conditions:**
0 °C–40 °C, 20 %–80 % relative air humidity (dry)

*1 KX-TG8051

*2 KX-TG8061/KX-TG8062/KX-TG8063

Note:

- Design and specifications are subject to change without notice.
- The illustrations in these instructions may vary slightly from the actual product.


Getting Started

Setting up

Connections


- Use only the supplied Panasonic AC adaptor PNLV226E.
- When mounting the unit on a wall, see page 48.

■ **Base unit (KX-TG8051)**

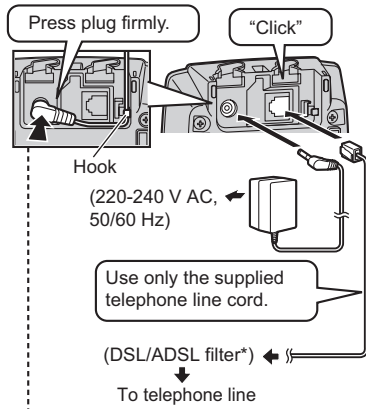


*DSL/ADSL filter (not supplied) is required if you have DSL/ADSL service.

■ **Base unit (KX-TG8061/KX-TG8062/ KX-TG8063)**

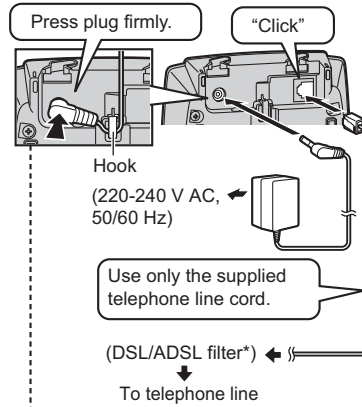

*DSL/ADSL filter (not supplied) is required if you have DSL/ADSL service.


■ **Charger**

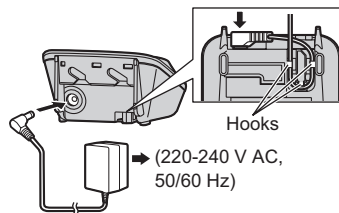

Getting Started

Battery installation

- USE ONLY Ni-MH batteries AAA (R03) size.
- Do NOT use Alkaline/Manganese/Ni-Cd batteries.
- Confirm correct polarities (+, -).

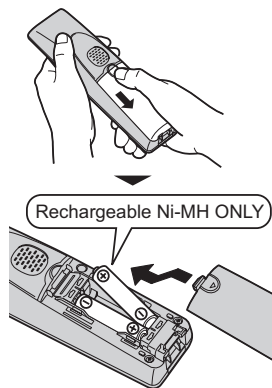


- When the date and time setting is displayed, see page 16.

Battery charging

Charge for about 7 hours.

- When the batteries are fully charged, the charge indicator goes off and "Fully charged" is displayed.

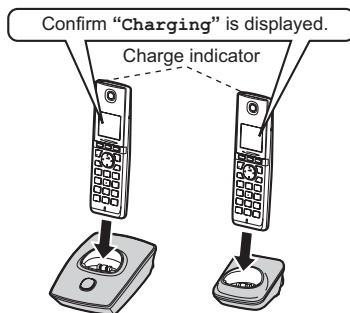

Note when setting up

Note for connections

- The AC adaptor must remain connected at all times. (It is normal for the adaptor to feel warm during use.)
- The AC adaptor should be connected to a vertically oriented or floor-mounted AC outlet. Do not connect the AC adaptor to a ceiling-mounted AC outlet, as the weight of the adaptor may cause it to become disconnected.

During a power failure

The unit will not work during a power failure. We recommend connecting a corded-type telephone (without AC adaptor) to the same telephone line or to the same telephone line jack using a T-adaptor. Your Panasonic sales shop can offer you more information about connection possibilities.

Note for battery installation

- Use the supplied rechargeable batteries. For replacement, we recommend using the Panasonic rechargeable batteries noted on page 4, 8.
- Wipe the battery ends (+, -) with a dry cloth.
- Avoid touching the battery ends (+, -) or the unit contacts.

Note for battery charging

- It is normal for the handset to feel warm during charging.
- Clean the charge contacts of the handset, base unit, and charger with a soft and dry cloth once a month. Clean more often if the unit is exposed to grease, dust, or high humidity.

Getting Started

Battery level

Icon	Battery level
	High
	Medium
	Low
	Needs charging.

Panasonic Ni-MH battery performance (supplied batteries)

Operation	Operating time
In continuous use	13 hours max.
Not in use (standby)	250 hours max.


Note:

- It is normal for batteries not to reach full capacity at the initial charge. Maximum battery performance is reached after a few complete cycles of charge/discharge (use).
- Actual battery performance depends on usage and ambient environment.
- Even after the batteries are fully charged, the handset can be left on the base unit or charger without any ill effect on the batteries.
- The battery level may not be displayed correctly after you replace the batteries. In this case, place the handset on the base unit or charger and let it charge for at least 7 hours.

Controls


Base unit

■ KX-TG8051

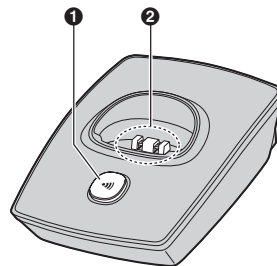

- ❶ **[📶]** (Locator)
- ❷ **Charge contacts**


■ KX-TG8061/KX-TG8062/KX-TG8063

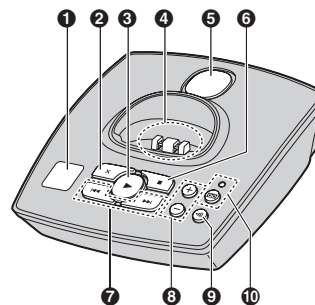

- ❶ **Message counter**
- ❷ **[X]** (Erase)
- ❸ **[▶]** (Play)
Message indicator
- ❹ **Charge contacts**
- ❺ **Speaker**
- ❻ **[■]** (Stop)
- ❼ **[⏮]/[⏭]** (Repeat/Skip)
- ❽ **[+]/[-]** (Volume up/down)
- ❾ **[📶]** (Locator)
- ❿ **[📞]** (Answer on)
Answer on indicator

Getting Started

Handset

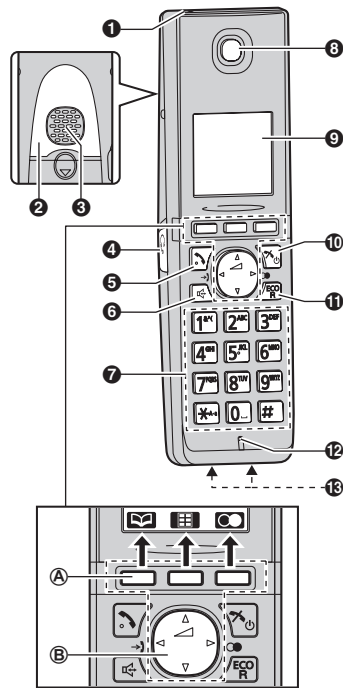

- ❶ **Charge indicator**
Ringer indicator
- ❷ **Secure grip**
 - Secure grip offers support when you cradle the handset between your shoulder and ear.
- ❸ **Speaker**
- ❹ **Headset jack**
- ❺ **[] (Talk)**
- ❻ **[] (Speakerphone)**
- ❼ **Dial keypad**
- ❽ **Receiver**
- ❾ **Display**
- ❿ **[] (Off/Power)**

- ⓫ **[ECO/R]**
ECO: Eco mode shortcut key
R: Recall/Flash

- ⓬ **Microphone**
- ⓭ **Charge contacts**

■ Control type

Ⓐ Soft keys

The handset features 3 soft keys. By pressing a soft key, you can select the feature shown directly above it on the display.

Ⓑ Navigator key













- [, , [, or []: Scroll through various lists and items.
- (Volume: [, or []): Adjust the receiver or speaker volume while talking.
- [] (): Caller list: View the caller list.
- [] (): Redial: View the redial list.
- As all multiple items cannot be displayed on screen at the same time, you can quickly search the desired item to move screens by pressing [] or [, instead of scrolling down or up line by line (page 17).

Display

Handset display items

Item	Meaning
	Range status: The more bars visible, the closer the handset is to the base unit.
	Out of base unit range
	Paging, intercom mode
	Speakerphone is on. (page 18)
	The line is in use. <ul style="list-style-type: none"> • When flashing slowly: The call is put on hold. • When flashing rapidly: An incoming call is now being received.
	Missed call* ¹ (page 32)

Getting Started

Item	Meaning
	The base unit transmission power is set to "Low". (page 17)
	The key backlight is off. (page 26)
	<ul style="list-style-type: none"> When displayed next to the battery icon: Answering system is on.² (page 34) When displayed with a number: New messages have been recorded.² (page 36)
	Answering system answers calls with a greeting message and caller messages are not recorded. ² ("Selecting "Greeting Only"", page 38)
	Battery level
	Alarm is on. (page 28)
	Equalizer is set. (page 19)
	Privacy mode is on. (page 27)
	Ringer volume is off. (page 26)
	Night mode is on. (page 28)
	Blocked call ¹ (page 29, 33)
	New voice mail message received. ³ (page 39)
Line in use	Someone is using the line.
IN USE	Answering system is being used by another handset or the base unit. ²







 
 









*1 Caller ID subscribers only
 *2 KX-TG8061/KX-TG8062/KX-TG8063
 *3 Voice mail subscribers only

Base unit display items

■ KX-TG8061/KX-TG8062/KX-TG8063

Item	Meaning
--	Answering system answers calls with a greeting message and caller messages are not recorded. ("Selecting "Greeting Only"", page 38)

Handset soft key icons

Icon	Action
	Returns to the previous screen or outside call.
	Displays the menu.
	Accepts the current selection.
	Displays a previously dialed phone number.
	Makes a call. (page 18)
	Temporarily turns off the ringer for incoming calls. (page 18)
	Sets 24-hour or 12-hour clock format. (page 17)
	Switches the wallpaper to display with or without date and time. (page 27)
	Places a call on hold.
	Opens the phonebook.
	Allows you to edit phone numbers. (page 30, 33)
	Adds new entry. (page 21, 29)
	Displays the phonebook search menu.
	Turns the key lock feature off. (page 20)
	Selects a character entry mode.
	Selects categories or handsets. (page 29, 30)
	Plays a message. ¹

Getting Started

Icon	Action
	Stops recording or playback.*1
	Stores phone numbers. (page 29, 33).
	Inserts a dialling pause.
	Erases the selected item or returns to the outside call.
	Switches display mode between single item and multiple items. (page 17)
	Allows you to make an intercom call. (page 40)
	Erases a number/character.
	Puts the call on mute.

*1 KX-TG8061/KX-TG8062/KX-TG8063

Handset main menu icons

The following icons are shown when you press down on the middle soft key in standby mode.

Icon	Feature
	Caller List
	Answer System*1
	Time Settings
	Intercom
	Ringer Setup
	Caller Barred*2
	Initial Setup

*1 KX-TG8061/KX-TG8062/KX-TG8063

*2 KX-TG8051

Screen saver mode

The backlight goes dark when on a call or turns off completely after 1 minute of inactivity if the handset is not on the base unit or charger.

Activate the handset display again by:

- pressing [**←**] or [**→**] when on a call.
- pressing [**⏻**] at all other times.

Turning the power on/off

Power on

Press [**⏻**] for about 1 second.

Power off

Press [**⏻**] for about 2 seconds.

Initial settings

Direct command code:

Programmable settings can be accessed by pressing **☐** (middle soft key), **#** and then the corresponding code on the dial keypad (page 24).

Example: Press **☐** (middle soft key) **#1101**.

Symbol meaning:

Example: [**↕**]: “OFF”

Press [**▼**] or [**▲**] to select the words in quotations.

Display language

- 1 **☐** (middle soft key) **#1110**
- 2 [**↕**]: Select your desired language. → **OK**
- 3 [**⏻**]

Date and time

Important:

- When you install the batteries for the first time, the handset may prompt you to set date and time. First press **OK**, then proceed to step 2.

- 1 **☐** (middle soft key) **#1101**
- 2 Enter the current date, month, and year. → **OK**
Example: 15 July, 2011
1 5 0 7 1 1

Getting Started

- You can select the date format by pressing **[#]**:
 - dd/mm/yy (date/month/year)
 - yy/mm/dd
- 3** Enter the current hour and minute.
Example: 9:30
[0] [9] [3] [0]
 - You can select 24-hour or 12-hour clock format (“**AM**” or “**PM**”) by pressing **[12/24]**.
- 4** **[OK]** → **[*] [0]**

Note:

- The date and time may be incorrect after a power failure. In this case, set the date and time again.

One touch eco mode

The **[ECO/R]** button on the handset enables you to activate the eco function with one touch. By activating eco mode, your unit can reduce the base unit transmission power by up to 90% in standby mode.

You can turn on/off one touch eco mode by just pressing **[ECO/R]**. The default setting is “**Normal**”.

- When the one touch eco mode is on: “**Low**” is temporarily displayed and **[ECO]** is shown on the handset display instead of **[Y]**.
- When the one touch eco mode is off: “**Normal**” is temporarily displayed and **[ECO]** goes off from the handset display.

Note:

- When there is another cordless phone nearby and it is in use, the base unit transmission power may not be reduced.
- Activating one touch eco mode reduces the range of the base unit in standby mode.
- If you set the repeater mode to “on” (page 31):
 - One touch eco mode is cancelled.
 - “**Eco Setup**” is not shown in the display menu (page 26).

Display mode

You can select to display either a single item or multiple items on one screen at a time for the following features:

- handset main menu icons in function menu
- menu list, recorded message list^{*1}, phonebook list, caller list, and redial list

*1 KX-TG8061/KX-TG8062/KX-TG8063

Select the desired setting:

- “**Multi Items**”: Multiple entries/all menu icons are shown on one screen at a time.
- “**Single Item**”: An entry/a menu icon is shown on one screen in large characters at a time.

The default setting is “**Multi Items**”.

Using soft key (Temporarily switching the display mode)

You can temporarily switch the display mode by pressing **[*] [0]** shown when viewing the lists or selecting menu icons.

Programming the display mode beforehand

- 1** **[*] [0]** (middle soft key) **[#] [1] [9] [2]**
- 2** **[↑]**: Select the desired setting. → **[OK]** → **[*] [0]**

Note:

- When in multiple items display mode, you can move screens by pressing **[▶]** or **[◀]**, without scrolling down or up through the list:
 - Press **[▶]** to go to the next screen.
 - Press **[◀]** to return to the previous screen.
- When in multiple items display mode, you can switch the screen to confirm the detailed information by pressing **[*] [0]**.

Making/Answering Calls

Making calls

- 1 Lift the handset and dial the phone number.
 - To correct a digit, press **C**.
- 2 Press **[↶]** or **[↷]**.
- 3 When you finish talking, press **[⏏]** or place the handset on the base unit or charger.

Using the speakerphone

- 1 Dial the phone number and press **[☎]**.
 - Speak alternately with the other party.
- 2 When you finish talking, press **[⏏]**.

Note:

- For best performance, use the speakerphone in a quiet environment.
- To switch back to the receiver, press **[☎]/[↶]**.

Adjusting the receiver or speaker volume

Press **[▲]** or **[▼]** repeatedly while talking.

Making a call using the redial list

The last 10 phone numbers dialled are stored in the redial list (each 24 digits max.).

- 1 **[☎]** (right soft key) or **[▶]** (**☎**)
- 2 **[↕]**: Select the desired phone number.
- 3 **[↶]**

Erasing a number in the redial list

- 1 **[☎]** (right soft key) or **[▶]** (**☎**)
- 2 **[↕]**: Select the desired phone number.
→ **[X]**
- 3 **[↕]**: "Yes" → **[OK]** → **[⏏]**

Pause (for PBX/long distance service users)

A pause is sometimes required when making calls using a PBX or long distance service. When storing a calling card access number and/or PIN in the phonebook, a pause is also needed (page 22).

Example: If you need to dial the line access number "0" when making outside calls with a PBX:

- 1 **[0] → [P]**
- 2 Dial the phone number. → **[↶]**

Note:

- A 3 second pause is inserted each time **[P]** is pressed. Repeat as needed to create longer pauses.

Answering calls

When a call is being received, the ringer indicator flashes rapidly.

- 1 Lift the handset and press **[↶]** or **[☎]** when the unit rings.
 - You can also answer the call by pressing any dial key from **[0]** to **[9]**, **[*]**, or **[#]**. (**Any key answer feature**)
- 2 When you finish talking, press **[⏏]** or place the handset on the base unit or charger.

Auto talk

You can answer calls simply by lifting the handset off the base unit or charger. You do not need to press **[↶]**. To turn this feature on, see page 27.

Adjusting the handset ringer volume

- **While the handset is ringing for an incoming call:**
Press **[▲]** or **[▼]** repeatedly to select the desired volume.
- **Programming the volume beforehand:**
 - 1 **[≡]** (middle soft key) **[#][1][6][0]**
 - 2 **[↕]**: Select the desired volume.
 - 3 **[OK]** → **[⏏]**

Temporary handset ringer off

While the handset is ringing for a call, you can turn the ringer off temporarily by pressing **[Z]**.

Making/Answering Calls

Useful features during a call

Hold

This feature allows you to put an outside call on hold.

- 1 Press **[H]** during an outside call.
- 2 **[*]: "Hold" → OK**
- 3 To release hold, press **[R]**.
 - Another handset user can take the call by pressing **[R]**.

Note:

- If a call is kept on hold for more than 9 minutes, an alarm tone starts to sound and the ringer indicator flashes rapidly. After 1 additional minute on hold, the call is disconnected.
- If another phone is connected to the same line, you can also take the call by lifting its handset.

Mute

While mute is turned on, you can hear the other party, but the other party cannot hear you.

- 1 Press **[M]** during conversation.
 - **[M]** flashes.
- 2 To return to the conversation, press **[M]** again.

Recall/flash

[ECO/R] allows you to use the special features of your host PBX such as transferring an extension call, or accessing optional telephone services.

Note:

- To change the recall/flash time, see page 27.

For call waiting or Call Waiting Caller ID service users

To use call waiting or Call Waiting Caller ID, you must first subscribe with your service provider/telephone company.

This feature allows you to receive calls while you are already talking on the phone. If you receive a call while on the phone, you will hear a call waiting tone.

If you subscribe to both Caller ID and Call Waiting with Caller ID services, the 2nd caller's information is displayed after you hear the call waiting tone on the handset.

- 1 Press **[ECO/R]** to answer the 2nd call.
- 2 To switch between calls, press **[ECO/R]**.

Note:

- Please contact your service provider/telephone company for details and availability of this service in your area.

Handset equalizer

This feature clarifies the voice of the person you are talking to, producing a more natural-sounding voice that is easier to hear and understand.

- 1 Press **[E]** while talking.
- 2 **[*]: "Equalizer" → OK**
- 3 **[*]:** Select the desired setting.
- 4 Press **OK** to exit.

Note:

- When this feature is turned on, **E** is displayed while talking.
- Depending on the condition and quality of your telephone line, this feature may emphasise existing line noise. If it becomes difficult to hear, turn this feature off.
- This feature is not available while using the speakerphone.

Call share

You can join an existing outside call. To join the conversation, press **[R]** when the other handset is on an outside call.


Note:



- To prevent other users from joining your conversations with outside callers, turn the privacy mode on (page 27).

Making/Answering Calls

Key lock

The handset can be locked so that no calls or settings can be made. Incoming calls can be answered, but all other functions are disabled while key lock is on.

To turn key lock on, press  for about 3 seconds.

-  is displayed.
- To turn key lock off, press  for about 3 seconds.

Note:



- Calls to emergency numbers cannot be made until key lock is turned off.

Phonebook

Handset phonebook

The phonebook allows you to make calls without having to dial manually. You can add 200 names and phone numbers, assign each phonebook entry to the desired category.



Adding entries

- 1  (left soft key) → 
- 2 Enter the party's name (16 characters max.). → **OK**
 - You can change the character entry mode by pressing **1/A/2** (page 41).
- 3 Enter the party's phone number (24 digits max.). → **OK**
- 4 **[↕]**: Select the desired category. → **OK** 2 times
 - To add other entries, repeat from step 2.
- 5 **[*0]**

Categories


Categories can help you find entries in the phonebook quickly and easily. When adding an entry to the phonebook, you can assign it to one of 9 categories. You can change the names of categories assigned for phonebook entries ("Friends", "Family", etc.) and then search for phonebook entries by category. The category ringer tone feature is available for Caller ID subscribers (page 32).

Changing category names



- 1  (left soft key) → 
- 2 **[↕]**: "Category" → **OK**
- 3 **[↕]**: Select the desired category. → **OK**
- 4 **[↕]**: "Category Name" → **OK**
- 5 Edit the name (10 characters max.; page 41). → **OK** → **[*0]**

Finding and calling from a phonebook entry



Scrolling through all entries

- 1  (left soft key)
- 2 **[↕]**: Select the desired entry.
 - You can scroll through the phonebook entry by pressing and holding **[v]** or **[^]**.
- 3 **[↶]**

Searching by first character

- 1  (left soft key)
 - Change the character entry mode if necessary:
 -  → **[↕]**: "Character Set" → **OK** → **[↕]**: Select the character entry mode. → **OK**
- 2 Press the dial key (**[0]** to **[9]**, or **[#]**) which contains the character you are searching for (page 41).
 - Press the same dial key repeatedly to display the first entry corresponding to each character located on that dial key.
 - If there is no entry corresponding to the character you selected, the next entry is displayed.
- 3 **[↕]**: Scroll through the phonebook if necessary.
- 4 **[↶]**

Searching by category

- 1  (left soft key) → 
- 2 **[↕]**: "Category" → **OK**
- 3 **[↕]**: Select the desired category. → **OK**
 - If you select "All", the unit ends the category search.
- 4 **[↕]**: Scroll through the phonebook if necessary.
- 5 **[↶]**

Phonebook

Editing entries

- 1 Find the desired entry (page 21). → **☰**
- 2 **[↕]**: "Edit" → **OK**
- 3 Edit the name if necessary (16 characters max.; page 41). → **OK**
- 4 Edit the phone number if necessary (24 digits max.). → **OK**
- 5 **[↕]**: Select the desired category. → **OK**
2 times → **[↵]**

Erasing entries

Erasing an entry

- 1 Find the desired entry (page 21).
- 2 **[X]** → **[↕]**: "Yes" → **OK** → **[↵]**

Erasing all entries

- 1 **[☰]** (left soft key) → **☰**
- 2 **[↕]**: "Erase All" → **OK**
- 3 **[↕]**: "Yes" → **OK**
- 4 **[↕]**: "Yes" → **OK** → **[↵]**

Speed dial

Assigning an entry in the phonebook to a speed dial key

Dial keys **[1]** to **[9]** can each be used as a speed dial key, allowing you to dial a number from the phonebook by simply pressing a dial key.

- 1 Find the desired entry (page 21). → **☰**
- 2 **[↕]**: "Speed Dial" → **OK**
- 3 **[↕]**: Select the desired dial key number. → **OK**
 - Where a dial key is already being used for speed dialling, "✓" is displayed next to the dial key number. If you select this dial key, you can overwrite the previous assignment.
- 4 **OK** → **[↵]**

Making a call using a speed dial key

- 1 Press and hold the desired speed dial key (**[1]** to **[9]**).
 - You can view other speed dial assignments by pressing **[▼]** or **[▲]**.
- 2 **[↵]**

Canceling a speed dial assignment

- 1 Press and hold the desired speed dial key (**[1]** to **[9]**). → **[X]**
- 2 **[↕]**: "Yes" → **OK** → **[↵]**

Chain dial

This feature allows you to dial phone numbers in the phonebook while you are on a call. This feature can be used, for example, to dial a calling card access number or bank account PIN that you have stored in the phonebook, without having to dial manually.

- 1 During an outside call, press **☰**.
- 2 **[↕]**: "Phonebook" → **OK**
- 3 **[↕]**: Select the desired entry.
- 4 Press **[↵]** to dial the number.

Note:

- When storing a calling card access number and your PIN in the phonebook as one phonebook entry, press **[P]** to add pauses after the number and PIN as necessary (page 18).

Copying phonebook entries

You can copy phonebook entries between 2 handsets.*1

*1 Panasonic compatible handset

Note:

- Category settings for phonebook entries are not copied.

Copying an entry

- 1 Find the desired entry (page 21). → **☰**

Phonebook

- 2 [↕]: "Copy" → **OK**
- 3 [↕]: Select the handset you want to send the phonebook entry to. → **OK**
 - When an entry has been copied, "Completed" is displayed.
 - To continue copying another entry:
[↕]: "Yes" → **OK** → [↕]: Select the desired entry. → **OK**
- 4 [**⏏**]

Copying all entries


- 1 [**☰**] (left soft key) → [**☰**]
- 2 [↕]: "Copy All" → **OK**
- 3 [↕]: Select the handset you want to send the phonebook entry to. → **OK**
 - When all entries have been copied, "Completed" is displayed.
- 4 [**⏏**]

Programming



Programmable settings

You can customise the unit by programming the following features using the handset. To access the features, there are 2 methods.

 
■ Scrolling through the display menus

- 1  (middle soft key)
- 2 Press [**▼**], [**▲**], [**▶**], or [**◀**] to select the desired main menu. → **OK**
- 3 Press [**▼**] or [**▲**] to select the desired item from the next sub-menus. → **OK**
- 4 Press [**▼**] or [**▲**] to select the desired setting. → **OK**
 - This step may vary depending on the feature being programmed.
 - To exit the operation, press [**⏏**].


■ Using the direct command code


- 1  (middle soft key) → Enter the desired code.
Example: Press  (middle soft key) **#101**.
- 2 Select the desired setting. → **OK**
 - This step may vary depending on the feature being programmed.
 - To exit the operation, press [**⏏**].


Note:


- In the following table, < > indicates the default settings.
- In the following table,  indicates the reference page number.
- Display menu order and sub-menu may vary depending on your model.

 Display the menu tree and direct command code table

Main menu:  "Caller List"

Operation	Code	
Viewing the caller list.	#213	32

Main menu:  "Answer System"^{*1}

Sub-menu 1	Sub-menu 2	Settings	Code	
Message List	–	–	#329	36
Play New Msg. (Msg.: message)	–	–	#323	36
Play All Msg.	–	–	#324	36
Erase All Msg. ^{*2}	–	–	#325	37
Greeting	Start REC ^{*2} (Record greeting)	–	#302	35
	Play Greeting	–	#303	35
	Default ^{*2} (Reset to pre-recorded greeting)	–	#304	35

Programming

Sub-menu 1	Sub-menu 2	Settings	Code	
Settings	Number of Rings ^{*2}	2-9: 2-9 Rings 5: <5 Rings> 0: Auto	#211	38
	Recording Time ^{*2}	1: 1 Minute 3: <3 Minutes> 0: Greeting Only ^{*3}	#305	38
	Remote Code ^{*2}	-	#306	37
	Call Screening	1: <On> 0: Off	#310	34
Answer On ^{*2}	-	-	#327	34
Answer Off ^{*2}	-	-	#328	34

Main menu: **☉** "Time Settings"

Sub-menu 1	Sub-menu 2	Settings	Code	
Set Date/Time ^{*2}	-	-	#101	16
Alarm	-	1: Once 2: Daily 0: <Off>	#720	28
Time Adjustment ^{*2, *4}	-	1: <Caller ID> 0: Manual	#226	-

Main menu: **☺** "Intercom"

Operation	Code	
Paging the desired unit.	#274	40

Main menu: **♪** "Ringer Setup"

Sub-menu 1	Sub-menu 2	Settings	Code	
Ringer Volume	Handset ^{*5}	0-6: Off-6 <6>	#160	18
	Base Unit ^{*1, *2}	0-6: Off-6 <3>	#*160	-
Ringtone ^{*6, *7} (Handset)	-	<Ringtone 1>	#161	-
Night Mode	On/Off	1: On 0: <Off>	#238	28
	Start/End	<23:00/06:00>	#237	28
	Ring Delay	1: 30 sec. 2: <60 sec.> 3: 90 sec. 4: 120 sec. 0: No Ringing	#239	29
	Select Category	1-9: Category 1-9	#241	29

Programming

Main menu: **X** "Caller Barred"^{*2, *8}

Operation	Code	☞
Storing/Viewing bar call numbers.	#217	29

Main menu: **** "Initial Setup"

Sub-menu 1	Sub-menu 2	Settings	Code	☞
Ringer Setup	Ringer Volume – Handset ^{*5}	0-6: Off-6 <6>	#160	18
	Ringer Volume – Base Unit ^{*1, *2}	0-6: Off-6 <3>	#*160	–
	Ringtone ^{*6, *7} (Handset)	<Ringtone 1>	#161	–
	Night Mode – On/Off	1: On 0: <Off>	#238	28
	Night Mode – Start/End	<23:00/06:00>	#237	28
	Night Mode – Ring Delay	1: 30 sec. 2: <60 sec.> 3: 90 sec. 4: 120 sec. 0: No Ringing	#239	29
	Night Mode – Select Category	1-9: Category 1-9	#241	29
Time Settings	Set Date/Time ^{*2}	–	#101	16
	Alarm	1: Once 2: Daily 0: <Off>	#720	28
	Time Adjustment ^{*2, *4}	1: <Caller ID> 0: Manual	#226	–
Handset Name	–	–	#104	29
Caller Barred ^{*2}	–	–	#217	29
Eco Setup	Transmission Power ^{*2}	1: <Normal> 2: Low	#725	17
Display Setup	Wallpaper ^{*9}	<Wallpaper1>	#181	–
	Display Colour	1-2: Colour1-2 <Colour1>	#182	–
	Display Mode	1: <Multi Items> 0: Single Item	#192	17
	Key Backlight	1: <On> 0: Off	#276	–
	LCD in charging ^{*10} (LCD backlight)	1: <On> 0: Off	#191	–
Contrast (Display contrast)	1-6: Contrast 1-6 <Contrast 3>	#145	–	

Programming

Sub-menu 1	Sub-menu 2	Settings	Code	
Keytones ^{*11}	–	1: <On> 0: Off	#165	–
Call Restrict ^{*2}	–	–	#256	30
Auto Talk ^{*12}	–	1: On 0: <Off>	#200	18
Line Setup	Recall/Flash ^{*2, *13}	0: 900 msec. 1: 700 msec. 2: 600 msec. 3: 400 msec. 4: 300 msec. 5: 250 msec. *: 200 msec. #: 160 msec. 6: 110 msec. 7: <100 msec.> 8: 90 msec. 9: 80 msec.	#121	19
Privacy Mode ^{*2, *14}	–	1: On 0: <Off>	#194	–
Base Unit PIN ^{*2}	–	<0000>	#132	30
Repeater Mode ^{*2}	–	1: On 0: <Off>	#138	31
Register	Register H. set (H. set: handset)	–	#130	30
	Cancel Register ^{*3}	–	#131	31
Language	Display	<English>	#110	16

*1 KX-TG8061/KX-TG8062/KX-TG8063

*2 If you program these settings using one of the handsets, you do not need to program the same item using another handset.

*3 This menu is not displayed when scrolling through the display menus. It is only available in direct command code.

*4 This feature allows the unit to automatically adjust the date and time each time caller information including date and time is received.

To turn this feature on, select "Caller ID". To turn this feature off, select "Manual". (Caller ID subscribers only)


To use this feature, set the date and time first (page 16).

*5 Ringer volume cannot be turned off for alarm, intercom calls, and paging.

*6 If you select one of the melody ringer tones, the ringer tone continues to play for several seconds even if the caller has already hung up. You may either hear a dial tone or no one on the line when you answer the call.

*7 The preset melodies in this product are used with permission of © 2011 Copyrights Vision Inc.

*8 KX-TG8051

*9 You can set the wallpaper to display with or without date and time by pressing . The default setting is with date and time displayed.

*10 You can set the handset display backlight while on charge.

– "On": Backlight is on (dimmed).

– "Off": Backlight turns off after 10 seconds of charging.

*11 Turn this feature off if you prefer not to hear key tones while you are dialling or pressing any keys, including confirmation tones and error tones.

Programming

*12 If you subscribe to a Caller ID service and want to view the caller's information after lifting up the handset to answer a call, turn off this feature.

*13 The recall/flash time depends on your telephone exchange or host PBX. Contact your PBX supplier if necessary.

*14 To prevent other users from joining your conversations with outside callers, turn this feature on.

Special programming

Alarm

An alarm sounds at the set time for 3 minutes once or daily. Alarm can be set for each handset.

Important:

- Set the date and time beforehand (page 16).

- 1 **[MNF]** (middle soft key) **[#][7][2][0]**
- 2 **[↑↓]**: Select the desired alarm option. → **OK**

"Off"
Turns alarm off. Go to step 6.

"Once"
An alarm sounds once at the set time.

"Daily"
An alarm sounds daily at the set time. Go to step 4.

- 3 Enter the desired date and month. → **OK**
- 4 Set the desired time. → **OK**
- 5 **[↑↓]**: Select the desired alarm tone. → **OK**
 - We recommend selecting a different ringer tone from the one used for outside calls.
- 6 **OK** → **[*][0]**
 - When the alarm is set, **[*][0]** is displayed.

Note:

- To stop the alarm, press **[*][0]** or place the handset on the base unit or charger.
- When the handset is in use, the alarm will not sound until the handset is in standby mode.

Night mode

Night mode allows you to select a period of time during which the handset will not ring for outside calls. This feature is useful for time periods when you do not want to be disturbed, for example, while sleeping. Night mode can be set for each handset.

Using the phonebook's category feature (page 21), you can also select categories of callers whose calls override night mode and ring the handset (Caller ID subscribers only).

Important:

- Set the date and time beforehand (page 16).
- We recommend turning the base unit ringer off (page 26) in addition to turning the night mode on. (KX-TG8061/KX-TG8062/KX-TG8063)
- If you have set the alarm, the alarm sounds even if the night mode is turned on.

Turning night mode on/off

- 1 **[MNF]** (middle soft key) **[#][2][3][8]**
- 2 **[↑↓]**: Select the desired setting. → **OK**
 - If you select "off", press **[*][0]** to exit.
- 3 Enter the desired hour and minute you wish to start this feature. → **OK**
 - You can select 24-hour or 12-hour clock format ("AM" or "PM") by pressing **[12/24]**.
- 4 Enter the desired hour and minute you wish to end this feature. → **OK**
- 5 **[*][0]**
 - When the night mode is set, **[*][0]** is displayed.

Changing the start and end time

- 1 **[MNF]** (middle soft key) **[#][2][3][7]**

Programming

- Continue from step 3, "Turning night mode on/off", page 28.

Setting the ring delay

This setting allows the handset to ring during night mode if the caller waits long enough. After the selected amount of time passes, the handset rings. If you select "No Ringing", the handset never rings during night mode.

- [M]** (middle soft key) **[#][2][3][9]**
- [↓]**: Select the desired setting. → **OK** → **[*][0]**

Note:

- When the answering system answers the call, this feature does not work. (KX-TG8061/KX-TG8062/KX-TG8063)

Selecting categories to bypass night mode

- [M]** (middle soft key) **[#][2][4][1]**
- [↓]**: Select your desired categories. → **[✓]**
 - "✓" is displayed next to the selected category numbers.
 - To cancel a selected category, press **[✓]** again. "✓" disappears.
- OK** → **[*][0]**

Note:

- You can also select the categories in step 2 as follows:
Press **[1]** to **[9]**. → **OK**

Changing the handset name

Each handset can be given a customised name ("Bob", "Kitchen", etc.). This is useful when you make intercom calls between handsets. You can also select whether or not the handset name is displayed in standby mode. The default setting is "No". If you select "Yes" without entering any handset name, "Handset 1" to "Handset 6" is displayed.

- [M]** (middle soft key) **[#][1][0][4]**
- Enter the desired name (max. 10 characters; page 41).
 - If not required, go to step 3.
- OK**

- [↓]**: Select the desired setting. → **OK** 2 times

- [*][0]**

Incoming call barring (Caller ID subscribers only)

This feature allows the unit to reject calls from specified phone numbers that you do not want to answer such as junk calls.

When a call is received, the unit does not ring while the caller is being identified. If the phone number matches an entry in the call barred list, the unit sends out a busy tone to the caller, and then disconnects the call.

Important:

- When the unit receives a call from a number that is stored in the call barred list, the call is logged in the caller list (page 32) with **[x]** after the call is disconnected.

Storing unwanted callers

You can store up to 30 phone numbers in the call barred list.

Important:

- You must store the phone number with an area code in the call barred list.

From the caller list:

- [←](→)**
- [↓]**: Select the entry to be barred. → **OK** → **[*][0]**
- [↓]**: "Caller Barred" → **OK**
- [↓]**: "Yes" → **OK** → **[*][0]**



By entering phone numbers:

- [M]** (middle soft key) **[#][2][1][7]** → **[*][0]**
- Enter the phone number (24 digits max.). → **OK**
 - To erase a digit, press **[C]**.
- [*][0]**

Viewing/editing/erasing bar call numbers

- [M]** (middle soft key) **[#][2][1][7]**
- [↓]**: Select the desired entry.
 - To exit, press **[*][0]**.

Programming


- 3 To edit a number:**
 → Edit the phone number. → **OK**
 → [**⏏**]
- To erase a number:**
 → [**+**]: "Yes" → **OK** → [**⏏**]

Note:

- When editing, press the desired dial key to add, **C** to erase.

Setting call restriction

You can restrict selected handsets from dialling certain numbers. You can assign up to 6 phone numbers to be restricted, and select which handsets are to be restricted. Storing area codes here prevents the restricted handsets from dialling any phone number in that area code.

- 1**  (middle soft key) **#256**
- 2** Enter the base unit PIN (default: "0000").
 - If you forget your PIN, see page 45.
- 3** [**+**]: Select the handsets to be restricted. →
 - All handsets registered to the base unit are displayed.
 - "✓" is displayed next to the selected handset numbers.
 - To cancel a selected handset, press again. "✓" disappears.
- 4** **OK**
- 5** [**+**]: Select a memory location. → **OK**
- 6** Enter the phone number or area code to be restricted (8 digits max.). → **OK** → [**⏏**]
 - To erase a restricted number, press **C**.

Note:


- You can also select a memory location in step 5 as follows:
 Press **1** to **6**. → **OK**

Changing the base unit PIN (Personal Identification Number)

Important:

- If you change the PIN, please make note of your new PIN. The unit will not reveal the

PIN to you. If you forget your PIN, see page 45.

- 1**  (middle soft key) **#132**
- 2** Enter the current 4-digit base unit PIN (default: "0000").
- 3** Enter the new 4-digit base unit PIN. → **OK** → [**⏏**]

Registering a unit

Operating additional units

 
Additional handsets


Up to 6 handsets can be registered to the base unit.

Important:

- The additional handset model recommended for use with this unit is noted on page 5. If another handset model is used, certain operations (handset settings, base unit settings, etc.) may not be available.

Registering a handset to the base unit

The supplied handset and base unit are pre-registered. If for some reason the handset is not registered to the base unit (for example,  is displayed even when the handset is near the base unit), re-register the handset.

- 1 Handset:**
 (middle soft key) **#130**
 - 2 Base unit:**
 Proceed with the operation for your model.
 - **KX-TG8051**
 Press and hold [**Ⓜ**] for about 5 seconds. (No registration tone)
 - **KX-TG8061/KX-TG8062/KX-TG8063**
 Press and hold [**Ⓜ**] for about 5 seconds, until the registration tone sounds.
- If all registered handsets start ringing, press [**Ⓜ**] again to stop, then repeat this step.

Programming

- The next step must be completed within 90 seconds.

3 Handset:

OK → Wait until “Base PIN” is displayed. → Enter the base unit PIN (default: “0000”). → **OK**

- If you forget your PIN, see page 45.
- When the handset has been registered successfully, **Y** is displayed.

Note:

- While registering, “Base in registering” is displayed on all registered handsets.
- When you purchase an additional handset, refer to the additional handset’s installation manual for registration.

Deregistering a handset

A handset can cancel its own registration to the base unit, or other handsets registered to the same base unit. This allows the handset to end its wireless connection with the system.

- 1 **[M]** (middle soft key) **[#][1][3][1]**
 - All handsets registered to the base unit are displayed.
- 2 **[↕]**: Select the handset you want to cancel. → **OK**
- 3 **[↕]**: “Yes” → **OK**
 - A confirmation tone sounds.
 - The handset does not beep when cancelling its own registration.
- 4 **[*][0]**

Increasing the range of the base unit

You can increase the signal range of the base unit by using a DECT repeater. Please use only the Panasonic DECT repeater noted on page 4. Contact your Panasonic dealer for details.

Important:

- Before registering the repeater to this base unit, you must turn the repeater mode on.
- Do not use more than one repeater at a time.

Setting the repeater mode

- 1 **[M]** (middle soft key) **[#][1][3][8]**
- 2 **[↕]**: Select the desired setting. → **OK**
→ **[*][0]**

Note:

- After turning the repeater mode on or off, **Y** is displayed on the handset momentarily. This is normal and the handset can be used once **Y** is displayed.

Registering the DECT repeater (KX-A405) to the base unit

Note:

- Please use a repeater that has not yet been registered to another unit. If the repeater is registered to another unit, deregister it first, referring to the Installation Guide for the DECT repeater.

- 1 **Base unit:**
Proceed with the operation for your model.
 - **KX-TG8051**
Press and hold **[*][0]** for about 5 seconds. (No registration tone)
 - **KX-TG8061/KX-TG8062/KX-TG8063**
Press and hold **[*][0]** for about 5 seconds, until the registration tone sounds.
 - The next step must be completed within 90 seconds.
- 2 **DECT repeater:**
Connect the AC adaptor, then wait until the **①** indicator lights green.
- 3 **Base unit:**
To exit the registration mode, press **[*][0]**.
 - The registration tone stops.
(KX-TG8061/KX-TG8062/
KX-TG8063)

Caller ID Service

Using Caller ID service

Important:

- This unit is Caller ID compatible. To use Caller ID features, you must subscribe to a Caller ID service. Contact your service provider/telephone company for details.

Caller ID features

When an outside call is being received, the caller's phone number is displayed.

Caller information for the last 50 callers is logged in the caller list from the most recent call to the oldest.

- If the unit cannot receive caller information, the following is displayed:
 - “**Out of Area**”: The caller dials from an area which does not provide a Caller ID service.
 - “**Private Caller**”: The caller requests not to send caller information.
- If the unit is connected to a PBX system, caller information may not be properly received. Contact your PBX supplier.

Missed calls

If a call is not answered, the unit treats it as a missed call and **[M]** is displayed. This lets you know if you should view the caller list to see who called while you were away.

Even if only one missed call in the caller list is viewed (page 32), **[M]** disappears from the display. When you receive another new call, **[M]** is displayed again.

Note:

- Even when there are unviewed missed calls, **[M]** disappears from the standby display if the following operation is performed by one of the registered handsets:
 - Being replaced on the base unit or charger.
 - Pressing **[*][0]**.

Phonebook name display

When caller information is received and it matches a phone number stored in the phonebook, the stored name in the phonebook is displayed and logged in the caller list.

Category ringer tone

This feature can help you identify who is calling by using different ringer tones for different categories of callers. When adding an entry to the phonebook, you can assign it to the desired category (page 21). When a call is received from a caller assigned to a category, the ringer you selected for that category rings after caller information is displayed.

If you select “**Default Ringer**”, the unit uses the ringer tone you selected on page 26 when calls from this category are received. The default setting is “**Default Ringer**”.

- 1 **[M]** (left soft key) → **[F3]**
- 2 **[+]**: “**Category**” → **OK**
- 3 **[+]**: Select the desired category. → **OK**
- 4 **[+]**: Select the current setting of the category ringer tone. → **OK**
- 5 **[+]**: Select the desired ringer tone. → **OK**
- 6 **[*][0]**

Caller list

Important:

- Only 1 person can access the caller list at a time.
- Make sure the unit's date and time setting is correct (page 16).

Viewing the caller list and calling back

- 1 **[<]** (**[M]**)
- 2 Press **[v]** to search from the most recent call, or press **[▲]** to search from the oldest call.

Caller ID Service

- You can see the detailed information about the caller by pressing **[7/8]** when in multiple display mode.

3 To call back, press **[↶]**.
To exit, press **[✕⏏]**.

Note:

- If the entry has already been viewed or answered, “✓” is displayed, even if it was viewed or answered using another handset.
- If the call matches an entry in the call barred list, the number is logged with **✕** (page 29).

Editing a caller's phone number before calling back

- [↶] (↷)**
- [↕]**: Select the desired entry. → **OK**
- [✎]** → Edit the number.
 - Press dial key (**[0]** to **[9]**) to add, **[C]** to delete.
- [↶]**

Erasing selected caller information

- [↶] (↷)**
- [↕]**: Select the desired entry.
- [X]** → **[↕]**: “Yes” → **OK** → **[✕⏏]**

Erasing all caller information

- [↶] (↷)**
- [X]** → **[↕]**: “Yes” → **OK** → **[✕⏏]**

Storing caller information to the phonebook

- [↶] (↷)**
- [↕]**: Select the desired entry. → **OK** → **[✎]**
- [↕]**: “Phonebook” → **OK**
- To store the name, continue from step 2, “Adding entries”, page 21.

Answering System

Answering system

Available for:
KX-TG8061/KX-TG8062/KX-TG8063

The answering system can answer and record calls for you when you are unavailable to answer the phone.

You can also set the unit to play a greeting message but not to record caller messages by selecting "Greeting Only" as the recording time setting (page 38).


Important:

- Only 1 person can access the answering system (listen to messages, record a greeting message, etc.) at a time.
- When callers leave messages, the unit records the day and time of each message. Make sure the date and time have been set correctly (page 16).

Memory capacity (including your greeting message)

The total recording capacity is about 18 minutes. A maximum of 64 messages can be recorded.

Note:

 
- When message memory becomes full:
 - "Messages Full" is shown on the handset display.
 - The answer on indicator on the base unit flashes rapidly if the answering system is turned on.
 - The message counter on the base unit flashes if the answering system is turned on.
 -  and the total number of new messages are not displayed on the handset even if the answering system is turned on.
 - If you use the pre-recorded greeting message, the unit automatically switches to another pre-recorded greeting message asking callers to call again later.
 - If you recorded your own greeting message, the same message is still

announced to callers even though their messages are not recorded.

Turning the answering system on/off



The answering system is preset to on.


Base unit

Press  to turn on/off the answering system.


- When the answering system is turned on:
 - The answer on indicator lights up.
 - The message counter displays the total number of messages (old and new).

Handset

  
 

- To turn on:**
 (middle soft key) #327
- To turn off:**
 (middle soft key) #328


 
- []**

Note:

- When the answering system is turned on,  is displayed next to the battery icon.

Call screening

While a caller is leaving a message, you can listen to the call through the handset's speaker. To adjust the speaker volume, press [] or [] repeatedly. You can answer the call by pressing [] on the handset. Call screening can be set for each handset. The default setting is "on".

-  (middle soft key) #310
- [+]**: Select the desired setting. → **OK**
→ []

Answering System

Greeting message

When the unit answers a call, a greeting message is played to callers. You can use either:

- your own greeting message
- a pre-recorded greeting message

Recording your greeting message

- 1 (middle soft key)
- 2 : "Yes" →
- 3 After a beep sounds, hold the handset about 20 cm away and speak clearly into the microphone (2 minutes and 30 seconds max.).
- 4 Press to stop recording.
- 5

Using a pre-recorded greeting message

The unit provides 2 pre-recorded greeting messages:

- If you erase or do not record your own greeting message, the unit plays a pre-recorded greeting asking callers to leave a message.
- If the message recording time (page 38) is set to "Greeting Only", callers' messages are not recorded and the unit plays a different pre-recorded greeting message asking callers to call again.

Resetting to a pre-recorded greeting message

If you want to use a pre-recorded greeting message once you record your own greeting message, you need to erase your own greeting message.

- 1 (middle soft key)
- 2 →

Playing back the greeting message

- 1 (middle soft key)
- 2

Listening to messages using the base unit

When new messages have been recorded, on the base unit flashes.

Press .

- If new messages have been recorded, the base unit plays back new messages.
- If there are no new messages, the base unit plays back all messages.

Operating the answering system during playback

Key	Operation
or	Adjust the speaker volume
	Repeat message ^{*1}
	Skip message
	Stop playback
	Erase currently playing message


*1 If pressed within the first 5 seconds of a message, the previous message is played.


 
 
 

 



Erasing all messages

Press 2 times while the unit is not in use.


Answering System

Listening to messages using the handset

When new messages have been recorded,  is displayed on the handset with the total number of new messages.


 
 
 



 


- To listen to new messages:**
 (middle soft key)   
To listen to all messages:
 (middle soft key)   
- When finished, press .

Note:

- To switch to the receiver, press .

Listening to messages from the message list




You can select the item to play back.





 

-  (middle soft key)   
- : Select the desired item from the message list. → 
 - You can erase the selected message as follows:
 → : "Yes" → 
- When finished, press .





 
 
 



 
 
 
 
 

 
Note:

- If the item has already been heard, "✓" is displayed, even if it was heard using another handset.
- "Message" is displayed in the message list if the unit cannot receive caller information.

Operating the answering system

 

 (middle soft key) →  → 


 

Key	Operation
 or 	Adjust the receiver or speaker volume (during playback)
 or 	Repeat message (during playback) ^{*1}
 or 	Skip message (during playback) ^{*2}

Key	Operation
	Enter the "Settings" menu
	Play new messages
	Play all messages
	Play greeting message
 	Record greeting message
	Turn answering system on
	Pause message ^{*3}
 or 	Stop recording Stop playback
	Turn answering system off
  ^{*4}	Erase currently playing message
 	Erase all messages
 	Reset to a pre-recorded greeting message

*1 If pressed within the first 5 seconds of a message, the previous message is played except when playing back from the message list.




*2 When you play a message from the message list, the unit stops message playback and the display goes back to the message list.

*3 To resume playback: : "Play" → 


 


*4 You can also erase as follows:
 → : "Yes" → 

Calling back (Caller ID subscribers only)

If caller information is received for the call, you can call the caller back while listening to a message.

- Press  during playback.
- : "Call Back" → 

Editing the number before calling back

- Press  during playback.
- : "Edit & Call" → 
- Edit the number. → 

Answering System

Erasing all messages

- 1 **[MFK]** (middle soft key) **[#][3][2][5]**
- 2 **[↕]**: “Yes” → **OK** → **[*][0]**

Remote operation

Using a touch-tone phone, you can call your phone number from outside and access the unit to listen to messages or change answering system settings. The unit's voice guidance prompts you to press certain dial keys to perform different operations.

Remote access code

A 3-digit remote access code must be entered when operating the answering system remotely. This code prevents unauthorised parties from listening to your messages remotely.

Important:

- In order to operate the answering system remotely, you must first set a remote access code.

- 1 **[MFK]** (middle soft key) **[#][3][0][6]**
- 2 To turn on remote operation, enter the desired 3-digit remote access code.
- 3 **OK** → **[*][0]**

Deactivating remote operation

Press **[*]** in step 2 on “Remote access code”, page 37.

- The entered remote access code is deleted.

Using the answering system remotely

- 1 Dial your phone number from a touch-tone phone.
- 2 After the greeting message starts, enter your remote access code.
- 3 Follow the voice guidance prompts as necessary or control the unit using remote commands (page 37).
- 4 When finished, hang up.

Voice guidance

During remote operation, the unit's voice guidance starts and prompts you to press **[1]** to perform a specific operation, or press **[2]** to listen to more available operations.

Note:

- If you do not press any dial keys within 10 seconds after a voice guidance prompt, the unit disconnects your call.

Remote commands

You can press dial keys to access certain answering system functions without waiting for the voice guidance to prompt you.

Key	Operation
[1]	Repeat message (during playback) ^{*1}
[2]	Skip message (during playback)
[4]	Play new messages
[5]	Play all messages
[6]	Play greeting message
[7]	Record greeting message
[9]	Stop recording Stop playback
[0]	Turn answering system off
[*][4]	Erase currently playing message
[*][5]	Erase all messages
[*][6]	Reset to a pre-recorded greeting message (during greeting message playback)
[*][#]	End remote operation (or hang up)

*1 If pressed within the first 5 seconds of a message, the previous message is played.

Answering System

Turning on the answering system remotely

If the answering system is off, you can turn it on remotely.

- 1 Dial your phone number from a touch-tone phone.
- 2 Let the phone ring 20 times.
 - A long beep is heard.
- 3 Enter your remote access code within 10 seconds after the long beep.
 - The greeting message is played back.
 - You can either hang up, or enter your remote access code again and begin remote operation (page 37).

Answering system settings

Number of rings before the unit answers a call

You can change the number of times the phone rings "Number of Rings" before the unit answers a call. You can select 2 to 9 rings, or "Auto".

The default setting is "5 Rings".

"Auto": The unit's answering system answers at the end of the 2nd ring when new messages have been recorded, or at the end of the 5th ring when there are no new messages. If you call your phone from outside to listen to new messages (page 37), you know that there are no new messages when the phone rings for the 3rd time. You can then hang up without being charged for the call.

- 1 **[M]** (middle soft key) **[#][2][1][1]**
- 2 **[+]**: Select the desired setting. → **OK**
→ **[*][0]**

For voice mail service subscribers

To receive voice mail and use answering system properly, please note the following:

- To use the voice mail service (page 39) provided by your service provider/telephone company rather than the unit's

answering system, turn off the answering system (page 34).

- To use this unit's answering system rather than the voice mail service provided by your service provider/telephone company, please contact your service provider/telephone company to deactivate your voice mail service.

If your service provider/telephone company cannot do this:

- Set this unit's "Number of Rings" setting so that this unit's answering system answers calls before the voice mail service of your service provider/telephone company does. It is necessary to check the number of rings required to activate the voice mail service provided by your service provider/telephone company before changing this setting.
- Change the number of rings of the voice mail service so that the answering system can answer the call first. To do so, contact your service provider/telephone company.

Caller's recording time

You can change the maximum message recording time allowed for each caller. The default setting is "3 Minutes".

- 1 **[M]** (middle soft key) **[#][3][0][5]**
- 2 **[+]**: Select the desired setting. → **OK**
→ **[*][0]**

Selecting "Greeting Only"

You can select "Greeting Only" which sets the unit to announce a greeting message to callers but not record messages.

Select "Greeting Only" in step 2 on "Caller's recording time", page 38.


Note:

- When you select "Greeting Only":
 - If you do not record your own message, the unit will play the pre-recorded greeting-only message asking callers to call again later.
 - If you use your own message, record the greeting-only message asking callers to call again later (page 35).



Voice Mail Service

Voice mail service

Voice mail is an automatic answering service offered by your service provider/telephone company. After you subscribe to this service, your service provider/telephone company's voice mail system answers calls for you when you are unavailable to answer the phone or when your line is busy. Messages are recorded by your service provider/telephone company, not your telephone.

When you have new messages,  is displayed on the handset if message indication service is available. Please contact your service provider/telephone company for details of this service.

Important:

- If  still remains on the display even after you have listened to new messages, turn it off by pressing and holding  for 2 seconds.
- To use the voice mail service provided by your service provider/telephone company rather than the unit's answering system, turn off the answering system (page 34). For details, see page 38.
(KX-TG8061/KX-TG8062/KX-TG8063)

Intercom/Locator

Intercom

Intercom calls can be made between handsets.

Note:

- If you receive an outside call while talking on the intercom, you hear 2 tones. To answer the call, press **[*☎]**, then press **[↶]**.
- When paging the handset, the paged handset beeps for 1 minute.

Making an intercom call

- 1 **[☰]** (middle soft key) → **[☎]**
- 2 **[↕]**: Select the desired unit. → **OK**
 - To stop paging, press **[*☎]**.
- 3 When you finish talking, press **[*☎]**.

Answering an intercom call

- 1 Press **[↶]** to answer the page.
- 2 When you finish talking, press **[*☎]**.

Handset locator

You can locate a misplaced handset by paging it.

- 1 **Base unit:** Press **[☎]**.
 - All registered handsets beep for 1 minute.
- 2 To stop paging:
 - Base unit:** Press **[☎]**.
 - Handset:** Press **[*☎]**.

Transferring calls, conference calls

Outside calls can be transferred or a conference call with an outside party can be made between 2 handsets.

- 1 During an outside call, press **[☎]** to put the call on hold.

- 2 **[↕]**: Select the desired unit. → **OK**
- 3 Wait for the paged party to answer.
 - If the paged party does not answer, press **[☎]** to return to the outside call.

4 To complete the transfer:

Press **[*☎]**.

- The outside call is being routed to the destination unit.

To establish a conference call:

[☰] → **[↕]**: "Conference" → **OK**

- To leave the conference, press **[*☎]**. The other 2 parties can continue the conversation.
- To put the outside call on hold: **[☰]** → **[↕]**: "Hold" → **OK**
To resume the conference: **[☰]** → **[↕]**: "Conference" → **OK**

Note:

- If you want to return to the outside call after the paged party answers, press **[*X]**.

Answering a transferred call

Press **[↶]** to answer the page.

Useful Information

Character entry

The dial keys are used to enter characters and numbers. Each dial key has multiple characters assigned to it. The characters that can be entered depend on the character entry mode (page 41).

- Press [←] or [→] to move the cursor left or right.
- Press dial keys to enter characters and numbers.
- Press [C] to erase the character or number highlighted by the cursor. Press and hold [C] to erase all characters or numbers.
- Press [A→a] to switch between uppercase and lowercase.
- To enter another character located on the same dial key, press [→] to move the cursor to the next space, then press the appropriate dial key.
- If you do not press any dial key within 5 seconds after entering a character, the character is fixed and the cursor moves to the next space.

Character entry modes

The available character entry modes are Alphabet (ABC), Numeric (0-9), Greek (ΑΒΓ), Extended 1 (ΑĂĂ), Extended 2 (ŚŚŚ), and Cyrillic (АБВ). When in these entry modes except Numeric, you can select which character is entered by pressing a dial key repeatedly.

When the unit displays the character entry screen:

1/A/2 → [↕]: Select a character entry mode. → **OK**

Note:

- [] in the following tables represents a single space.

Alphabet character table (ABC)

0 []	1 & ' ()	2 ABC	3 DEF	4 GHI	5 JKL	6 MNO	7 PQRS	8 TUV	9 WXYZ	#
[] 0	& ' () * , - . / 1	A B C 2 a b c 2	D E F 3 d e f 3	G H I 4 g h i 4	J K L 5 j k l 5	M N O 6 m n o 6	P Q R S 7 p q r s 7	T U V 8 t u v 8	W X Y Z 9 w x y z 9	#

Numeric entry table (0-9)

0 []	1 & ' ()	2 ABC	3 DEF	4 GHI	5 JKL	6 MNO	7 PQRS	8 TUV	9 WXYZ	#
0	1	2	3	4	5	6	7	8	9	#

Greek character table (ΑΒΓ)

0 []	1 & ' ()	2 ABC	3 DEF	4 GHI	5 JKL	6 MNO	7 PQRS	8 TUV	9 WXYZ	#
[] 0	& ' () * , - . / 1	A B Γ 2	Δ E Z 3	H Θ I 4	K Λ M 5	N Ξ O 6	Π Ρ Σ 7	Τ Υ Φ 8	Χ Ψ Ω 9	#

Useful Information

Extended 1 character table (AÄ)

0	1 &'()	2 ABC	3 DEF	4 GHI	5 JKL	6 MNO	7 PQRS	8 TUV	9 WXYZ	#
0	& ' () * , - . / 1	A Ä Á Å Æ B C Ç 2	D E È É Ê Ë F 3	G Ğ H I Î Ï 4	J K L 5	M N Ñ O Ö Ó Ø 6	P Q R S Ş ß 7	T U Û Ú Ü Ü Û V 8	W X Y Ŵ Ŷ X Ÿ Ź Z 9	#
		a á ä â ã ä å æ b c ç 2	d e è é ê ë f 3	g ğ h i î ï 4	j k l 5	m n ñ o ö ó ø 6	p q r s ş ş ß 7	t u ù ú û ü û v 8	w ŵ x y ŷ z 9	

• The following are used for both uppercase and lowercase: ø Ŵ Ŷ

Extended 2 character table (SŠ)

0	1 &'()	2 ABC	3 DEF	4 GHI	5 JKL	6 MNO	7 PQRS	8 TUV	9 WXYZ	#
0	& ' () * , - . / 1	A Á Ā B C Č Ć 2	D Ď E É Ě ě F 3	G H I Í 4	J K L Ł Ł Ł 5	M N Ń Ń Ń Ń Ō Ō Ō	P Q R Ŕ Ŕ Ŕ Ś Ś Ś 7	T Ť U Ú Ú Ú Ů Ů Ů 8	W X Y Ÿ Ź Z 9	#
		a á ā B b c Č Ć 2	d ě e é ě ě f 3	g h i í 4	j k l ł ł ł 5	m n ń ń ń ń ō ō ō	p q r ŕ ŕ ŕ ś ś ś 7	t ŧ u ú ú ú ů ů ů 8	w x y ŷ Ź Z 9	

• The following are used for both uppercase and lowercase:

Ą Ć Ć Ě Ł Ł Ł Ń Ń Ń Ů Ů Ů Ÿ Ź Ž Ž

Cyrillic character table (АБВ)

0	1 &'()	2 ABC	3 DEF	4 GHI	5 JKL	6 MNO	7 PQRS	8 TUV	9 WXYZ	#
0	Г Є І І Ÿ	А Б В Г 2	Д Е Ж З 3	И Й К Л 4	М Н О П 5	Р С Т У 6	Ф Х Ц Ч 7	Ш Щ Ъ Ы 8	Ь Э Ю Я 9	#

Useful Information**Error messages**

Display message	Cause/solution
Base no power or No link to base. Reconnect main base AC adaptor.	<ul style="list-style-type: none"> The handset has lost communication with the base unit. Move closer to the base unit and try again. Unplug the base unit's AC adaptor to reset the unit. Reconnect the adaptor and try again. The handset's registration may have been cancelled. Re-register the handset (page 30).
Check Phone Line	<ul style="list-style-type: none"> The supplied telephone line cord has not been connected yet or not connected properly. Check the connections (page 11).
Error ^{*1}	<ul style="list-style-type: none"> Recording was too short. Try again.
Failed	<ul style="list-style-type: none"> Phonebook copy failed (page 22). Confirm the other handset (the receiver) is in standby mode and try again.
Incomplete	<ul style="list-style-type: none"> The receiver's phonebook memory is full. Erase the unwanted phonebook entries from the other handset (the receiver) and try again.
Memory Full	<ul style="list-style-type: none"> The phonebook memory is full. Erase unwanted entries (page 22). Message memory is full. Erase unwanted messages (page 35, 36).^{*1} The call barred list memory is full. Erase unwanted entries (page 29).
Use rechargeable battery.	<ul style="list-style-type: none"> A wrong type of battery such as Alkaline or Manganese was inserted. Use only the rechargeable Ni-MH batteries noted on page 4, 8.
You must first subscribe to Caller ID.	<ul style="list-style-type: none"> You must subscribe to a Caller ID service. Once you receive caller information after subscribing to a Caller ID service, this message will not be displayed.

*1 KX-TG8061/KX-TG8062/KX-TG8063

Useful Information

Troubleshooting

If you still have difficulties after following the instructions in this section, disconnect the base unit's AC adaptor and turn off the handset, then reconnect the base unit's AC adaptor and turn on the handset.

General use

Problem	Cause/solution
The handset does not turn on even after installing charged batteries.	<ul style="list-style-type: none"> Place the handset on the base unit or charger to turn on the handset.
The unit does not work.	<ul style="list-style-type: none"> Make sure the batteries are installed correctly (page 12). Fully charge the batteries (page 12). Check the connections (page 11). Unplug the base unit's AC adaptor to reset the unit and turn off the handset. Reconnect the adaptor, turn on the handset and try again. The handset has not been registered to the base unit. Register the handset (page 30).
The handset display is blank or dark.	<ul style="list-style-type: none"> The handset is in screen saver mode (page 16). Activate the handset display again by: <ul style="list-style-type: none"> pressing [◀] or [▶] when on a call. pressing [📞] at all other times. "LCD in charging" is set to "off" while on charge. Change the setting (page 26). The handset is not turned on. Turn the power on (page 16).
I cannot hear a dial tone.	<ul style="list-style-type: none"> Make sure that you are using the supplied telephone line cord. Your old telephone line cord may have a different wiring configuration. The base unit's AC adaptor or telephone line cord is not connected. Check the connections. Disconnect the base unit from the telephone line and connect the line to a known working telephone. If the working telephone operates properly, contact our service personnel to have the unit repaired. If the working telephone does not operate properly, contact your service provider/telephone company.

Programmable settings

Problem	Cause/solution
The display is in a language I cannot read.	<ul style="list-style-type: none"> Change the display language (page 16).
While programming, the display returns to standby mode.	<ul style="list-style-type: none"> A call matching an entry in the call barred list is being received. Wait and try again later.

Useful Information

Problem	Cause/solution
I cannot activate the eco mode.	<ul style="list-style-type: none"> You cannot set eco mode when you set the repeater mode "On". If required, set the repeater mode to "off" (page 31).
I cannot register a handset to a base unit.	<ul style="list-style-type: none"> The maximum number of handsets (6) is already registered to the base unit. Cancel unused handset registrations from the base unit (page 31). You entered the wrong PIN. If you forget your PIN, see "I cannot remember the PIN." (page 45).
I cannot remember the PIN.	<ul style="list-style-type: none"> Change the PIN using the following method. <ol style="list-style-type: none"> (middle soft key) Enter the new 4-digit base unit PIN. → →

Battery recharge

Problem	Cause/solution
The handset beeps and/or flashes.	<ul style="list-style-type: none"> Battery charge is low. Fully charge the batteries (page 12).
I fully charged the batteries, but <ul style="list-style-type: none"> still flashes or the operating time seems to be shorter. 	<ul style="list-style-type: none"> Clean the battery ends (+, -) and the charge contacts with a dry cloth and charge again. It is time to replace the batteries (page 12).

Making/answering calls, intercom

Problem	Cause/solution
is displayed.	<ul style="list-style-type: none"> The handset is too far from the base unit. Move closer. The base unit's AC adaptor is not properly connected. Reconnect AC adaptor to the base unit. The handset is not registered to the base unit. Register it (page 30). Activating one touch eco mode reduces the range of the base unit in standby mode. If required, turn eco mode off (page 17).
Noise is heard, sound cuts in and out.	<ul style="list-style-type: none"> You are using the handset or base unit in an area with high electrical interference. Re-position the base unit and use the handset away from sources of interference. Move closer to the base unit. If you use a DSL/ADSL service, we recommend connecting a DSL/ADSL filter between the base unit and the telephone line jack. Contact your DSL/ADSL provider for details. Unplug the base unit's AC adaptor to reset the unit and turn off the handset. Reconnect the adaptor, turn on the handset and try again.

Useful Information

Problem	Cause/solution
Sound quality seems to be getting worse.	<ul style="list-style-type: none"> You have registered a handset that is not recommended (page 5). The clearest sound quality is only possible by registering the recommended handset.
The handset does not ring.	<ul style="list-style-type: none"> The ringer volume is turned off. Adjust ringer volume (page 18). Night mode is turned on. Turn it off (page 28).
The base unit does not ring.*1	<ul style="list-style-type: none"> The ringer volume is turned off. Adjust ringer volume (page 26).
I cannot make a call.	<ul style="list-style-type: none"> The handset is too far from the base unit. Move closer and try again. Another unit is in use. Wait and try again later. Answering system is being used.*1 Wait and try again later. You dialled a call restricted number (page 30). The key lock feature is turned on. Turn it off (page 20).

*1 KX-TG8061/KX-TG8062/KX-TG8063

Caller ID

Problem	Cause/solution
Caller information is not displayed.	<ul style="list-style-type: none"> You must subscribe to a Caller ID service. Contact your service provider/telephone company for details. If your unit is connected to any additional telephone equipment, remove and plug the unit directly into the wall jack. If you use a DSL/ADSL service, we recommend connecting a DSL/ADSL filter between the base unit and the telephone line jack. Contact your DSL/ADSL provider for details. Other telephone equipment may be interfering with this unit. Disconnect the other equipment and try again.
Caller information is slow to display.	<ul style="list-style-type: none"> Depending on your service provider/telephone company, the unit may display the caller's information at the 2nd ring or later. Move closer to the base unit.
Time on the unit has shifted.	<ul style="list-style-type: none"> Incorrect time information from incoming Caller ID changes the time. Set the time adjustment to "Manual" (off) (page 25).
The name stored in the phonebook is not fully displayed while an outside call is being received.	<ul style="list-style-type: none"> Edit the phonebook entry name to fit in 1 line of text (page 22).

Useful Information

Answering system (KX-TG8061/KX-TG8062/KX-TG8063)

Problem	Cause/solution
The unit does not record new messages.	<ul style="list-style-type: none"> • The answering system is turned off. Turn it on (page 34). • The message memory is full. Erase unwanted messages (page 35). • The recording time is set to "Greeting Only". Change the setting (page 38). • If your own greeting message is not recorded properly, callers are unable to leave a message. Record your own greeting message again (page 35). • If you subscribe to a voice mail service, messages are recorded by your service provider/telephone company, not your telephone. Change the unit's number of rings setting or contact your service provider/telephone company (page 38).
My own greeting message cannot be properly heard.	<ul style="list-style-type: none"> • Record your own greeting message again (page 35).
I cannot operate the answering system.	<ul style="list-style-type: none"> • Someone is using the unit. Wait for the other user to finish. • A caller is leaving a message. Wait for the caller to finish. • The handset is too far from the base unit. Move closer.
I cannot operate the answering system remotely.	<ul style="list-style-type: none"> • The remote access code is not set. Set the remote access code (page 37). • You are entering the wrong remote access code. If you have forgotten your remote access code, enter the remote access code setting to check your current code (page 37). • Press each key firmly. • The answering system is turned off. Turn it on (page 38).

Liquid damage

Problem	Cause/solution
Liquid or other form of moisture has entered the handset/base unit.	<ul style="list-style-type: none"> • Disconnect the AC adaptor and telephone line cord from the base unit. Remove the batteries from the handset and leave to dry for at least 3 days. After the handset/base unit are completely dry, reconnect the AC adaptor and telephone line cord. Insert the batteries and charge fully before use. If the unit does not work properly, contact an authorised service centre.

Caution:

- To avoid permanent damage, do not use a microwave oven to speed up the drying process.

Useful Information

Belt clip

■ To attach



■ To remove




Wall mounting


Note:

- Make sure that the wall and the fixing method are strong enough to support the weight of the unit.


■ Base unit (KX-TG8051)

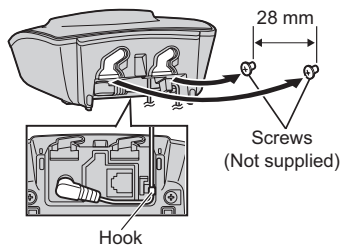

■ Base unit (KX-TG8061/KX-TG8062/
KX-TG8063)

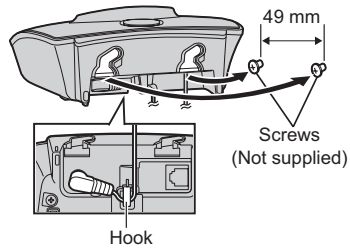

■ Charger

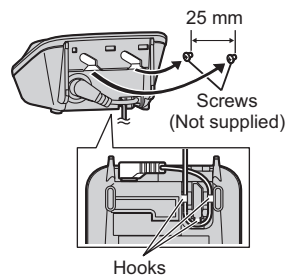

Useful Information

Conditions of guarantee

This guarantee is in addition to and does not in any way affect any statutory or other rights of consumer purchasers. If within the applicable guarantee period, the product proves to be defective by reason of faulty design, workmanship or materials, we undertake subject to the following conditions to have the defective product (or any part or parts thereof) repaired or replaced free of charge.

1. The product shall have been purchased and used solely within either the U.K. or Ireland and in accordance with standard operating instructions and the technical and/or Safety Standards required in the U.K.
2. On being found defective, please consult with the retailer from where it was purchased for assistance.
3. This guarantee shall not apply to damage caused through fire, accident, lightning, misuse, wear and tear, neglect, incorrect adjustment or repair, to damage caused through installation, adaption, modification or use in an improper manner or inconsistent with the technical and/or safety standards required in the country where this product is used, or to damage occurred during transit to or from the purchaser.
4. If at any time during the guarantee period any part or parts of the product are replaced with a part or parts not supplied or approved by us or of an objective quality safe and suitable for the product, or the product has been dismantled or repaired by any person not authorised by us, we shall have the right to terminate this guarantee in whole or in part immediately without further notice.
5. The purchaser's sole and exclusive remedy under this guarantee against us is for the repair or replacement of the product or any defective part or parts and no other remedy, including, but not limited to, incidental or consequential damage or loss of whatsoever nature shall be available to the purchaser.
6. This guarantee shall not apply to batteries and any other items of limited natural life.
7. Our decision on all matters relating to complaints shall be final. Any product or defective part which has been replaced shall become our property.
8. The guarantee period applicable to this product shall be 12 months.

Please keep these operating instructions with your receipt.

Panasonic Business Systems U.K.

Receipt No. _____	Date of purchase _____
Model No. _____	Serial No. _____

 
 
Index

Index

- A** Additional handsets: 30
- Alarm: 28
- Answering calls: 18
- Answering system: 34
 - Call screening: 34
 - Erasing messages: 35, 36, 37
 - Greeting message: 35
 - Greeting only: 38
 - Listening to messages: 35, 36, 37
 - Message list: 36
 - Number of rings: 38
 - Recording time: 38
 - Remote access code: 37
 - Remote operation: 37
 - Turning on/off: 34, 36, 38
- Auto talk: 18
- B** Battery: 12
- Belt clip: 48
- C** Caller ID service: 32
- Caller list: 32
- Caller list edit: 33
- Call restriction: 30
- Call share: 19
- Call waiting: 19
- Call Waiting Caller ID: 19
- Category: 21, 32
- Chain dial: 22
- Character entry: 41
- Conference calls: 40
- Control type: 14
- D** Date and time: 16
- Direct command code: 24
- Display
 - Colour: 26
 - Contrast: 26
 - Display mode: 17
 - Language: 16
 - LCD backlight: 26
 - Wallpaper: 26
- E** Eco mode: 17
- Equalizer: 19
- Error messages: 43
- H** Handset
 - Deregistration: 31
 - Locator: 40
 - Name: 29
 - Registration: 30
 - Hold: 19
- I** Incoming call barring: 29
- Intercom: 40
- K** Key lock: 20
- Keytones: 27
- M** Making calls: 18
- Missed calls: 32
- Mute: 19
- N** Night mode: 28
- P** Pause: 18
- Phonebook: 21
- PIN: 30
- Power failure: 12
- Power on/off: 16
- Privacy mode: 27
- R** Recall/flash: 19
- Redialling: 18
- Repeater: 31
- Ringer tone: 26, 32
- S** Speakerphone: 18
- Speed dial: 22
- T** Time adjustment: 25
- Transferring calls: 40
- Troubleshooting: 44
- V** Voice mail: 39
- Volume
 - Receiver: 18
 - Ringer (Base unit): 26
 - Ringer (Handset): 18, 26
 - Speaker: 18
- W** Wall mounting: 48



Notes



IMPORTANT!

If your product is not working properly. . .

- ① **Reconnect AC adaptor to the base unit.**
- ② **Check if telephone line cord is connected.**
- ③ **Use rechargeable Ni-MH batteries.**
(Alkaline/Manganese/Ni-Cd batteries CANNOT be used.)
- ④ Read **troubleshooting** page in the **Operating Instructions**.



If you still have any problems, please call the Panasonic DECT Helpline

0844 844 3898 (U.K.)

01289 8333 (Ireland)

or contact us through our website:

www.panasonic.co.uk

CE0470

Sales Department:

Panasonic Business Systems U.K.

Panasonic House, Willoughby Road, Bracknell, Berkshire, RG12 8FP

Panasonic System Networks Co., Ltd.

1-62, 4-chome, Minoshima, Hakata-ku, Fukuoka 812-8531, Japan

© Panasonic System Networks Co., Ltd. 2011



TG8051 E

PNQX3045ZA TC0111YK0 (A)