

Panasonic

Proprietary Telephone
for Electronic Modular Switching Systems

MODEL NO. **KX-T7050E**

Reference Manual



The KX-T7050E is compatible with the Panasonic Electronic Modular Switching Systems.

Please read before using.

Cautions

- The apparatus is designed to be installed and operated under controlled conditions of ambient temperature and a relative humidity not greater than 60%.
- Avoid installing the apparatus in damp or humid environments, such as bathrooms or swimming pools.
- 999 or 112 can be dialled on the apparatus after accessing the CO line for the purpose of making outgoing calls to the BT emergency service.
- During dialling, this apparatus may tinkle the bells of other telephones using the same line. This is not a fault and we advise you not to call Fault Repair Service.
- If the apparatus does not operate properly, disconnect the unit from the extension line cord and then connect again.
- **Power failure transfer**

Even if the KX-T7050E is connected to telephone line, it will not operate during a power failure.

For further details, see the Installation Manual.

APPROVED for connection to telecommunication systems specified in the instructions for use subject to the conditions set out in them.

S/1010/3/M/502123


Contents

Connection	4
Initial Setting	5
Location of Controls	6
Feature Descriptions	8
Operating Instructions	
for KX-T30810BE, KX-T61610BE or KX-T123210BE	9
for KX-T30810BE or KX-T61610BE	10
for KX-T123210BE	11
Wall Mounting	14
Others	15


This Telephone Set will not operate on the original version of KX-T30810BE. All the features described in this manual are available on the upgraded version of KX-T123210BE. Some of the features are not available on the other models (original version of KX-T61610BE/KX-T123210BE and upgraded version of KX-T30810BE/KX-T61610BE). For further details, please see the leaflet of "Information."

Connection

Connect as shown.

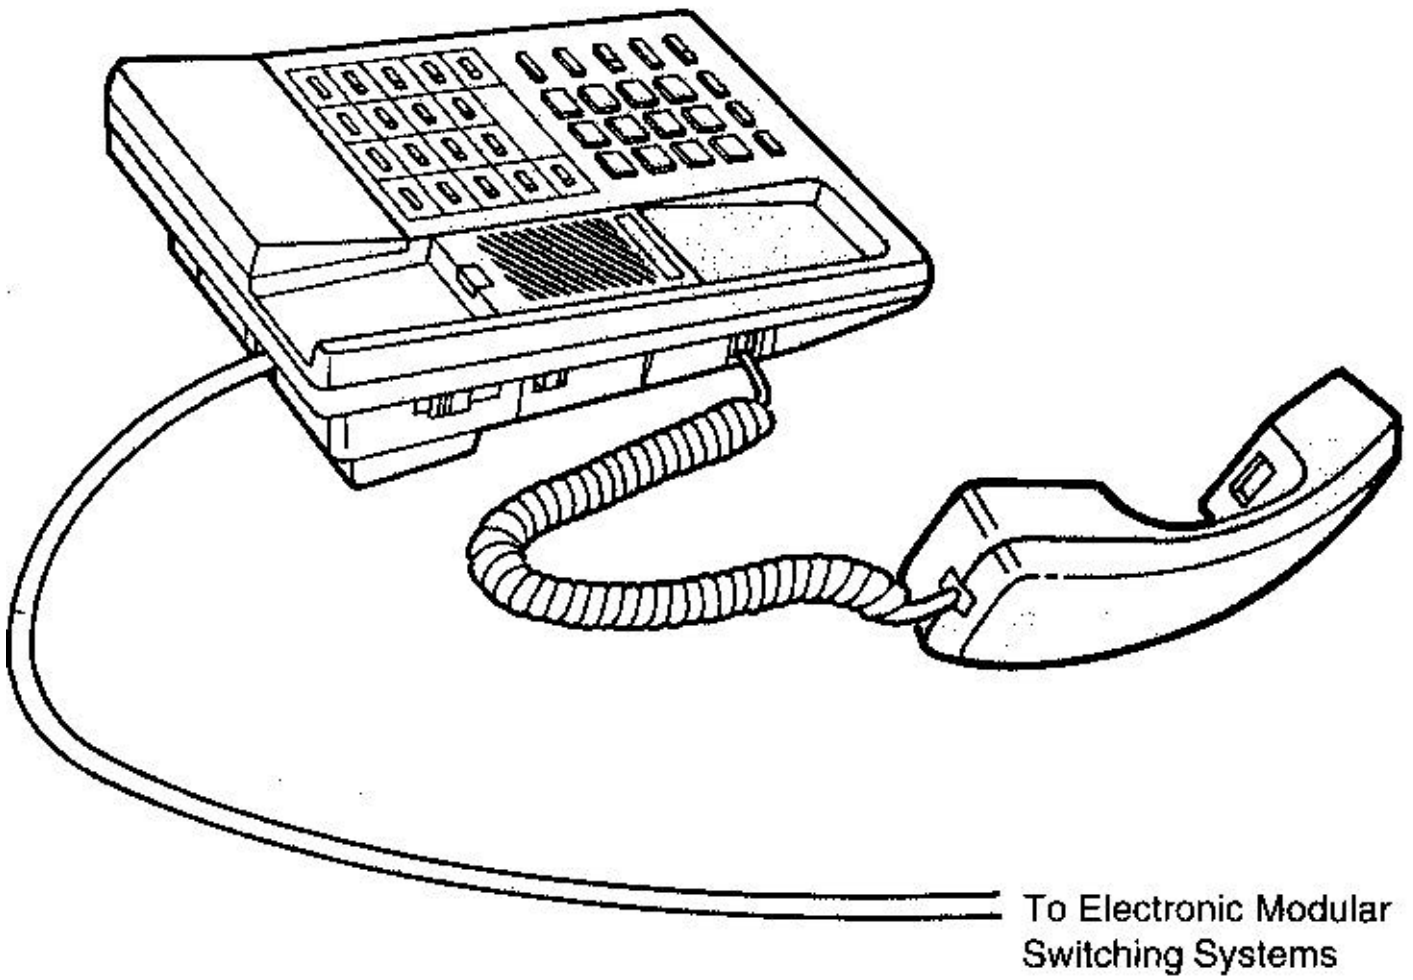

Initial Setting

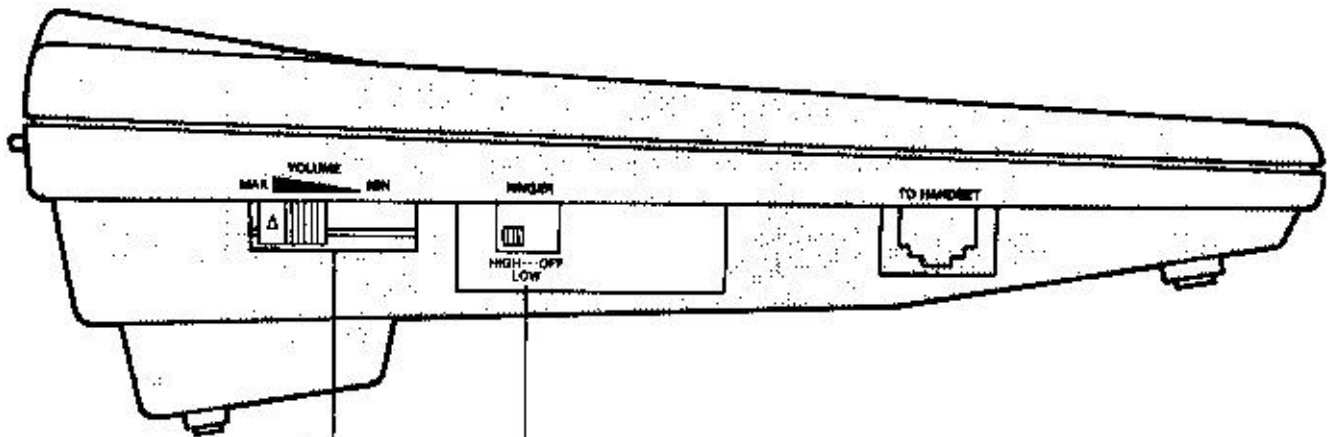

Ringer Volume Selector :

HIGH : The ringing sound will be loud.


LOW : The ringing sound will be soft.

OFF : The telephone will not ring.

VOLUME Control :

MAX : The volume will be loud.

MIN : The volume will be soft.

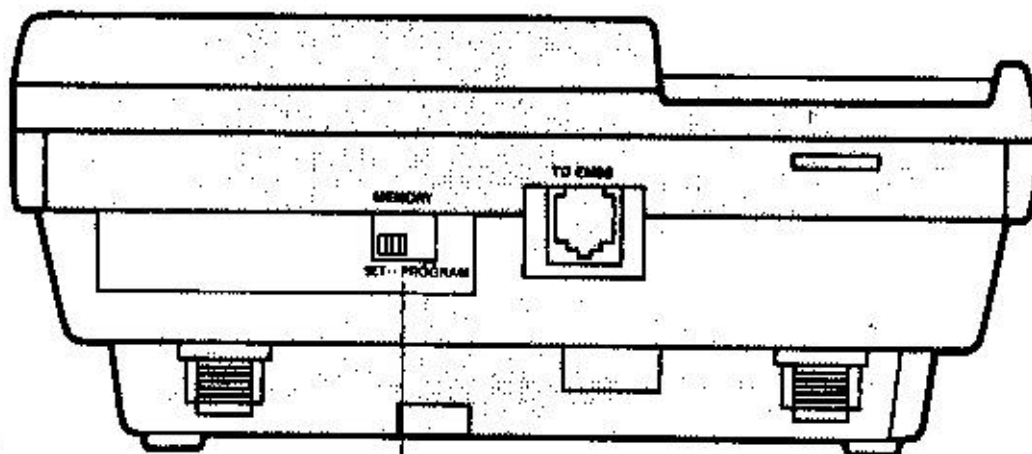


MEMORY Switch :

Set to "SET."

For station programming, set to "PROGRAM."

Location of Controls

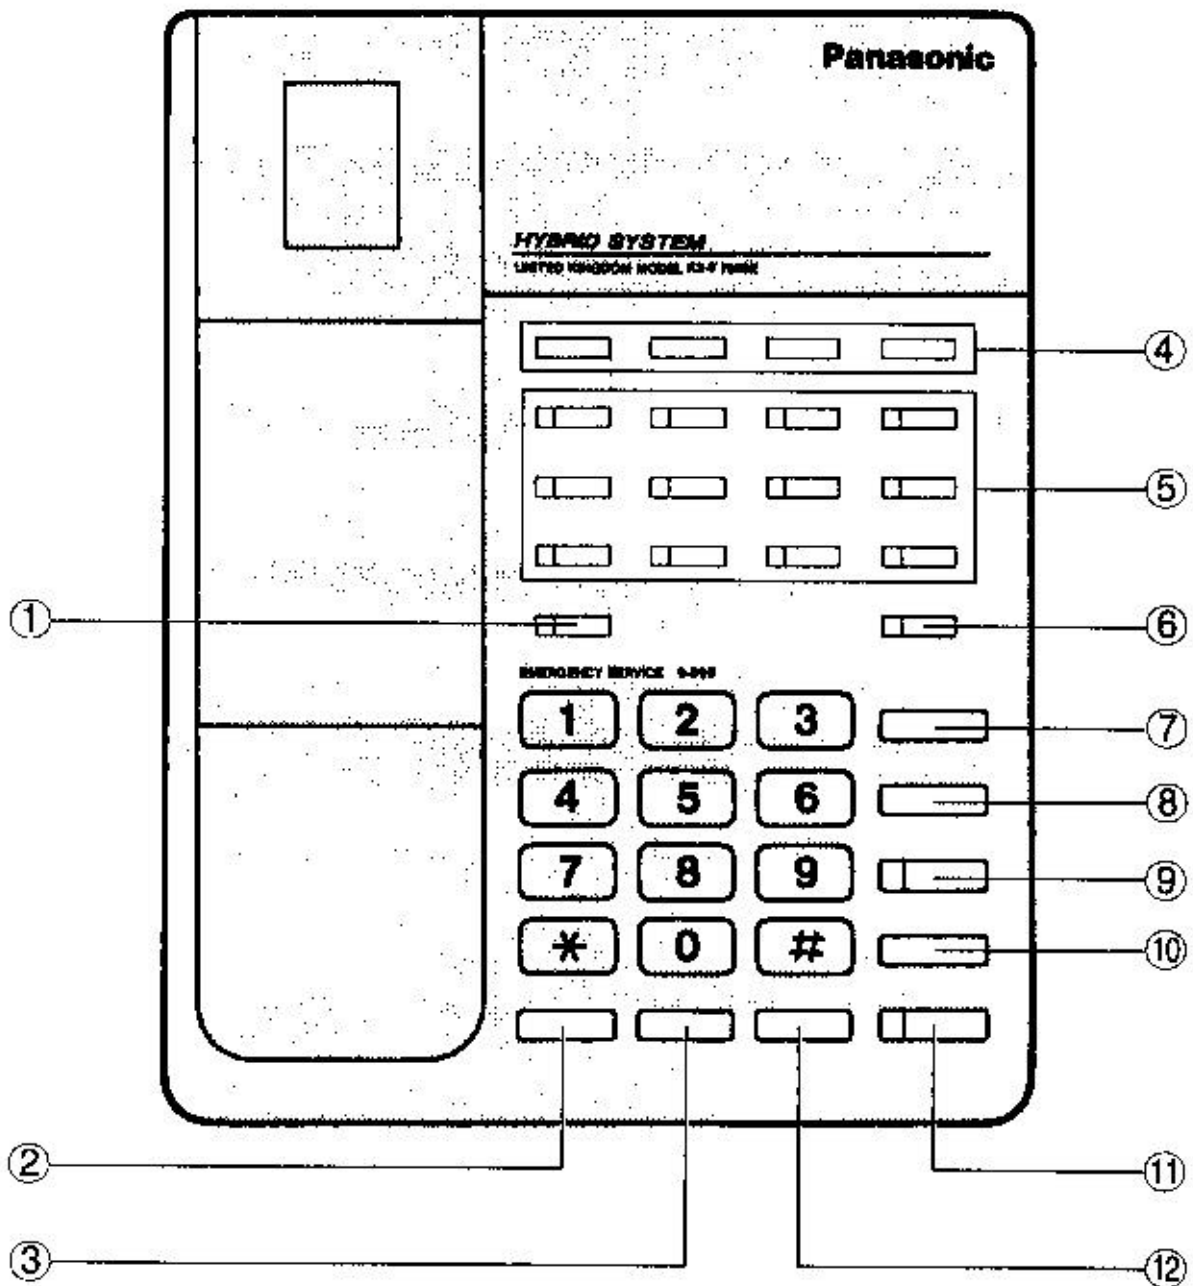

- The KX-T7050E is designed especially for the visually handicapped operators: TRANSFER button, SP-PHONE button, and dial key "5" of KX-T7050E have a raised pip to aid them to locate the buttons and keys.

① INTERCOM Button and Indicator:

Used to make or receive an intercom call.

② REDIAL Button:

Used to redial the last dialled number.

③ RECALL Button:

Used to send a recall signal to a Central Office line.

④ Programmable Feature Buttons:

Can be used as One-Touch Dialling buttons or system feature buttons.

⑤ Flexible CO Buttons and Indicators:

Can be used as CO, Direct Station Selection or One-Touch Dialling buttons.

⑥ Flexible MESSAGE Button and Indicator:

Can be used as Message Waiting, Direct Station Selection or a One-Touch Dialling button.

⑦ TRANSFER Button:

Used to transfer an outside or intercom call to another extension.

⑧ PAUSE Button:

Used to insert a pause in a speed dial number.

⑨ AUTO DIAL/STORE Button and Indicator:

Used before dialling a speed dial number. / In "PROGRAM" mode, used to store a station programming procedure in the memory at the end of operation.

⑩ CONFERENCE Button and Indicator:

Used to perform a three-party conference.

⑪ MONITOR Button and Indicator:

Used to make a phone call without using the handset.

⑫ HOLD Button:

Used to place a call on hold.

Feature Descriptions

■ Automatic Line Access

Allows you to select an unoccupied outside line automatically to make an outgoing call.

■ Call Forwarding (FWD)

Calls to your telephone set are automatically forwarded to another preset extension or outside party. The following types are available:

- FWD — All Calls

All calls are forwarded to another extension.

- FWD — Busy or No Answer

Calls are forwarded to another extension when you are busy or do not answer.

■ Conference

Allows you to make a three-inside-party conference.

■ Dial Call Pickup

Allows you to answer a call to any extension in your pickup group.

■ Directed Call Pickup

Allows you to answer a call from any extension.

■ Do Not Disturb

Your telephone set will not receive incoming calls.

■ F3-One-Touch Button Mode Selection*

Allows you to change the F3 button to Call Forwarding/Do Not Disturb (FWD/DND) button.

■ Flexible CO Button

Can be used as CO button with CO number different from the default or as DSS or One-Touch Dialling button.

■ Flexible MESSAGE Button

Can be used as Message Waiting, DSS or One-Touch Dialling button.

■ Individual Line Access

Allows you to select an outside line directly to make an outgoing call.

■ Last Number Redial

Redials the last dialed number.

■ One-Touch Dialling

Allows you to dial a stored phone number by pressing one button.

■ Paging

There are four paging types as follows:

- All Extensions
- Group
- External
- All Extensions and External

■ Paging and Transfer

Allows you to transfer a call to a paged person.

■ Paging Answer

Allows you to answer a page.

■ System Speed Dialling

Allows you to dial a stored phone number quickly.

Operating Instructions for KX-T30810BE, KX-T61610BE or KX-T123210BE

NOTE

Line access code: 9 or 81 through 83 for KX-T30810BE
9 or 81 through 86 for KX-T61610BE
9 or 81 through 88 for KX-T123210BE

Pressing the **MONITOR** button can perform handsfree dialling operation.

■ Automatic Line Access

- Lift the handset.
- Dial **9 + phone number**.

■ Call Transfer to Extension

- Screened

While having a conversation,

- Press **TRANSFER** button.
- Dial **extension number**, or press **DSS** button (if assigned).
- Wait for an answer and announce.
- Replace the handset.

- Unscreened

While having a conversation,

- Press **TRANSFER** button.
- Dial **extension number**, or press **DSS** button (if assigned).
- Replace the handset.

■ Conference

When talking with a party,

- Press **CONF** button. (The first party is placed on hold.)
- Dial the **next party's number**.
- Talk to the next party.
- Press **CONF** button. (A three-inside-party conference is now established.)

■ Flexible CO Button

Before programming,

- ◆ *Be sure your telephone is On-hook.*
- ◆ *Set the MEMORY switch to "PROGRAM."*

- To assign another CO number

- Press **CO** button.
- Dial **0**.
- Dial **new CO number**.
 - **1** through **3** for KX-T30810BE
 - **1** through **6** for KX-T61610BE
 - **01** through **12** for KX-T123210BE
- Press **STORE** button.

- To assign DSS function

- Press **CO** button.
- Dial **1 + extension number**.
- Press **STORE** button.

- To assign One-Touch Dialling function

- Press **CO** button.
- Dial **2 + line access code + phone number**.
- Press **STORE** button.

After programming,

- ◆ *Return the MEMORY switch to "SET."*

■ Flexible MESSAGE Button

Before programming,

- ◆ *Be sure your telephone is On-hook.*
- ◆ *Set the MEMORY switch to "PROGRAM."*

- To assign DSS function

- Press **MESSAGE** button.
- Dial **1 + extension number**.
- Press **STORE** button.

- To assign One-Touch Dialling function

- Press **MESSAGE** button.
- Dial **2 + line access code + phone number**.
- Press **STORE** button.

After programming,

- ◆ *Return the MEMORY switch to "SET."*

Operating Instructions for KX-T30810BE, KX-T61610BE or KX-T123210BE (Contd.)

■ Hold

- Press **HOLD** button.
- Retrieving an intercom call at the holding extension
 - Press **INTERCOM** button.
- Retrieving a CO call at the holding extension
 - Press the green flashing **CO** button.

■ Individual Line Access

- Lift the handset.
- Press **CO** button.
- Dial **phone number**.

■ Intercom Calling

- Lift the handset.
- Dial **extension number**, or press **DSS** button (if assigned).

■ Last Number Redial

- Lift the handset.
- Press **REDIAL** button.

■ One-Touch Dialling

Storing a phone number

Before programming,

- ◆ *Be sure your telephone is On-hook.*
- ◆ *Set the MEMORY switch to "PROGRAM."*

- Press a **programmable feature** button.
- Dial **line access code + phone number**.
- Press **STORE** button.

After programming,

- ◆ *Return the MEMORY switch to "SET."*

Dialling

- Lift the handset.
- Press a **programmable feature** button.

■ System Speed Dialling

- Lift the handset.
- Press **AUTO DIAL** button.
- Dial a **speed dial number**.

Operating Instructions for KX-T30810BE or KX-T61610BE

■ Call Forwarding - All Calls Setting

- Lift the handset.
- Press **71 + extension number + #**
- Replace the handset.

Cancelling

- Lift the handset.
- Dial **70#**.
- Replace the handset.

■ Dial Call Pickup

- Lift the handset.
- Dial **50**.
- Hear confirmation tone.
- Talk.

■ Directed Call Pickup

- Lift the handset.
- Dial **5 + extension number**.
- Hear confirmation tone.
- Talk.

■ Do Not Disturb

Setting

- Lift the handset.
- Dial **7120#**.
- Replace the handset.

Cancelling

- Lift the handset.
- Dial **70#**.
- Replace the handset.

Operating Instructions for KX-T30810BE or KX-T61610BE (Contd.)

■ Paging

- Paging All Extensions (Internal Page)

- Lift the handset.
- Dial **44**.
- Hear confirmation tone.
- Page.

- Group Paging (Internal Page)

- Lift the handset.
- Dial **group access number**.
 - **45**: for Group 1
 - **46**: for Group 2
 - **47**: for Group 3
(KX-T61610BE only)
 - **48**: for Group 4
(KX-T61610BE only)
- Hear confirmation tone.
- Page.

- External Paging

- Lift the handset.
- Dial **43**.
- Hear confirmation tone.
- Page.

■ Paging and Transfer

While having a conversation,

- Press **TRANSFER** button.
- Dial **paging access number**:
 - **44**: for Paging All Extensions
 - **43**: for External Paging
 - **45**: for Group 1
 - **46**: for Group 2
 - **47**: for Group 3
(KX-T61610BE only)
 - **48**: for Group 4
(KX-T61610BE only)
- Hear confirmation tone.
- Page.
- Wait for an answer.
- Replace the handset.

■ Paging Answer

- Lift the handset.
- Dial **51**.
- Hear confirmation tone.
- Talk.

Operating Instructions for KX-T123210BE

■ Call Forwarding

- ◆ *Set the F3 button to FWD/DND function previously. (See F3-One-Touch Button Mode Selection)*

Setting

- All Calls/Busy or No Answer

- Lift the handset.
- Press **F3** button.
- Dial **feature access code**:
 - **1**: for All Calls
 - **2**: for Busy or No Answer
- Dial **extension number + #**.
- Replace the handset.

Cancelling

- Lift the handset.
- Press **F3** button.
- Dial **0 + #**.
- Replace the handset.

■ Call Park

- To park a call

While having a conversation,

- Press **HOLD** button.
- Dial **50 + parking zone number** (0 through 9).
- Replace the handset.

- To retrieve a parked call

- Lift the handset.
- Dial **51**.
- Dial **parking zone number**.
- Hear confirmation tone.
- Talk.

Operating Instructions for KX-T123210BE (Contd.)

■ Dial Call Pickup

- Lift the handset.
- Dial **40**.
- Hear confirmation tone.
- Talk.

■ Directed Call Pickup

- Lift the handset.
- Dial **4 + extension number**.
- Hear confirmation tone.
- Talk.

■ Do Not Disturb

- ◆ *Set the F3 button to FWD/DND function previously. (See F3-One-Touch Button Mode Selection)*

Setting

- Lift the handset.
- Press **F3** button.
- Dial **4 + #**.
- Replace the handset.

Cancelling

- Lift the handset.
- Press **F3** button.
- Dial **0 + #**.
- Replace the handset.

■ F3-One-Touch Button Mode Selection

Setting the F3 button to FWD/DND function

Before programming,

- ◆ *Be sure your telephone is on-hook.*
- ◆ *Set the MEMORY switch to "PROGRAM."*

- Dial **72**.
- Press **STORE** button.

After programming,

- ◆ *Return the MEMORY switch to "SET."*

■ Paging

- All Extensions (Internal Page)

- Lift the handset.
- Dial **330**.

- Hear confirmation tone.
- Page.

- Group (Internal Page)

- Lift the handset.
- Dial **33 + extension group number (1 through 8)**.
- Hear confirmation tone.
- Page.

- External

- Lift the handset.
- Dial **32**.
- Dial **pager access number**.
 - **0**: for pagers 1 & 2
 - **1**: for pager 1
 - **2**: for pager 2
- Hear confirmation tone.
- Page.

- All Extensions and External

- Lift the handset.
- Dial **32*** or **33***.
- Hear confirmation tone.
- Page.

■ Paging and Transfer

While having a conversation,

- Press **TRANSFER** button.
- Dial **paging access number**:
 - **330**: for All Extensions
 - **331 through 338**:
for Group 1 through 8
 - **320 through 322**:
for External pager: all or 1 or 2
 - **32*** or **33***:
for All Extensions and External
- Hear confirmation tone.
- Page.
- Wait for an answer.
- Replace the handset.

Operating Instructions for KX-T123210BE (Contd.)


■ Paging Answer

- **To answer an internal page from the built-in speaker**
 - Lift the handset.
 - Dial **43**.
 - Hear confirmation tone.
 - Talk.


- **To answer an external page**
 - Lift the handset.
 - Dial **41**.
 - Dial **pager access number**.
 - 1: for pager 1
 - 2: for pager 2
 - Hear confirmation tone.
 - Talk.

Wall Mounting


- 1** Turn around the handset hook.

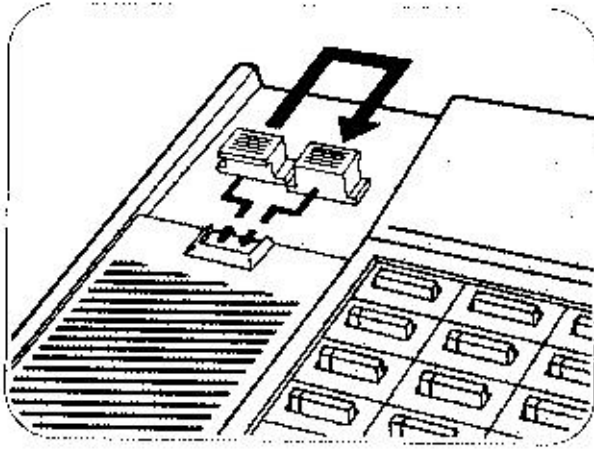


- 4** Place the stand.

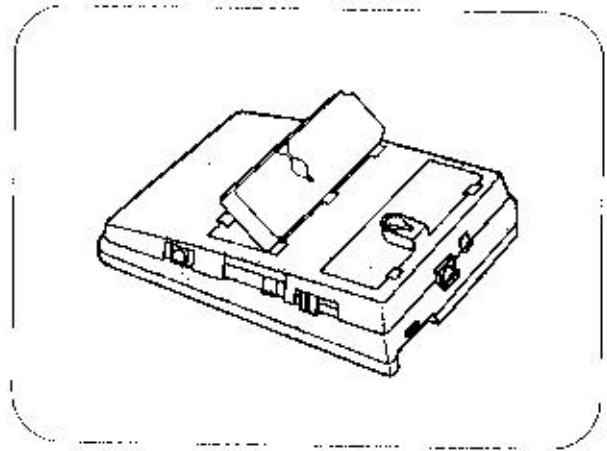


- 2** Remove the attaching stand.

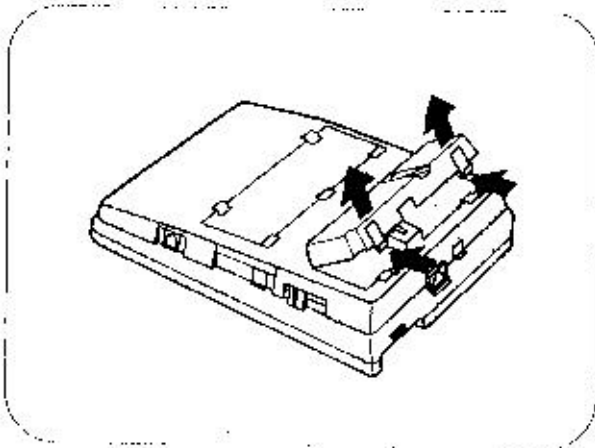


- 5** Mount the unit on the wall phone plate.

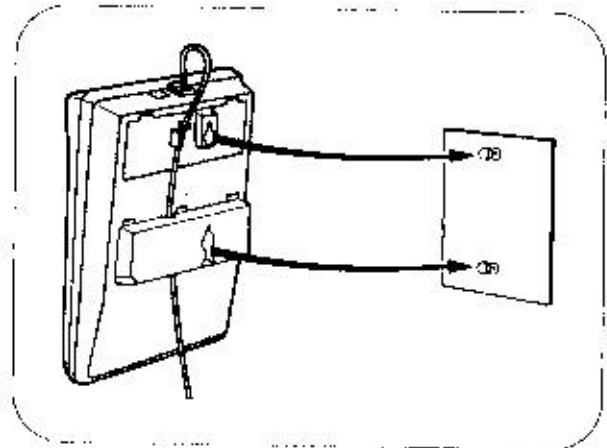

- 3** Rotate the stand in the direction of the arrow.

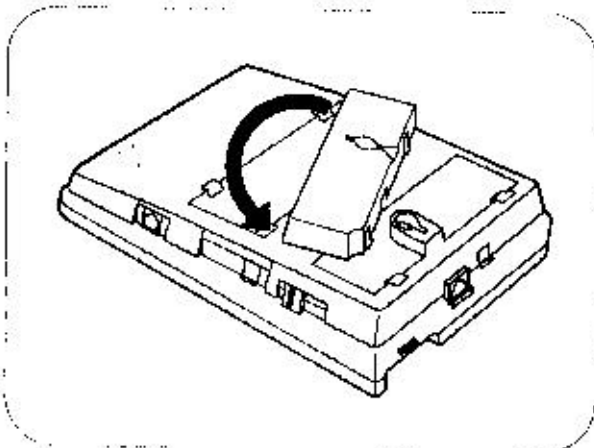


To temporarily place the handset down during a conversation, hook as shown.

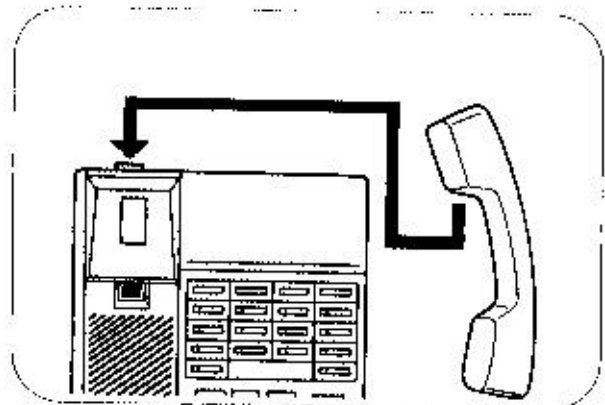


Others

- If there is any trouble, disconnect the unit from the extension line and connect a known working phone. If the known working phone operates properly, do not reconnect the unit to the extension line until the trouble has been repaired. If the known working telephone does not operate properly, check the Electronic Modular Switching System.


- Keep the unit away from heating appliances and electrical noise generating devices such as fluorescent lamps and motors.

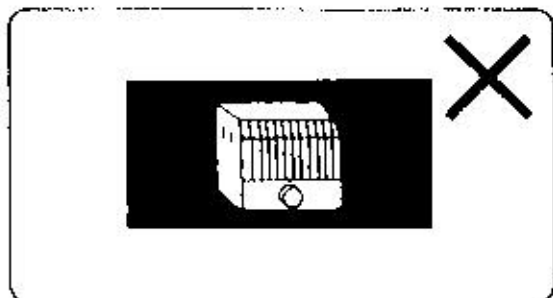

- The unit should be kept free of dust, moisture and vibration, and should not be exposed to direct sunlight.

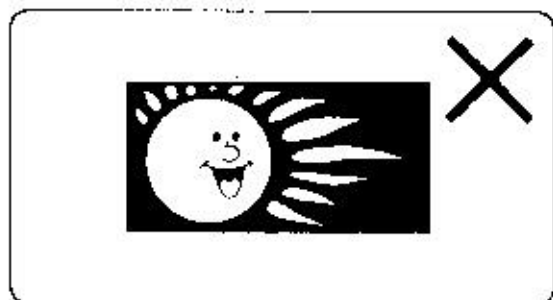

- Do not use benzine, thinner, or the like, or any abrasive power to clean the cabinet. Wipe it with a soft cloth.

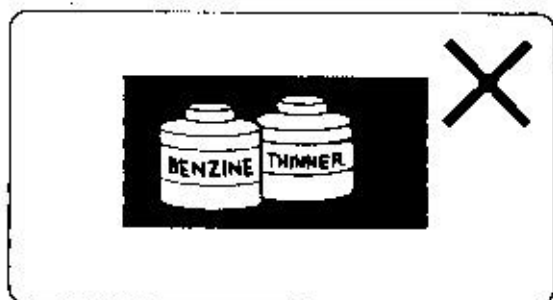

- This unit is capable of being used in conjunction with hearing aids fitted with inductive coil pick-ups. The handset should be held as for normal conversation. For operation the hearing aid should be set to its "T" position or as directed in the operating instructions for the hearing aid.



- KX-T7050E is designed to aid the visually handicapped to locate dial keys and buttons.

WARNING:

TO PREVENT FIRE OR SHOCK HAZARD, DO NOT EXPOSE THIS PRODUCT TO RAIN OR ANY TYPE OF MOISTURE.

Do not use any handset other than the Panasonic handset for model KXT 7050E

Panasonic Business Systems U.K.

Panasonic House, Willoughby Road, Bracknell,
Berkshire RG12 4FP

Printed in the United Kingdom

PQQX10148YB S0293M0