

# Gigaset

A510 - A510A

## Congratulations

By purchasing a Gigaset, you have chosen a brand that is fully committed to sustainability. This product's packaging is eco-friendly!

To learn more, visit [www.gigaset.com](http://www.gigaset.com).



GIGASET. INSPIRING CONVERSATION.  
**MADE IN GERMANY**



# Gigaset A510/A510A – your high-quality accessory

---

Congratulations on your purchase of this latest generation Gigaset.

Your Gigaset can do a lot more than just make calls:

## Directory for 150 entries

Save phone numbers and names to the directory (→ page 30). You can designate important entries as VIPs (Very Important Persons). VIP calls are then recognised by their ringtone and their background colour (→ page 31).

## If you don't (always) want it to ring

Use time control for calls (→ page 46) or ensure that all calls from a withheld number are not signalled (→ page 46).

## Other practical information

Transfer the directory from an existing Gigaset handset (→ page 31), use the shortcut function (→ page 31) and adjust the background colour and contrast of the display to your requirements (→ page 45).

## Environment

Gigaset Green Home – be environmentally aware when using your phone. For details of our ECO DECT products, visit [www.gigaset.com/service](http://www.gigaset.com/service).

For more information about your phone, visit [www.gigaset.com/gigasetA510](http://www.gigaset.com/gigasetA510).

**After purchasing your Gigaset phone, please register it at [www.gigaset.com/service](http://www.gigaset.com/service)** – this will ensure that any questions you may have or warranty services you request are dealt with even faster!

**Have fun using your new phone!**

# Overview



- 1 **Signal strength** (→ page 18)  
Icon changes when Eco Mode+ is activated (→ page 41)
- 2 **Control key** (→ page 20)  
Mute microphone (→ page 29)
- 3 **Talk/Handsfree key**  
Flashing: incoming call;  
Lights up: handsfree mode activated;  
accept call; open redial list (press briefly);  
start dialling (press and hold);  
During a call: switch between earpiece and  
handsfree mode (→ page 28)
- 4 **Key 1**  
Open answering machine (A510A only)/  
network mailbox (press and hold)
- 5 **Star key**  
Activate/deactivate ringtones  
(press and hold);  
With an open connection: switch from pulse  
dialling to tone dialling (press briefly)
- 6 **Message key** (→ page 32)  
Access to call and message lists;  
Flashing: new message or new call
- 7 **Microphone**
- 8 **Recall key**  
- Consultation call (flash)  
- Insert a dialling pause (press and hold)
- 9 **Hash key**  
Keypad lock on/off (press and hold in  
idle status);  
toggles between upper/lower case and digits
- 10 **End call key, On/Off key**  
End call; cancel function; go back one menu  
level (press briefly); back to idle status  
(press and hold); activate/deactivate handset  
(press and hold in idle status)
- 11 **Display keys** (→ page 4)
- 12 **Display in idle status**
- 13 **Charge status of the batteries**  
(→ page 18)
- 14 **Answering machine icon**  
(A510A only)  
Answering machine switched on;  
Flashing: answering machine is recording  
a message or is being operated by another  
internal party



**Please note**

To change the **display language**, proceed as described on page 15/page 45.

## Gigaset service contact numbers:

For personal advice on our range of products and for repairs or guarantee/warranty claims call:

**Service Centre UK: 0845 367 0812**  
(local call cost charge)

## Display icons

The following icons are displayed depending on the settings and the operating status of your telephone:

Signal strength **↑**) (→ page 18)  
 or Eco Mode + icon **Ⓟ** (→ page 41)

Keypad locked (→ page 22)

Ringtone switched off (→ page 46)

Answering machine activated (A510A only)

Batteries are charged (→ page 18)

Charge status of the batteries (→ page 18)

**INT 1** — Name of the handset (→ page 44)

**23.04. 10:53** — Current day/current time (→ page 16)

**INT 1**

**🕒 12:00 10:53** — Alarm clock switched on and wake-up time set (→ page 42)

**03 01** — Number of new messages:  
 ♦ **03** on the answering machine (A510A only)/network mailbox (→ page 32)  
 ♦ **01** in the missed calls list (→ page 32)

**Redial ◊ Menu** — Display keys (→ page 4)

### Display during external call:

**📞↔️📞** — Connection established

**1234567890** — Number (or name) of caller (→ page 27)

**00:00:53** — Call duration

**Menu** — Display key (→ page 4)  
 ♦ Set call volume (→ page 45)  
 ♦ Access service information

 
## Display keys

### Other display icons:

Establishing a connection



Connection established



Connection cannot be established or connection interrupted



External call (→ page 27)



Internal call (→ page 43)



Alarm call (→ page 42)



 
Answering machine is recording (→ page 35)



Information



Query



Please wait...



Action complete




Action failed



## Display keys

The functions of the display keys change depending on the particular operating situation. Examples:

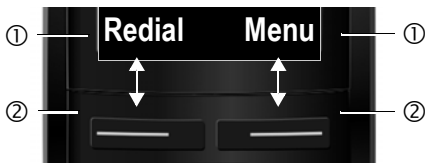





- ① Current display key function
- ② Display keys

Important display keys:

Redial	Open redial list.
Menu	Open a menu for further functions.
OK	Confirm selection.
Del.	Delete key: Delete character by character from right to left.
Back	Go back one menu level or cancel operation.
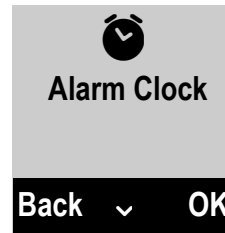
## Main menu icons



-  Alarm Clock
-  Voice Mail
-  Settings

Information on using the menus → page 21  
Menu overview → page 25

## Base overview

You can use the keys on the base to operate the integrated answering machine (Gigaset A510A only), search for handsets ("paging" → page 43) and register handsets to the base (→ page 42).

### Gigaset A510A base



- 1 **Registration/paging key**  
Search for handsets (press **briefly**, paging → page 43).  
Register handsets (press and **hold** → page 42).
- 2 **On/Off key**  
Activating/deactivating the answering machine.  
**Lights up:** answering machine is activated.  
**Flashes:** message is being played back or recorded.
- 3 **Volume keys** ([-] = quieter; [+] = louder)  
During message playback: adjust the speaking volume.  
While phone is ringing: adjust ringer volume.

#### 4 Play/stop key

Play back new message from answering machine (press **briefly**), play back all messages (press and **hold**) or cancel playback.

**Flashes:** at least one new message is present.

**Flashes very quickly:** memory is full.

#### During message playback:

- 5 Go to the next message.
- 6 Skip to the start of the current message (press once) or go to the previous message (press twice).
- 7 Delete current message.

#### Please note:

If the answering machine is being operated from a handset or if it is recording a message (On/Off key flashes), it cannot be operated from the base at the same time.

### Gigaset A510 base



#### Registration/paging key

- Press **briefly**: search for handsets ("paging") → page 43.
- Press and **hold**: register handsets and DECT devices → page 42.

# Contents

---

<b>Gigaset A510/A510A – your high-quality accessory</b> .....	<b>1</b>
<b>Overview</b> .....	<b>2</b>
<b>Display icons</b> .....	<b>3</b>
<b>Display keys</b> .....	<b>4</b>
<b>Main menu icons</b> .....	<b>4</b>
<b>Base overview</b> .....	<b>5</b>
<b>Safety precautions</b> .....	<b>9</b>
<b>First steps</b> .....	<b>10</b>
Checking the package contents .....	10
Setting up the base and charging cradle (if included) .....	11
Connecting the base .....	11
Connecting the charging cradle (if included) .....	12
Setting up the handset for use .....	13
Changing the display language .....	15
Setting the date/time .....	16
What would you like to do next? .....	19
<b>Using the phone</b> .....	<b>20</b>
Control key .....	20
Keys on the keypad .....	20
Correcting incorrect entries .....	20
Menu guidance .....	21
Activating/deactivating the handset .....	22
Activating/deactivating the keypad lock .....	22
Understanding the operating steps .....	23
<b>Menu tree</b> .....	<b>25</b>
<b>Making calls</b> .....	<b>27</b>
Making an external call .....	27
Ending a call .....	27
Accepting a call .....	27
Calling Line Identification .....	27
Notes on phone number display (CLIP) .....	28
Handsfree operation .....	28
Switching to mute .....	29
Automatic network provider preselection .....	29



<b>Using the directory and lists</b> .....	<b>30</b>
Directory .....	30
Redial list .....	32
Function of the message key .....	32
Answering machine list (Gigaset A510A only) .....	33
Calls list .....	34
<b>Operating the Gigaset A510A base answering machine</b> .....	<b>35</b>
Operation via the handset .....	35
Activating/deactivating call screening .....	37
Setting the recording parameters .....	38
Resetting fast access for the answering machine using key 1 .....	38
Operating when on the move (remote operation) .....	39
<b>Using the network mailbox</b> .....	<b>40</b>
Using fast access for the network mailbox .....	40
Viewing the network mailbox message .....	40
<b>ECO DECT</b> .....	<b>41</b>
<b>Using the handset as an alarm clock</b> .....	<b>42</b>
<b>Using multiple handsets</b> .....	<b>42</b>
Registering handsets .....	42
De-registering handsets .....	43
Locating a handset (paging) .....	43
Making internal calls .....	43
Listening in to an external call (conference) .....	44
Changing the name of a handset .....	44
<b>Handset settings</b> .....	<b>45</b>
Changing the display language .....	45
Setting the display/screensaver .....	45
Activating/deactivating auto answer .....	45
Changing the handsfree/earpiece volume .....	45
Changing ringtones .....	46
Restoring the handset default settings .....	47
<b>Base settings</b> .....	<b>47</b>
Changing the ringtones for the Gigaset A510A base .....	47
Activating/deactivating music on hold .....	47
Repeater support .....	47
Protecting against unauthorised access .....	48
Resetting the base to the default settings .....	48
<b>Connecting the base to the PABX</b> .....	<b>49</b>
Dialling mode and Flash time .....	49
Setting pauses .....	49
Switching temporarily to tone dialling (DTMF) .....	49

# Contents

<b>Service (Customer Care)</b> .....	<b>50</b>
Questions and answers .....	51
Authorisation .....	52
Guarantee Certificate	
United Kingdom .....	52
Guarantee Certificate	
Ireland .....	53
<b>Environment</b> .....	<b>54</b>
<b>Appendix</b> .....	<b>55</b>
Care .....	55
Contact with liquid .....	55
Specifications .....	55
Writing and editing text .....	57
<b>Accessories</b> .....	<b>58</b>
<b>Mounting the base on the wall</b> .....	<b>62</b>
<b>Mounting the charger on the wall</b> .....	<b>62</b>
<b>Index</b> .....	<b>63</b>

# Safety precautions

## Warning

Read the safety precautions and the user manual before use.

Explain their content and the potential hazards associated with using the telephone to your children.



Use only the power adapter supplied, as indicated on the underside of the base.



Use only **rechargeable batteries** that correspond to the **specification provided on page 55**, as this could otherwise result in significant health risks and personal injury.



Using your telephone may affect nearby medical equipment. Be aware of the technical conditions in your particular environment, e.g., doctor's surgery. If you use a medical device (e.g., a pacemaker), please contact the device manufacturer. They will be able to advise you regarding the susceptibility of the device to external sources of high frequency energy. Please refer to the "Appendix" chapter for the specifications of this Gigaset product.



Do not hold the rear of the handset to your ear when it is ringing or when speaker mode is activated. Otherwise you risk serious and permanent damage to your hearing.

Your Gigaset is compatible with the majority of digital hearing aids on the market. However, perfect function with all hearing aids cannot be guaranteed.

The handset may cause interference in analogue hearing aids. If you require assistance, please contact the hearing aid supplier.



Do not install the base or charger in bathrooms or shower rooms. The base and charger are not splashproof (→ page 55).



Do not use your phone in environments with a potential explosion hazard (e.g., paint shops).



If you give your phone to a third party, make sure you also give them the user manual.



Remove faulty bases from use or have them repaired by our Service team, as these could interfere with other wireless services.

## Please note

- ◆ Not all of the functions described in this user guide are available in all countries.
- ◆ The device cannot be used in the event of a power failure. It is also **not** possible to transmit **emergency calls**.

# First steps

---

## Checking the package contents



- 1 One Gigaset A510/A510A base
- 2 One power adapter for the base
- 3 One Gigaset handset
- 4 Two batteries
- 5 One battery cover
- 6 One phone cord
- 7 One user guide

If you have purchased a model with **multiple handsets**, the package should contain two batteries, a battery cover and a charging cradle **8** with power adapter **9** for each additional handset.



## Setting up the base and charging cradle (if included)

The base and charging cradle are designed for use in dry rooms in a temperature range of +5°C to +45°C.

- ▶ Set up the base at a central point in the building on a level, non-slip surface or mount the base or charger on the wall → page 62.

### Please note

Pay attention to the range of the base.

This is up to 300 m in unobstructed outdoor areas and up to 50 m inside buildings. The range is reduced when Eco Mode is activated (→ page 41).

The phone's feet do not usually leave any marks on surfaces. However, due to the multitude of different varnishes and polishes used on today's furnishings, the occurrence of marks on the surfaces cannot be completely ruled out.

### Please note:


- ◆ Never expose the telephone to the effects of heat sources, direct sunlight or other electrical devices.
- ◆ Protect your Gigaset from moisture, dust, corrosive liquids and fumes.

## Connecting the base


- ▶ **First** connect the telephone jack **1** and insert the cables into the cable ducts.
- ▶ **Then** connect the power adapter **2**.

### Please note:

- ◆ The power adapter must **always be connected**, as the phone will not operate without a mains connection.
- ◆ Use only the power adapter and phone cord **supplied**. Pin connections on telephone cables can vary (pin connections → page 57).
- ◆ The answering machine is ready for use **approx. 15 seconds** after the base has been connected or reset.

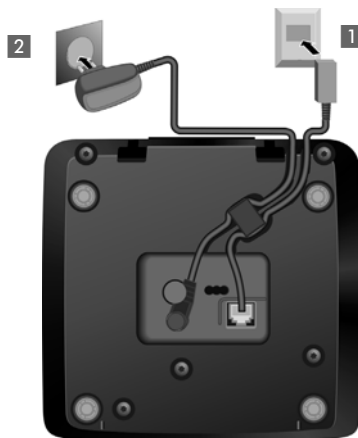


## Connecting the charging cradle (if included)

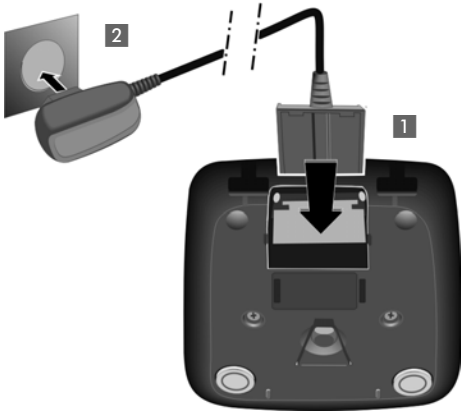

- ▶ Connect the flat plug from the power adapter **1**.
- ▶ Plug the power adapter into the plug socket **2**.

To disconnect the plug from the charger, press the release button **3** and disconnect the plug **4**.

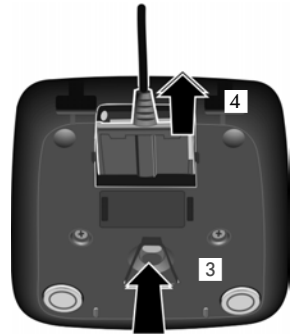

## Setting up the handset for use

The display is protected by a plastic film.  
Please remove the protective film!

### Inserting the battery and closing the battery cover

#### Warning

Use only rechargeable batteries (→ page 55) recommended by Gigaset Communications GmbH, as this could otherwise result in significant health risks and personal injury. For example, the outer casing of the batteries could be destroyed or the batteries could explode. The phone could also malfunction or be damaged as a result of using batteries that are not of the recommended type.

- ▶ Insert the batteries with the polarity in the correct direction. The polarity is indicated in the battery compartment.



- ▶ First insert the battery cover at the top **a**.
- ▶ Then press the cover **b** until it clicks into place.

To open the battery cover, for instance to replace the batteries, insert a coin into the cavity on the casing, then pull the battery cover in an upward direction.



## Initial charging and discharging of the batteries

The correct charge status can only be displayed if the batteries are first fully charged **and** discharged.

- ▶ Charge the handset in the base for **6 hours**.



### Please note

The handset must only be placed in the designated Gigaset A510/A510A base or charger.

- ▶ After charging, remove the handset from the base and only replace it when the batteries are **fully discharged**.

### Please note


- ◆ The handset is pre-registered with the base. If you have purchased a **model with multiple handsets**, all handsets will already be registered with the base. You do not need to register the handset again. However, if a handset is not registered with the base (**Register handset** or **Place handset into base** flashes on the display), please register the handset manually → page 42.
- ◆ After the first battery charge **and** discharge, you may place your handset in the charger after every call.
- ◆ Always repeat the charging and discharging procedure if you remove the batteries from the handset and reinsert them.
- ◆ The batteries may warm up during charging. This is not dangerous.
- ◆ After a while, the charge capacity of the batteries will decrease for technical reasons.

**If you have any questions about using your phone, please read the tips on troubleshooting (→ page 51) or contact our Customer Care team (→ page 50).**




## Changing the display language

Change the display language if you do not understand the language currently set.

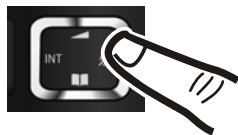

 
- ▶ Press right on the control key.
- ▶ Press the keys **6 MNO** and **4 GHI** **slowly** one after the other.



The display for setting languages appears and the current language (e.g., English) is selected.




- ▶ Press down on the control key  ...




... until the language you wish to use is displayed e.g., French.

- ▶ Press the key below **OK** to select this language.



The selection is marked with .


- ▶ Press and **hold** the end call key  to return to idle status.

## Setting the date/time

Set the date and time so that the correct date and time can be assigned to incoming calls, and so that the alarm clock can be used.


### Please note

Depending on your network provider, the date and time may be displayed automatically.

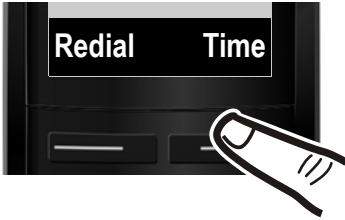


- ▶ Press the key below **Time** on the display screen to open the input field. (If you have already set the date/time, open the input field via the menu → page 26.)

 
The **Date/Time** submenu is shown on the display.



- ▶ The active input position flashes. Enter the day, month and year as an 8-digit number via the keypad, e.g.,         for 4 April 2011.

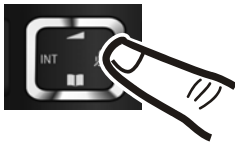

To change the input position, e.g., to correct an entry, press **right** or **left** on the control key.

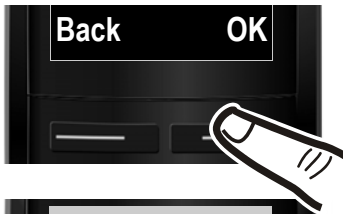

- ▶ Press the key below **OK** on the display screen to save your entry.



- ▶ Enter the hours and minutes in 4-digit format via the keypad, e.g.,     for 07:15 am. Change the input position with the control key if necessary.
- ▶ Confirm with **OK**.




## Display in idle status

Once the phone is registered and the time set, the screen display is as follows (example).

### Screen display

- ◆ Reception between the base and the handset:
  - Good to poor: 📶 📶 📶 📶
  - No reception: 📶
- ◆ Activating the answering machine:
  - 📞 Your answering machine is set with a prerecorded announcement.
- ◆ Charge status of the batteries:
  - 🔋 charged over 66%
  - 🔋 charged between 34% and 66%
  - 🔋 charged between 11% and 33%
  - 🔋 charged to below 11%
  - 🔋 flashes: battery almost empty (less than 10 minutes talktime)
  - 🔌 🔌 🔌 🔌 lit up: batteries charging
- ◆ INT 1  
Internal name of the handset (→ page 44)

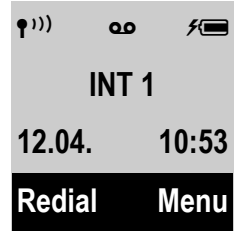









If **Eco Mode+** (→ page 41) is activated, the 📶 icon is displayed in the top left corner of the display.

**Your phone is now ready for use.**

## What would you like to do next?


Now that you have successfully set up your Gigaset, you can immediately start calling – or you can adapt it to your personal requirements. Use the following guide to quickly locate the most important functions.

<b>Information on ...</b>	<b>... is located here.</b>
<b>Using the phone</b>	 <b>page 20</b>
<b>Setting ringtones</b>	 <b>page 46</b>
<b>Recording your own announcement for the answering machine</b>	 <b>page 35</b>
<b>Registering existing Gigaset handsets to a base</b>	 <b>page 42</b>
<b>Transferring directory entries from existing Gigaset handsets to new handset(s)</b>	 <b>page 31</b>
<b>Setting Eco Mode / Eco Mode+</b>	 <b>page 41</b>
<b>Operating the telephone on a PABX</b>	 <b>page 49</b>
<b>Setting the earpiece volume</b>	 <b>page 45</b>

## Using the phone

---





### Control key

In the description below, the side of the control key (up, down, right, left) which you have to press in the different operating situations is marked in black e.g.,  for "press the right edge of the control key".



The control key has a number of different functions:





#### When the handset is in idle status

-  Open the main menu.
-  Open the directory.
-  Open the list of handsets.
-  Call up the menu for setting the handset's call volume (→ page 45).





#### In menus and lists

- / Scroll up/down line by line.





#### In input fields

You can use the control key to move the cursor up , down , right  or left .

#### During an external call

-  Mute the microphone.
-  Open the directory.
-  Initiate an internal consultation call.
-  Adjust the loudspeaker volume for earpiece and handsfree mode.

### Keys on the keypad

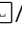- // etc.  
Press the matching key on the handset.
-  Enter digits or letters.

### Correcting incorrect entries


You can correct incorrect characters in the input fields by navigating to the incorrect entry using the control key. You can then:

- ◆ Use the display key **Del.** to delete the character to the left of the cursor
- ◆ Insert characters at the cursor position
- ◆ Overwrite the highlighted (flashing) character e.g., when entering time and date.


## Menu guidance

Your telephone's functions are accessed via a menu consisting of several levels (menu overview → page 25).



### Main menu (first menu level)

- ▶ With the handset in idle status, press the display key **Menu** or right on the control key  to open the main menu.

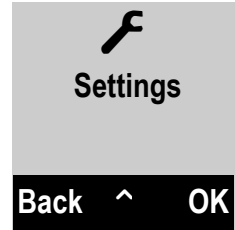The functions in the main menu are displayed in the form of a list with names and icons (example on the right).



### Selecting a function


- ▶ You can scroll between functions using the control key . The selectable function is shown in the display.
- ▶ Press the display key **OK** or right on the control key  to select the displayed function. This opens the corresponding submenu and the first entry is displayed.


If you press the display key **Back** or **briefly** press the end call key , the display returns to idle status.

### Submenus

The functions in the submenu are displayed with the corresponding names.

### Selecting a function


- ▶ You can scroll between functions using the control key . The relevant function is shown in the display.
- ▶ Press the display key **OK** to select the displayed function. This opens the corresponding submenu and the first entry is displayed.

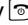If you press the display key **Back** or **briefly** press the end call key , you return to the previous menu level or cancel the operation.

Any settings you have not confirmed by pressing **OK** will be discarded.

### Reverting to idle status

From any point in the menu:

- ▶ Press and **hold** the end call key  or
- ▶ Do not press any key: after 2 minutes, the display will **automatically** revert to idle status.

An example of the display in idle status is shown on page 18.

## Activating/deactivating the handset




In idle status, press and **hold** the end call key (confirmation tone).

## Activating/deactivating the keypad lock

The keypad lock prevents any unwanted use of the phone.



In idle status, press and **hold** the hash key (confirmation tone).

The keypad lock is activated or deactivated. When it is switched on, the  icon appears in the display.

If the keypad lock is activated, a corresponding message is displayed when you press a key.

The keypad lock deactivates automatically when you receive a call. It is reactivated when the call is finished.

### **Please note**

When the keypad lock is active, you cannot call emergency numbers.




## Understanding the operating steps

The operating steps are shown in abbreviated form, for example:


**Menu** ▶ **Settings** ▶ **Eco Mode+** (☑ = on)

▶ This means you should proceed as follows:

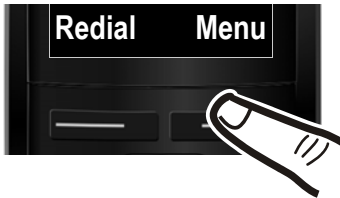

▶ Press the key below **Menu** on the display screen to open the main menu.




▶ Press down on the control key  ...



... until the **Settings** menu item appears.

▶ Press the key below **OK** on the display screen to confirm your selection.



▶ Press down on the control key  ...




... until the **Eco Mode+** menu item appears.

- ▶ Press the key below **OK** on the display screen to switch the function on or off (☑ = on).

- ▶ Press the key below **Back** on the display screen to jump back to the previous menu level.

**Or**

Press and **hold** the end call key  to return to idle status.

# Menu tree

The menu entries are partially subdivided. The page numbers refer to the relevant description in the user guide.

To open the main menu: press the display key **Menu** when the phone is in idle mode.

## Alarm Clock

Activation	→ page 42
Wake up time	→ page 42

## Voice Mail

Play Messages	Network Mailbox **	→ page 40
	Answer Machine **	→ page 35
Answerphone *	→ page 35	
Call Screening *	Handset	→ page 37
	Base	
Announcements *	Record Announcement	→ page 35
	Play Announcement	→ page 35
	Delete Announcement	→ page 36
Message Length *	Unlimited	→ page 38
	1 Minute	
	2 Minutes	
	3 Minutes	
Ring Delay *	Immediately	→ page 38
	10 sec	
	18 sec	
	30 sec	
	Auto	
Network Mailbox	→ page 40	
Set Key 1 *	Network Mailbox	→ page 40
	Answer Machine	→ page 40

\* Base **with** answering machine only

\*\* Base **with** answering machine **and** number of network mailbox is already entered


 **Settings**

Date/Time	→ page 16	
Audio Settings	Call Volume	→ page 45
	Ringer Volume	→ page 46
	Advisory Tones	→ page 47
	Battery Low	→ page 47
	Ringtones (Handset)	→ page 46
	Ringtones (Base)	→ page 47
Display	Screensaver	→ page 45
	Colour Schemes	→ page 45
	Contrast	→ page 45
Language	→ page 45	
Registration	Register Handset	→ page 42
	De-register Handset	→ page 43
Telephony	Auto Answer	→ page 45
	Listening in	→ page 44
	Calls List Type	→ page 34
	Preselection	→ page 29
	Music on hold	→ page 47
System	Reset Handset	→ page 47
	Base Reset	→ page 48
	Repeater Mode	→ page 47
	System PIN	→ page 48
Eco Mode	→ page 41	
Eco Mode+	→ page 41	



## Making calls


### Making an external call

External calls are calls using the public telephone network.

 Enter the number and press the talk key.

Or:

 Press and **hold** the talk key  and then enter the number.


You can cancel the dialling process with the end call key .

You are shown the duration of the call while the call is in progress.


#### Please note


Dialling with the directory (→ page 30), calls list (→ page 34) and redial list (→ page 32) saves you from repeatedly keying in phone numbers.

### Ending a call

 Press the end call key.

### Accepting a call

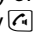The handset indicates an incoming call in three ways: by ringing, by a display on the screen and by the flashing talk key .

To accept the call, press the talk key .

Gigaset A510A: Instead of accepting the call, you can also redirect it to the answering machine:

**Menu** ▶ **Divert to AM** ▶ **OK**

If the handset is in the charger and the **Auto Answer** function is activated (→ page 45), the handset automatically answers calls when you remove it from the base/charger.

If the ringer is intrusive, you can deactivate it:

**Menu** ▶ **Silent** ▶ **OK**

You can accept the call as long as it is displayed on the screen.


## Calling Line Identification

When you receive a call, the caller's number is displayed on the screen if the following prerequisites are met:

- ◆ Your network provider supports CLIP, CLI.
  - CLI (Calling Line Identification): The caller's number is transmitted.
  - CLIP (Calling Line Identification Presentation): The caller's number is displayed.
- ◆ You have requested CLIP from your network provider.
- ◆ The caller has requested CLI from the network provider.

### Call display with CLIP/CLI

If the caller's number is saved in your directory, the caller's name will be displayed.

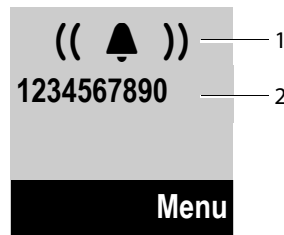

- 1 Ringer icon
- 2 Number or name of caller

The following is displayed instead of the number:

- ◆ **External Call**, if no number is transmitted.
- ◆ **Withheld**, if the caller has withheld Calling Line Identification.
- ◆ **Unavailable**, if the caller has not arranged Calling Line Identification.

#### Please note

The ringer can be switched off for unknown calls (calls with Calling Line Identification withheld) (→ page 46).

## Notes on phone number display (CLIP)

---

By default, the number of the caller is shown in the display of your Gigaset telephone. You do not have to make any other settings on your Gigaset telephone.

**However, if the caller's number is not displayed, this can be due to the following:**

- ◆ You have not ordered CLIP from your network provider
- ◆ Your telephone is connected via a PABX or a router with an integrated PABX (gateway) that does not transmit all information.

### Is your telephone connected via a PABX/gateway?

You can establish this by checking for an additional device connected between your telephone and home connection, e.g., a PABX, gateway etc. In most cases, simply resetting this device will remedy the situation:

- ▶ Briefly disconnect the PABX power plug. Re-insert the plug and wait for the device to restart.

### If the caller number is still not displayed:

- ▶ Check the CLIP (phone number display) settings of your PABX and activate this function if necessary. In the user manual for the device, search for the term "CLIP" (or an alternative term such as "calling line identification", "phone number transmission", "caller ID" etc.). If necessary, contact the device manufacturer.

If this does not resolve the problem, it is possible that your network provider does not provide the CLIP service for this number.

## Have you requested the phone number display service from your network provider?

- ▶ Check whether your provider supports phone number display (CLIP) and that the function has been activated for you. If necessary, contact your provider.

Additional information on this subject can be found on the Gigaset website at: [www.gigaset.com/service](http://www.gigaset.com/service)

## Handsfree operation

---

In handsfree mode, you activate the loudspeaker so that you can hear the caller without having to hold the handset to your ear. You therefore have both hands free and other people can listen in on the conversation.

### Please note

Inform your caller before you use the handsfree function so that the caller knows a third party may be listening.

## Activating/deactivating handsfree mode

---

During a call and when listening to the answering machine (Gigaset A510A only), activate or deactivate handsfree mode.

- ☒ Press the handsfree key. Each key press switches between earpiece and handsfree mode. If handsfree mode is activated, the key is lit up.


If you wish to place the handset in the charger during a call:

- ▶ Press and hold handsfree key ☒ while placing the handset in the base/charger and for a further 2 seconds.

For instructions on adjusting the handsfree volume, see page 45.

## Switching to mute

You can deactivate your handset's microphone during a call.

-  Press **right** on the control key to mute the handset. The display shows **Microphone is switched off**.  
Press the key again to unmute the microphone.

## Automatic network provider preselection

You can store a call-by-call number (preselection number), which is **automatically** placed in front of numbers when you dial them.

In the **With Preselection** list, specify the dialling codes or the first digits of the dialling codes that you wish to assign to the preselection number.

In the **Without Preselection** list, enter the exceptions to the **With Preselection** list.

### Examples:


Preselection Number	0999
With Preselection	08
Without Preselection	081 084

All numbers that start with 08, except for 081 and 084, are dialled with the preselection number 0999.

Phone number	Dialled number
07112345678	▶ 07112345678
<b>08912345678</b>	▶ <b>0999</b> 08912345678
<b>08412345678</b>	▶ 08412345678

## Storing preselection numbers

**Menu** ▶ **Settings** ▶ **Telephony**  
▶ **Preselection** ▶ **Preselection Number**

 Enter or change the preselection number (call-by-call number).


**OK** Press the display key.


## Save or change entries in the preselection lists

Each of the two lists can contain 11 entries, each with 4 digits.

Depending on the country, numbers may be preset in the "**With Preselection**" list. This means, for example, that all national calls or calls to the mobile network are **automatically** linked to the preselection number you have stored previously.



**Menu** ▶ **Settings** ▶ **Telephony**  
▶ **Preselection** ▶ **With Preselection / Without Preselection**

 Select entry.

 Enter or edit first digits of number.

**OK** Press the display key.

## Temporarily cancelling preselection

 (press and hold) ▶ **Menu**  
▶ **Automatic Preselect off**  
▶  (dial number)

## Permanently deactivating preselection

**Menu** ▶ **Settings** ▶ **Telephony**  
▶ **Preselection** ▶ **Preselection Number**

**Del.** Press and hold the display key until the preselection number is deleted.

**OK** Press the display key.

## Using the directory and lists

---

The options are:

- ◆ Directory
- ◆ Redial list
- ◆ Calls lists
- ◆ Answering machine list  
(Gigaset A510A only)

You can create a personalised directory for your own individual handset. You can also send lists/entries to other handsets (→ page 31).

## Directory

---


You can save a total of 150 entries in the directory.

### Please note

To quickly access a number from the directory (shortcut), you can assign the number to a key (→ Using speed dial keys, page 31).

In the **directory**, you can save

- ◆ Numbers and corresponding names
- ◆ VIP ringtones and colours.

You open the directory in idle status using the  key.


### Length of the entries


Number: max. 32 digits  
Name: max. 16 characters

## Saving the first number in the directory

---

 ▶ Dir. empty New Entry?


 Enter the number and press **OK**.


 Enter the name and press **OK**.

## Storing a number in the directory

---

 ▶ **Menu** ▶ New Entry

 Enter the number and press **OK**.

 Enter the name and press **OK**.

## Order of directory entries

---

Directory entries are generally sorted alphabetically by surname. Spaces and digits take first priority.

The sort order is as follows:

1. Space
2. Digits (0–9)
3. Letters (alphabetical)
4. Other characters



To work round the alphabetical order of entries, insert a space or a digit before the first letter of the name. These entries will then move to the beginning of the directory.

## Selecting directory entries

---

 Open the directory.

You have the following options:

- ◆ Use  to scroll through the entries until the required name is selected.
- ◆ Enter the first character of the name, if necessary scroll to the entry with the  key.

## Dialling with the directory

---

 ▶  (Select entry)


 Press the talk key.




## Managing directory entries

 ▶  (Select entry)


**Menu** Press the display key.

The following functions can be selected with :

### VIP Caller Melody

Mark a directory entry as a VIP (Very Important Person) by assigning a specific ringtone to it. The entry is flagged with the  icon in the directory. You recognise VIP calls by the ringtone.

### VIP Caller Colour


Mark a directory entry as a VIP (Very Important Person) by assigning a specific background colour to it. The entry is displayed with this background colour in the address book and marked with the  icon. VIP calls are then recognised by their background colour.

### Edit Entry

Edit the number if required and press **OK**.

Edit the name if required and press **OK**.

### Use Number

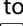Edit or add to a saved number and then dial it with  or save it as a new entry; to do so, display the number and press:

**Menu** ▶ **Copy to Directory** ▶ **OK**

### Delete Entry

Delete selected entry.

### Send Entry

Send a single entry to a handset  
(→ Transferring the directory to another handset, page 31).

### Delete List

Delete **all** directory entries.

### Send List



Send the entire directory to a handset  
(→ Transferring the directory to another handset, page 31).



### Shortcut


Assign the current entry as a shortcut to a selected key (→ Using speed dial keys, page 31).

## Using speed dial keys

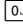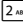You can assign directory entries to the keys

 and :

 ▶  (select entry) ▶ **Menu**

▶ **Shortcut** ▶  (press the key you want to assign the number to)



**To dial**, press and **hold** the required speed dial key.

## Transferring the directory to another handset


You can transfer directory entries from other handsets to your new handset – even entries from old handsets.

### Prerequisites:

- ◆ The sending and receiving handsets must both be registered to the same base.
- ◆ The other handset and the base can send and receive directory entries.

 ▶  (Select entry) ▶ **Menu** (Open menu)

▶ **Send Entry / Send List**

 Select the internal number of the receiving handset and press **OK**.

You can transfer several individual entries one after the other by responding to the **Entry copied. Next entry?** prompt with **OK**.

A message appears on the display to confirm a successful transfer. You will hear the confirmation tone.

### Please note:

- ◆ Entries with identical numbers are not overwritten on the receiving handset.
- ◆ The transfer is cancelled if the phone rings or if the memory of the receiving handset is full.
- ◆ VIP melodies and colours assigned to entries are not transferred.

### Adding a displayed number to the directory

---

You can copy numbers displayed in a list, e.g., the calls list or redial list, to the directory.

A number is displayed:

#### **Menu** ▶ Copy to Directory



- ▶ Complete the entry (→ Storing a number in the directory, page 30).

Gigaset A510A: Message playback is interrupted during the number transfer from the answering machine list.

### Copying a number from the directory

---

In some operating situations you can open the directory to copy a number (e.g., during an external call or in pre-dialling mode). Your handset need not be in idle status.

-  Open the directory.
-  Select an entry and press **OK**.




### Redial list

---

The redial list contains the ten numbers last dialled with the handset (max. 32 numbers). If one of the numbers is in the directory, the corresponding name will be displayed.



### Manual redial


---

-  Press the talk key **briefly**  
**Or**
- Redial** Press the display key.
-  Select entry.
-  Press the talk key. The number is dialled.

### Managing entries in the redial list

---

-  Press the talk key **briefly**  
**Or**
- Redial** Press the display key.
-  Select entry.
- Menu** Open menu.

The following functions can be selected with :

#### **Use Number**

(As in the directory, → page 31)

**Copy to Directory** (→ Storing a number in the directory, page 30)

#### **Delete Entry**

Delete selected entry.

#### **Delete List**


Delete **all** entries in the redial list.

### Function of the message key

---

#### Opening lists



---

Use the message key  to open the following lists:

- ◆ Network mailbox or answering machine list (Gigaset A510A only), if your network provider supports this function and fast access is set for the network mailbox (→ page 40).
- ◆ Calls list

An advisory tone sounds as soon as a **new entry** arrives in a list.

Depending on the type of the new entry, an icon appears in the display while in **idle status**:


- | Icon  | New message ...  |
|---|--|
|  | ... in the answering machine list (Gigaset A510A only) or on the network mailbox |
|  | ... in the <b>missed calls</b> list  |

The number of **new** entries is displayed under the corresponding icon.



### Please note

If calls are saved in the network mailbox, you will receive a message if the list type has been set accordingly (see your network provider user guide).


After pressing the message key , you can see all lists containing messages and the network mailbox list.

The list is displayed with the number of new entries (1) and the number of old, read entries (2) (example):

 


Select a list with . To open, press **OK**.

## Activating/deactivating flashing message key

You can specify whether you want the message key  to flash for new messages (default setting). Proceed as follows:

- ▶ Press the following keys in sequence:



You will see:

**97**

- ▶ Press one of the following keys to select the type of message:




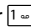
for missed calls



for messages on the answering machine (Gigaset A510A only)/network mailbox

Your selection is displayed (e.g., 5 for missed calls), the current setting flashes:

**975 SET: [0]**

- ▶ Press  or  to determine the setting for new messages:



The message key flashes (it goes off when the key is pressed)



The message key does not flash

Your selection is displayed (e.g., 1):

**975 SET: [1]**

- ▶ Press the display key **OK**.

## Answering machine list (Gigaset A510A only)

You can use the **answering machine list** to listen to the messages that are on the answering machine (→ page 36).


### Calls list

---

**Prerequisite:** Calling Line Identification Presentation (CLIP, page 27)

Depending on the type of list, the calls list contains the last 25 numbers of

- ◆ All calls
  - Accepted calls
  - Unanswered calls
  - Calls recorded by the answering machine (Gigaset A510A only)
- ◆ Missed calls
  - Unanswered calls and
  - Calls not recorded by the answering machine (Gigaset A510A only)


In idle status, you can open the calls list by pressing the message key .

### Setting the calls list type

---

**Menu** ▶ **Settings** ▶ **Telephony**  
▶ **Calls List Type**

#### Missed Calls / All Calls

Select and press **OK** ( = on).



Press and **hold** (idle status).

The calls list entries are retained when you change the list type.

### List entry


---

Example of list entries:

<b>New Call</b>	<b>02</b>
<b>1234567890</b>	
<b>28.06.</b>	<b>08:34</b>
<b>Back</b>	<b>^ Menu</b>

- ◆ Status of entry
  - **New Call:** New missed call.
  - **Old Call:** Entry already read.
  - **Call recv.:** Call was answered.
  - **Answer M** (Gigaset A510A): the answering machine accepted the call. A message was left.

- ◆ Entry number
- ◆ Number or name of caller
- ◆ Call date and time (if set, → page 16).

Press the talk key  to call the selected caller back.

Use the **Menu** display key to select the following options:

#### Delete Entry

Delete selected entry.

**Copy to Directory** (→ Storing a number in the directory, page 30)

#### Delete List

Delete **all** entries in the list.

After exiting the calls lists, all viewed entries are assigned the status "old".


## Operating the Gigaset A510A base answering machine

---

You can operate the answering machine via the handset, the buttons on the base (→ page 5) or by remote control (from another phone/mobile phone). You can record your own announcements using the handset.

### Operation via the handset

---


The handset loudspeaker activates **automatically** if you receive an acoustic prompt or message while operating. You can switch it off with the handsfree key .

### Switching the answering machine on/off

---

**Menu** ▶ **Voice Mail** ▶ **Answerphone** (= on)

If the message memory is full, the answering machine cannot be activated. You will receive an instruction to delete old messages.

When you switch the answering machine on, the remaining memory time is announced. If the time has not yet been set, a corresponding announcement is made (set time → page 16). The  icon appears in the display.

The telephone is supplied with a pre-recorded announcement. This pre-recorded announcement is used if no personal announcement is available.

### Recording an announcement

---

**Menu** ▶ **Voice Mail** ▶ **Announcements**

▶ **Record Announcement**

▶ **Press OK, talk after tone**


**OK** Press the display key to start the recording.

You hear the ready tone (short tone).

▶ Now say your announcement (at least 3 secs.).

Just as if making a call via the earpiece, place the telephone against your ear and speak into the microphone at a normal volume.

**OK** Press the display key to end the recording.

Cancel the recording with  or **Back**. Restart the recording with **OK**.

After recording, the announcement is played back for you to check.

#### Please note:

- ◆ Recording ends automatically if the maximum recording time of 170 seconds is exceeded or there is a break in speech for more than 2 seconds.
- ◆ If you cancel the recording, the pre-recorded announcement is used.

### Playing back an announcement

---

**Menu** ▶ **Voice Mail** ▶ **Announcements**

▶ **Play Announcement**

If you have not recorded a personal announcement, the pre-recorded announcement is played.

## Deleting an announcement

**Menu** ▶ **Voice Mail** ▶ **Announcements**  
▶ **Delete Announcement**

**OK** Press the display key to confirm the prompt.

The pre-recorded announcement is used again after a personal announcement is deleted.

### Please note


Deleting announcements can take some time.

## Playing back messages


The date and time of each message is logged (provided this has been set, → page 16) and displayed during the playback. If Calling Line Identification is activated, the caller's number is displayed. If the caller's number is saved in the directory, their name is displayed.

New messages that have not yet been played back are indicated on the display with an icon and number:



The message key  on the handset flashes.

### To listen to messages:

 Press the message key.

**Answ. Mach.:**

Select as required and press **OK**.

If you have new messages, playback will start with the first new message, otherwise with the first old message.

If the message has been saved with the date and time, you will hear an appropriate announcement before playback begins.

After the entry time and date have been played back (after approx. 3 seconds), a new message assumes the status "old".


## Stopping and controlling playback

During message playback:


**2.MC** **Pause playback.** Press **2.MC** again to resume.

**Or**

**Menu** Stop playback.  
To resume, press **Continue** ▶ **OK**

 or **1.MC** Go to the **start of the current message.**

Press twice to go back to the previous message.

 or **3.MC** Go to the **next message.**  
Press twice to skip ahead two messages.

If playback is interrupted for over a minute, the answering machine returns to idle status.

## Copying a phone number from a message to the directory

During playback or pause:

**Menu** ▶ **Copy to Directory**

▶ Complete the entry → page 32.

### Please note

Message playback can also be started via the menu:

**Menu** ▶ **Voice Mail** ▶ **Play Messages**  
▶ **Answer Machine**

## Deleting messages

You can either delete all old messages together or individually.

### Deleting all old messages

During playback or pause:

**Menu** ▶ **Delete all**

**OK** Press the display key to confirm the prompt.

### Deleting individual old messages

During playback:

**Del.** Press the display key.


## Accepting a call from the answering machine

---

You can pick up a call while the answering machine is recording or being operated via remote operation:

**Accept** Press the display key.

Recording stops and you can speak to the caller.

If 3 seconds of the call have already been recorded when you pick it up, the call will be displayed as a new message. The  key on the handset flashes.

You can answer the call even if it is not signalled on the handset.

## Diverting an external call to the answering machine

---

You can divert an incoming external call to the answering machine, even if it is deactivated.

**Prerequisite:** the answering machine has available memory.

An external call is signalled on the handset:

**Menu** ▶ **Divert to AM** ▶ **OK**

The answering machine starts immediately in answer & record mode and records the call. The set time for ring delay (→ page 38) is ignored.

## Activating/deactivating two-way record

---

You can record an **external** call with the answering machine.

- ▶ Inform the caller that the call is being recorded.

During the conversation:

**Menu** Open menu.

### Two-way Recording

Select and press **OK**.

Two-way record is indicated on the display by an advisory text and is added to the answering machine list as a new message.

**End** Press the display key to stop two-way record.

The maximum recording time depends on the memory available on the answering machine. If the memory is full, you will hear an end tone, the recording is aborted, and the call recorded up to that point is listed in the answering machine list as a new message.

## Activating/deactivating call screening

---

While the caller is leaving a message on the answering machine, you can listen in via the loudspeaker on the base or handset.


### Permanently activating/deactivating call screening

**Menu** ▶ **Voice Mail** ▶ **Call Screening**  
▶ **Handset / Base** (☑= on)

Call screening can be simultaneously activated on the base and handset.

### Deactivating call screening for the current recording

You can deactivate the function for your own handset during the recording.

 Press the end call key.

## Setting the recording parameters

---

The answering machine has already been preset at the factory. You can configure individual settings via the handset.

### Setting the message length

---

You can set the maximum message length: **1 Minute, 2 Minutes, 3 Minutes or Unlimited.**

**Menu** ▶ **Voice Mail** ▶ **Message Length**



Select message length and press **OK** (✓= selected).

### Setting up ring delay

---

You can set when you want the answering machine to accept a call: **Immediately, 10 sec, 18 sec, 30 sec or Auto.**

**Menu** ▶ **Voice Mail** ▶ **Ring Delay**



Select time and press **OK** (✓= selected).

### Information about ring delay

In **Auto** mode, the following applies for ring delay:

- ◆ If there are no new messages, the answering machine answers a call after 18 seconds.
- ◆ If there are new messages, the answering machine answers a call after 10 seconds.

When operating remotely (→ page 39), you can then tell after approx. 15 seconds that there are no new messages (otherwise the answering machine would have already accepted your call). There are no call charges if you hang up now.

## Resetting fast access for the answering machine using key 1

---

To access the answering machine, simply **press and hold** the **1** key – you do not have to select it via the menu.

The integrated answering machine has already been preset at the factory. However, if you have set the network mailbox for fast access (→ page 40), you can change this setting.

**Menu** ▶ **Voice Mail** ▶ **Set Key 1**

**Answer Machine**

Select and press **OK**.

The setting for fast access applies to all registered handsets.



## Operating when on the move (remote operation)

---





You can check and activate your answering machine from any other telephone (hotel, pay phone etc.).

### Prerequisites:

- ◆ You have set a system PIN other than 0000 (→ page 48).
- ◆ The phone you are using for remote operation has tone dialling (DTMF) i.e., you hear different tones when you press the keys. Alternatively, you can use a code transmitter (available from retailers).





## Calling the answering machine and playing messages

---

-  Dial your own number.
-   When you hear your announcement, press  and enter the system PIN.

You are informed whether any new messages have been recorded. The messages are now played back. You can now operate the answering machine with the keypad.

You use the following keys:

-  To return to the start of the current message.  
Press twice to go back to the previous message.
-  Stop playback. Press again to resume.
-  Go to the next message.
-  Delete current message.

## Activating the answering machine

- ▶ Phone home and let the phone ring until you hear: "Please enter PIN".



Enter system PIN.

Your answering machine is activated. It tells you how much memory is left.

The messages are played.

The answering machine cannot be deactivated remotely.

## Using the network mailbox


---

The network mailbox is your provider's voice mail feature within the network. More information is available from your provider.

You cannot use the network mailbox unless you have **requested** it from your provider.

## Using fast access for the network mailbox

---

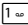To access the answering machine, simply **press and hold** the  key – you do not have to select it via the menu.

**Gigaset A510:** The network mailbox is pre-configured for fast access. You only need to enter the number of the network mailbox.

**Menu** ▶ **Voice Mail** ▶ **Network Mailbox**

= selected)



Enter the network mailbox number and press **OK**.

**Gigaset A510A:** The integrated answering machine is preconfigured for fast access. You can switch to the network mailbox.

**Menu** ▶ **Voice Mail** ▶ **Network Mailbox**



Enter the network mailbox number and press **OK**.

▶ **Set Key 1** ▶ **Network Mailbox**

= selected)

The setting for fast access applies to all handsets.

## Calling the network mailbox



Press and hold. You are connected straight to the network mailbox.

### Please note

You can also connect to the network mailbox via the menu:

**Menu** ▶ **Voice Mail** ▶ **Play Messages**  
▶ **Network Mailbox** (Gigaset A510A only)

## Viewing the network mailbox message

---

When a message is recorded, you receive a call from the network mailbox. If you have requested Calling Line Identification, the network mailbox number is displayed. If you accept the call, new messages are played back. If you do not accept the call, the network mailbox number is saved in the missed calls list and the message key flashes (→ page 32).

### Please note

Enter the network mailbox phone number into your directory along with the designation "Network mailbox"; the display and the calls list will then show this designation.

## ECO DECT

You are helping to protect the environment with your Gigaset.

### Reducing energy consumption

Your telephone has a power-saving adapter plug and uses less power.

### Reducing radiation

The radiation from your telephone is reduced **automatically**:

- ◆ **Handset:** The closer the handset is to the base, the lower the radiation.
- ◆ **Base:** The radiation is reduced to virtually zero when only one handset is registered and the handset is placed in the base.

You can reduce the radiation from the handset and base even more by using **Eco Mode**:

#### Eco Mode

Reduces radiation from the base and handset by 80% – whether you are making a call or not. **Eco Mode** reduces the range of the base by approx. 50%. Using **Eco Mode** always makes sense when a reduced range is sufficient.

### Switching off radiation

#### Eco Mode+

When you activate **Eco Mode+**, the radiation (DECT transmission power) of base and handset is switched off automatically and only turns on when calls are made. This is also true when multiple handsets are used, if the handsets support **Eco Mode+**.

**Eco Mode** / **Eco Mode+** can be activated/deactivated independently of one another and can also be used with multiple handsets.

### Activate/deactivate Eco Mode:

**Menu** ▶ **Settings** ▶ **Eco Mode**

**OK**

Press the display key.  
(An advisory message appears when Eco Mode is **activated**; confirm with **OK**.)  = on.



### Activate/deactivate Eco Mode+:

**Menu** ▶ **Settings** ▶ **Eco Mode+**


**OK**

Press display key ( = on).

### Status displays

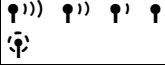Display icon	
	Reception strength: – Good to poor – No reception
	<b>Eco Mode+</b> enabled (displays instead of the reception strength icon when in idle status)

#### Please note

- ◆ When using **Eco Mode+** you can ensure that the range of the base is sufficient by pressing and **holding** the talk key . You hear the dial tone if the base can be reached.
- ◆ When **Eco Mode+** is enabled:
  - Call setup is delayed by approx. 2 seconds.
  - Handset standby time is reduced by approx. 50%.
- ◆ Registering handsets that do not support **Eco Mode+** causes the mode to be deactivated on the base and all other handsets.
- ◆ Activating **Eco Mode** reduces the range of the base.
- ◆ **Eco Mode** / **Eco Mode+** and repeater support (→ page 47) cancel each other out, i.e., if you use a repeater you cannot use **Eco Mode** or **Eco Mode+**.

## Using the handset as an alarm clock

---

**Prerequisite:** The date and time have already been set (→ page 16).

### Activating/deactivating the alarm clock

---

**Menu** ▶ Alarm Clock ▶ Activation (☑ = on)

After you activate the alarm clock, the menu for setting the wake up time opens automatically.

The ☺ icon and wake up time are shown on the display.


A wake-up call is signalled on the display (→ page 3), with the selected ringer volume and melody (→ page 46). The wake-up call sounds for 60 seconds. If no key is pressed, the wake-up call is repeated twice at five minute intervals and then switched off.

During a call, the wake-up call is only signalled by a short tone.

### Setting the wake-up time

---

**Menu** ▶ Alarm Clock ▶ Wake up time

 Enter the wake up time in hours and minutes, then press **OK**.

### Deactivating the wake-up call/ repeating after a pause (snooze mode)

---

**Prerequisite:** a wake-up call is sounding.

**Off** Press the display key. The wake-up call is deactivated.

Or

**Snooze** Press the display key or any key. The wake-up call is deactivated and then repeated after 5 minutes. After the second repetition the wake-up call is deactivated completely.

## Using multiple handsets

---

### Registering handsets

---

You can register up to four handsets on your base. **Each** additional handset must be registered with the base in order for it to work properly!

### Registering a Gigaset handset to a Gigaset A510/A510A


---

You must manually register the handset on both the handset (1) and the base (2).

Once registration is complete, the handset returns to idle status. The handset's internal number is shown on the display, e.g., INT 1. If not, repeat the procedure.

#### 1) On the handset

**Menu** ▶ Settings ▶ Registration  
▶ Register Handset

 If required, enter the system PIN for the base (the default is **0000**) and press **OK**.

The display shows **Handset is registering**.

#### 2) On the base

▶ Within 60 seconds, press and **hold** the register/paging key on the base (→ page 5) (for approx. 3 seconds).

### Registering other handsets

---

You can manually register other Gigaset handsets and handsets for other devices with GAP functionality as follows.

#### 1) On the handset

▶ Start to register the handset as described in its user guide.


#### 2) On the base


▶ Press and **hold** the register/paging key on the base (→ page 5) (approx. 3 sec.).

## De-registering handsets

You can de-register all other registered handsets from each of the registered Gigaset handsets.

**Menu** ▶ **Settings** ▶ **Registration**  
▶ **De-register Handset**

 Select the internal number you wish to de-register and press **OK**.  
(The handset you are currently using is highlighted with <).)

 Enter the current system PIN and press **OK**.



**OK** Press the display key.

## Locating a handset (paging)

You can locate your handset using the base.

- ▶ **Briefly** press the register/paging key on the base (→ page 5).
- ▶ All handsets will ring at the same time ("paging"), even if the ringtones are switched off.


### Ending paging


- ▶ **Briefly** press the registration/paging key on the base or press the talk key  or end call key  on the handset.

## Making internal calls


Internal calls are free calls between handsets that are registered with the same base.


### Calling a specific handset


 Initiate internal call.

 Enter the number of the handset.

**Or:**

 Initiate internal call.


 Select handset.


 Press the talk key.

### Calling all handsets ("group call")


 Press and **hold**.

**Or:**

 Initiate internal call.

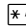 Press the star key.

**Or:**


 Initiate internal call.

**Call All** Select and

 Press the talk key.


All handsets are called.


### Ending a call

 Press the end call key.

## Transferring a call to another handset/making an internal consultation call

You are talking to an external participant and can call an internal participant at the same time to forward the call or to consult.


 Open the list of handsets.  
The external participant hears music on hold, if activated (→ page 47).

 Select a handset or **Call All** and press **OK**.

When the internal participant answers:


- ▶ If necessary, announce the external call.

### Either

 Press the end call key. The external call is transferred to the other handset.

**Or**

**Back** Press the display key. You are reconnected with the external participant.



When transferring a call, you can also press the end call key  before the internal participant answers.

If the internal participant does not answer or the line is busy, the call will automatically return to you.

### Accepting a waiting call

---

If you receive an **external** call during an **internal** call, you will hear the call waiting tone (short tone). With Calling Line Identification, the caller's number will appear in the display.

-  Press the end call key to end the internal call.
-  Press the talk key to accept the external call.

### Listening in to an external call (conference)

---


**Prerequisite:** The **Listening in** function must be activated.

You are conducting an external call. An internal participant can listen in on this call and take part in the conversation. All the participants are made aware of additional listeners by a signal tone.

### Activating/deactivating listening in

---


**Menu** ▶ **Settings** ▶ **Telephony**  
▶ **Listening in**

Press **OK** to activate/deactivate the function ( = on).

### Internal listening in


---

The line is engaged with an external call. Your screen will display information to that effect. To listen in to the external call.


-  Press and **hold** the talk key.

You can listen in to the call. All participants hear a signal tone. During this time, this handset displays the **Conference Call** message and it is not possible to dial another number from this handset.

### Ending listening in

-  Press the end call key.


All participants hear a signal tone.

If the **first** internal participant presses the end call key , the handset that has "listened in" remains connected to the external participant.

### Changing the name of a handset

---

The names "INT 1", "INT 2" etc. are assigned automatically on registration. You can change these names. The name must be no more than 10 characters. The changed name is displayed in every handset's list.

-  Open the list of handsets. Your own handset is indicated by <.

-  Select handset.

**Menu** Open menu.

#### Rename

-  Enter the name.

**OK** Press the display key.

## Handset settings


Your handset comes with default settings, but you can change the settings to suit your individual requirements.

### Changing the display language

You can view the display texts in different languages.


**Menu** ▶ **Settings** ▶ **Language**

The current language is indicated by a .

 Select a language and press **OK**.

If you accidentally choose a language you do not understand:

 ▶  6  4 

 Select the correct language and press **OK**.

### Setting the display/screensaver

You have a choice of four colour schemes and several different contrasts. You can also configure a screensaver.


**Menu** ▶ **Settings** ▶ **Display**

You have the following options:

#### Screensaver

In idle status a digital clock can be displayed as a screensaver. This replaces the idle status display. You can choose between **No Screensaver** and **Digital Clock**.

The screensaver is not displayed in certain situations e.g., during a call or if the handset is de-registered.

To show the display in idle status, briefly press end call key .


#### Colour Schemes

You can view the display backlight in different colours. Four colour schemes are available.

#### Contrast


Nine contrast settings are available.

### Activating/deactivating auto answer

If you activate this function, when you receive a call you can simply lift the handset out of the charging cradle without having to press the talk key .

**Menu** ▶ **Settings** ▶ **Telephony**

▶ **Auto Answer**

**OK** Press the display key  (= on).

### Changing the handsfree/earpiece volume

You can set the volume for handsfree mode and earpiece mode to five different levels.


In idle status:

 ▶ **Call Volume**

**Earpiece Volume / Handsfree Volume**

Select and press **OK**.




Set the volume (e.g., volume 3 = .

**OK**

Press the display key to save the setting.

During a conversation via the earpiece or in handsfree mode:



Press the control key to open the menu for setting the volume. Set the earpiece or handsfree volume by pressing .

The setting will automatically be saved after approximately 3 seconds or press the display key **OK**.

#### Please note

You can also set the call volume using the menu (→ page 26).

## Changing ringtones

---

- ◆ **Volume:**  
You can choose between five volumes (e.g., volume 3 = ■■■■■) and the "crescendo" ring (volume increases with each ring 6 = \_\_\_\_\_).
- ◆ **Ringtones:**  
You can select from a list of pre-loaded ringtones and melodies.

You can set different ringtones for the following functions:

- ◆ Internal calls
- ◆ External calls
- ◆ Alarm clock

## Setting the ringer volume

---

The ringer volume is the same for all types of ring.

In idle status:

 ▶ **Ringer Volume**

 Set the volume.

**OK** Press the display key to save the setting.

### Please note

You can also adjust the ringer volume via the menu (→ page 26).

## Setting ringtone

---

Set different ringtones for external calls, internal calls and the alarm clock.


### For internal calls and the alarm clock

In idle status:

 ▶ **Ringtones (Handset)**

**Internal Calls / Alarm Clock**

Select and press **OK**.

 Select melody and press **OK**  
( = selected).


### For external calls:

In idle status:

 ▶ **Ringtones (Handset)**

## External Calls

Select and press **OK**.

 can be used for the following:

### Melodies

You can set the ringtone as described above.

### Time Control

You can specify a time period when you do not want the telephone to signal external calls e.g., during the night.

**Activation** is switched on or off by pressing **OK** ( = activated)

### Settings

**Ringer off from: /Ringer off until:**

Enter time in 4-digit format.

### Please note

During this period, you will continue to receive calls from numbers to which you have assigned a personalised melody/background colour in the directory (VIP).

## Anonymous Calls Silent

You can set your handset so that it does not ring for calls where Calling Line Identification has been withheld (not answering machine). The call will only be signalled on the display.

Switch the **Anonymous Calls Silent** function on or off by pressing **OK**  
( = activated).

### Please note

You can also set the ringtones via the menu (→ page 26).

## Activating/deactivating the ringer

---

You can:

- ◆ Permanently deactivate the ringer in idle status or when receiving a call
- ◆ Deactivate the ringer for the current call only.

The ringer cannot be re-activated while a call is in progress.




## Deactivating the ringer permanently

 Press and **hold** the star key.

The  icon appears in the display.

## Reactivating the ringer

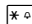 Press and **hold** the star key.

## Deactivating the ringer for the current call


**Menu** ▶ **Silent** ▶ **OK**

## Activating/deactivating advisory tones/battery warning tones

Your handset uses advisory tones to tell you about different activities and statuses. These can be activated and deactivated independently of each other:

- ◆ **Advisory Tones**
  - **Confirmation tone:** at the end of an entry/setting and when a new entry arrives in the answering machine list or calls list.
  - **Error tone:** when you make an incorrect entry.
  - **Key click:** every key press is confirmed.
- ◆ **Battery Low**

The battery requires charging.

 ▶ **Advisory Tones / Battery Low**  
Select and press **OK** to activate or deactivate ( = activated).

The **menu end tone** when scrolling at the end of a menu cannot be deactivated.

## Restoring the handset default settings

You can reset any individual settings and changes that you have made.

The following settings are **not** affected by a reset:

- ◆ Registering the handset to the base
- ◆ Date/time
- ◆ Entries in the directory, calls lists

**Menu** ▶ **Settings** ▶ **System** ▶ **Reset Handset**

**OK** Confirm prompt.

## Base settings

The base settings are carried out using a registered Gigaset handset.

## Changing the ringtones for the Gigaset A510A base

- ◆ **Volume:**  
You can choose between five volumes and the "crescendo" ring, → page 46.  
Select "0" to deactivate the base ringer.
- ◆ **Ringtones:**  
You can set a ringtone for external calls, → page 46.
- ◆ **Time control:**  
You can specify when the base should not ring (e.g., during the night).

**Menu** ▶ **Settings** ▶ **Audio Settings**  
▶ **Ringtones (Base)** ▶ **Ringer Volume / Ringer Melody / Time Control**

For more information on adjusting the settings, see page 46.

## Activating/deactivating music on hold

**Menu** ▶ **Settings** ▶ **Telephony**  
▶ **Music on hold**

Press **OK** to activate or deactivate music on hold ( = on).

## Repeater support

You can increase the range and signal strength of the base using a repeater. You will need to activate repeater mode. This will terminate any calls that are in progress at the time.

**Prerequisite:** a repeater is registered.

**Menu** ▶ **Settings** ▶ **System**  
▶ **Repeater Mode**

Press **OK** to activate/deactivate repeater mode ( = activated).

## Base settings

After activating or deactivating the repeater, switch your handset off and on again (→ page 22).

### Please note

- ◆ Eco Mode / Eco Mode+ (→ page 41) and repeater support cancel each other out i.e., if you use a repeater, you cannot use Eco Mode or Eco Mode+.
- ◆ The default encrypted transmission setting is deactivated when repeater mode is activated.

## Protecting against unauthorised access

Protect the system settings of the base station with a PIN known only to yourself. The system PIN must be entered when, for example, registering/de-registering a handset to/from the base or when restoring the default settings.

## Changing the system PIN

You can change the 4-digit system PIN set on the base (default setting: **0000**) to a 4-digit PIN that only you know.

Gigaset A510A: setting a system PIN enables remote operation of the answering machine → page 39.

**Menu** ▶ Settings ▶ System ▶ System PIN



Enter the current system PIN and press **OK**.



Enter your new system PIN and press **OK**.

## Resetting the system PIN

If you have forgotten your system PIN, you can reset the PIN to the original code **0000** using the button on the base. **This will also reset other settings**; see the section entitled "Resetting the base to the default settings".

## Resetting the base to the default settings

When restoring default settings:

- ◆ Individual settings are reset
- ◆ All lists are deleted
- ◆ Eco Mode and Eco Mode+ are deactivated

The date and time are retained.

### Please note

The answering machine is ready for use approx. 15 seconds after the base has been connected or reset.

## Resetting the base via the menu

When resetting via the menu

- ◆ Handsets are still registered
- ◆ The system PIN is not reset.

**Menu** ▶ Settings ▶ System ▶ Base Reset

**OK**

Press the display key.

## Resetting the base using the button on the base

When resetting the base using the button on the base

- ◆ All handsets are de-registered and
- ◆ The system PIN is reset to the original code **0000**

### Carry out the following steps:

- ▶ Remove the mains cable from the base
- ▶ Hold down the registration/paging key on the base (→ page 5) and reconnect the power cable to the base at the same time. Hold the key down for at least 5 seconds.

### Please note

All handsets are de-registered and must be re-registered. All settings are reset to the default settings.

## Connecting the base to the PABX

The following settings are only necessary if your PABX requires them; see the PABX user manual.

### Dialling mode and Flash time

#### Changing the dialling mode


The following dialling modes can be selected:

- ◆ Tone dialling (DTMF)
- ◆ Pulse dialling (PD).


**Menu** Open main menu.

\* 0 # → 0 \_ 5 # → 1 \_ 1 \_

Press keys.

 1 \_ **OK** Pulse dialling mode (DP).

Or:

 0 \_ **OK** Tone dialling (DTMF).

#### Please note

Tone dialling (DTMF) is now the most common dialling mode. Pulse dialling mode (PD) is used only for a few old PABXs.


### Setting flash time

Your phone is preset for operation on the main connection. For operation on a PABX, you may have to change this value. Please refer to the user guide for your PABX.

**Menu** Open main menu.

\* 0 # → 0 \_ 5 # → 1 \_ 2 \_


Press keys.

 Enter number for the flash time and press **OK**.

0 = 80 ms; 1 = 100 ms; 2 = 120 ms;  
3 = 400 ms; 4 = 250 ms; 5 = 300 ms;  
6 = 600 ms; 7 = 800 ms

## Setting pauses


### Changing the pause after line seizure

You can change the length of the pause that is inserted between pressing the talk key  and sending the number.

**Menu** Open main menu.

\* 0 # → 0 \_ 5 # → 1 \_ 9 \_

Press keys.

 Enter number for the length of the pause (1 = 1 sec.; 2 = 3 secs; 3 = 7 secs) and press **OK**.


### Changing the pause after recall key

You can change the length of the pause if your PABX requires this (refer to the user guide for your PABX).

**Menu** Open main menu.

\* 0 # → 0 \_ 5 # → 1 \_ 4 \_

Press keys.

 Enter a number for the length of the pause (1 = 800 ms; 2 = 1600 ms; 3 = 3200 ms) and press **OK**.

## Switching temporarily to tone dialling (DTMF)

If your PABX still operates with pulse dialling (PD), but you need tone dialling for a connection (e.g., to listen to the network mailbox), you must switch to tone dialling for the call.

**Prerequisite:** You are conducting a call or have already dialled an external number.

\* 0 Press the star key.

After the call ends, pulse dialling is automatically reactivated.

# Service (Customer Care)

---

You have questions? As a Gigaset customer, you can take advantage of our comprehensive service offerings. You can find help quickly in this User Manual and in the service pages of our Gigaset online portal.

Please register your phone right after purchase.

This enables us to provide you with even better service regarding questions or a warranty claim. Your personal user account enables you to directly contact our customer service by email.

Our representatives are available on the telephone hotlines for more advanced questions or immediate consultation.

## United Kingdom

[www.gigaset.com/uk/service](http://www.gigaset.com/uk/service)

**Service Hotline: 0845 367 0812**

(local call cost charge)

## Ireland

[www.gigaset.com/ie/service](http://www.gigaset.com/ie/service)

**Service Hotline: 1850 777 277**

(6.6561 Ct./Call)


Please note that if the Gigaset product is not sold by authorised dealers in the national territory the product may not be fully compatible with the national telephone network. It is clearly specified on the box near the CE mark as well as on the bottom of the base station for which country/countries the equipment has been developed. If the equipment is used in a manner inconsistent with this advice or with the instructions of the manual and on the product itself, this may have implications on the conditions for warranty or guarantee claims (repair or exchange of product).


In order to make use of the warranty, the product purchaser is asked to submit a receipt which proves the date of purchase (date from which the warranty period starts) and the type of goods that have been purchased.

## Questions and answers

If you have any queries about the use of your telephone, visit our website at [www.gigaset.com/service](http://www.gigaset.com/service) for assistance 24/7.

The table below also lists steps for troubleshooting.

<p><b>The display is blank.</b></p> <ol style="list-style-type: none"><li>1. The handset is not activated.<ul style="list-style-type: none"><li>› Press and <b>hold</b> the end call key .</li></ul></li><li>2. The battery is empty.<ul style="list-style-type: none"><li>› Charge the battery or replace it (→ page 13).</li></ul></li></ol>
<p><b>"Base" flashes on the display.</b></p> <ol style="list-style-type: none"><li>1. The handset is outside the range of the base.<ul style="list-style-type: none"><li>› Move the handset closer to the base.</li></ul></li><li>2. The base's range is reduced because Eco Mode is activated.<ul style="list-style-type: none"><li>› Deactivate Eco Mode (→ page 41) or reduce the distance between the handset and the base.</li></ul></li><li>3. The base is not activated.<ul style="list-style-type: none"><li>› Check the base power adapter (→ page 11).</li></ul></li><li>4. Handset has not been registered with the base or has been de-registered.<ul style="list-style-type: none"><li>› Register the handset (→ page 42).</li></ul></li></ol>
<p><b>The handset does not ring.</b></p> <ol style="list-style-type: none"><li>1. The ringtone is switched off.<ul style="list-style-type: none"><li>› Activate the ringtone (→ page 46).</li></ul></li><li>2. The phone only rings if the phone number has been transferred.<ul style="list-style-type: none"><li>› Activate the ringtone for unknown calls (→ page 46).</li></ul></li></ol>
<p><b>You cannot hear a ringtone/dialling tone from the fixed line.</b></p> <p>The phone cord supplied has not been used or has been replaced by a new cord with the wrong pin connections.</p> <ul style="list-style-type: none"><li>› Please always use the phone cord supplied or ensure that the pin connections are correct when purchasing from a retailer (→ page 57).</li></ul>

<p><b>Each incoming call resets the date/time incorrectly.</b></p> <p>The date and time are sent via e.g., your network provider, a router or PABXs during calling line display. This data may be incorrect.</p> <ul style="list-style-type: none"><li>› Set the date/time correctly e.g., on the router or PABX.</li><li>› Do not automatically copy the date/time → page 17.</li></ul>
<p><b>The connection always terminates after approx. 30 seconds.</b></p> <p>Repeater activated/deactivated (→ page 47).</p> <ul style="list-style-type: none"><li>› Activate/deactivate the handset (→ page 22).</li></ul>
<p><b>Error tone sounds after system PIN prompt.</b></p> <p>You have entered the wrong system PIN.</p> <ul style="list-style-type: none"><li>› Reset the system PIN to 0000 (→ page 48).</li></ul>
<p><b>Forgotten system PIN.</b></p> <ul style="list-style-type: none"><li>› Reset the system PIN to 0000 (→ page 48).</li></ul>
<p><b>The other party cannot hear you.</b></p> <p>You pressed the mute key  during a call. The handset is "muted".</p> <ul style="list-style-type: none"><li>› Unmute the microphone (→ page 29).</li></ul>
<p><b>The number of the caller is not displayed although CLIP has been set.</b></p> <p>Calling Line Identification is not enabled.</p> <ul style="list-style-type: none"><li>› <b>The caller</b> should ask the network provider to enable Calling Line Identification (CLI).</li></ul> <p>Refer to the notes on calling line display → page 28.</p>
<p><b>You hear an error tone when keying an input.</b></p> <p>Action has failed/invalid input.</p> <ul style="list-style-type: none"><li>› Repeat the process.<ul style="list-style-type: none"><li>› Watch the display and refer to the user manual if necessary.</li></ul></li></ul>
<p><b>You cannot listen to messages on the network mailbox.</b></p> <p>Your PABX is set to pulse dialling.</p> <ul style="list-style-type: none"><li>› Set your PABX to tone dialling.</li></ul>

## Gigaset A510A only:

No time is specified for a message in the calls list.

Date and time have not been set.

- › Set the date/time (→ page 16).

The answering machine reports "Invalid PIN" during remote operation.

1. You have entered the wrong system PIN.
  - › Enter the system PIN again.
2. The system PIN is still set to 0000.
  - › Set the system PIN to something other than 0000 (→ page 48).

The answering machine is not recording any messages/has switched to answer only mode.

Its memory is full.

- › Delete old messages.
- › Play back new messages and delete.

### Exclusion of liability

Some displays may contain pixels (picture elements), which remain activated or deactivated.

This is completely normal and does not indicate a fault.

## Authorisation

This device is intended for analogue phone lines in the UK and on the Irish network.

Country-specific requirements have been taken into consideration.

We, Gigaset Communications GmbH, declare that this device meets the essential requirements and other relevant regulations laid down in Directive 1999/5/EC.

A copy of the 1999/5/EC Declaration of Conformity is available at this Internet address: [www.gigaset.com/docs](http://www.gigaset.com/docs)

CE 0682

## Guarantee Certificate United Kingdom

Without prejudice to any claim the user (customer) may have in relation to the dealer or retailer, the customer shall be granted a manufacturer's Guarantee under the conditions set out below:

- ◆ In the case of new devices and their components exhibiting defects resulting from manufacturing and/or material faults within 24 months of purchase, Gigaset Communications shall, at its own option and free of charge, either replace the device with another device reflecting the current state of the art, or repair the said device. In respect of parts subject to wear and tear (including but not limited to, batteries, keypads, casing), this warranty shall be valid for six months from the date of purchase.
- ◆ This Guarantee shall be invalid if the device defect is attributable to improper treatment and/or failure to comply with information contained in the user guides.
- ◆ This Guarantee shall not apply to or extend to services performed by the authorised dealer or the customer themselves (e. g. installation, configuration, software downloads). User guides and any software supplied on a separate data medium shall be excluded from the Guarantee.
- ◆ The purchase receipt, together with the date of purchase, shall be required as evidence for invoking the Guarantee. Claims under the Guarantee must be submitted within two months of the Guarantee default becoming evident.
- ◆ Ownership of devices or components replaced by and returned to Gigaset Communications shall vest in Gigaset Communications.

- ◆ This Guarantee shall apply to new devices purchased in the European Union. For Products sold in the United Kingdom the Guarantee is issued by: Gigaset Communications UK Limited, Quatro House, Lyon Way, Camberley, Surrey, GU16 7ER.
- ◆ Any other claims resulting out of or in connection with the device shall be excluded from this Guarantee. Nothing in this Guarantee shall attempt to limit or exclude a Customers Statutory Rights, nor the manufacturer's liability for death or personal injury resulting from its negligence.
- ◆ The duration of the Guarantee shall not be extended by services rendered under the terms of the Guarantee.
- ◆ Insofar as no Guarantee default exists, Gigaset Communications reserves the right to charge the customer for replacement or repair.
- ◆ The above provisions does not imply a change in the burden of proof to the detriment of the customer.

To invoke this Guarantee, please contact the Gigaset Communications telephone service. The relevant number is to be found in the accompanying user guide.

## Guarantee Certificate Ireland

---

Without prejudice to any claim the user (customer) may have in relation to the dealer or retailer, the customer shall be granted a manufacturer's Guarantee under the conditions set out below:

- ◆ In the case of new devices and their components exhibiting defects resulting from manufacturing and/or material faults within 24 months of purchase, Gigaset Communications shall, at its own option and free of charge, either replace the device with another device reflecting the current state of the art, or repair the said device. In respect of parts subject to wear and tear (including but not limited to, batteries, keypads, casing), this warranty shall be valid for six months from the date of purchase.
- ◆ This Guarantee shall be invalid if the device defect is attributable to improper care or use and/or failure to comply with information contained in the user manuals. In particular claims under the Guarantee cannot be made if:
  - ◆ The device is opened (this is classed as third party intervention)
  - ◆ Repairs or other work done by persons not authorised by Gigaset Communications.
  - ◆ Components on the printed circuit board are manipulated
  - ◆ The software is manipulated
  - ◆ Defects or damage caused by dropping, breaking, lightning or ingress of moisture. This also applies if defects or damage was caused by mechanical, chemical, radio interference or thermal factors (e.g.: microwave, sauna etc.)
  - ◆ Devices fitted with accessories not authorised by Gigaset Communications

## Environment

- ◆ This Guarantee shall not apply to or extend to services performed by the authorised dealer or the customer themselves (e.g. installation, configuration, software downloads). User manuals and any software supplied on a separate data medium shall be excluded from the Guarantee.
- ◆ The purchase receipt, together with the date of purchase, shall be required as evidence for invoking the Guarantee. Claims under the Guarantee must be submitted within two months of the Guarantee default becoming evident.
- ◆ Ownership of devices or components replaced by and returned to Gigaset Communications shall vest in Gigaset Communications.
- ◆ This Guarantee shall apply to new devices purchased in the European Union. For Products sold in the Republic of Ireland the Guarantee is issued by Gigaset Communications UK Limited, Quatro House, Lyon Way, Camberley, Surrey, GU16 7ER.
- ◆ Any other claims resulting out of or in connection with the device shall be excluded from this Guarantee. Nothing in this Guarantee shall attempt to limit or exclude a Customers Statutory Rights, nor the manufacturer's liability for death or personal injury resulting from its negligence.
- ◆ The duration of the Guarantee shall not be extended by services rendered under the terms of the Guarantee.
- ◆ Insofar as no Guarantee default exists, Gigaset Communications reserves the right to charge the customer for replacement or repair.
- ◆ The above provisions does not imply a change in the burden of proof to the detriment of the customer.

To invoke this Guarantee, please contact the Gigaset Communications helpdesk on 1850 777 277. This number is also to be found in the accompanying user guide.

## Environment

---

### Our environmental mission statement

---

We, Gigaset Communications GmbH, bear social responsibility and are actively committed to a better world. Observing our ecological responsibilities is paramount in every aspect of our work – from product and process design to production and sales or even disposal.

Further information on environmentally friendly products and processes is available on the Internet at [www.gigaset.com](http://www.gigaset.com).

### Environmental management system

---



Gigaset Communications GmbH is certified pursuant to the international standards EN 14001 and ISO 9001.

**ISO 14001 (Environment):** Certified since September 2007 by TÜV SÜD Management Service GmbH.

**ISO 9001 (Quality):** Certified since 17/02/1994 by TÜV SÜD Management Service GmbH.

### Ecological energy consumption

---

The use of ECO DECT (→ page 41) saves energy and makes an active contribution towards protecting the environment.



## Disposal

---

Batteries should not be disposed of in general household waste. Observe the local waste disposal regulations, details of which can be obtained from your local authority.

All electrical and electronic products should be disposed of separately from the municipal waste stream via designated collection facilities appointed by the government or the local authorities.



This crossed-out wheeled bin symbol on the product means the product is covered by the European Directive 2002/96/EC.

The correct disposal and separate collection of your old appliance will help prevent potential negative consequences for the environment and human health. It is a precondition for reuse and recycling of used electrical and electronic equipment.

For more detailed information about disposal of your old appliance, please contact your local council refuse centre or the original supplier of the product.

## Appendix

---

### Care

---

Wipe the base station, charging cradle and handset with a **damp** cloth (do not use solvent) or an antistatic cloth.

**Never** use a dry cloth. This can cause static.

### Contact with liquid

---

If the handset has come into contact with liquid:

1. **Switch off the handset and remove the battery pack immediately.**
2. Allow the liquid to drain from the handset.
3. Pat all parts dry, then place the handset with the battery compartment open and the keypad facing down in a dry, warm place **for at least 72 hours (not in a microwave, oven etc.)**.
4. **Do not switch on the handset again until it is completely dry.**

When it has fully dried out, you will normally be able to use it again.

## Specifications

---

### Batteries

---

Technology:

Nickel-metal-hydride (NiMH)

Size: AAA (Micro, HR03)

Voltage: 1.2 V

Capacity: 550 - 1000 mAh

The device is supplied with two approved batteries.

## Handset operating times/charging times

This Gigaset can charge batteries up to a capacity of 1000 mAh. Using special high-performance batteries or batteries with high capacities is not recommended for cordless phones.

The operating time of your Gigaset depends on the capacity and age of the batteries and the way it is used. (Standby times/talktimes/operating times are maximum possible times, charging times are typical values).

	Capacity (mAh) approx.			
	550	700	800	1000
Standby time (hours)	220	255	290	360
Talktime (hours)	20	23	27	33
Operating time for 1.5 h of calls per day (hours)				
- <b>Without</b> Eco Mode+	135	155	180	255
- <b>With</b> Eco Mode+	95	110	130	155
Charging time in base (hours)	6	7	8	10
Charging time in charger (hours)	5.5	6.5	7	9

Due to the constant progression in battery development, the list of recommended batteries in the FAQ section of the Gigaset Customer Care pages is updated regularly:

[www.gigaset.com/service](http://www.gigaset.com/service)

## Base power consumption

	A510	A510A
In standby mode *	approx. 0.7 W	approx. 0.7 W
Base in standby mode **	< 0.4 W	< 0.4 W
During a call	approx. 0.5 W	approx. 0.5 W


\* Charged handset in base

\*\* Handset not in base

## General specifications

DECT standard	Supported
GAP standard	Supported
No. of channels	60 duplex channels
Radio frequency range	1880–1900 MHz
Duplex method	Time multiplex, 10 ms frame length
Repeat frequency of the transmission pulse	100 Hz
Length of the transmission pulse	370 µs
Channel grid	1728 kHz
Bit rate	1152 kbit/s
Modulation	GFSK
Language code	32 kbit/s
Transmission power	10 mW average power per channel, 250 mW pulse power
Range	up to 300 m outdoors, up to 50 m indoors
Base power supply	230 V ~/50 Hz
Environmental conditions for operation	+5°C to +45°C, 20% to 75% relative humidity
Dialling mode	DTMF (tone dialling)/ PD (pulse dialling)

## Pin connections on the telephone jack

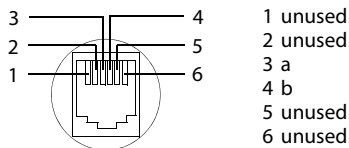

## Writing and editing text

The following rules apply when writing text:

- ◆ Multiple letters and characters are assigned to each key between **0..** and **9numz** as well as **\* c** and **# -**.
- ◆ Control the cursor with .
- ◆ Characters are inserted at the cursor position.
- ◆ Press the display key **Del.** to delete the character to the left of the cursor.
- ◆ The first letter of the name of directory entries is automatically capitalised, followed by lower case letters.

## Setting upper/lower case or digits

Repeatedly press the hash key **# -** to change the text input mode.

123	Digits
Abc	Upper case *
abc	Lower case

\* First letter in capitals, all others in lower case

When the mode is switched, the active mode is indicated at the bottom left of the screen.

## Writing names

- ▶ Enter the individual letters/characters by pressing the corresponding key.

The characters assigned to the key are shown in a selection line at the bottom left of the screen. The selected character is highlighted.

- ▶ **Briefly** press the key several times in succession to select the required letter/character.

## Standard characters

	1x	2x	3x	4x	5x	6x	7x	8x	9x	10x	11x	12x	13x	14x	15x	16x
1 sp	1	€	£	\$	¥	¤										
2 abc	a	b	c	2	ä	á	à	â	ã	ç						
3 def	d	e	f	3	ë	é	è	ê								
4 ghi	g	h	i	4	ï	í	ì	î								
5 jkl	j	k	l	5												
6 mno	m	n	o	6	ö	ñ	ó	ò	ô	õ						
7pqrs	p	q	r	s	7	ß										
8 tuv	t	u	v	8	ü	ú	ù	û								
9wxyz	w	x	y	z	9	ÿ	ý	æ	ø	å						
0..		<sup>1)</sup> .	,	? !	<sup>2)</sup> ←	0	+	-	:	;	‘	’	;	_		
* c	*	/	(	)	<	=	>	%								
# -		#	@	\	&	§										

- 1) Space
- 2) Line break

## Accessories

---

### Gigaset handsets

Upgrade your Gigaset to a cordless PABX:

#### Gigaset A510H handset

- ◆ Hear whom the call is for with VIP ringtones
- ◆ High-quality keypad
- ◆ 1.8" b/w display
- ◆ Directory for 150 entries
- ◆ Talk/standby time of up to 18 h/260 h, standard batteries
- ◆ Brilliant sound quality in handsfree mode
- ◆ Screensaver (digital clock)
- ◆ ECO DECT
- ◆ Alarm clock
- ◆ No interruptions from anonymous calls

[www.gigaset.com/gigasetA510h](http://www.gigaset.com/gigasetA510h)



#### Gigaset C300H handset

- ◆ Hear whom the call is for with VIP ringtones
- ◆ High-quality keypad with backlight
- ◆ 1.7" CSTN colour display
- ◆ Directory for 250 entries
- ◆ Talk/standby time of up to 20 h/300 h, standard batteries
- ◆ Brilliant sound quality in handsfree mode
- ◆ Screensaver (digital clock or picture)
- ◆ ECO DECT
- ◆ Alarm clock
- ◆ No interruptions from anonymous calls

[www.gigaset.com/gigasetc300h](http://www.gigaset.com/gigasetc300h)



## Accessories

### Gigaset SL400H handset

- ◆ Genuine metal frame and keypad
- ◆ High-quality keypad backlight
- ◆ 1.8" TFT colour display
- ◆ Bluetooth® and mini USB
- ◆ Directory for up to 500 vCards
- ◆ Talk/standby time of up to 14 h/230 h
- ◆ Large font for calls lists and directory
- ◆ Brilliant sound quality in handsfree mode:  
4 handsfree settings
- ◆ Caller pictures, slideshow and screensaver  
(analogue and digital clock)
- ◆ Silent alert, download ringer melodies
- ◆ ECO DECT
- ◆ Alarm clock
- ◆ Calendar with appointment scheduler
- ◆ Night mode with time-controlled ringer deactivation
- ◆ No interruptions from anonymous calls
- ◆ Room monitor (baby alarm, Babyphone)
- ◆ Direct call



[www.gigaset.com/gigaset-sl400h](http://www.gigaset.com/gigaset-sl400h)

### Gigaset S810H handset

- ◆ Brilliant sound quality in handsfree mode
- ◆ High-quality genuine metal keypad with backlight
- ◆ Plus/minus key for simple volume control
- ◆ 1.8" TFT colour display
- ◆ Bluetooth® and mini USB
- ◆ Directory for up to 500 vCards
- ◆ Talk/standby time of up to 13 h/180 h,  
standard batteries
- ◆ Large font for calls lists and directory
- ◆ Caller pictures, screensaver (analogue and  
digital clock)
- ◆ Download ringer melodies
- ◆ ECO DECT
- ◆ Alarm clock
- ◆ Calendar with appointment scheduler
- ◆ Night mode with time-controlled ringer deactivation
- ◆ No interruptions from anonymous calls
- ◆ Room monitor (baby alarm, Babyphone)
- ◆ Direct call



[www.gigaset.com/gigaset-s810h](http://www.gigaset.com/gigaset-s810h)

## Accessories

### Gigaset C610H handset

- ◆ Social life management with room monitor and birthday reminders
- ◆ Individual programming of ringers with 6 VIP groups
- ◆ High-quality keypad with backlight
- ◆ 1.8" TFT colour display
- ◆ Directory for up to 150 vCards
- ◆ Talk/standby time of up to 12 h/180 h, standard batteries
- ◆ Large font for calls lists and directory
- ◆ Brilliant sound quality in handsfree mode
- ◆ Screensaver (digital clock)
- ◆ ECO DECT
- ◆ Alarm clock
- ◆ Night mode with time-controlled ringer deactivation
- ◆ No interruptions from anonymous calls
- ◆ Room monitor (baby alarm, Babyphone)
- ◆ Direct call

[www.gigaset.com/gigasetc610h](http://www.gigaset.com/gigasetc610h)



### Gigaset SL78H handset

- ◆ Real metal frame
- ◆ Modern keypad with high-quality backlight
- ◆ 2.2" TFT QVGA colour display
- ◆ Bluetooth® and mini USB
- ◆ Directory for up to 500 vCards
- ◆ Talk/standby time of up to 14 h/200 h
- ◆ Brilliant sound quality in handsfree mode
- ◆ Caller pictures, slide show and screensaver (analogue and digital clock)
- ◆ Download ringer melodies
- ◆ ECO DECT
- ◆ Alarm clock
- ◆ Calendar with appointment scheduler
- ◆ Night mode with time-controlled ringer deactivation
- ◆ Room monitor (baby alarm, Babyphone)

[www.gigaset.com/gigasetsl78h](http://www.gigaset.com/gigasetsl78h)



## Accessories

### Gigaset E49H handset

- ◆ Resistant to shocks, dust and water splashes
- ◆ 1.7" CSTN colour display
- ◆ Hardy keypad with backlight
- ◆ Colour display
- ◆ Directory for up to 150 entries
- ◆ Talk/standby time of up to 12 h/250 h, standard batteries
- ◆ Brilliant sound quality in handsfree mode
- ◆ Screensaver
- ◆ ECO DECT
- ◆ Alarm clock
- ◆ Room monitor (baby alarm, Babyphone)

[www.gigaset.com/gigasete49h](http://www.gigaset.com/gigasete49h)



### L410 handsfree clip for cordless phones

- ◆ Complete freedom of movement when making calls
- ◆ Practical clip fastening
- ◆ Perfect sound quality in handsfree mode
- ◆ Weight approx. 30 g
- ◆ ECO DECT
- ◆ 5 volume settings
- ◆ LED status display
- ◆ Talk/standby time of up to 5 h/120 h
- ◆ Indoors: ranges of up to 50 m, outdoors: up to 300 m

[www.gigaset.com/gigasetsl410](http://www.gigaset.com/gigasetsl410)



### Gigaset repeater

The Gigaset repeater can be used to increase the reception range between your Gigaset handset and the base.

[www.gigaset.com/gigasetrepeater](http://www.gigaset.com/gigasetrepeater)



### Compatibility

You can find more information about the handset functions in connection with the individual Gigaset bases at:

[www.gigaset.com/compatibility](http://www.gigaset.com/compatibility)

All accessories and batteries are available from your phone retailer.



Use only original accessories. This will avoid possible health risks and personal injury, and also ensure that all the relevant regulations are complied with.

# Mounting the base on the wall

---

A510A: 45 mm

A510: 30 mm



A510A: approx 8.5 mm

 
A510: approx. 7.4 mm




# Mounting the charger on the wall

---

21.6 mm



approx. 3.3

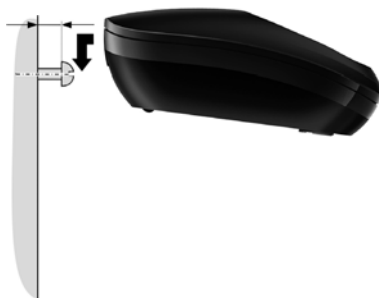



# Index

---

## A

- Accepting a call ..... 27
- Access protection ..... 48
- Accessories ..... 58
- Acknowledge tones ..... 47
- Activating
  - answering machine ..... 35
  - answering machine  
(remote operation) ..... 39
  - flashing message key ..... 33
  - handset ..... 22
  - keypad lock ..... 22
  - ring delay ..... 45
  - two-way recording ..... 37
- Alarm clock ..... 42
- Announcement (answering machine) .. 35
- Answering machine ..... 35
  - activating/deactivating ..... 35
  - deleting messages ..... 36
  - icon ..... 2
  - playing back messages ..... 36
  - remote operation ..... 39
  - skipping back ..... 36
  - skipping forward ..... 36
- Answering machine list ..... 32, 33
- Answering machine, see also  
Network mailbox
- Authorisation ..... 52
- Automatic
  - network provider preselection ..... 29
  - ring delay ..... 27, 45

## B

- Base
  - connecting ..... 11
  - connecting to PABX ..... 49
  - restoring default settings ..... 48
  - setting ..... 47
  - setting up ..... 11
  - system PIN ..... 48
- Battery
  - charging ..... 2, 3
  - display ..... 2, 3
  - icon ..... 2, 3
  - inserting ..... 13
  - tone ..... 47

## C

- Call
    - ending ..... 27
    - external ..... 27
    - internal ..... 43
    - participant listening in ..... 44
    - picking up from ans. machine ..... 37
    - transferring (connecting) ..... 43, 44
    - two-way recording ..... 37
  - Call duration ..... 27
  - Call screening during recording ..... 37
  - Call waiting
    - internal call ..... 44
  - Call-by-call ..... 29
  - Calling
    - external ..... 27
    - internally ..... 43
  - Calling Line Identification ..... 27
  - Calls lists ..... 34
  - Care of the telephone ..... 55
  - Changing
    - dialling mode ..... 49
    - display language ..... 15, 45
    - earpiece volume ..... 45
    - handsfree volume ..... 45
    - name of handset ..... 44
    - pauses ..... 49
    - ringtone ..... 46
    - system PIN ..... 48
  - Character set ..... 57
  - Charge status indicator ..... 2, 3
  - CLI, CLIP ..... 27
  - Colour scheme ..... 45
  - Confirmation tone ..... 47
  - Connecting the base to PABX ..... 49
  - Contrast ..... 45
  - Control key ..... 2, 20
  - Correcting incorrect entries ..... 20
  - Customer Care ..... 50
- ## D
- Date, setting ..... 16
  - Deactivating
    - answering machine ..... 35
    - flashing message key ..... 33
    - handset ..... 22
    - keypad lock ..... 22
    - ring delay ..... 45
    - two-way recording ..... 37
  - Delete key ..... 4

## Index

Deleting	
announcement for ans. machine	36
characters	20
message	36
De-registering (handset)	43
Dialling	
using quick dial	31
with directory	30
Dialling mode	49
Digital clock	45
Directory	30
copying number from text	32
managing entries	31
opening	20
order of entries	30
saving entry	30
saving the first number	30
sending entry/list to handset	31
using to enter numbers	32
Display	
changing display language	15, 45
colour scheme	45
contrast	45
in idle status	18, 21
network mailbox message	40
number (CLI/CLIP)	27
screensaver	45
setting	45
Display keys	2, 4
Disposal	55
<b>E</b>	
Earpiece volume	45
ECO DECT	41
Eco mode	41
Eco mode+	41
End call key	2, 27
Ending a call	27
Entry	
saving, changing (preselection)	29
selecting from directory	30
Environment	54
Error tone	47
External call	
divert to ans. machine	37
<b>F</b>	
Fast access	
answering machine	38
network mailbox	40

<b>G</b>	
General troubleshooting	51
Group call	43
Guarantee Certificate	52

## H

Handset	
activating/deactivating	22
changing name	44
contact with liquid	55
de-registering	43, 48
display language	15, 45
earpiece volume	45
handsfree volume	45
idle status	21
list	20
locating	43
muting	29
paging	43
registering	42
restoring to default settings	47
setting	45
setting up	13
transferring a call	43
using multiple	42
Handsfree operation	28
Hash key	2, 22
Hearing aids	9
Help	51

## I

Icon	
alarm clock	42
for new messages	32
keypad lock	22
new message (answering machine)	36
ringtone	47
Idle status	
display	18, 21
returning to	21
Incorrect entries (correction)	20
Internal	
listening in	44
making calls	43
Internal call	43
call waiting	44

**K**

- Key 1 (quick dial) ..... 2, 38
- Keypad lock ..... 22
- Keys
  - assigning directory entry ..... 31
  - control key ..... 2, 20
  - delete key ..... 4
  - display keys ..... 2, 4
  - end call key ..... 2, 27
  - hash key ..... 2, 22
  - message key ..... 2
  - on/off key ..... 2
  - quick dial ..... 2, 31, 38
  - recall key ..... 2
  - star key ..... 2
  - talk key ..... 2, 27

**L**

- Language, display ..... 15, 45
- Liquid ..... 55
- List
  - answering machine ..... 32, 33
  - calls lists ..... 34
  - handsets ..... 20
  - missed calls ..... 34
  - network mailboxes ..... 32
- Listening in to a call ..... 44
- Locating, handset ..... 43
- Lock
  - activating/deactivating keypad lock .. 22

**M**

- Making calls
  - accepting a call ..... 27
  - external ..... 27
  - internal ..... 43
- Manual redial ..... 32
- Medical equipment ..... 9
- Menu
  - end tone ..... 47
  - tree ..... 25
  - using ..... 21
- Message key
  - activating/deactivating flashing ..... 33
  - opening lists ..... 32
- Message length (ans. mach.) ..... 38

**Messages**

- copying number to directory ..... 36
- deleting ..... 36
- key ..... 2
- playing back ..... 36
- Microphone ..... 2
- Missed calls ..... 34
- Music on hold ..... 47
- Muting
  - handset ..... 29

**N**

- Name
  - of a handset ..... 44
- Network mailbox ..... 40
- Network provider code, automatic ..... 29
- Night mode, see Time control
- Number
  - copying to directory ..... 32
  - displaying caller's number (CLIP) ..... 27
  - entering with directory ..... 32
  - saving in the directory ..... 30

**O**

- On/Off key ..... 2
- Operating remotely ..... 39
- Order in directory ..... 30

**P**

- PABX
  - connecting base ..... 49
  - pauses ..... 49
  - setting dialling mode ..... 49
  - setting recall ..... 49
  - switching to tone dialling ..... 49
- Package contents ..... 10
- Paging ..... 43
- Pause
  - after line seizure ..... 49
  - after recall key ..... 49
- PD (pulse dialling) ..... 49
- Phone number display, notes ..... 28
- PIN change
  - system PIN ..... 48
- Pin connections ..... 57
- Playing back
  - announcement (ans. machine) ..... 35
  - message (answering machine) ..... 36

## Index

Power adapter .....	9
Power consumption .....	56
Preselection .....	29
Protecting phone against access.....	48
Pulse dialling .....	49

## Q

Questions and answers .....	51
-----------------------------	----

## R

Range .....	11
Recall .....	49
Recall key.....	2, 49
Reception booster, see Repeater	
Recording	
two-way recording .....	37
Redial .....	32
Registering (handset).....	42
Repeater .....	47
Ring delay .....	38
Ringtone	
changing.....	46
setting melody.....	46, 47
setting volume.....	46

## S

Screen protection, see Screensaver	
Screensaver.....	45
Searching in directory .....	30
Sending	
directory entry to handset .....	31
Service .....	50
Setting	
melody.....	47
melody (ringer) .....	46
wake-up time .....	42
Setting up	
base .....	11
handset .....	13
Snooze mode .....	42
Sound, see Ringtone	
Special functions.....	49
Specifications .....	55
Speed dial .....	30, 31
Star key .....	2
Switching off	
internal listening in.....	44
Switching on	
internal listening in.....	44
System .....	48

## T

Talk key .....	2, 27
Telephone jack	
pin connections .....	57
Time control (night mode) .....	46
Time, setting.....	16
Tone dialling.....	49

## U

Unknown caller .....	27
----------------------	----

## V

Viewing network mailbox message .....	40
Volume	
earpiece.....	45
handset handsfree volume.....	45
ringtone .....	46
speaker .....	45

## W

Writing and editing text .....	57
--------------------------------	----

**Issued by**

Gigaset Communications GmbH  
Frankenstr. 2a, D-46395 Bocholt

© Gigaset Communications GmbH 2011

All rights reserved. Subject to availability.

Rights of modification reserved.

[www.gigaset.com](http://www.gigaset.com)

This user guide is made from 100% recycled paper.

Version: 20.05.2011



A31008 - M2202 - L101 - 1 - 7619