


# Panasonic<sup>®</sup>

## Operating Instructions DECT 6.0 Portable Station

---

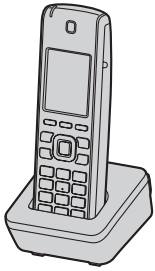

Model No. **KX-UDT111**

Thank you for purchasing this Panasonic product.

Please read this manual carefully before using this product and save this manual for future use.

Please use only the batteries provided and charge the batteries for about 7 hours before using the handset for the first time. For details, see "Charging the Batteries" in this manual.

**Note**

In this manual, the suffix of each model number is omitted unless necessary.

# Introduction

## Outline

This manual describes information about the installation and operation of the PS (Portable Station) handset and the charger.

## Related Documentation

### **Getting Started**

Briefly describes basic information about the installation of the handset and the charger.

### **Administrator Guide**

Describes information about the programming and maintenance of the SIP Cell Station Unit (CS).

### **Installation Guide**

Briefly describes basic information about the installation of the SIP Cell Station Unit (CS).

Manuals and supporting information are provided on the Panasonic Web site at:

<http://www.panasonic.com/sip> (for users in the United States)

<http://panasonic.net/pcc/support/sipphone> (for users in Canada)

### **Note**

- The contents and design of the software are subject to change without notice.

## Other Information

### When you ship the product (For users in the United States only)

Carefully pack and send it prepaid, adequately insured and preferably in the original carton. Attach a postage-paid letter, detailing the symptom to the outside of the carton.

DO NOT send the product to the Executive or Regional Sales offices. They are NOT equipped to make repairs.

### Product Service (For users in the United States only)

Panasonic factory service centers for this product are listed in the service center directory.

Consult your authorized Panasonic dealer for detailed instructions.

### For Future Reference

Record the information in the space below for future reference.

#### **Note**

- The serial number of this product may be found on the label affixed to the inside of the battery compartment on the back of the handset. You should note the serial number of this unit in the space provided and retain this manual as a permanent record of your purchase to aid in identification in the event of theft.

MODEL NO.	_____
SERIAL NO.	_____
DATE OF PURCHASE	_____
NAME OF DEALER	_____
DEALER'S ADDRESS	_____ _____ _____
DEALER'S TEL. NO.	_____

# Table of Contents

<b>Important Information .....</b>	<b>6</b>
<b>For Your Safety .....</b>	<b>6</b>
<b>Data Security .....</b>	<b>8</b>
<b>Additional Information .....</b>	<b>8</b>
Important Safety Instructions .....	8
For Users in the United States Only .....	8
For Users in Canada Only .....	10
For Best Performance .....	11
Battery Information .....	11
<b>Before Operating the Telephone .....</b>	<b>13</b>
<b>Accessory Information .....</b>	<b>13</b>
<b>Location of Controls .....</b>	<b>14</b>
<b>Handset Functions .....</b>	<b>16</b>
Setting the Password .....	16
Key Lock .....	16
Silent Mode .....	16
Advanced Voice Clarity .....	17
Power Save Mode .....	17
Display .....	18
Soft Keys .....	19
Other Icons .....	20
Flexible Keys .....	21
<b>Basic Operations .....</b>	<b>22</b>
Operation Outline .....	22
Function Menus .....	23
Function Keys .....	23
Selecting the Display Language .....	24
Changing the Handset Phone Number Display .....	24
Editing the Names of the Flexible Keys .....	24
Adjusting the Ringer Volume .....	24
Changing the Vibrate Setting .....	24
Adjusting the Receiver/Speaker/Headset Volume .....	25
<b>Feature Operations .....</b>	<b>26</b>
<b>Making Calls .....</b>	<b>26</b>
Calling .....	26
One-touch Dialing .....	26
Hot Key Dialing .....	26
Searching for an Item in the Phonebook .....	27
<b>Receiving Calls .....</b>	<b>28</b>
Receiving .....	28
Caller ID .....	28
<b>During a Conversation .....</b>	<b>29</b>
Holding a Call .....	29
Transferring a Call (Call Transfer) .....	29
Three-party Conference .....	29
<b>Useful Features .....</b>	<b>30</b>
Call Forwarding/Do Not Disturb .....	30
Call Waiting .....	31
Listening to Voice Mail Messages .....	31

---

<b>Customizing the Telephone</b> .....	<b>32</b>
<b>Using the Handset Phonebook</b> .....	<b>32</b>
Private Ring .....	32
Storing an Item in the Handset Phonebook .....	32
Locking the Handset Phonebook .....	34
<b>Assigning Hot Keys</b> .....	<b>34</b>
<b>Memo Alarm Setting</b> .....	<b>35</b>
<b>Entering Characters</b> .....	<b>36</b>
Character Mode Table .....	37
<b>Deleting Stored Items</b> .....	<b>38</b>
<b>Changing Handset Settings</b> .....	<b>39</b>
Handset Setting Menu Layout .....	39
<b>Installation and Setup</b> .....	<b>47</b>
<b>Battery Installation</b> .....	<b>47</b>
<b>Charger Connection</b> .....	<b>47</b>
<b>Charging the Batteries</b> .....	<b>48</b>
<b>Charger Wall Mounting</b> .....	<b>48</b>
<b>Attaching the Belt Clip</b> .....	<b>49</b>
<b>Attaching the Phone Strap</b> .....	<b>49</b>
<b>Appendix</b> .....	<b>50</b>
<b>Specifications</b> .....	<b>50</b>
RF Specifications .....	50
<b>Troubleshooting</b> .....	<b>51</b>
<b>Error Messages</b> .....	<b>54</b>
<b>Index</b> .....	<b>56</b>



# Important Information

## For Your Safety



To reduce the risk of injury, loss of life, electric shock, fire, malfunction, and damage to equipment or property, always observe the following safety precautions.

### Explanation of symbols

The following symbols are used to classify and describe the level of hazard and injury caused when the denotation is disregarded and improper use is performed.









	<b>WARNING</b>
Denotes a potential hazard that could result in serious injury or death.	
	<b>CAUTION</b>
Denotes a hazard that could result in minor injury or damage to the unit or other equipment.	






The following symbols are used to classify and describe the type of instructions to be observed.

	This symbol is used to alert users to a specific operating procedure that must not be performed.
	This symbol is used to alert users to a specific operating procedure that must be followed in order to operate the unit safely.





## **WARNING**

### General Safety


-  For safety reasons, do not physically modify the product or any optional equipment.
-  To prevent possible fire or electric shock, do not expose this product to rain or moisture.
-  Follow all warnings and instructions marked on this product.
-  To reduce the risk of electric shock, do not disassemble this product. Only qualified personnel should service this product. Opening or removing covers may expose you to dangerous voltages or other risks. Incorrect reassembly can cause electric shock.
-  Unplug the AC adaptor from the AC outlet and have the product serviced by qualified service personnel in the following cases:
  - A.** When the power supply cord or plug is damaged or frayed.
  - B.** If liquid has been spilled into this product.
  - C.** If the product has been exposed to rain or water.
  - D.** If the product does not operate according to this manual. Adjust only the controls that are explained in this manual. Improper adjustment of other controls may result in damage and may require service by a qualified technician to restore the product to normal operation.
  - E.** If the product has been dropped or damaged.
  - F.** If product performance deteriorates.
-  Do not insert objects of any kind into this product through openings, as they may touch dangerous voltage points or short out parts that could result in a risk of fire or electric shock. Never spill liquid of any kind on or in the product.
-  The use of excessive sound volume through earphones, headphones, or headsets may cause hearing loss.
-  Switch off the device when in the proximity of areas with potentially explosive atmospheres such as fuel/chemical storage facilities or blasting operations.

-  Consult the manufacturer of any personal medical devices, such as pacemakers, to determine if they are adequately shielded from external RF (radio frequency) energy. (The product operates in the frequency range of 1920 MHz to 1930 MHz and the output peak power level is less than 0.12 W.)
-  Do not use the product in health care facilities if any regulations posted in the area instruct you not to do so. Hospitals or health care facilities may be using devices sensitive to external RF (radio frequency) energy.
-  Unplug the charger from AC outlet if it emits smoke, an abnormal smell or makes unusual noise. These conditions can cause fire or electric shock. Confirm that smoke has stopped and contact an authorized service center.
-  The batteries pose a choking hazard. Keep the batteries out of reach of children.
-  This handset earpiece is magnetized and may retain small ferrous objects.












### Installation

-  Do not install the product in any other way than described in relevant manuals.
-  The product may only be installed and serviced by qualified service personnel.
-  The AC adaptor should only be connected to the type of electric power supply specified on the charger label. If you are not sure of the type of power supply to your home, consult your dealer or local power company.
-  Do not allow anything to rest on the power cord. Do not locate the charger where the power cord may be stepped on or tripped on.

### Placement

-  Do not place the product on an unstable surface, as a fall may cause serious internal damage.



-  The AC adaptor is used as the main disconnect device. Ensure that the AC outlet is installed near the product and is easily accessible.
-  The product should never be placed near or over a radiator or other heat source.
-  Use only the AC adaptor, batteries and charger indicated in this manual.
-  Do not dispose of the batteries in a fire. They may explode. Check with local authorities for special disposal instructions.
-  Do not open or disassemble the batteries. Released electrolyte is corrosive and may cause burns or injury to the eyes or skin. The electrolyte is toxic if swallowed.
-  Exercise care in handling batteries in order not to short the batteries to conductive materials such as rings, bracelets, and keys. The batteries and/or conductor may overheat and cause burns.
-  Charge the batteries provided with, or identified for use with, this product only in accordance with the instructions and limitations specified in this manual.
-  There is a danger of explosion if the batteries are incorrectly replaced.
-  When you leave the product unused for a long period of time, unplug the AC adaptor from the outlet.
-  Do not use a microwave oven to dry this product.
-  Do not use the AC adaptor if it has been submerged in water.

### Notice

- This telephone communicates using digital signals that are difficult to intercept. However, it is possible that the signals could be intercepted by a third party.

## Data Security

- To avoid unauthorized access to this product:
  - Keep the password (e.g., PIN for registration) secret.
  - Change the default password.
  - Set a password that is random and cannot be easily guessed.
  - Change the password regularly.
- This product can store your private/confidential information. To protect your privacy/confidentiality, we recommend that you erase the information such as the phonebook or call log from the memory before you dispose of, transfer or return the product, or have the product repaired.
- Set the password when you register the PS to the CS (Cell Station). For details, see "Setting the Password (Page 16)".
- It is recommended that you lock the phonebook to prevent stored information from being leaked when you carry the PS or if the PS is lost.

## Additional Information

### Important Safety Instructions

When using your telephone equipment, basic safety precautions, including those below, should always be followed to reduce the risk of fire, electric shock and injury to persons.

- Do not use the product near water, for example, near a bathtub, wash bowl, kitchen sink, or laundry tub, in a wet basement, or near a swimming pool.
- Do not use the telephone in the vicinity of a gas leak to report the leak.
- Do not mix old and new batteries.

### **SAVE THESE INSTRUCTIONS**

### For Users in the United States Only

#### FCC and Other Information

Privacy of communications may not be ensured when using this phone.

#### **FCC RF Exposure Warning:**

- This product complies with FCC radiation exposure limits set forth for an uncontrolled environment.
- To comply with FCC RF exposure requirements, the base unit must be installed and operated 20 cm (8 inches) or more between the product and all person's body (excluding extremities of hands, wrist and feet).
- This product may not be collocated or operated in conjunction with any other antenna or transmitter.
- The handset may be carried and operated with only the specific provided belt-clip. Other non-tested belt-clips or similar body-worn accessories may not comply and must be avoided.

#### **Notice**

FCC ID can be found inside the battery compartment or on the bottom of the units.

#### **Note**

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses, and



can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment to an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

**WHEN PROGRAMMING EMERGENCY NUMBERS AND/OR MAKING TEST CALLS TO EMERGENCY NUMBERS:**

1. Remain on the line and briefly explain to the dispatcher the reason for the call before hanging up.
2. Perform such activities during off-peak hours, such as early morning or late evening.

**CAUTION**

Any changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate this product.

**Customer Information**

This equipment complies with Part 68 of the FCC rules and the requirements adopted by the ACTA. On the inside of the battery compartment of this equipment is a label that contains, among other information, a product identifier in the format US:ACJ.....

If requested, this number must be provided to the telephone company.

If trouble is experienced with this equipment, for repair or warranty information, please contact:

Panasonic Service and Technology Company-BTS Center

415 Horizon Drive Bldg. 300 Ste. 350-B  
Suwanee, GA 30024-3186

If the equipment is causing harm to the telephone network, the telephone company may request that you disconnect the equipment until the problem is resolved.

**Hearing Aid Compatibility**

This telephone provides magnetic coupling for hearing aids as defined by the FCC in 47 CFR Section 68.316. Use only handsets or other acoustic devices with this equipment that are compliant with the hearing aid compatibility requirements of FCC Part 68.

When you hold the phone to your ear, noise might be heard in your Hearing Aid. Some Hearing Aids are not adequately shielded from external RF (radio frequency) energy. If noise occurs, use an optional headset accessory or the speakerphone option (if applicable) when using this phone. Consult your audiologist or Hearing Aid manufacturer about the availability of Hearing Aids which provide adequate shielding to RF energy commonly emitted by digital devices.

**Compliance with TIA-1083 standard:**



Telephone handsets identified with this logo have reduced noise and interference when used with T-Coil equipped hearing aids and cochlear implants.

**For Product Service**

- Call 1-800-211-PANA (7262) for the location of your nearest authorized service center.
- Panasonic's e-mail address for customer inquiries: [consumerproducts@panasonic.com](mailto:consumerproducts@panasonic.com)  
For customers in the USA and Puerto Rico ONLY.

- This cordless telephone is designed for use in the United States of America. Sale or use of this product in other countries may violate local laws.
- Ce téléphone sans fil est conçu pour être utilisé aux États-Unis d'Amérique. La vente ou l'emploi de cet appareil dans certains autres pays peut constituer une infraction à la législation locale.
- Este teléfono sin cordón fue elaborado para su uso en los Estados Unidos de América. La venta o el empleo de este producto en ciertos países puede constituir una violación de la legislación local.
- このコードレス電話機は、日本国外での使用を目的として設計されており、日本国内での使用は法律違反となります。従って、当社では日本国内においては原則として修理などのサービスは致しかねます。

## For Users in Canada Only

### Industry Canada Notices and Other Information

This product meets the applicable Industry Canada technical specifications.

#### **Notice**

Operation is subject to the following two conditions: (1) this product may not cause interference, and (2) this product must accept any interference, including interference that may cause undesired operation of the product.

Privacy of communications may not be ensured when using this phone.

Some wireless telephones operate at frequencies that may cause interference to nearby TVs and VCRs. To minimise or prevent such interference, the wireless telephone should not be placed near, or on top of, a TV or VCR. If interference is experienced, move the wireless telephone farther away from the TV or VCR. This will often reduce, or eliminate, interference.

This transmitter must not be co-located or operated in conjunction with any other antenna or transmitter. This Class B digital apparatus complies with Canadian ICES-003.

#### **CAUTION**

Any changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate this product.

#### **RF Exposure Warning:**

- This product complies with IC radiation exposure limits set forth for an uncontrolled environment.
- This handset may not be collocated or operated in conjunction with any other antenna or transmitter.
- The handset may be carried and operated with only the specific provided belt-clip. Other non-tested belt-clips or similar body-worn accessories may not comply and must be avoided.

## For Best Performance

### Operating Range

- The range of operation depends on the topography of your office, weather, or usage conditions, because signals are transmitted between the CS and the handset by radio waves.
- Normally, you get greater range outdoors than indoors. If there are obstacles such as walls, noise may interfere with your telephone calls. In particular, high metal shelves or reinforced concrete walls will restrict your operating range.
- A handset may not work when it is too far from the CS depending on the structure of the building.
- We strongly suggest you hold the bottom half of the handset to ensure better call quality. Because, the antenna is located in the upper half of the handset.

### Noise

Occasional noise or interference may occur due to electromagnetic radiation from objects such as refrigerators, microwave ovens, faxes, TVs, radios, or personal computers. If noise disturbs your telephone calls, keep the handset away from these electrical appliances.

### Environment

- Keep the product away from heating appliances and devices that generate electrical noise, such as fluorescent lamps and motors. These noise sources can interfere with performance of the product.
- Do not place the product in rooms where the temperature is less than 0 °C (32 °F) or greater than 40 °C (104 °F).
- Allow 10 cm (3-15/16 in) clearance around the product for proper ventilation.
- Avoid environments with excessive smoke, dust, moisture, mechanical vibration, shock, or direct sunlight.
- The apparatus is designed to be installed and operated under controlled conditions of ambient temperature and a relative humidity.

### Routine Care

- Unplug the charger from the AC outlet before cleaning.
- Wipe the product with a soft cloth.
- Do not clean the product with abrasive powder or with chemical agents such as benzine or thinner.
- Do not use liquid cleaners or aerosol cleaners.
- Clean the terminal of the charger periodically.

### Placement

- Do not place heavy objects on top of the handset and charger.
- Care should be taken so that objects do not fall onto, and liquids are not spilled into, the product.
- Place the charger on a flat surface. If the charger is mounted on the wall, install it straight.


## Battery Information

After your batteries are fully charged (at 25 °C [77 °F]):

Operation	Operating Time
While Talking (Backlight off <sup>1</sup> , Narrowband Mode)	Up to about 11 h
While Talking (Backlight on <sup>2</sup> , Wideband Mode)	Up to about 8 h
While not in use (Standby)	Up to about 200 h


<sup>1</sup> When the "Talking" setting of "Backlight" is set to "off". For details, see "Display Option (Page 43)".

<sup>2</sup> When the "Talking" setting of "Backlight" is set to "on". For details, see "Display Option (Page 43)".

- Operating time may be shorter than listed above depending on usage conditions and ambient temperature.
- The batteries will drain slowly even while the handset is turned off.
- The handset can receive calls while charging.
- Battery consumption increases when the handset is out of range (if  flashes, turn the handset off).
- **Clean the handset and the charger contacts with a soft, dry cloth once a month. Clean more often if the unit is subject to grease, dust or high humidity.** Otherwise the batteries may not charge properly.

## Low Battery Warning

The batteries need to be charged in the following situations:

- The battery level indicator displays as empty ("") and the alarm sounds<sup>1</sup>.
- "Charge Battery" is displayed. In this situation, the handset cannot be operated.

<sup>1</sup> If the low battery warning occurs during a conversation, the handset will turn off in one minute.

## Replacing the Batteries

If the battery level indicator displays as empty ("🔋") after using the phone for a short time, even when the batteries have been fully charged, the batteries should be replaced.

Before replacing the batteries, make sure the low battery warning is displayed, then turn off the power to prevent memory loss. Replace the batteries and charge the new batteries for about 7 hours.

If you replace the batteries before the low battery warning appears, the battery strength icon may display an incorrect reading. In this case, use the handset as normal with the new batteries installed. To install the batteries, see "Battery Installation (Page 47)".

When the low battery warning is displayed, charge the batteries for about 7 hours. The battery strength icon will then display the correct reading.

- Please use AAA Ni-MH 1.2 V, 700 mAh batteries only. (For details, consult your dealer.)
- There is a danger of explosion if the batteries are incorrectly replaced.



Nickel metal hydride batteries that are recyclable power the product you have purchased. Please call 1-800-8-BATTERY for information on how to recycle these batteries.

## Important Notice Concerning the Correct Use and Charging of Ni-MH Batteries

Batteries, due to their construction, undergo some wear and tear. The lifetime of batteries also depends on correct maintenance. Charging and discharging are the most important factors. You should take notice of the following to maintain the life of the batteries as long as possible.

Ni-MH batteries have a kind of memory, the "memory effect". If fully charged batteries are used several times only for 15 minutes in the handset and then recharged, the capacity of the batteries will be reduced to 15 minutes due to the memory effect. Therefore you should discharge the batteries completely, i.e. use them in the handset until the battery level indicator displays as empty ("🔋"). Then recharge them as described in the manual. After the memory effect has occurred, it is possible to achieve almost complete capacity of the Ni-MH batteries by charging and discharging several times one after another.

Ni-MH batteries can also self-discharge. This self-discharge depends on the ambient temperature. At temperatures under 0 °C (32 °F), the self-discharge will be the lowest. High humidity and high temperatures support the self-discharge. Also long-term storage will lead to self-discharge.



 

 
 
### **CAUTION**

**RISK OF EXPLOSION IF BATTERIES ARE REPLACED BY AN INCORRECT TYPE. DISPOSE OF USED BATTERIES ACCORDING TO THE INSTRUCTIONS.**

# Before Operating the Telephone

## Accessory Information

### Included Accessories
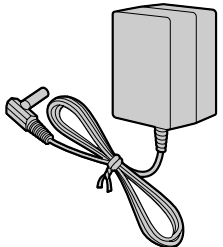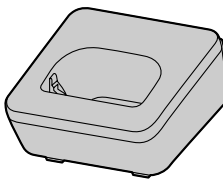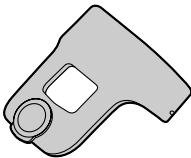
<p>AC adaptor: 1</p>  <p>[Part No.] PNLV226</p>	<p>Charger: 1</p>  <p>[Part No.] PNWEUDT111M</p>	<p>Battery<sup>1</sup>: 2</p> 
<p>Belt Clip: 1</p>  <p>[Part No.] PNKE1118Z1</p>	<p>Belt Clip Holder: 1</p>  <p>[Part No.] PSKE1040Z4</p>	<p>Battery Cover<sup>2</sup>: 1</p> 

<sup>1</sup> Rechargeable AAA Ni-MH 1.2 V, 700 mAh batteries

<sup>2</sup> The battery cover comes attached to the handset.


- To order accessories, call toll-free **1-800-332-5368**. (For users in the United States only)

**Note**



- The illustrations may differ from the appearance of the actual product.

# Location of Controls


The headset is an optional accessory.

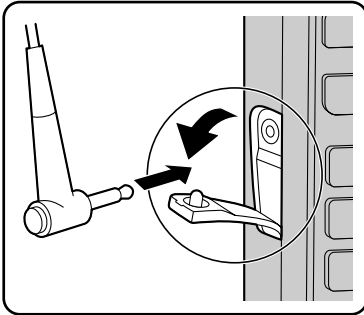

Open the cover.

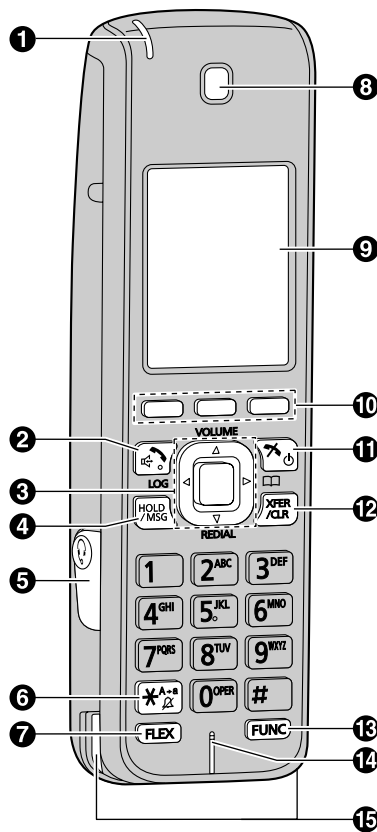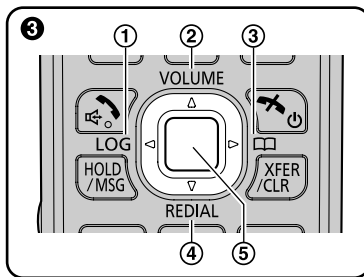

[Back View]

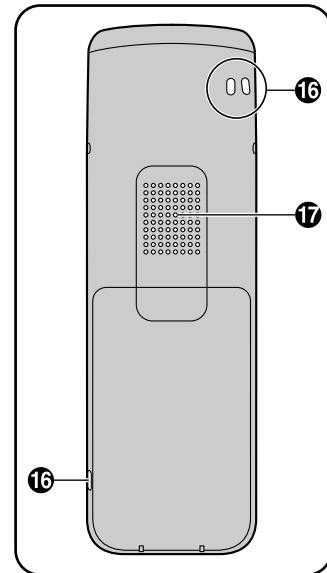

**1 Ringer/Charge Indicator**

**2 TALK/SP-PHONE (Speakerphone) Key**

Used to make or answer calls, or toggle between Receiver mode and Hands-free mode during a conversation.

During a conversation using a headset, Hands-free mode does not work.

**3 Navigator Key**

The Navigator Key includes four arrow keys and a center key. The arrow keys are used to adjust the ringer/receiver volume or move the cursor to select an item. The center key is used to confirm a selection. If in standby mode, pressing the keys perform the following functions:

- ① LEFT (LOG) → Used to display the Incoming call log.
- ② UP (VOLUME) → Used to adjust the ringer volume.
- ③ RIGHT (☐) → Used to open the phonebook.
- ④ DOWN (REDIAL) → Used to display the Outgoing call log.

- ⑤ **CENTER** → Used to display the Menu.

In this manual, when a procedure instructs you to "press **OK**", you can also press the **[CENTER]** key to confirm the selection.

④ **HOLD/Voice Message Key**

During talking, used to place a call on Hold. In standby mode, pressing this key plays your voice messages.

⑤ **Headset Jack**

The following headsets can be used with this unit. (Not all operations with the headsets can be guaranteed.)

- Panasonic KX-TCA400 and KX-TCA430

For up-to-date information about headsets that have been tested with this unit, refer to the following web sites:

<http://www.panasonic.com/sip> (for users in the United States)

<http://panasonic.net/pcc/support/sipphone> (for users in Canada)

⑥ **Silent Mode Key**

Used to turn Silent Mode on or off when pressed for more than 2 seconds in standby mode. For details, see "Silent Mode (Page 16)".

⑦ **Flexible Key**

Pressing the **[FLEX]** key displays a menu with functions that have been assigned to each dial key (0–9, \*, and #). The functions can be selected from the menu, or accessed quickly by pressing **[FLEX]**, then the assigned key.

⑧ **Receiver**

⑨ **Display**

For details, see "Display (Page 18)".

⑩ **Soft Keys**

The handset features 3 soft keys. By pressing a soft key, you can select the feature shown directly above it on the display. For details about the soft keys displayed here, see "Soft Keys (Page 19)".

⑪ **POWER/CANCEL Key**

Used to end calls, exit the phonebook or Function mode. Press and hold this key to turn the handset on or off.

⑫ **TRANSFER/CLEAR Key**

Used to transfer a call to another party, or to clear digits or characters.

⑬ **Function Key**

Pressing the **[FUNC]** key followed by a keypad number (0–9) allows you to perform various common functions quickly. For details, see "Function Keys (Page 23)".

⑭ **Microphone**

⑮ **Charge Contacts**

⑯ **Strap Holes**

Used to attach phone straps and similar items.

⑰ **Speaker**



# Handset Functions

## Setting the Password

The handset password is not set by default. You must register a handset password (4 digits) before use. You cannot use the following features without setting a password:

- Phonebook lock (See "Locking the Handset Phonebook (Page 34)".)
- "Manual&Password" or "Auto&Password" for Key Lock Type (See "Key Option (Page 43)".)
- Reset Handset (See "Other Option (Page 45)".)

### To set

1. Press **MENU** or the **[CENTER]** navigation key.
2. Select "**Setting Handset**" by pressing the arrow keys, and then press **OK**.
3. Press **[▲]** or **[▼]** to select "Other Option", and then press **OK**.
4. Press **[▲]** or **[▼]** to select "Change Password", and then press **OK**.
5. Enter a new password (4 digits [0–9]).
6. Verify the password by entering it again as in step 5.

### Note

- To avoid unauthorized access to this product:
  - Set a password that is random and cannot be easily guessed.
  - Change the password regularly.
- Make a note of the password so that you will not forget it.

## Key Lock

You can lock all keys other than the Navigator Key while the handset is in standby mode. One of 4 key lock types can be selected. For details, see "Key Option (Page 43)".

### To lock

Press and hold **MENU** or the **[CENTER]** navigation key for more than 2 seconds to lock the handset keys. The **LOCK** icon will be displayed to indicate that the keys are locked.

### To unlock

To unlock the handset keys, press and hold **LOCK** or the **[CENTER]** navigation key for more than 2 seconds. The **LOCK** icon will change to **MENU** to indicate the keys have been unlocked.

### Note

- If you select "Manual&Password" or "Auto&Password" for Key lock type, you need to enter the password to unlock the handset.
- If no password has been set, you cannot select "Manual&Password" or "Auto&Password" for Key lock type. To set the password, see "Setting the Password (Page 16)".

## Silent Mode

Silent Mode turns off the ringer and sets the handset to vibrate when calls are received. This can be useful in situations where you do not want to be disturbed, such as during a meeting.

When Silent Mode is active, the following features are turned off or set as specified automatically, regardless of their settings.

- Ringer Volume
- Ring On Charger
- Auto Answer
- Key Tone
- Vibrate (Vib.& Ring)

### To set or cancel

To set or cancel Silent Mode, press and hold **X A B** for more than 2 seconds.

### Note

- If you set the handset on the charger during Silent Mode, the handset will not vibrate.<sup>\*1</sup>
- When Silent Mode is set, the Low Battery Alarm will not be heard in standby mode.
- When Silent Mode is set, confirmation sounds for setting the ring pattern or ring volume will not play.

<sup>\*1</sup> Please note that if you set the handset on the charger while receiving an incoming call, vibration will stop. Once the vibration stops, the handset will not vibrate again for that call, even if the handset is lifted up again. (If Quick Answer is set, lifting up the handset will answer the call.)



## Advanced Voice Clarity

When Advanced Voice Clarity is enabled, environmental noise is reduced to improve and maintain sound quality for the other party in the conversation. Receiver volume is also increased according to the level of environmental noise. It is useful in noisy environments such as warehouses, manufacturing plants, restaurants, and garages. Advanced Voice Clarity can be enabled by default for regular use, or toggled on/off during a call.

### Enabling or disabling Advanced Voice Clarity

1. Press **FUNC**.
2. Press **[▲]** or **[▼]** to select "Voice Clarity", and then press **OK**.
3. Press **[▲]** or **[▼]** to select "on" or "off", and then press **OK**.

### Temporarily enabling or disabling Advanced Voice Clarity during a call

You can enable or disable Advanced Voice Clarity during a call by doing either of the following:

- a. Press **FUNC**, then press **[▲]** or **[▼]** to select "Voice Clarity", and then press **OK**.  
or
- b. Press **AVC**. To display the **AVC** soft key, edit the displayed soft keys. See "Key Option (Page 43)".

#### Note

- Advanced Voice Clarity can be used only in Receiver mode or with a headset. It cannot be used in Hands-free mode. If Hands-free mode is enabled during a call while Advanced Voice Clarity is enabled, Advanced Voice Clarity will be temporarily disabled.

## Power Save Mode

Power Save Mode turns off the ringer, LCD backlight, and/or key backlight automatically after a set number of seconds have passed while receiving a call. For details about adjusting power save mode settings, see "Incoming Option (Page 40)".

## Display



### 1 Pictograph

	Within range of a Cell Station (CS)
	(Blinking) Out of range
	Off-hook Status
	Phonebook
	Voice Message
	Incoming Call Log
	Outgoing Call Log
	Navigation Key Guidance
<b>Battery Indicator<sup>*1</sup></b>	
	Full
	Low
	Needs to be charged

\*1 For details, see "Battery Information (Page 11)".

### 2 Handset Status Information

	Vibration (See page 24)
	Ringer Off (See page 24)
	Silent Mode (See page 16)
	Auto Answer (See page 23)
	Microphone Mute

<b>Fwd</b>	Call Forwarding (See page 30)
<b>DND</b>	Do Not Disturb (See page 30)

### 3 Time Display

### 4 Date/Incoming Call Log Status/New Messages/Phonebook Error

	New Incoming Call Record
--	--------------------------

### 5 Handset's Phone Number and Name

To change the display of the handset's phone number, see "Changing the Handset Phone Number Display (Page 24)".









### 6 Soft Keys

#### Note

- Example images of the display in this manual are samples only, and the actual screen on your phone may vary in color and/or appearance.










## Soft Keys

Icons and information shown on the display will vary depending on the context. To select an item shown on the display, press the corresponding soft key.

	Opens the phonebook. Pressing this key for more than 2 seconds locks the phonebook.	<b>SAVE</b>	Used to save a setting.
	Displayed when in Phonebook Lock. Pressing this key and then entering the password (default: not registered), unlocks the phonebook temporarily. Pressing for more than 2 seconds, then entering the password (default: not registered), unlocks the phonebook. If no password has been set, you cannot lock the phonebook. For details about setting the password, see "Setting the Password (Page 16)".	<b>CLR</b>	Clears digits or characters.
	Stores a new item in the phonebook.	<b>MUTE</b>	Turns the microphone mute feature on or off during a conversation. Flashes when Mic Mute is on.
<b>CALL</b>	Make a call.		Turns the ringer off.
<b>AVC</b>	Activate/deactivate Advanced Voice Clarity.	<b>MENU</b>	<ul style="list-style-type: none"> <li>When in standby mode, opens the main menu.</li> <li>When changing/viewing settings, opens the list menu (edit/delete in the phonebook, etc.).</li> </ul> When in standby mode, pressing this key for than 2 seconds locks all keys.
	Used to set the Alarm.		Returns to the previous display.
<b>DENY</b>	Reject an incoming call.	<b>AM/PM</b>	Used to select AM or PM when setting the Memo Alarm feature.
<b>CONF</b>	Establishes a multiple-party conversation (Conference).	<b>OK</b>	Confirms the entry.
	Searches for an item in the phonebook alphabetically.		Displayed when in Key Lock mode. Pressing this key for more than 2 seconds unlocks the keys.
<b>ABC</b>	Displayed when in Alphabetic character entry mode. Pressing this key switches to Numeric character entry mode.	<b>NEXT</b>	Advances to the next display.
<b>0-9</b>	Displayed when in Numeric character entry mode. Pressing this key switches to Special character (Extended 1) character entry mode.	<b>DELETE</b>	Used to delete the setting.

## Before Operating the Telephone


---

	Displayed when in Special character (Extended 1) entry mode. Pressing this key switches to Alphabetic character entry mode.		Disconnects the current call and allows you to make another call without hanging up.
	Used to set Call Forwarding and Do Not Disturb.		Perform an unscreened (blind) transfer.
	Displays the Outgoing Call Log.		Used to select an item when in setting mode.
	Displays the last dialed number.		Used to set/clear Auto Answer mode when in standby mode. During a conversation, turns the microphone mute feature on or off. For details about the Mute/Auto Answer function, see "Function Keys (Page 23)".
	Opens the Incoming Call Log.		

### Note

- The display of the soft keys can be customized. The soft keys displayed in standby mode or during a call can be set. The names of the soft keys can also be edited. For details, see "Key Option (Page 43)".

## Other Icons


Icon	Description
	Displayed next to an extension from which a voice mail message is waiting. For details, see "Listening to Voice Mail Messages (Page 31)".

## Flexible Keys

A Flexible Key can be used either to seize a line in order to make or receive a call, or used as a function key.

Press **FLEX** to display the Flexible Key list. Here you can access the 12 Flexible Keys. The color of each key number indicates the status of the line or the status of the function assigned to the key.

### [Example]

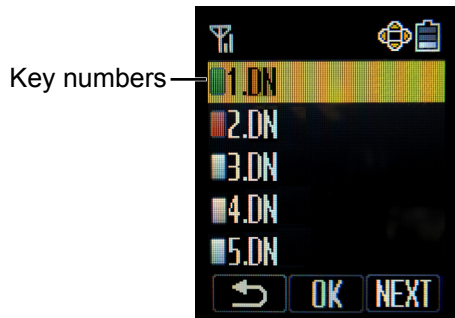

- To select a key, press [**▲**] or [**▼**] to select the desired key, and then press **OK**.
- To edit the names of Flexible Keys, see page 24.

The following types of flexible keys are available:

### DN (Directory Number)

Seizes the line assigned to the DN key. When a call arrives at the DN key, pressing the key answers the call.

#### Status Indication

- **Off:** Idle
- **Green on:** You are on a call using the DN key.
- **Flashing green rapidly:** A call is being received.
- **Flashing green slowly:** A call is on hold.
- **Red on:** A shared line is in use or on private hold at another unit.
- **Flashing red slowly:** A shared line is on hold at another unit.

#### Note

- A shared line is a line that can be used by multiple units. This is an optional feature and may not be supported on your phone system.
- If a call is on private hold (red, steady on), the call cannot be retrieved except from the unit that put the call on hold.

# Basic Operations

## Operation Outline

Handset functions are accessed through the display menu and selected with the Navigator Key and soft keys.




\*1 If soft key display settings are changed, the soft keys shown here may not be displayed.






- The selected item will be highlighted.
- For details about entering characters, see "Entering Characters (Page 36)". For details about searching for an item in the phonebook, see "Searching for an Item in the Phonebook (Page 27)".

## Function Menus

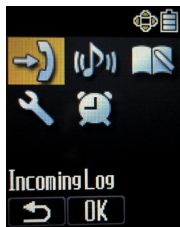
Press **MENU** or the **[CENTER]** navigation key to display the main and sub menus.






### Main Menu—While in Standby Mode

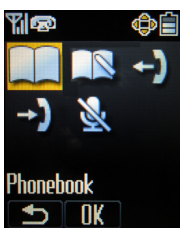

-  **Incoming Log**  
Enters the Incoming Call Log.
-  **Ringer Volume**  
Accesses the "Ringer Volume" setting.
-  **New Phonebook**  
Stores a new item in the phonebook.
-  **Setting Handset**  
Accesses the "Setting Handset" settings.
-  **Memo Alarm**  
Accesses the "Memo Alarm" settings.

### Sub Menu—While Off-hook/During a Conversation




-  **Phonebook**  
Opens the phonebook.
-  **New Phonebook**  
Stores a new item in the phonebook.
-  **Outgoing Log**  
Enters the Outgoing Call Log.
-  **Incoming Log**  
Enters the Incoming Call Log.
-  **Mute**  
Turns the microphone mute feature on or off during a conversation.

## Function Keys

Handset functions can be activated through the display key list.

1. Press **[FUNC]** to display the function key list.
2. Press **[▲]** or **[▼]** to select the desired function, and then press **OK**.

You can also press the number key corresponding to a function number to select it directly.

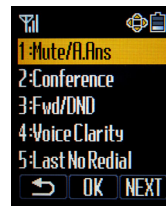

### 1: Mute/A.Ans

Automatically answers incoming calls in hands-free mode. "☎" is displayed in standby mode.

### 2: Conference

Establishes a multiple-party conversation.

### 3: Fwd/DND

Displays and/or sets Call Forwarding and Do Not Disturb.

### 4: Voice Clarity

Sets Advanced Voice Clarity.



### 5: Last No Redial

Call the last number that was dialed.

### 6: Phonebook

Makes a call using the phonebook.

### 7: Incoming Log

Makes a call using the Incoming Call Log.

### 8: Redial List


List numbers that were recently dialed.

### 9: Flash/Recall

Disconnects the current call and allows you to make another call without hanging up.

### 0: Alarm

Sets a memo alarm.

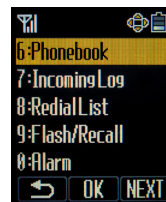



## Selecting the Display Language

You can select the language displayed on your handset.

1. Press **MENU** or the **[CENTER]** navigation key.
2. Select "**Setting Handset**" by pressing the arrow keys, and then press **OK**.
3. Press **[▲]** or **[▼]** to select "Display Option", and then press **OK**.
4. Press **[▲]** or **[▼]** to select "Language", and then press **OK**.
5. Press **[▲]** or **[▼]** to select a language<sup>1</sup>, and then press **OK**.

<sup>1</sup> You can select one of the following 3 languages: English, Español, FRANÇAIS.

## Changing the Handset Phone Number Display

You can change the display of the handset's phone number when the handset is in standby mode.

1. Press **MENU** or the **[CENTER]** navigation key.
2. Select "**Setting Handset**" by pressing the arrow keys, and then press **OK**.
3. Press **[▲]** or **[▼]** to select "Display Option", and then press **OK**.
4. Press **[▲]** or **[▼]** to select "Standby Display", and then press **OK**.
5. Press **[▲]** or **[▼]** to select the desired item, and then press **OK**.

### Note

- By default, "H/S No." is selected.
- For details about standby display settings, see "Display Option (Page 43)".

## Editing the Names of the Flexible Keys

Web user interface programming is required to change the names of the Flexible Keys used for the handset. For details, consult your administrator or dealer.

## Adjusting the Ringer Volume

The volume of the ringer can be adjusted, or turned off.

## Adjusting the Ringer Volume or Turning the Ringer Off

1. Press **MENU** or the **[CENTER]** navigation key.
2. Select "**Ringer Volume**" by pressing the arrow keys, and then press **OK**.
3. Press **[▲]** or **[▼]** to select the desired setting (Step Up, Step Down, Level 1–6, Off), and then press **OK**.

### Note

- You can press the **[▲]** key instead of performing steps 1 and 2.
- For details about setting the ringer pattern, see "Incoming Option (Page 40)".

## Adjusting the Ringer Volume or Turning the Ringer Off while Ringing

While receiving a call, do the following to adjust the ringer volume or turn the ringer off:

### To adjust the ringer volume

Press **[▲]** or **[▼]** to adjust the volume<sup>1</sup>.

### To turn the ringer off

Press  or .

<sup>1</sup> The adjusted volume level will also be used for subsequent calls.

### Note

- If you attach a headset while receiving an incoming call, the ring from the handset does not switch to the headset. If you attach a headset before receiving an incoming call, and headset ringer is set to "On", ringing will be heard from the headset.

## Changing the Vibrate Setting

1. Press **MENU** or the **[CENTER]** navigation key.
2. Select "**Setting Handset**" by pressing the arrow keys, and then press **OK**.
3. Press **[▲]** or **[▼]** to select "Incoming Option", and then press **OK**.
4. Press **[▲]** or **[▼]** to select "Vibrate", and then press **OK**.



5. Press [▲] or [▼] to select the desired setting (Vib. & Ring, Vib. → Ring, Off), and then press **OK**.

**Note**

- To set Vibrate only, without ringing, select "Vib. & Ring" and set the Ringer Volume to "Off", or turn Silent Mode on. For details, see "Location of Controls (Page 14)" and "Adjusting the Ringer Volume (Page 24)".

## Adjusting the Receiver/ Speaker/Headset Volume



During a conversation, press [▲] or [▼] to adjust the volume (Level 1–6).

# Feature Operations


## Making Calls

### Calling


#### Calling by Dialing

1. Press .
2. Dial the outside party's number.
3. Press **CALL**.
4. To end the call, press .

#### Predialing




In standby mode, you can start dialing while still on-hook. After dialing the number, press  to go off-hook and begin the call.

#### Note



- Alternatively, you can seize a specific line for making the call by pressing **FLEX** and selecting an idle DN key.
- To cancel dialing, press .
- If "Y" flashes, move closer to the CS and dial again.

#### Using the Outgoing Call Log



If a call is received from a phone number stored in the phonebook, the number and name of the caller will be displayed in the call log.

1. While in standby mode, press **[▼]** or .
2. Press **[▲]** or **[▼]** to select an outgoing call record, and then press .
3. To end the call, press .

#### Using the Incoming Call Log

1. While in standby mode, press **[◀]**.
2. Press **[▲]** or **[▼]** to select an incoming call record, and then press .
3. To end the call, press .

### Using the Phonebook


1. Press **[▶]** or .
2. Select an item stored in the phonebook, and then press .
3. To end the call, press .

#### Note

- For details about searching for an item in the phonebook, see "Searching for an Item in the Phonebook (Page 27)".
- For details about entering characters, see "Entering Characters (Page 36)".
- For details about storing an item in the phonebook, see "Storing an Item in the Handset Phonebook (Page 32)".

### One-touch Dialing

You can make a call with a One-touch operation if a One-touch Dialing key has been created for the desired party. One-touch Dialing keys can also be configured to access features of your phone system, if available.


1. Press **FLEX**, and then press the One-touch Dialing key (flexible key).
2. To end the call, press .

#### Note

- For details about Flexible Keys, see "Flexible Keys (Page 21)".

### Hot Key Dialing

You can assign a phone number to each number key and then access the desired phone number by simply pressing and holding the assigned number key.

1. Press and hold the dialing key (0–9) assigned as a Hot Key for more than 1 second.
2. Press .



#### Note

- While the Hot Key's information is displayed, you can press **[▲]** or **[▼]** to select another Hot Key number.
- If Hot Key dialing is set to "Auto", a Hot Key number can also be dialed by pressing and holding the assigned dialing key for a specified number of seconds. For details, see "Selecting the Type of Hot Key Dialing (Page 34)".

- For details about assigning Hot Keys, see "Assigning Hot Keys (Page 34)".




## Searching for an Item in the Phonebook

You can search for an item in the phonebook, and then make a call.

1. While in standby mode, press [▶] or .
2. Press [▲] or [▼] to select the desired item.
3. Press .




### Searching by Name

You can also search for an item in the phonebook by entering a name:

1. While in standby mode, press [▶] or .
2. Press .
3. Enter the name or the first character(s) of the desired name, and then press **OK**.
4. Press [▲] or [▼] to select the desired item.
5. Press .


### Searching by Category

If items in the phonebook have been assigned categories, you can search by category.

1. While in standby mode, press [▶] or .
2. Press , and then press #.
3. Press [▲] or [▼] to select a category, and then press **OK**.
4. Enter the name or the first character(s) of the desired name of the item in the category, and then press **OK**.
5. Press [▲] or [▼] to select the desired item.
6. Press .


#### Note

- If one item has multiple phone numbers stored, you can press the [CENTER] navigation key, and then press [▲] or [▼] to select the desired phone number for that item.
- Characters that are entered using the # key (for example, "\$") cannot be entered when searching the phonebook.
- For details about entering characters, see "Entering Characters (Page 36)".

- While an item is displayed you can press  to return to the "<Enter Name>" display, and then search for another item.

# Receiving Calls

## Receiving

To answer an incoming call, press .

### To answer an incoming call on a specific line

1. Press **FLEX** to display the flexible keys.
2. Press the flexible key number, or press **[▲]** or **[▼]** to select the desired key, and then press **OK**.

You can also answer a call using the following features:

- Any Key Answer
- Quick Answer
- Auto Ans Delay

For details about setting these features, see "Answer Option (Page 42)".

#### Note

- If an incoming call is directed to PS ring groups<sup>1</sup>, the flexible keys will not flash. Please press TALK button to answer the call.
- Flexible keys with incoming calls will be flashing green rapidly.
- If "Quick Answer" is set to "On" and a brief power failure occurs while the handset is receiving a call on the charger, the following may occur:
  - If "Talk On Charger" is set to "Off" (default), the call may be disconnected after being answered.
  - If "Talk On Charger" is set to "On", the call may be answered automatically. In this case, please note that privacy rights may be violated or sensitive information may be transmitted to unauthorized parties.
- You can select the ringer pattern and LED pattern for each type of incoming call. For details, see "Incoming Option (Page 40)".

<sup>1</sup> The PS ring group is available if the CS is connected to a KX-NS1000 PBX. For details, refer to the documentation of the KX-NS1000.

### Rejecting an incoming call

You can reject an incoming call from your handset.

1. While an incoming call is ringing, press **DENY**.
2. The call will be rejected, and the handset will return to standby mode.

### Rejecting calls from specific numbers

Calls from specific numbers can be automatically rejected. This feature can be enabled through Web user interface programming. For details, contact your administrator or dealer.

#### Note


The rejecting call is not available if the CS is connected to a KX-NS1000 PBX.

## Caller ID

If an outside call that contains Caller ID information (a caller's name and telephone number) is received, this information will be logged in the incoming call log and displayed on the handset.

If a call from a number matching a number entered in the phonebook is received, the name registered in the phonebook for that number will be displayed along with the number.

#### [Example]

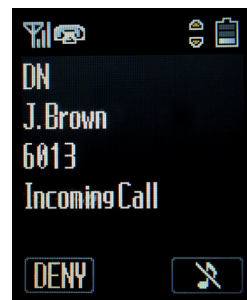

If caller information is sent by the phone system and there is also information stored in the phonebook for the same number, you can choose which information will be displayed on the handset. Caller information sent by the phone system is displayed by default. For details, see "Display Option (Page 43)".

If you set the handset to display the caller information stored in the phonebook, caller information sent by the phone system will only be displayed if the number of the caller is not stored in the phonebook.

#### Note


 
The soft key to reject an incoming call is not displayed on the handset if the CS is connected to a KX-NS1000 PBX.

## During a Conversation

### Holding a Call

You can put a call on hold by holding the call at your extension.





#### To hold the current call

Press , and then press .

#### Note

- If Automatic Call Hold is enabled on your handset, the call will also be put on hold if you select a DN key other than the one for the current call. For details, consult your administrator or dealer.



 
#### To retrieve a call on hold at your extension

- Press .
- Press the dial key corresponding to the slowly flashing green DN key, or press  or  to select a slowly flashing green DN key, and then press .


## Transferring a Call (Call Transfer)

You can transfer a call to another destination (extension or outside party).

#### To transfer


- Press  during a conversation.
- Dial the party you want to transfer to, and then press .
- Wait until the other party answers to announce the transfer.
- Press .

#### Note

- To return to the call before the transfer destination answers, press .
- If unscreened transfers are supported on your phone system, step 3 can be omitted. For details, consult your administrator or dealer.

#### To do a blind transfer<sup>\*1</sup>

- Press  during a conversation.

- Dial the party you want to transfer to, and then press .

<sup>\*1</sup> A blind transfer is not available if the CS is connected to a KX-NS1000 PBX.




## Three-party Conference

During a conversation, you can add an additional party to your call and establish a conference call.


#### Notice

- If the CS is connected to a KX-NS1000 PBX, refer to the documentation for the PBX.
- Your phone system may support advanced conference features, such as conference calls with four or more parties. In this case, the procedures for handling a conference call may be different from those explained in this section. For details about your phone system, consult your administrator or dealer.

#### Making a Conference Call



 
 



 


- Press , and then press 2 ("Conference").
- Dial the party you want to add to the conversation, and then press .
- After the called party answers, press , and then press 2 ("Conference").

#### Note

- The  soft key can also be used to access the Conference function directly. To display this key, edit the displayed soft keys. For details, see "Key Option (Page 43)".

#### Removing a Party from the Conference

During a conference, you can remove other parties from the conference. However, this operation is available only during conference calls you initiate.

- During a conference call, press .
- Press .
- Press the dial key, or press  or , and then press  to select the DN key (flexible key) that corresponds to the party you want to disconnect.
- Press .
- Press .
- Press the dial key, or press  or , and then press  to select the DN key (flexible key) that corresponds to the remaining party.

**Note**

- To reestablish the conference without removing either party, press **FUNC**, and then 2 ("Conference") after step 3.

**Ending a Conference Call**

To go on-hook and end the conference call, press



## Useful Features

### Call Forwarding/Do Not Disturb

You can have incoming calls automatically forwarded to another destination. You can also have incoming calls rejected (Do Not Disturb).

**To access the FWD/DND settings**

1. In standby mode, press **FUNC**, and then 3 ("Fwd/DND").
2. If the unit has multiple lines, press **[▲]** or **[▼]** to select the desired line, and then press **OK**.
3. Press **[▲]** or **[▼]** to select the type of FWD or DND setting to apply, and then press **OK**.

The settings are as follows:

- **Fwd/DND off<sup>\*1</sup>**: Disable Forward and Do Not Disturb (All incoming calls are accepted.)
- **DND**: Enable Do Not Disturb (All incoming calls are automatically rejected.)
- **Fwd (All)**: Enable Forward All Calls (All incoming calls are forwarded.)
- **Fwd (Busy)**: Enable Forward Busy (Incoming calls are forwarded only when your extension is in use.)
- **Fwd (NA)**: Enable Forward No answer (An incoming call is forwarded if you do not answer the call within a certain amount of time.)
- **Fwd (B/NA)<sup>\*1</sup>**: Enable Forward Busy or No Answer (An incoming call is forwarded when your extension is in use or you do not answer the call within a certain amount of time.)

<sup>\*1</sup> Fwd/DND Off and Fwd(B/NA) are only available if the CS is connected to a KX-NS1000 PBX.

4. If a Forward setting is selected, enter a new forward destination number, or confirm and modify a previously set forward destination number.
  - If the CS is connected to a KX-NS1000 PBX, press **#** and then **OK**.
  - If the CS is connected to a KX-NS1000 PBX, press **OK**.



**Note**

- When Call Forwarding and/or Do Not Disturb is enabled, **Fwd** and/or **DND** appears on the display in standby mode.
- FWD settings cannot be used on a shared line.


## Call Waiting

During a conversation, if a second call arrives, you will hear a call waiting tone. You can answer the second call by disconnecting or holding the current call.


### To disconnect the current call and then talk to the new party

1. Press  while hearing the call waiting tone.
2. Press .



### To hold the current call and then talk to the new party

1. Press  while hearing the call waiting tone.
2. Press **FLEX**.
3. Press the dial key corresponding to the flashing green DN key, or press **[▲]** or **[▼]** to select a flashing green DN key, and then press **OK**.

## Listening to Voice Mail Messages

When you receive a voice message, "Message" is displayed, and  will appear.

You can check your new messages by accessing your mailbox.

1. In standby mode, press and hold .
2. Press **[▲]** or **[▼]** to select the line on which  is displayed, and then press **OK**.

### Note

- Step 2 is not necessary if only one line is configured on the handset.

# Customizing the Telephone

## Using the Handset Phonebook

You can store up to 500 phone numbers in the handset along with names for easy access. You can also set unique ringer patterns and LED patterns for different categories to identify incoming calls. All phonebook items are stored in alphabetical order.

For security purposes, you can lock the phonebook. For details about making calls from the phonebook, see "Using the Phonebook (Page 26)".

### Note

- A single entry (i.e., name) can have multiple phone numbers. Since the phonebook capacity is limited by the number of stored phone numbers, storing multiple phone numbers in an entry decreases the maximum number of entries.
- We recommend that backups are made of the handset's phonebook data, in case the data becomes unrecoverable due to product malfunction. For details, consult your administrator or dealer.

## Private Ring

You can organize entries in the phonebook into one of 9 Private Ring Categories. It is possible to set a different ringer pattern and LED pattern, vibration pattern, and color pattern<sup>1</sup> for each category. When the displayed Caller ID<sup>2</sup> matches a phone number or name stored in the phonebook, the handset rings according to the Private Ring Category settings.

<sup>1</sup> For details about ringer patterns, LED patterns, vibration patterns, and color patterns, see "Incoming Option (Page 40)".

<sup>2</sup> For details about Caller ID information, see "Caller ID (Page 28)".

## Storing an Item in the Handset Phonebook

### Storing a New Item

1. Press **MENU** or the **[CENTER]** navigation key.
2. Select "**New Phonebook**" by pressing the arrow keys, and then press **OK**.
3. Enter a name (max. 24 characters), and then press **OK**.
4. Press **[▲]** or **[▼]** to select a phone number type (① to ⑤), and then press **OK**.
5. Enter the phone number (max. 32 digits), and then press **OK**.
6. Repeat steps 4 and 5 to add additional phone number types.
7. Press **[▲]** or **[▼]** to select "Category Off", and then press **OK**.
8. Select a category, and then press **OK**.
9. To select a default number for the entry, press **[▲]** or **[▼]** to select "Default TEL No", and then press **OK**.
10. Press **[▲]** or **[▼]** to select the number to use as the default number, and then press **OK**.
11. Press **SAVE**.

### Note

- Steps 7 and 8 can be omitted if you do not want to assign a category.
- Steps 9 and 10 can be omitted if you do not want to assign a default number. (The first number entered for an entry will automatically be assigned as the default number.)
- The valid digits are "0" through "9", "×", "#", and "+".
- For details about entering characters, see "Entering Characters (Page 36)".
- If an item with the same name and number exists, the new information added will be merged with the existing item.

### Editing a Stored Item

You can edit the information stored in phonebook entries.

1. Press **BOOK**.
2. Press **[▲]** or **[▼]** to display the desired entry, or press **SEARCH** and search for the desired entry.



3. Press **MENU** to open the phonebook sub-menu.
4. Press [**▲**] or [**▼**] to select "Edit", and then press **OK**.
5. Edit the name, phone number, category, and default number setting as necessary.
6. Press **SAVE**.

#### Note

- To change a character or digit, press [**◀**] or [**▶**] to highlight it, press **XFER/CLR** to delete it, and then enter the new character or digit.
- To clear an entire line, press and hold **XFER/CLR** for more than 1 second.
- To move the cursor to the left or right, press [**◀**] or [**▶**], respectively.
- For details about searching for an item in the phonebook, see "Searching for an Item in the Phonebook (Page 27)".
- For details about entering characters, see "Entering Characters (Page 36)".

## Storing an Item Using Predialing

You can dial a number first and then add it as a phonebook entry.

1. In standby mode, dial a number.
2. Press **☎**.
3. Enter a name (max. 24 characters), and then press **OK**.
4. Press [**▲**] or [**▼**] to select a phone number type (① to ⑤), and then press **OK**.
5. Enter the phone number (max. 32 digits), and then press **OK**.
6. Repeat steps 4 and 5 to add additional phone number types.
7. Press [**▲**] or [**▼**] to select "Category Off", and then press **OK**.
8. Select a category, and then press **OK**.
9. To select a default number for the entry, press [**▲**] or [**▼**] to select "Default TEL No", and then press **OK**.
10. Press [**▲**] or [**▼**] to select the number to use as the default number, and then press **OK**.
11. Press **SAVE**.

#### Note

- Steps 7 and 8 can be omitted if you do not want to assign a category.

- Steps 9 and 10 can be omitted if you do not want to assign a default number. (The first number entered for an entry will automatically be assigned as the default number.)
- For details about entering characters, see "Entering Characters (Page 36)".

## Storing an Item Using the Incoming or Outgoing Call Log

You can add a number listed in the incoming or outgoing call log to the phonebook.

1. In standby mode, press [**◀**] to open the Incoming Call Log or press [**▼**] to open the Outgoing Call Log.
2. Press [**▲**] or [**▼**] to select a record in the log.
3. Press **MENU** to open the phonebook sub-menu.
4. Press [**▲**] or [**▼**] to select "Save Phonebook", and then press **OK**.
5. Edit the name if desired, and then press **OK**.
6. Press [**▲**] or [**▼**] to select a phone number type (① to ⑤), and then press **OK**.
7. Edit the phone number if desired, and then press **OK**.
8. Repeat steps 6 and 7 to add additional phone number types.
9. Press [**▲**] or [**▼**] to select "Category Off", and then press **OK**.
10. Select a category, and then press **OK**.
11. To select a default number for the entry, press [**▲**] or [**▼**] to select "Default TEL No", and then press **OK**.
12. Press [**▲**] or [**▼**] to select the number to use as the default number, and then press **OK**.
13. Press **SAVE**.

#### Note

- Steps 9 and 10 can be omitted if you do not want to assign a category.
- Steps 11 and 12 can be omitted if you do not want to assign a default number. (The first number entered for an entry will automatically be assigned as the default number.)
- For details about entering characters, see "Entering Characters (Page 36)".

## Editing Category Names

You can edit the names of the categories in the phonebook.

1. Press **MENU** or the **[CENTER]** navigation key.
2. Select "**Setting Handset**" by pressing the arrow keys, and then press **OK**.
3. Press **[▲]** or **[▼]** to select "Display Option", and then press **OK**.
4. Press **[▲]** or **[▼]** to select "Category Name", and then press **OK**.
5. Press **[▲]** or **[▼]** to select the desired category number (1–9), and then press **OK**.
6. Enter a name for the category (max. 13 characters), and then press **OK**.
7. Repeat steps 5 and 6 for each category name to edit.

### Note

- For details about entering characters, see "Entering Characters (Page 36)".

## Locking the Handset Phonebook

You can lock/unlock the phonebook while the handset is in standby mode. If no password has been set, you cannot lock the phonebook. For details about setting the password, see "Setting the Password (Page 16)".

## Locking/Unlocking the Phonebook

### To lock

- Press and hold **📖** for more than 2 seconds. **🔒** will be displayed.

### To unlock

1. Press and hold **🔒** for more than 2 seconds.
2. Enter your password.
3. Press **📖** to return to standby mode.

## Unlocking the Phonebook Temporarily

1. Press **🔒**.
2. Enter your password.

## Assigning Hot Keys

You can assign a phone number stored in the phonebook to a key to be used as a Hot Key.

1. In standby mode, press and hold a dial key (0–9) for more than 1 second.
2. Press **MENU**.
3. Press **[▲]** or **[▼]** to select "Copy from P.book", and then press **OK**.
4. Press **[▲]** or **[▼]** to select an entry, or press **🔍** to search for an entry, and then press **OK**.
5. Press **[▲]** or **[▼]** to select a number, and then press **OK**.
6. Press **OK**.

### Note

- For details about searching for an item in the phonebook, see "Searching for an Item in the Phonebook (Page 27)".

## Selecting the Type of Hot Key Dialing

You can select one of 2 types of Hot Key Dialing for each assigned Hot Key.

1. In standby mode, press and hold a dial key (0–9) for more than 1 second.
2. Press **MENU**.
3. Press **[▲]** or **[▼]** to select "Automatic Call", and then press **OK**.
4. Select "Manual" or "Auto", and then press **OK**.
  - **Manual**: Pressing and holding an assigned Hot Key for the set number of seconds will display the Hot Key's information. Then, press **📞** to dial the Hot Key's assigned number. Alternately, when the Hot Key's information is displayed, you can press **FLEX** and select a DN key to dial using the line assigned to the DN key.
  - **Auto**: Pressing and holding an assigned Hot Key for the set number of seconds will dial that Hot Key's assigned number immediately.

### Note

- To select the number of seconds before the call is automatically made, see "Key Option (Page 43)".

## Memo Alarm Setting

An alarm will sound at the set time. A memo can also be displayed. Memo Alarm is available only when the handset is within range of a CS.

### Note

- You can select the ringer pattern and LED pattern for each Memo Alarm. For details, see "Incoming Option (Page 40)".
- If you are on a call at the time that the alarm is set to sound, it will sound after you have ended the call.

### Setting a Memo Alarm

- Press **MENU** or the **[CENTER]** navigation key.
- Select "**Memo Alarm**" by pressing the arrow keys, and then press **OK**.
- Press **[▲]** or **[▼]** to select an alarm number (1–3), and then press **OK**.
- Press **[▲]** or **[▼]** to select an alarm mode, and then press **OK**.

The alarm modes are as follows:

- off**: Disables the selected Memo Alarm.
  - once**: The selected Memo Alarm will occur only once.
  - Daily**: The selected Memo Alarm will occur at the same time every day.
  - Weekly**: The selected Memo Alarm will occur at the same time on selected days of the week.
- Set the time and date for the Memo Alarm. The information to enter depends on the alarm mode.
    - once**: Enter the date and time, using the Navigator Keys and/or dial keys, and then press **OK**.
    - Daily**: Enter the daily time, using the Navigator Keys and/or dial keys, and then press **OK**.
    - Weekly**:
      - Press **[▲]** or **[▼]** to select a day of the week, and then press **✓**. A ✓ mark will be displayed next to each day of the week that has been selected. In this way, you can select multiple days of the week.
      - After selecting 1 or more days of the week, press **OK**.

- Enter a time of day using the Navigator Keys and/or dial keys, and then press **OK**.

- Enter a text message to be displayed when the Memo Alarm occurs, and then press **OK**.
- Press **OK**.




### Note

- For details about entering characters, see "Entering Characters (Page 36)".
- When entering a time of day, press **AM/PM** to toggle between AM or PM. **AM/PM** will not be displayed if 24-hour-time display is set.

### Deleting a Memo Alarm




- Press **MENU** or the **[CENTER]** navigation key.
- Select "**Memo Alarm**" by pressing the arrow keys, and then press **OK**.
- Press **[▲]** or **[▼]** to select an alarm number (1–3), and then press **DELETE**.
- Press **[▲]** or **[▼]** to select "**Yes**", and then press **OK**.

### Stopping a Memo Alarm

- While the alarm is ringing, press , , , or set the handset on the charger.

# Entering Characters

You can enter characters and digits using the dial keys. You can select one of 3 character modes by pressing the **Right Soft Key** while entering a name. The function icon above the soft key displays the current character mode. For a list of available characters, see "Character Mode Table (Page 37)".

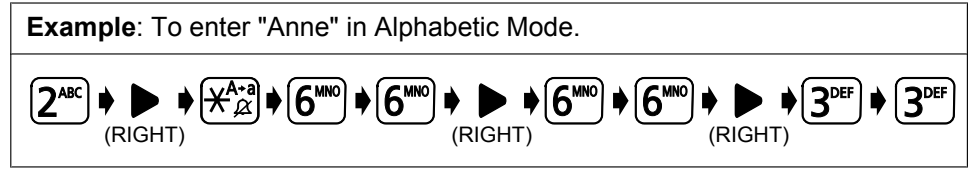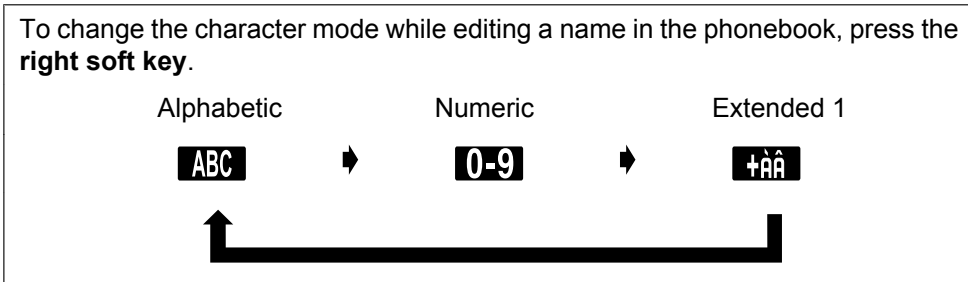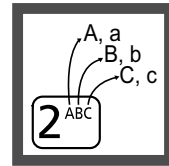

- To switch between uppercase and lowercase, press .
- To enter a character located on the same dialing key as the previous character, move the cursor by pressing the Navigator Key **[▶]**, then enter the desired character.
- If you enter a different character by mistake, press the Navigator Key **[◀]** or **[▶]** to highlight the character, press to delete it, and then enter the correct character.
- To clear an entire line, press for more than 1 second.
- To move the cursor, press the Navigator Key **[◀]**, **[▶]**, **[▲]** or **[▼]**.






## Character Mode Table

Keys	ABC (Alphabetic)		0-9 (Numeric)	+ÅÅ (Extended 1)	
	Upper	Lower		Upper	Lower
<b>1</b>	Space # & ' ( ) * , - . / 1		<b>1</b>	Space # & ' ( ) * , - . / 1	
<b>2<sup>ABC</sup></b>	A B C 2	a b c 2	<b>2</b>	A Å Á Â Ã Ä Å Æ B C Ç 2	a à á â ã ä å æ b c ç 2
<b>3<sup>DEF</sup></b>	D E F 3	d e f 3	<b>3</b>	D Đ E È É Ê Ë Ì 3	d ð e è é ê ë ì 3
<b>4<sup>GHI</sup></b>	G H I 4	g h i 4	<b>4</b>	G Ğ H I Ì Í Î Ï 4	g ğ h i ì í î ï 4
<b>5<sup>JKL</sup></b>	J K L 5	j k l 5	<b>5</b>	J K L 5	j k l 5
<b>6<sup>MNO</sup></b>	M N O 6	m n o 6	<b>6</b>	M N Ñ O Ó Ô Õ Ö Ø 6	m n ñ o ó ô õ ö ø 6
<b>7<sup>PQRS</sup></b>	P Q R S 7	p q r s 7	<b>7</b>	P Q R S Ş ß 7	p q r s ş ß 7
<b>8<sup>TUV</sup></b>	T U V 8	t u v 8	<b>8</b>	T U Û Ü Ü Û Ü V 8	t u ù ú û ü v 8
<b>9<sup>WXYZ</sup></b>	W X Y Z 9	w x y z 9	<b>9</b>	W Ŵ X Y Ŷ Z 9	w ŵ x y ŷ z 9
<b>0<sup>OPER</sup></b>	Space ! ? " : ; + = < > 0		<b>0</b>	Space ! ? " : ; + = < > 0	
<b>#</b>	\$ % & @ € £		<b>#</b>	\$ % & @ € £	

- Press **X<sup>A-Z</sup>** before or after entering a character to change between uppercase and lowercase.
- Pressing a key repeatedly will cycle through the characters associated with that key. For example, to enter the letter "C" in Alphabet Mode, press **2<sup>ABC</sup>** 3 times.
- Characters that are entered using the # key (for example, "\$") cannot be entered when searching the phonebook. See "Searching for an Item in the Phonebook (Page 27)".
- The illustrations of the keys in the table may differ in appearance from the actual keys on the handset.

## Deleting Stored Items




### Phonebook

1. Press [▶] or  to display the phonebook.
2. Press [▲] or [▼] to select an item, or press  to search for an item.
3. Press .
4. Press [▲] or [▼] to select "Delete", and then press .
5. Press [▲] or [▼] to select "Yes", and then press .

#### Note

- In step 4, you can select "Delete All" instead to delete all items.
- For details about searching for an item in the phonebook, see "Searching for an Item in the Phonebook (Page 27)".




### Hot Key Dial

1. Press and hold the dialing key assigned as a Hot Key for more than 1 second.
2. Press .
3. Press [▲] or [▼] to select "Delete", and then press .
4. Press [▲] or [▼] to select "Yes", and then press .

#### Note

- In step 1 while the Hot Key's information is displayed, you can press [▲] or [▼] to select another Hot Key number.
- In step 3, you can select "Delete All" instead to delete all items.

### Incoming/Outgoing Call Log


1. In standby mode, press [◀] to open the Incoming Call Log or press [▼] to open the Outgoing Call Log.
2. Select an item stored in the call log, and then press .
3. Press [▲] or [▼] to select "Delete", and then press .
4. Press [▲] or [▼] to select "Yes", and then press .

#### Note

- In step 3, you can select "Delete All" instead to delete all items.

# Changing Handset Settings

## Handset Setting Menu Layout

	[Main Item]	[Sub Item]
Setting Handset	├ Incoming Option	├ Ringer Volume
		├ Ringer Type
		├ Vibrate
		├ Ring On Charger
		├ Memo Alarm
		├ Power Save
		└ Headset Ringer
	├ Talk Option	├ Speaker Volume
		├ Receiver Volume
		├ Headset Volume
		├ Headset Mic Vol
		└ Talk On Charger
	├ Answer Option	├ Any Key Answer
		├ Quick Answer
		└ Auto Ans Delay
	├ Key Option	├ Soft Key Edit
		├ Soft Key Name
		├ Key Lock Type
		├ Auto Lock Time
		└ Hot Key Time
	├ Display Option	├ Language
		├ Backlight
		├ LCD Brightness
		├ Standby Display
		├ Category Name
		├ Date Format
		├ Time Format
		├ Caller ID Disp
		└ Color Scheme

## Customizing the Telephone

---

- └ Tone Option
  - |
  - └ System Option
    - |
    - |
    - |
    - |
    - |
    - |
    - |
    - |
    - └ Other Option
      - └ Key Tone
        - └ Range Alarm
      - └ Register H/S
        - └ Cancel Base
        - └ Select Base
        - └ System Lock
        - └ Change PIN
        - └ H/S Information
        - └ CS Version
        - └ Firmware Update<sup>\*1</sup>
          - └ Enable CS Web<sup>\*1</sup>
        - └ Change Password
          - └ Reset Handset
          - └ MasterCS Address

<sup>\*1</sup> These settings are made available through Web user interface programming. For details, consult your administrator or dealer.

## Incoming Option

Sub Item	Description	Setting	Default
Ringer Volume	Adjusts the ringer volume.	<input type="checkbox"/> Step Up <input type="checkbox"/> Step Down <input type="checkbox"/> Level 1–6 <input type="checkbox"/> Off	Level 3



Sub Item	Description	Setting	Default
<b>Ringer Type Default<sup>4</sup></b> – Private Ring (Category 1–9) – Intercom Ring <sup>5</sup> – Ext Ring <sup>5</sup> – Group Ring <sup>5</sup> – Doorphone <sup>5</sup>	<b>Ringer Pattern</b> Selects the ringtone for each type of call. <sup>1</sup>	<input type="checkbox"/> Ringtone 1–19, 25–32	Ringtone 1
	<b>LED Pattern</b> Selects the LED pattern for each type of call.	<input type="checkbox"/> Red <input type="checkbox"/> Green <input type="checkbox"/> Orange <input type="checkbox"/> R→G→O	Default: Red Private Ring: Green
	<b>Vib. Pattern</b> Selects the vibrate pattern for each type of call.	<input type="checkbox"/> Single <input type="checkbox"/> Double <input type="checkbox"/> Triple <input type="checkbox"/> Continuous	Single
	<b>Color Pattern<sup>2</sup></b> Selects the color pattern for each type of call.	<input type="checkbox"/> Normal <input type="checkbox"/> Yellow <input type="checkbox"/> Red	Normal
<b>Vibrate</b>	Selects whether the handset vibrates while receiving a call.	<input type="checkbox"/> Vib.& Ring <input type="checkbox"/> Vib.→ Ring <input type="checkbox"/> Off	Off
<b>Ring On Charger</b>	Selects the ringing mode (On or Off) while a handset is set on the charger. <sup>3</sup>	<input type="checkbox"/> On <input type="checkbox"/> Off	On
<b>Memo Alarm</b>	<b>Ringer Pattern</b> Selects the ringtone for each Memo Alarm.	<input type="checkbox"/> Ringtone 1–19, 25–32	Ringtone 1
	<b>LED Pattern</b> Selects the LED pattern for each Memo Alarm.	<input type="checkbox"/> Red <input type="checkbox"/> Green <input type="checkbox"/> Orange <input type="checkbox"/> R→G→O	Green
	<b>Vib. Pattern</b> Selects the vibrate pattern for each Memo Alarm.	<input type="checkbox"/> Single <input type="checkbox"/> Double <input type="checkbox"/> Triple <input type="checkbox"/> Continuous	Single

Sub Item	Description	Setting	Default
<b>Power Save</b>	<b>Power Save Time</b> Selects the number of seconds before automatically turning off the Power Save Items below when receiving a call.	0–60 s	30s
	<b>Power Save Item</b> Selects the items to turn off.	<input type="checkbox"/> Ringer&Vibrate <input type="checkbox"/> Backlight	Not selected
<b>Headset Ringer</b>	Selects whether a tone is heard from the attached headset while receiving a call.	<input type="checkbox"/> On <input type="checkbox"/> Off	Off

\*1 The preset melodies in this product are used with permission of © 2010 Copyrights Vision Inc.

\*2 Displayed only when "Private Ring" is selected.

\*3 When "Ring On Charger" is set to "On" but "Ringer Volume" is set to "Off", the handset rings at level 1.

\*4 This Ringer Type is available if the CS is connected to the SIP server.

\*5 This Ringer Type is available if the CS is connected to a KX-NS1000 PBX.

## Talk Option

Sub Item	Description	Setting	Default
<b>Speaker Volume</b>	Adjusts the rear speaker volume.	Level 1–6	Level 3
<b>Receiver Volume</b>	Adjusts the receiver volume.	Level 1–6	Level 2
<b>Headset Volume</b>	Adjusts the headset speaker volume.	Level 1–6	Level 2
<b>Headset Mic Vol</b>	Adjusts the headset microphone volume.	Level 1–6	Level 6
<b>Talk On Charger</b>	Selects whether or not to continue the conversation when the handset is put on the charger during a conversation.	<input type="checkbox"/> On <input type="checkbox"/> Off	Off

## Answer Option

Sub Item	Description	Setting	Default
<b>Any Key Answer</b>	Answers a call by pressing any dialing key.	<input type="checkbox"/> On <input type="checkbox"/> Off	Off
<b>Quick Answer</b>	Answers a call while the phone is charging by just lifting up a handset from the charger.	<input type="checkbox"/> On <input type="checkbox"/> Off	Off
<b>Auto Ans Delay</b>	Selects the number of seconds before a call is automatically answered when Auto Answer is turned on.	0–20 s	6s

## Key Option

Sub Item	Description	Setting	Default
<b>Soft Key Edit</b> – Softkey A – Softkey B – Softkey C	Edits the soft keys. – Standby – Talking	<input type="checkbox"/> Default <input type="checkbox"/> Flexible Key <input type="checkbox"/> Function Key <input type="checkbox"/> Hot Key Dial <sup>1</sup>	Not stored
<b>Soft Key Name</b> – Softkey A – Softkey B – Softkey C	Edits the names of the soft keys. – Standby – Talking	Max. 5 characters	Not stored
<b>Key Lock Type</b>	Selects the type of key lock.	<input type="checkbox"/> Manual <input type="checkbox"/> Manual&Password <sup>2,3</sup> <input type="checkbox"/> Auto <input type="checkbox"/> Auto&Password <sup>2,3</sup>	Manual
<b>Auto Lock Time</b>	Sets the number of seconds before the handset key lock is activated when "Auto" is selected as the Key Lock Type.	0–60 s	10s
<b>Hot Key Time</b>	Selects the number of seconds before a call is automatically made when a Hot Key assigned to "Auto" is pressed and held.	1–20 s	2s

<sup>1</sup> Displayed only when "standby" is selected.

<sup>2</sup> To avoid unauthorized access to this product:

- Set a password that is random and cannot be easily guessed.
- Change the password regularly.

<sup>3</sup> If no password has been set, you cannot select "Manual&Password" or "Auto&Password" for "Key Lock Type". For details about setting the password, see "Setting the Password (Page 16)".

## Display Option

Sub Item	Description	Setting	Default
<b>Language</b>	Selects the display language.	<input type="checkbox"/> English <input type="checkbox"/> Español <input type="checkbox"/> FRANÇAIS	English
<b>Backlight</b>	Turns on the backlight of the LCD and keypad. Can be set for each of the following: – Receiving – Talking	<input type="checkbox"/> On <input type="checkbox"/> Off	Receiving: Off Talking: On
<b>LCD Brightness</b>	Adjusts the brightness of the backlight of the LCD.	Level 1–6	Level 3

Sub Item	Description	Setting	Default
Standby Display	Selects what is shown on the display while in standby mode. <sup>*1</sup>	<input type="checkbox"/> H/S No. <input type="checkbox"/> Base & H/S No. <input type="checkbox"/> Edit <input type="checkbox"/> Off	H/S No.
	Edits the name displayed on the LCD while in standby mode.	Max. 16 characters	Not stored
Category Name	Edits the names of the categories.	Max. 13 characters per Category (1–9)	Not stored
Date Format	Selects the format for the date shown on the display.	<input type="checkbox"/> DD-MM-YYYY <input type="checkbox"/> MM-DD-YYYY <input type="checkbox"/> YYYY-MM-DD	MM-DD-YYYY
Time Format	Selects the format for the time shown on the display.	<input type="checkbox"/> 12H <input type="checkbox"/> 24H	12H
Caller ID Disp	Selects which caller information is displayed when a call is received. Either the information stored in the handset's phonebook or the phone system can be displayed.	<input type="checkbox"/> H/S Phonebook <input type="checkbox"/> PBX Setting	PBX Setting
Color Scheme	Selects the color scheme of the LCD.	<input type="checkbox"/> Dark <input type="checkbox"/> Light	Dark

\*1 If an extension name is assigned through Web user interface programming, the extension name is displayed when "H/S No." or "Base & H/S No." is selected. Depending on the number of characters stored for the extension name, the end of the extension name may not be displayed.

## Tone Option

Sub Item	Description	Setting	Default
Key Tone	Turns the key tone on or off.	<input type="checkbox"/> On <input type="checkbox"/> Off	On
Range Alarm	Selects whether the range alarm tone rings or not.	<input type="checkbox"/> On <input type="checkbox"/> Off	On

## System Option

Sub Item	Description	Setting	Default
Register H/S	Registers a handset to a base.	Base 1–4	Not stored
Cancel Base <sup>*1</sup>	Cancels the registration of a handset.	Base 1–4 <sup>*2</sup>	Not selected

Sub Item	Description	Setting	Default
<b>Select Base</b> <sup>*1</sup>	Selects a base.	<input type="checkbox"/> Auto <input type="checkbox"/> Base 1–4	Auto
<b>System Lock</b>	Selects whether to lock the System Option setting or not.	<input type="checkbox"/> On <sup>*3</sup> <input type="checkbox"/> Off	Off
<b>Change PIN</b>	Before registering your handset with a phone system, enter the phone system's PIN here. Once you have registered the handset with a phone system, this PIN can be changed so that the handset can be registered to an additional phone system.	Enter the PIN number. (max. 8 digits)	1234
<b>H/S Information</b>	Displays the firmware version and the IPEI (International Portable Equipment Identity) number of the handset.	—	—
<b>CS Version</b>	Displays the firmware version and the IPL (Initial Program Loader) number of the CS that the handset is registered to.	—	—

\*1 Only registered bases are shown.

\*2 You can select multiple bases simultaneously.

\*3 Password is required (4 digits). For details about setting the password, see "Setting the Password (Page 16)".

## Other Option

Sub Item	Description	Setting	Default
<b>Change Password</b> <sup>*1*2</sup>	Changes the handset password (4 digits) used for unlocking the phonebook, using the Reset Handset option, and unlocking the key lock.	Enter Old Password. <sup>*3</sup> ↓ Enter New Password. ↓ Verify New Password.	Not registered
<b>Reset Handset</b>	Returns the handset settings to its default settings.	Enter Password. <sup>*4</sup> (4 digits) ↓ Select the desired item(s). ↓ Press <b>OK</b> .	Not selected

## Customizing the Telephone

---


Sub Item	Description	Setting	Default
MasterCS Address	Displays the IP address of the Master CS. If the handset is not yet registered, "xxx . xxx . xxx . xxx" will be displayed.	—	—

- \*1 To avoid unauthorized access to this product:
- Set a password that is random and cannot be easily guessed.
  - Change the password regularly.
- \*2 Make a note of the password so that you will not forget it.
- \*3 If a password has not already been set, you can skip the first step.
- \*4 For details about setting the password, see "Setting the Password (Page 16)".

# Installation and Setup


## Battery Installation

Open the battery cover, insert the batteries, and close the cover as indicated below.

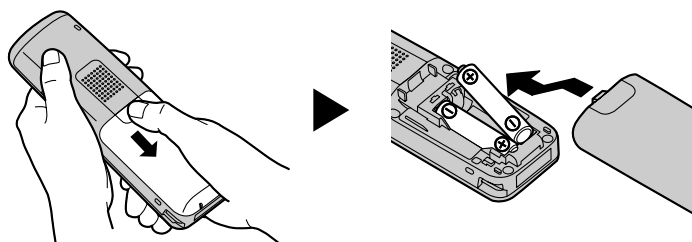

## Charger Connection

Connect the AC adaptor to the charger.

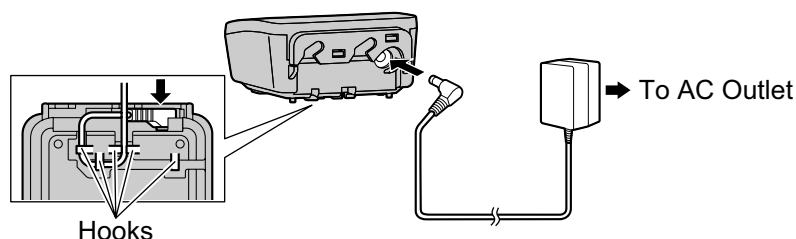


- The AC adaptor should be connected to a vertically oriented or floor-mounted AC outlet. Do not connect the AC adaptor to a ceiling-mounted AC outlet, as the weight of the adaptor may cause it to become disconnected.
- Fasten the AC adaptor cord to the cord holder.
- Use only the included Panasonic AC adaptor. For details, see "Accessory Information (Page 13)".

### **WARNING**

- To reduce the risk of fire or electric shock, do not overload AC outlets and extension cords.
- Do not bundle the charger's AC adaptor cord with the power cords of machines located nearby.
- Completely insert the AC adaptor/power plug into the AC outlet. Failure to do so may cause electric shock and/or excessive heat resulting in a fire.
- Regularly remove any dust, etc. from the AC adaptor/power plug by pulling it from the power outlet, then wiping with a dry cloth. Accumulated dust may cause an insulation defect from moisture, etc. resulting in a fire.


## Charging the Batteries

At the time of shipment, the batteries are not charged. **Please charge the batteries for about 7 hours before using the handset for the first time.**

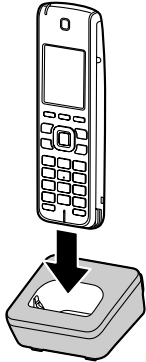


- The charge indicator will turn off when the batteries are fully charged. For more information about charging batteries, see "Battery Information (Page 11)".
- It is normal for the handset and charger to feel warm while the batteries are charging.
- Keep devices sensitive to magnetic fields away from the charger.
- Use only the included charger.

## Charger Wall Mounting

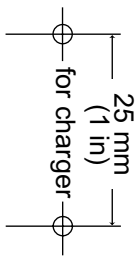

1. Install the two screws in the wall, spacing them 25 mm (1 in) apart.

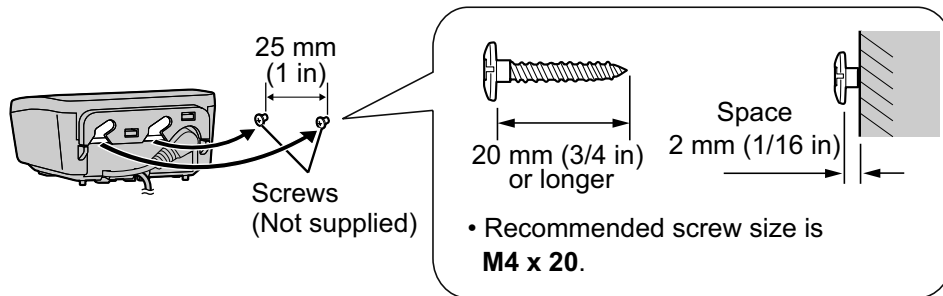

2. Mount the charger securely on the wall.

- Please copy this page and use as a reference for wall mounting. Make sure to set the print size to correspond with the size of this page. If the dimension of the paper output still deviates slightly from the measurement indicated here, use the measurement indicated here.
- When mounting the charger, ensure that the correct screws are used for the type of wall.
- Make sure that the wall that the charger will be attached to is strong enough to support the total weight of the handset and charger (approx. 165 g [0.36 lb]). If not, it is necessary for the wall to be reinforced.
- When this product is no longer in use, make sure to detach it from the wall.
- When inserting screws, avoid pipes and electrical cables, etc, that may be present/buried.
- The screw heads should not be flush to the wall.
- Certain types of wall may require plugs to be anchored in the wall before the screws are inserted.




## Attaching the Belt Clip

You can attach the handset to your belt by following the steps below.


### [To attach]

1. Insert the clip into the designated notches in the handset.
2. Slide the clip into the holder until it clicks.

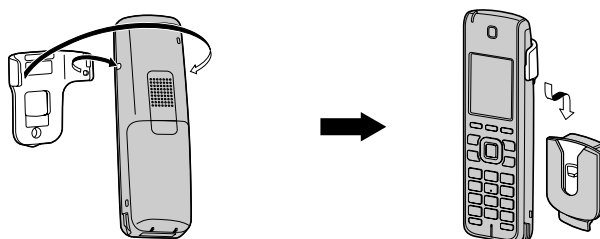


### [To remove]

1. Make sure to turn the handset 180° when you take it off.
2. Remove the belt clip.

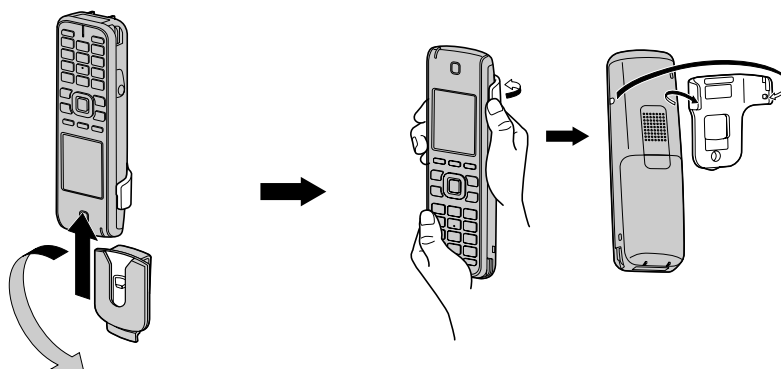

## Attaching the Phone Strap

Open the battery cover, run the strap through the strap hole, and then loop it around the hook.

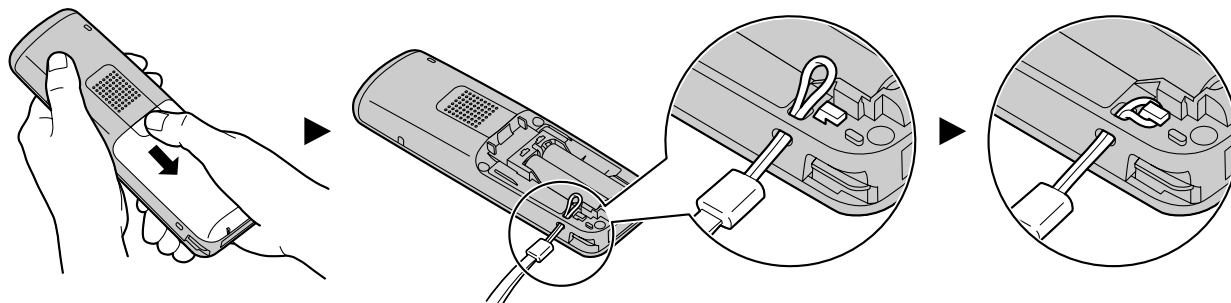

# Appendix




## Specifications

Item	Specifications
Display	1.8-inch TFT Backlight LCD, 65,000 colors
Headset Jack	1 (ø 2.5 mm [3/32 in])
Batteries	Ni-MH AAA × 2 (1.2 V, 700 mAh)
Maximum Power Consumption (Charger)	Standby: 0.3 W Maximum: 2.0 W
Battery Performance	Talk: up to 11 hours Standby: up to 200 hours
Charging Time	7 hours
Dimensions (Width × Depth × Height)	Handset only: 48.2 mm × 25.4 mm × 146.3 mm (1.90 in × 1 in × 5.76 in)  Handset on charger: 71.9 mm × 71.3 mm × 159.7 mm (2.83 in × 2.81 in × 6.29 in)
Weight	Handset (including batteries): 115 g (0.25 lb) Handset (including batteries) and charger: 165 g (0.36 lb)
Operating Environment	0 °C to 40 °C (32 °F to 104 °F)

## RF Specifications

Item	Specifications
Frequency Band	1920 MHz to 1930 MHz (DECT 6.0)
Number of Carriers	5
Transmission Output	Peak 115 mW

## Troubleshooting

Problem	Possible Cause	Solution
The handset does not work.	The batteries are drained.	Charge the batteries fully. For details, see "Charging the Batteries (Page 48)".
	The power is off.	<ul style="list-style-type: none"> <li>Turn it on. For details, see "Location of Controls (Page 14)".</li> <li>Re-insert the batteries, and then set the handset on the charger. For details, see "Battery Installation (Page 47)", and "Charging the Batteries (Page 48)".</li> </ul>
The handset does not ring.	Ringer volume is set to "OFF". (If the ringer volume is set to "off",  is displayed.)	Adjust the ringer volume level. For details, see "Adjusting the Ringer Volume (Page 24)".
	Silent Mode is on. (If Silent Mode is on, the  icon is displayed.)	Turn off Silent Mode. For details, see "Silent Mode (Page 16)".
It is difficult to have a conversation when in Hands-free mode.	The microphone is facing the wrong direction or is obstructed during the conversation.	The front of the handset should face you, and the microphone should not be covered. You can also place the phone so that it stands vertically. For details, see "Location of Controls (Page 14)".
You cannot make/receive a call.	The handset is out of range, or the CS is busy.	Move closer to the CS or try again later.
	The radio channel is busy, or a radio communication error occurred.	Try again later.
You cannot dial.	The number that you dialed is restricted by your phone system.	Consult your administrator or dealer.
	Key lock mode is on.	To cancel the mode, press and hold  for about 2 seconds. For details, see "Key Lock (Page 16)".
	The radio channel is busy or a radio communication error occurred.	Try again later.

Problem	Possible Cause	Solution
The handset stops working during operation.	An unknown error has occurred.	<ul style="list-style-type: none"> <li>Turn the handset off, and then turn it back on. For details, see "Location of Controls (Page 14)".</li> <li>Re-insert the batteries and try again. For details, see "Battery Installation (Page 47)".</li> </ul>
You cannot use the handset during a power failure.	The handset will not function during a power failure because the CS stops emitting radio waves.	—
The headset does not work.	The headset ringer cannot be heard when receiving an incoming call when the headset is attached.	<ul style="list-style-type: none"> <li>Make sure the headset ringer setting is set to "On". For details, see "Incoming Option (Page 40)".</li> <li>Make sure the headset jack is connected properly. For details, see "Location of Controls (Page 14)".</li> </ul>
Noise is frequently heard.	Nearby electrical appliances are causing interference, or you are too far from the CS.	<ul style="list-style-type: none"> <li>Place the handset and CS away from other electrical appliances.</li> <li>Move closer to the CS.</li> </ul>
Two short beeps are heard during a conversation.	The radio signal is weak.	Move closer to the CS.
You charged the batteries for 7 hours, but the beep tones sound, and "🔋" flashes (needs to be charged) after a few telephone calls.	The battery charge contacts may be dirty.	Clean the battery charge contacts without damaging them and charge once more.
	It is time to change the batteries.	Replace with new batteries.
While charging the batteries, the handset and the AC adaptor feel warm.	These are normal conditions.	—
"No Service" is displayed, and beep tones are heard.	The handset is out of range.	Move closer to the CS or try again later.
	The CS or phone service is out of service.	Consult your administrator or dealer.
While charging the batteries, the LED indicator blinks rapidly and the handset beeps rapidly.	The batteries are not charging correctly due to an electrical failure.	Unplug the AC adaptor from the AC outlet, remove the batteries from the handset, and consult your dealer.

Problem	Possible Cause	Solution
The "Delete All" operation to delete all phonebook entries is not functioning.	The batteries are drained, which prevents the operation from being completed.	Charge the batteries fully, then try again. For details, see "Charging the Batteries (Page 48)".
The System Speed Dial Download of the KX-NS1000 PBX is enabled but some of the phone numbers to be downloaded (default: 100) are not downloaded to the handset phonebook.* <sup>1</sup>	The total number of the phone numbers registered to the handset and the phone numbers downloaded from the PBX exceeds the handset phonebook capacity (500 numbers).	Delete the phone numbers of the handset phonebook which were registered manually.

\*<sup>1</sup> This item is applied only when the CS is connected to a KX-NS1000 PBX.

## Error Messages

Error Message	Possible Cause	Solution
Register Unit	The handset has been cancelled or the handset has not been registered.	Consult your dealer.
No Service	The handset is out of range.	Move closer to the CS.
	The CS is turned off.	Make sure the power cord is connected.
CS Busy	The CS is busy.	Try again later.
Charge Battery	The handset batteries have little charge remaining.	Charge the batteries fully. For details, see "Charging the Batteries (Page 48)".
No Entries	When trying to view the phonebook: No items have been stored. For details, see "Storing an Item in the Handset Phonebook (Page 32)". When trying to view the Incoming or Outgoing Call Log: No logs have been stored.	—
Memory Full	The phonebook is full and cannot store the new item.	Remove unnecessary data in the phonebook and try again.
Use Rechargeable Battery	The wrong type of battery such as Alkaline or Manganese was inserted.	Use only the rechargeable Ni-MH batteries. For details, see "Accessory Information (Page 13)" and "Replacing the Batteries (Page 12)".
Need Repair	There is an error with the fixed internal memory.	Consult your dealer.
System Locked	The System Option menu has been locked and cannot be accessed.	Consult your administrator or dealer.
Password Not Stored	Displayed when you access a feature that requires a password, but a password has not been set.	Set a password. See "Setting the Password (Page 16)".
Error	An error message is received from the CS when trying to change FWD/DND status.	Try again, or consult your administrator or dealer.
Aborted	There was a wireless transmission error during a phonebook download or upload.	Use the PS closer to the CS.

Error Message	Possible Cause	Solution
Phonebook Error	There was a wireless transmission error, corrupted data, or the memory became full during a phonebook download.	<ul style="list-style-type: none"><li>Remove unnecessary data in the phonebook, or consult your administrator regarding the number of items being downloaded.</li><li>Use the PS closer to the CS.</li></ul>
Download Failed	There was an error during a PS firmware update.	Consult your administrator or dealer.
<ERROR 1>/<ERROR 2>	There was a hardware error during a PS firmware update.	Consult your administrator or dealer.

# Index

## A

- AC adaptor 13
- Accessories 13
- Advanced Voice Clarity 17

## B

- Batteries 13
  - Charging 48
  - Installation 47
- Battery information 11
- Belt clip 13
  - Attaching 49
- Belt clip holder 13

## C

- Call Forwarding 30
- Call Log
  - Deleting 38
  - Making a call 26
  - Storing to phonebook 33
- Call Waiting 31
- Caller ID 28
- Calls
  - Holding 29
  - Making 26
  - Receiving 28
  - Transferring 29
- Category names, editing 34
- Characters
  - Available characters 37
  - Entering 36
- Charger 13
  - Connection 47
  - Wall mounting 48
- Conference 29
- Controls, locations of 14

## D

- Display language 24
- Do Not Disturb (DND) 30

## E

- Error messages 54

## F

- Flexible Keys 21
  - Editing names 24
- Function keys 23
- Function menus 23

## H

- Headset volume 25
- Hold 29
- Hot Key

- Assigning 34
- Deleting 38
- Dialing 26

## K

- Key Lock 16

## L

- Lock
  - Keys 16
  - Phonebook 34

## M

- Memo Alarm 35

## O

- One-touch Dialing 26
- Operation outline 22

## P

- Phone strap, attaching 49
- Phonebook 32
  - Category names, editing 34
  - Deleting 38
  - Editing 32
  - Locking 34
  - Searching 27
  - Storing from call log 33
  - Storing from predial 33
  - Storing new 32
- Power Save Mode 17
- Private Ring 32

## R

- Receiver volume 25
- Ringer volume 24

## S

- Settings 39
  - Answer Option 42
  - Display Option 43
  - Incoming Option 40
  - Key Option 43
  - Other Option 45
  - System Option 44
  - Talk Option 42
  - Tone Option 44
- Silent Mode 16
- Soft Keys 19
- Speaker volume 25
- Specifications 50
- Standby display number 24

## T

- Text, entering 36
- Three-party conference 29
- Transferring a call 29



**V**

Vibrate 24

Voice Mail 31

Volume

Receiver/Speaker/Headset 25

Ringer 24

## Panasonic Corporation of North America

One Panasonic Way, Secaucus, New Jersey 07094

<http://www.panasonic.com/sip>

## Panasonic Canada Inc.

5770 Ambler Drive, Mississauga, Ontario, L4W 2T3

<http://www.panasonic.ca>

### **Copyright:**

This material is copyrighted by Panasonic System Networks Co., Ltd., and may be reproduced for internal use only. All other reproduction, in whole or in part, is prohibited without the written consent of Panasonic System Networks Co., Ltd.

© Panasonic System Networks Co., Ltd. 2012