

USER MANUAL

Business GSM Desk Phone

AUTO-DIAL PHONE SMS SETTINGS

Setting up the Auto Dial Number

STEP 1: Insert a SIM card into the TELECOM500 and turn on the Phone.
(Make sure the SIM card has credit to send a text message because it will send a confirmation text message back once remote programming is successful)

STEP 2: Using your mobile phone, send this SMS Text message to the SIM card phone number in the TELECOM500 Phone:

SET*1234*number#

*where **number** is the replace with the phone number you want the TELECOM500 phone to auto dial once the hand piece is picked up.

Example: **SET*1234*01617379898#**

Once set up is successful, you will get an **"OK"** SMS text message back from the phone.

IMPORTANT NOTE: Make sure that **"SET"** is in capital letters when sending. **"set"** will not work.

Remote check the number of calls

This is to check how many calls that the phone has made.

1. To check the number of calls that the phone has made remotely, you will need to send an SMS (Text Message) to the phone. Note the phone **MUST** be in baby call mode for this feature to work.

Send the following SMS (Text Message) to the mobile phone number in the phone:

QUERY*Passcode#

For example, you send the SMS in this order **QUERY*1234#** where **1234** is the passcode. The phone will reply back your SMS (Text message) to the mobile phone you sent the message from with: The current number of calls is

Note:

After the phone received the request and send you the number of calls, it will

USER MANUAL

reset to zero and start the counting again. Note that the number of calls only records when the phone is in baby call mode. The number does not include calls made when phone is in normal Mode.