



# Polycom Documentation

Copyright © 2020, Polycom, Inc. All rights reserved. No part of this document may be reproduced, translated into another language or format, or transmitted in any form or by any means, electronic or mechanical, for any purpose, without the express written permission of Polycom, Inc  
6001 America Center Drive

San Jose, CA 95002

USA

# Poly CCX 600 Business Media Phone Hardware

The following figure displays the hardware features on Poly CCX 600 business media phones. The table lists each feature numbered in the figure.

Figure 1. Poly CCX 600 Phone Hardware Features

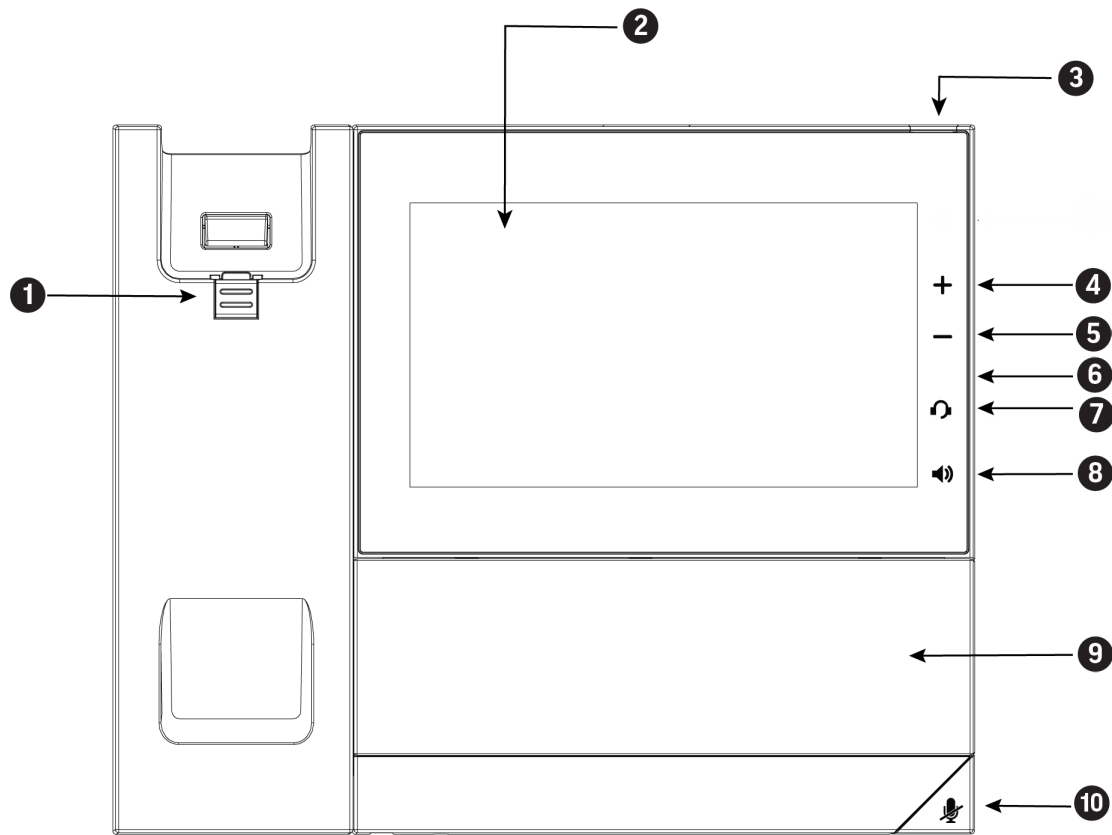


Table 1. Poly CCX 600 Phone Hardware Feature Descriptions

| Reference Number | Feature        | Feature Description   |
|------------------|----------------|---|
| 1                | Reversible tab | Secures the handset in the cradle when you position your phone stand at a high angle. To secure the handset, remove the tab, reverse it so the protrusion points up, and reinsert it. |

| Reference Number | Feature                   | Feature Description   |
|------------------|---------------------------|---|
|                  |                           | Position the handset so the protrusion on the tab fits into the slot on the handset.  |
| 2                | Touchscreen               | Enables you to select items and navigate menus on the touch-sensitive screen. Tap the screen to select and highlight screen items. To scroll, touch the screen, and swipe your finger up, down, right, or left. |
| 3                | Message waiting indicator | Flashes red to indicate when you have new messages.   |
| 4, 5             | Volume keys               | Adjusts the volume of the handset, headset, speaker, and ringer.  |
| 6                | USB port(s)               | CCX 600 phones contain one USB-A port and one USB-C port.<br>You can connect a USB flash drive to USB-C port and a headset to USB-A port.   |
| 7                | Headset indicator         | Displays when the phone is powered on. The icon glows green or blue when a headset is connected and activated.  |
| 8                | Speakerphone indicator    | Displays when the phone is powered on. The icon glows green when activated.   |
| 9                | Speaker                   | Provides ringer and speakerphone audio output.  |
| 10               | Mute key                  | Mutes local audio during calls and conferences.   |

## Related Topics

[CCX Phone Hardware Overview](#)