

! IMPORTANT !

The first thing you need to do is Charge the headset for at least 1 hour before attempting to pair it to your cordless telephone. Your cordless phone will also need to be charged for the same amount of time




The following steps need to be performed fairly quickly so it is a good idea to familiarise yourself with each step on both the headset and your cordless telephone first.

Then you should be able to go through each step quickly and within the time frame required.

You have approximately 30-60 seconds to complete the steps below once you begin

STEP 1

Lift the headset out of the charger base, press and hold the volume up button for 3 seconds until the indicator light is solid (Not Flashing)

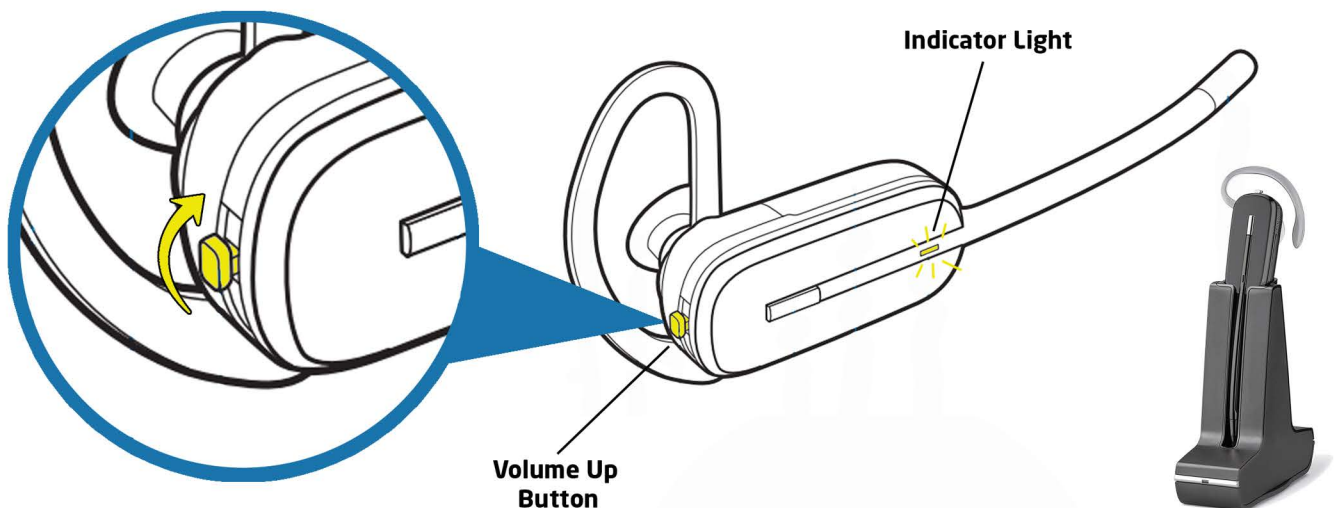

STEP 2

Now you need to place your cordless telephone base into Registration mode. There will be a button you will need to press and hold.

Follow the instructions for your cordless phone if it is listed below or on the next page.

If your phone not listed you will need to read the instruction manual from your cordless phone. Find the Register additional handset section in your phones manual.


BT 4000 Big Button DECT Cordless Phone

Press and hold **Find Phone** on the base until you hear a beep and the In use light starts to flash.



Find Phone This Button needs to be pressed and held down until you hear a beep

When the indicator light on the Headset goes out, the headset is paired

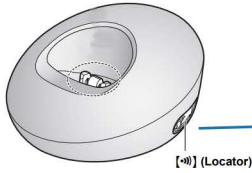

Panasonic KX-TGB210 DECT Cordless Phone

Registering a handset to the base unit

Base unit:

Press and hold **[📶]** for about 5 seconds. (No registration tone)

- If all registered handsets start ringing, press **[📶]** again to stop, then repeat this step. (KX-TGB212/KX-TGB213)

When the indicator light on the Headset goes out, the headset is paired



BT Diverse 7410 Plus DECT Cordless Phone

Find button is located on the Diverse base underneath where the handset sits. Press and hold the **Find** button on the base for approximately 8 seconds until the base beeps, then release.

When the indicator light on the Headset goes out, the headset is paired



BT Diverse 7110 Plus DECT Cordless Phone

Find button is located on the Diverse base underneath where the handset sits. Press and hold the **Find** button on the base for approximately 8 seconds until the base beeps, then release.

When the indicator light on the Headset goes out, the headset is paired



BT 4600 Big Button DECT Cordless Phone

Press and hold **Find Phone** on the base until you hear a beep and the In use light starts to flash.

Find Phone This Button needs to be pressed and held down until you hear a beep

When the indicator light on the Headset goes out, the headset is paired



Gigaset AS405A DECT Cordless Phone

Press and HOLD the registration button **[📶]** on the base station for 4 seconds until you hear a beep/tone

When the indicator light on the Headset goes out, the headset is paired



Gigaset E630A Robust DECT Cordless Phone

Press and HOLD the registration button **[📶]** on the base station for 4 seconds until you hear a beep/tone

When the indicator light on the Headset goes out, the headset is paired