EA15 COVERT EARPIECE MICROPHONE

V1.0

Quick Start User Guide

 $(\mathbf{\bullet})$



Contact

۲

For more information about our products please contact us:

📮 +44 (0)20 8236 0032 🛛 info@entel.co.uk 📮 entel.co.uk

All Rights Reserved. Copyright Entel UK Ltd.

∗ CE

 $(\mathbf{0})$

Designed in the United Kingdom



Quick Start User Guide

V1.0

 (\mathbf{h})

EA15

Thank you for purchasing the Entel earpiece microphone. With care, this product should provide years of trouble free use.

FITTING


۲

Carefully press the ear-bud into the opening of your ear canal, so it is comfortable and secure. Train the clear transparent acoustic tube around the back of the ear. The combination microphone/PTT button should be attached around the lapel area about 10cm from your mouth.

	OPHONE	
	Mic. element	Electret condenser
	Speaker impedance	16 ohm
	Output sound level pressure	<85 dBA
	Weight	53g

SPECIFICATIONS

TRANSPARENT ACOUSTIC

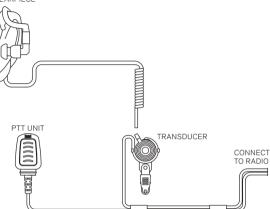



Above approvals apply to specific models only

Model	Series	Intrinsically safe cert. no	Approval
EA15/950	HT500, HT800, HT900	IECExSIR10.0097X & Sira 10ATEX2066X	IECEx ATEX
EA15/750	HT700	None	None
EA15/450	HX	None	None
EA15/DX	DX	None	None

OPERATING INSTRUCTIONS

- Press the PTT button to transmit and release to receive.
- Speak normally, do not shout directly into the microphone.

IMPORTANT

Always switch the radio off before attaching an audio accessory. Models that are certified to ATEX & IECEx have been clearly labelled. Should, in the course of use, any labels be removed or become illegible please return the accessory to Entel for relabelling.