

EA12

EARPIECE MICROPHONE WITH IN-LINE PTT

V1.1

Quick Start User Guide



Designed in the United Kingdom

Entel

EA12

Thank you for purchasing the Entel ear-piece microphone. With care, this product should provide years of trouble free use.

FITTING

Place the D-shaped shell comfortably and securely over your left ear. The combination microphone/PTT button should be attached around the lapel area about 10cm from your mouth.

OPERATING INSTRUCTIONS

- Press the PTT button to transmit and release to receive.
- Speak normally, do not shout directly into the microphone.

IMPORTANT


Always switch the radio off before attaching an audio accessory. Models that are certified to ATEX & IECEx have been clearly labelled. Should, in the course of use, any labels be removed or become illegible please return the accessory to Entel for relabelling.

SPECIFICATIONS

EARPIECE MICROPHONE

Mic. element	Electret condenser
Speaker impedance	16 ohm
Output sound pressure level	<85 dBA
Weight	60g

D-SHAPE EARPIECE

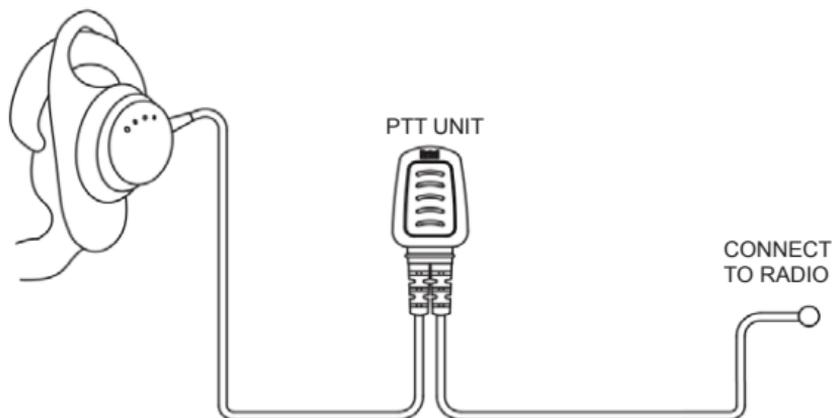

Above approvals apply to specific models only

Model	Series	Intrinsically safe cert. no.	Approval
EA12/950	HT500, HT800, HT900	IECEX SIR 10.0097X Sira 10ATEX2066X	IECEX ATEX
EA12/750	HT700	None	None
EA12/450	HX	None	None
EA12/DX	DX, DN	None	None
EA12/DT9	DT500 DT800, DT900	IECEX BAS 18.0094X Baseefa18ATEX0152X	IECEX ATEX



Contact

For more information about our products please contact us:

 **+44 (0)20 8236 0032**  **info@entel.co.uk**  **entel.co.uk**

All Rights Reserved. Copyright Entel UK Ltd.

