

# Documentation

HiPath 2000, HiPath 3000, HiPath 5000

HiPath OpenOffice

OpenStage 60/60 G, OpenStage 80/80 G

OpenStage Key Module

User Guide






Communication for the open minded

Siemens Enterprise Communications  
[www.siemens.com/open](http://www.siemens.com/open)

**SIEMENS**

## Important information

	<p>For safety reasons, the telephone should only be supplied with power:</p> <ul style="list-style-type: none"><li>• using the original power supply unit. Part number: L30250-F600-C14x (x: 1=EU, 2=UK, 3=US) or</li><li>• in a LAN with PoE (Power over Ethernet), which complies with the IEEE 802.3af standard.</li></ul>
	<p>Never open the telephone or a key module. Should you encounter any problems, contact the responsible service personnel.</p>
	<p>Use only original Siemens accessories. The use of other accessories may be hazardous and will render the warranty, extended manufacturer's liability and the CE marking invalid.</p>

## Trademarks



The device conforms to the EU directive 1999/5/EC as at-tested by the CE marking.



All electrical and electronic products should be disposed of separately from the municipal waste stream via designated collection facilities appointed by the government or the local authorities.

Proper disposal and separate collection of your old appliance will help prevent potential damage to the environment and human health. It is a prerequisite for reuse and recycling of used electrical and electronic equipment.

For more detailed information about disposal of your old appliance, please contact your city office, waste disposal service, the shop where you purchased the product or your sales representative.

The statements quoted above are only fully valid for equipment which is installed and sold in the countries of the European Union and is covered by the directive 2002/96/EC. Countries outside the European Union may impose other regulations regarding the disposal of electrical and electronic equipment.

## Location of the telephone

- The telephone should be operated in a controlled environment with an ambient temperature between 5°C and 40°C.
- To ensure good speakerphone quality, the area in front of the microphone (front right) should be kept clear. The optimum speakerphone distance is 50 cm.
- Do not install the telephone in a room where large quantities of dust accumulate; this can considerably reduce the service life of the telephone.
- Do not expose the telephone to direct sunlight or any other source of heat, as this is liable to damage the electronic components and the plastic casing.
- Do not operate the telephone in damp environments such as bathrooms.

## Software update



During a software update, the phone must not be disconnected from the power supply unit, the LAN line or the phone line. An update action is indicated by messages on the display and/or by flashing LEDs.

## Product support on the Internet

Information and support for our products can be found on the Internet:  
<http://www.siemens-enterprise.com/>.

Technical notes, current information about firmware updates, frequently asked questions and lots more can be found on the Internet at:  
<http://wiki.siemens-enterprise.com/>.

# Contents

## Important information .....2

Trademarks .....	2
Location of the telephone .....	3
Software update .....	3
Product support on the Internet .....	3

## General information.....12

About this manual .....	12
Service.....	12
Intended use .....	13
Telephone type .....	13
Voice encryption .....	13
Speakerphone quality and display legibility .....	13
Multi-line telephone, executive/secretary functions .....	14
Team functions .....	14

## Getting to know your OpenStage phone .....15

The user interface of your OpenStage 60/60 G/80/80 G .....	15
Ports on the underside of the phone.....	16
Using network ports more efficiently .....	17
OpenStage Manager .....	17
Features.....	17
OpenStage Key Module .....	18
Keys and controls .....	19
Function keys.....	19
Audio controls .....	19
Mode keys.....	20
TouchGuide .....	21
Programmable sensor keys .....	23
Keypad.....	25
Graphic display .....	26
Appearance .....	26
Display keyboard .....	27
Context-dependent displays .....	29
Idle mode.....	29
Telephony dialogs .....	30
Messages .....	30
Context menus .....	31
Pop-up window .....	31
Application tab .....	32

## Applications available on your OpenStage phone 33

Application navigation . . . . .	33
Telephony interface . . . . .	34
Phonebooks . . . . .	35
Personal phonebook . . . . .	36
LDAP directory . . . . .	37
System phonebook . . . . .	37
Call lists . . . . .	38
Managing call lists . . . . .	38
Entry details . . . . .	39
Mailbox . . . . .	40
Messages . . . . .	40
Voicemail . . . . .	40
Menu . . . . .	41
Settings – Service Menu . . . . .	41
Settings – telephone user menu . . . . .	41
Settings – administration . . . . .	43
Applications . . . . .	43
Help function . . . . .	43
Control and monitoring function . . . . .	44

## Basic functions . . . . . 45

Answering a call . . . . .	45
Answering a call via the handset . . . . .	45
Answering a call via the loudspeaker (speakerphone mode) . . . . .	46
Accepting a call via the headset . . . . .	46
Switching to speakerphone mode . . . . .	47
Switching to the handset . . . . .	47
Open listening . . . . .	47
Making calls . . . . .	48
Off-hook dialing . . . . .	48
En-bloc dialing . . . . .	48
On-hook dialing . . . . .	49
Dialing with the headset connected . . . . .	49
Dialing with DDS keys . . . . .	50
Ending a call . . . . .	50
Rejecting a call . . . . .	50
Turning the microphone on and off . . . . .	51
Calling a second party (consultation) . . . . .	52
Switching to the held party (alternating) . . . . .	52
Transferring a call . . . . .	53
Using callback . . . . .	54
Storing a callback . . . . .	54
Accepting a callback . . . . .	54
Viewing and deleting a stored callback . . . . .	55

<b>Enhanced phone functions</b> . . . . .	<b>56</b>
Answering calls . . . . .	56
Accepting calls via the Headset . . . . .	56
Answering a call for another phone . . . . .	56
Using the speakerphone . . . . .	57
Answering calls from the entrance telephone and opening the door . . . . .	58
Accepting a call from an answering machine . . . . .	59
Making calls . . . . .	60
Redialing from a call list . . . . .	60
Using a personal phonebook . . . . .	60
Using a system phonebook . . . . .	62
Using the LDAP directory . . . . .	62
Making calls using system speed-dial numbers . . . . .	63
Dialing with speed-dial keys . . . . .	63
Talking to your colleague with a speaker call . . . . .	65
Talking to your colleague with discreet calling . . . . .	65
Automatic connection setup/hotline . . . . .	66
Reserving a trunk . . . . .	66
Assigning a station number (not for U.S.) . . . . .	67
Associated dialing/dialing aid . . . . .	67
During a call . . . . .	68
Using call waiting (second call) . . . . .	68
Preventing and allowing a second call (call waiting) . . . . .	69
Activating/deactivating the camp-on tone . . . . .	69
Parking a call . . . . .	70
Placing an external call on hold . . . . .	71
Conducting a conference . . . . .	72
Activating tone dialing/DTMF suffix-dialing . . . . .	74
Recording a call . . . . .	75
Transferring a call after a speaker call announcement in a group . . . . .	76
Sending a trunk flash . . . . .	77
If you cannot reach a destination . . . . .	78
Call waiting (camp-on) . . . . .	78
Busy override – joining a call in progress . . . . .	78
Using night answer . . . . .	79

<b>Call forwarding</b> .....	<b>80</b>
Active call forwarding indication .....	80
Overview of call forwarding types .....	81
Call forwarding key .....	81
Editing call forwarding instructions .....	81
Editing forwarding destinations .....	82
Forwarding express activation for "all calls" .....	84
Activating call forwarding via the Program/Service menu .....	84
Configuration via the Program/Service menu .....	84
Deactivating call forwarding .....	85
Using system forwarding instructions .....	86
Call forwarding no reply (CFNR) .....	86
Call forwarding in the event of telephone failure (CFSS) .....	87
Call forwarding in the carrier network and forwarding multiple subscriber numbers (MSN) (not for U.S.) .....	88
<b>Programming sensor keys</b> .....	<b>89</b>
Configuring function keys .....	89
Overview of functions .....	91
Programming a procedure key .....	93
Configuring redial keys .....	95
Changing the label retrospectively .....	96
Deleting sensor key programming .....	97
<b>Phonebooks and call lists</b> .....	<b>98</b>
Personal phonebook .....	98
Creating a new contact .....	98
Changing contact data .....	100
Managing the phonebook .....	101
Managing groups .....	102
LDAP database .....	104
Finding an LDAP entry .....	104
Quick search .....	105
Call lists .....	106
View details .....	106
Deleting entries .....	106
Copying entries from the call logs into the personal phonebook ..	107
<b>Displaying and assigning call charges</b> .....	<b>108</b>
Displaying call charges (not for U.S.) .....	108
Displaying call charges for another telephone (not for U.S.) .....	109
Dialing with call charge assignment .....	110

**Privacy/security . . . . .111**

- Voice encryption (only for HiPath 2000/3000/5000/OpenOffice EE) . . . 111
  - Notes on voice encryption . . . . . 111
- User password . . . . . 112
- Turning ringer cutoff on and off. . . . . 113
- Deactivating the ring tone . . . . . 113
- Do not disturb . . . . . 114
- Suppressing your phone number on the called party's phone . . . . . 114
- Monitoring a room . . . . . 115
- Trace call: identifying anonymous callers (not for U.S.) . . . . . 116
- Locking the telephone to prevent unauthorized use . . . . . 117
- Locking another telephone to prevent unauthorized use . . . . . 118
- Saving your PIN . . . . . 119

**More functions/services. . . . .120**

- Appointments function . . . . . 120
  - Saving appointments . . . . . 120
  - Using timed reminders . . . . . 121
- Sending a message . . . . . 122
  - Creating and sending a message. . . . . 122
  - Viewing and editing incoming messages. . . . . 123
- Leaving an advisory message . . . . . 124
  - Deleting advisory messages . . . . . 124
- Displaying the number of waiting calls/overload display . . . . . 125
- Using another telephone like your own for a call . . . . . 125
- Using a mobile connection at another phone . . . . . 126
  - Mobility variants. . . . . 126
  - Logging on to the "guest telephone" . . . . . 128
  - Moving the connection to the next telephone. . . . . 129
  - Logging off the "guest telephone" . . . . . 129
- Fax details and message on answering machine . . . . . 130
- Resetting services and functions  
(system-wide cancellation for a telephone) . . . . . 130
- Activating functions for another telephone . . . . . 131
- Using system functions from outside
- DISA (direct inward system access) . . . . . 132
- Using functions in ISDN via code dialing (keypad dialing) . . . . . 134
- Controlling Connected Computer or  
Their Programs/Tel. Data Service . . . . . 135
- Communicating with PC applications over a CSTA interface . . . . . 136
- Controlling relays (only for HiPath 3000) . . . . . 137
- Sensors (HiPath 33x0/35x0 only) . . . . . 137
- Radio paging (not for U.S.) . . . . . 138



## **Making calls in the team/executive/secretary configuration ..... 139**

Lines .....	139
Line utilization .....	139
Line seizure .....	140
Trunk keys .....	140
Answering calls with the trunk keys .....	141
Dialing with trunk keys .....	141
Placing a call on hold on a trunk key and retrieving the held call ..	141
Making calls on multiple lines alternately .....	142
MULAP conference release .....	142
Direct station selection key .....	143
Using DSS keys to answer calls .....	143
Calling a team member directly .....	143
Transferring a call in progress .....	144
Accepting a call for another team member .....	144
Forwarding calls on trunks .....	145
Transferring calls directly to the executive phone .....	147

## **Using team functions ..... 148**

Activating/deactivating a group call .....	148
Accepting a call for another member of your team .....	150
Ringling group .....	150
Uniform Call Distribution (UCD) .....	151

## **Special functions in the LAN ..... 153**

Leaving hunt group/group call .....	153
Setting up "follow me" call forwarding .....	154
Using night answer .....	155
Ringling group .....	156
Controlling relays (only for HiPath 3000) .....	157
Opening a door .....	158

<b>Individual phone configuration</b> .....	<b>159</b>
Adjusting display settings .....	159
Adjusting the display to a comfortable reading angle .....	159
Screensaver .....	159
Color scheme .....	162
Lamp brightness for TouchSlider .....	163
Set the sensitivity of the TouchGuide .....	164
Contrast for the OpenStage Key Module .....	165
Adjusting audio settings .....	166
Volumes .....	166
Room character .....	167
Setting headset port use .....	168
Ringtone .....	169
Activating/deactivating the ringer .....	170
Adjusting the volume during a call .....	170
En-bloc dialing .....	171
Language for system functions .....	171
Configuring Bluetooth .....	172
Bluetooth settings .....	172
Connecting/disconnecting a Bluetooth device .....	174
Managing Bluetooth devices .....	175
Tone and indication with an unsecured voice connection .....	178
Context menu .....	179
Closing automatically .....	179
Setting the automatic display duration .....	180
Displaying network information .....	181
Resetting user data .....	182
Phone test .....	183
<b>Bluetooth</b> .....	<b>184</b>
Discoverability .....	184
Linking .....	184
Transferring contacts .....	185
Receiving a vCard .....	185
Sending a vCard .....	186
Using a Bluetooth headset .....	187
Testing a Bluetooth headset .....	187

<b>Data backup to USB memory stick</b> .....	<b>188</b>
Saving user data .....	189
Restoring user data .....	190
Restoring all user data .....	190
Restoring selected user data .....	191
Checking backups .....	192
Deleting backups .....	192
<b>Differing display view in a HiPath 4000 environment</b> .....	<b>193</b>
<b>Web interface</b> .....	<b>194</b>
User Pages .....	194
Administrator Pages .....	194
Configuring settings on the User Pages .....	195
Calling up the Web interface .....	195
Overview of the Web interface user menu .....	196
<b>Fixing problems</b> .....	<b>197</b>
Responding to error messages on the screen .....	197
Contact partner in the case of problems .....	198
Troubleshooting .....	199
Caring for your telephone .....	199
<b>Index</b> .....	<b>200</b>
<b>Overview of functions and codes</b> .....	<b>205</b>
<b>Display icons</b> .....	<b>210</b>

## General information

### About this manual

This document contains general descriptions of the technical options, which may not always be available in individual cases. The respective features must therefore be individually defined in the terms of the contract.


If a particular function on your phone is not available to you, this may be due to one of the following reasons:

- The function is not configured for you or your telephone. Please contact your system support representative.
- Your communications platform does not feature this function. Please contact your Siemens sales partner for information on how to upgrade.

This user guide is intended to help you familiarize yourself with OpenStage and all of its functions. It contains important information on the safe and proper operation of your OpenStage phone. These instructions should be strictly complied with to avoid operating errors and ensure optimum use of your multifunctional telephone in the network.

These instructions should be read and followed by every person installing, operating or programming an OpenStage phone.

---

 For your own protection, please read the section dealing with safety in detail. Follow the safety instructions carefully in order to avoid endangering yourself or other persons and to prevent damage to the unit.


---

This user guide is designed to be simple and easy to understand, providing clear step-by-step instructions for operating your OpenStage phone.

Administrative tasks are dealt with in a separate manual. The Quick Reference Guide contains quick and reliable explanations of frequently used functions.

### Service

---

 The Siemens service department can only help you if you experience problems or defects with the phone. Should you have any questions regarding operation, your specialist retailer or network administrator will gladly help you. For queries regarding connection of the telephone, please contact your network provider.

---

If you experience problems or defects with the phone, please dial the service number for your country.

## Intended use

The OpenStage phone is a desktop unit designed for voice transmission and for connection to the LAN. Any other use is regarded as unauthorized.

## Telephone type

The identification details (exact product designation and serial number) of your telephone can be found on the nameplate on the underside of the base unit. Specific details concerning your communications platform can be obtained from your service technician.

Please have this information ready when you contact our service department regarding faults or problems with the product.

## Voice encryption

Your OpenStage 60/60 G/80/80 G 2 (software release V1 R2.xxxx and later) supports voice encryption on HiPath 2000 V2, HiPath 3000/5000 V7 (minR 4 and later), and HiPath OpenOffice EE (V1).

This allows you to use your OpenStage to perform tap-proof calls. Voice transmission is encrypted and data is decrypted at the other call party's phone and vice versa.

If "Secure Mode" is enabled on your phone (consult your service personnel), and a connection is established to a phone that does not support voice encryption, the call is not encrypted and thus unsecured.

Your service personnel can define at the communication system whether you are notified of unencrypted calls and how → page 111.

## Speakerphone quality and display legibility

- To ensure good speakerphone quality, the area in front of the telephone (front right) should be kept clear.  
The optimum handsfree distance is 20 in. (50 cm).
- Proceed as follows to optimize display legibility:
  - Turn the phone to tilt the display. This ensures you have a frontal view of the display while eliminating light reflexes.

### Multi-line telephone, executive/secretary functions

Your OpenStage 60/60 G/80/80 G is a "multi-line telephone". This means that your service personnel can configure multiple lines on your phone, which is not the case with single-line phones. Each line is assigned an individual phone number which you can use to make and receive calls. The programmable sensor keys function as line keys on multi-line phones → page 140.

When using a multi-line phone to make and receive calls, certain particulars must be taken into account → page 141 ff.

The executive-secretary configuration is a special case. This is a multi-line telephone with special features (e.g. "Ring Transfer" and "Accept call"), configured especially for executive/secretary use → page 139 ff.

### Team functions

To increase the efficiency of telephony, your service personnel can configure various Team functions such as pickup groups, hunt groups, and call distribution groups.

## Getting to know your OpenStage phone

The following sections describe the most frequently used operating elements and the displays on your OpenStage phone.


### The user interface of your OpenStage 60/60 G/80/80 G

The diagram shows an OpenStage 60/60 G, the description applies to all product variants.



1	You can make and receive calls as normal using the <b>handset</b> .
2	The large <b>graphic display</b> permits intuitive operation of the phone → page 26.
3	The <b>mode keys</b> allow easy operation of the applications featured on your telephone. To select a tab within a function press the relevant key repeatedly until the required tab is displayed → page 20.
4	Use the <b>TouchGuide</b> to navigate conveniently through the applications on your telephone → page 21.
5	You can customize your telephone by assigning phone numbers and functions to the <b>programmable sensor keys</b> → page 23.
6	The <b>function keys</b> allow you to call up the most frequently used functions during a call (e.g. Disconnect) → page 19.
7	<b>Audio keys</b> are also available, allowing you to optimally configure the audio features on your telephone → page 19.
8	The <b>TouchSlider</b> allows you to adjust the current volume (e.g. telephone rings - ringer volume) → page 19.
9	Incoming calls are visually signaled via the <b>call display</b> .
10	The <b>keypad</b> can be used to enter phone numbers and text → page 25.

## Ports on the underside of the phone

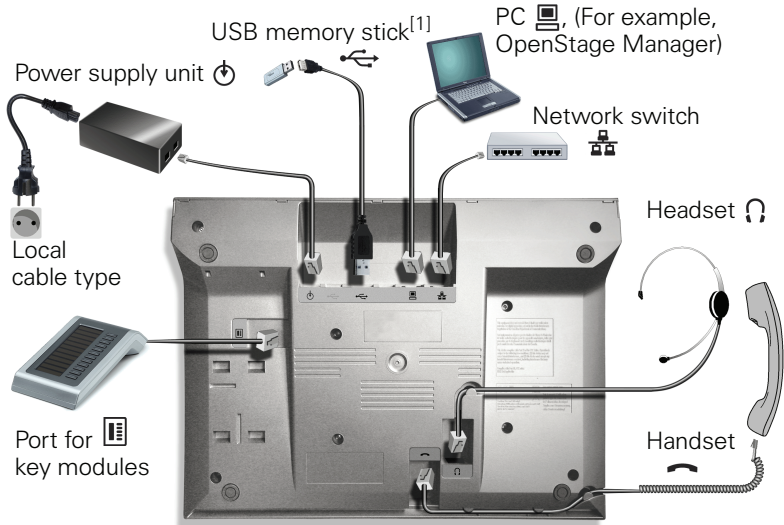

### OpenStage operating features

OpenStage	80	80 G	60	60 G
Display type	Color TFT 640x480		Color TFT 320x240	
Illuminated display	✓		✓	
Programmable sensor keys	9		8	
Full-duplex speakerphone function	✓		✓	
Headset	✓		✓	
Bluetooth	✓		✓	
USB master <sup>[1]</sup>	✓		✓	
10/100 Mbps Ethernet switch → page 17	✓	-	✓	-
1000 Mbps Ethernet switch → page 17	-	✓	-	✓
Interface for key modules	✓		✓	
Web-based Management (WBM)	✓		✓	

[1] Use an extension cable such as C39195-Z7704-A5 to connect the USB memory stick. The port is not suitable for USB hubs.



## Using network ports more efficiently

OpenStage 60/80 has a built-in 10/100 Mbps Ethernet switch. OpenStage 60 G/80 G has a 1000 Mbps Ethernet switch. This means that you can connect a PC to the LAN directly via the phone. The telephone-PC connection option must first be activated on the telephone by service personnel.



Using this connection option saves one network port for each switch used and requires fewer or shorter network cables when arranged correctly.

## OpenStage Manager

This program offers an additional option for tailoring your phone to your personal needs.

OpenStage Manager is suitable for the following models:

- OpenStage 60 (SIP/HFA)
- OpenStage 60 T
- OpenStage 80 (SIP/HFA)
- OpenStage 80 T
- OpenStage 60 G / 80 G (SIP/HFA)

## Features

- Phonebook management
- Assignment of images to contacts
- Synchronization of contacts
- Save and restore
- Key programming
- Screensavers
- Ring tones



Contact your service personnel for the latest version of OpenStage Manager.

## OpenStage Key Module

The OpenStage Key Module is a key module attached to the side of the phone that provides 12 additional illuminated, programmable keys. Like keys on the phone, these keys can be programmed and used according to your needs → page 23.






The diagram shows an OpenStage Key Module for OpenStage 80/80 G.

You can attach up to two OpenStage Key Modules to your OpenStage 60/60 G/80/80 G.

## Keys and controls

### Function keys







Key	Function when key is pressed
	End (disconnect) call → page 50.
	Call forwarding <sup>[1]</sup> → page 80.
	Key currently has no function.

[1] If the LED key flashes on the phone, your phone was configured as a forwarding destination.

### Audio controls

#### Audio keys



Key	Function when key is pressed
	Activate/deactivate the loudspeaker → page 46.
	Activate/deactivate headset → page 56.
	Activate/deactivate microphone (also for speakerphone mode) → page 51.

#### TouchSlider

Similar to the TouchGuide → page 21, you can set properties for your telephone, such as the volume, by sliding your finger over the TouchSlider.



Icon used in the manual:









The blue illuminated slider control displays the volume setting for the current tone (ring tone, handset tone and loudspeaker tone). You can adjust the volume by moving the slider left or right.

Set the lamp brightness of the TouchSlider → page 163.

## Mode keys

These sensor keys allow you to switch to the required application with the simple stroke of a key. To select a tab within an application press the relevant key repeatedly until the required tab is displayed.



Key	Function when key is pressed	LED display
	Display telephony interface → page 34	Blue: Application is active
	Display phonebooks → page 35	Blue: Application is active
	Display call lists → page 38	Blue: Application is active White: New entry in call list
	Display messages → page 40	Blue: Application is active White: New voicemail
	Display user/applications menu → page 41	Blue: Application is active
	Display Help function → page 43	Blue: Application is active












The icons for the mode keys also appear on the display → page 32.

## TouchGuide





Before using the telephone, remove the protective covering from the TouchGuide ring surface.






With this control, you can manage most of your phone's functions, as well as its displays.


Operation	Functions when key is pressed
 Press 	In idle mode: <ul style="list-style-type: none"> <li>• Open the idle menu → page 29</li> </ul> In lists and menus: <ul style="list-style-type: none"> <li>• Go to next level</li> </ul> Entry selected: <ul style="list-style-type: none"> <li>• Perform action</li> </ul> You can now access a context menu: <ul style="list-style-type: none"> <li>• Open the context menu</li> </ul>
 Press 	In lists and menus: <ul style="list-style-type: none"> <li>• One level back</li> </ul> Entry selected: <ul style="list-style-type: none"> <li>• cancel action</li> </ul> In input fields: <ul style="list-style-type: none"> <li>• Delete character to the left of the cursor</li> </ul>
 Press 	In lists and menus: <ul style="list-style-type: none"> <li>• Scroll down</li> <li>• Hold down: Jump to the end of the list/menu</li> </ul>
 Press 	In lists and menus: <ul style="list-style-type: none"> <li>• Scroll up</li> <li>• Hold down: Jump to the start of the list/menu</li> </ul>
 Move your finger around the inner wheel W	In lists and menus: <ul style="list-style-type: none"> <li>• Scroll up or down</li> </ul> In input fields: <ul style="list-style-type: none"> <li>• Select a character in the display keyboard → page 27</li> <li>• Set sensitivity → page 164.</li> </ul>
 Press the  key.	Entry selected: <ul style="list-style-type: none"> <li>• Perform action</li> <li>• Initiate call</li> </ul> In idle mode: <ul style="list-style-type: none"> <li>• Open the idle menu → page 29</li> </ul>

### Browsing in the call list and phonebook tabs

If you are in the phonebook, you normally navigate between the "Personal" and "Corporate" tabs using the  key or if you are in the call lists you navigate between the "Missed", "Received", "Dialled" and "Forwarded" tabs using the  key,


Alternatively you can use the TouchGuide to navigate between the tabs.


Firstly enter the tab line using the  key and then browse left or right using the  and  keys. Once you have reached the required tab, press the  or  key to enter the corresponding selection list.

If you are in one of the phonebook or caller lists or in one of the settings menu, you go back to the telephony interface by repeatedly pressing the  key.

## Programmable sensor keys


Your OpenStage 80/80 G has nine (OpenStage 60/60 G: eight) illuminated sensor keys. You can assign functions or numbers to them.

 Increase the number of programmable sensor keys by connecting a key module → page 18.



Depending on how they are programmed, you can use the sensor keys as:

- Function keys → page 89
- Redial keys → page 95
- Procedure keys → page 93

 You can program internal and external station numbers on the second level for all programmable sensor keys (except the Shift key). The LED function is not available for internal station numbers on the second level.




Touch the key to activate the programmed function or dial the stored number.

Press and hold a function key or redial key to open a menu for programming it. Direct station selection (DSS) keys can only be programmed via the service menu.


A label indicating the key's function is displayed to the left of the key; it cannot be changed. You can change the labels for redial or DSS keys according to your requirements → page 96.

The status of a function is shown by the LED on the corresponding sensor key.

### Meaning of LED displays on function keys

LED		Meaning of function key
	Off	The function is deactivated.
	Flashing <sup>[1]</sup>	Indicates the function status.
	On	The function is activated.

[1] In this manual, flashing sensor keys are identified by this icon, regardless of the flashing interval. The flashing interval represents different statuses, which are described in detail in the corresponding sections of the manual.

 The programmable sensor keys on multi-line phones function as trunk keys → page 140.


## Text input

Example: Changing the key label → page 96.

Enter the required characters via the keypad.



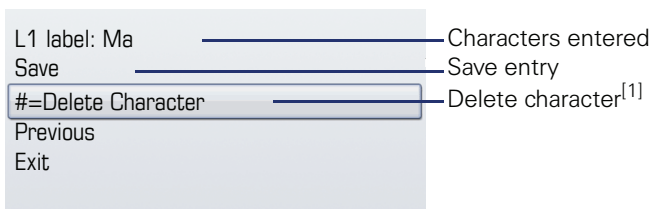









Select the functions using the keys  and .

Confirm your entry with .



[1] Alternatively, press the key .

## Character overview (depends on the current language setting)

Key	1x	2x	3x	4x	5x
	[1]	1			
	a	b	c	2	
	d	e	f	3	
	g	h	i	4	
	j	k	l	5	
	m	n	o	6	
	p	q	r	s	7
	t	u	v	8	
	w	x	y	z	9
	+	.	-	0	
	[2]				
	[3]				

[1] Space

[2] Next letter in upper case.


[3] Delete character




## Keypad

### Text input

In cases where text input is possible, you can use the keypad to input text, punctuation and special characters in addition to the digits 0 to 9 and the hash and asterisk symbols. To do this, press the numerical keys repeatedly.



Example: To enter the letter "h", press the number  key on the keypad twice. When entering the text, all available characters for this key are displayed. After a short while, the character in focus is displayed in the input field.



To speed up the input, you can confirm your entry by pressing " on the TouchGuide after you have selected the required character. To enter a digit in an alphanumeric input field, press the relevant key and hold it down. You no longer need to scroll through the entire list of possible characters.

Alphabetic labeling of dial keys is also useful when entering vanity numbers (letters associated with the phone number's digits as indicated on the telephone spell a name, e.g. 0700 - PATTERN = 0700 - 7288376).

### Multi-function keys

Function		
Long press (key held down)	Turn ringtone on/off → page 113.	Turn phone lock on/off → page 117.
Key label → page 24	Next letter in upper case.	Delete character.
Display keyboard → page 27	Write special characters.	Switch between upper and lower-case text and number entry.


## Graphic display

Your OpenStage 60/60 G/80/80 G is equipped with a tilt-and-swivel color display → page 16.

### Appearance

You can customize your display to suit your personal requirements:

- Angle the display as required → page 13.
- Select your preferred display design → page 162.

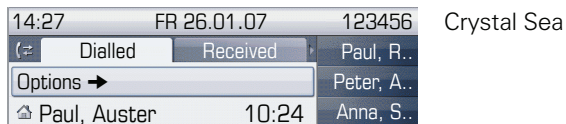

### Status bar

The time, weekday, date, and your phone number are displayed in the status bar.

In addition, different icons represent different situations and switches:


Icon	Explanation
	The ring tone is deactivated → page 113
	The "Do not disturb" function is activated → page 114
	The phone lock is activated → page 117
	The Bluetooth function is activated → page 172
	A mobility user is logged on to the phone → page 126
	Save the user data when logged off → page 129
	The data for the new user is retrieved → page 128
	Saving user changes → page 128
	Error during transfer via DLS server → page 128
	Transfer of caller list is aborted → page 129

## Display keyboard



Simple text and characters can also be entered at any time using the keypad → page 25.

Depending on the context, the display keyboard is displayed with different elements.



Use the TouchGuide to operate the display keyboard → page 21.

Operation	Function
Move your finger around the wheel	Set the focus on the next/previous element
Press	Select the element in focus (enters the character or performs the function)
Press	Delete character to the left
Press	Set focus to

You can select the following functions from the function bar:

Element	Explanation
	Switch to upper/lower case characters for first letter of words (initial letter upper case, all subsequent letters lower case)
	Switch to lower case characters
	Switch to numeric characters
	Switch to punctuation and special characters
	Move cursor one character to the right/left
	Copy entire content of the active field to the clipboard
	Insert clipboard content at cursor position. Existing content is not overwritten.
	Confirm changes

Character overview (depends on the current language setting)

Key	1x	2x	3x	4x	5x	6x	7x	8x	9x	10x	11x	12x	13x	14x
	1	[1]												
	a	b	c	2	ä									
	d	e	f	3										
	g	h	i	4										
	j	k	l	5										
	m	n	o	6	ö									
	p	q	r	s	7	ß								
	t	u	v	8	ü									
	w	x	y	9										
	0	+												
	.	*	#	,	?	!	'	-	(	)	@	/	:	-
	[3]													

[1] Space

[2] Additional special characters are available on the display keyboard

[3] Switch between upper and lower-case text and number entry


## Context-dependent displays

Depending on the situation at hand, the graphic display on your OpenStage phone displays different content, to which you can respond intuitively.

### Idle mode

If there are no calls taking place or settings being made, your OpenStage is in idle mode.

In addition to the status bar and the programmable sensor key list, the graphic display offers a wide range of context-dependent displays.

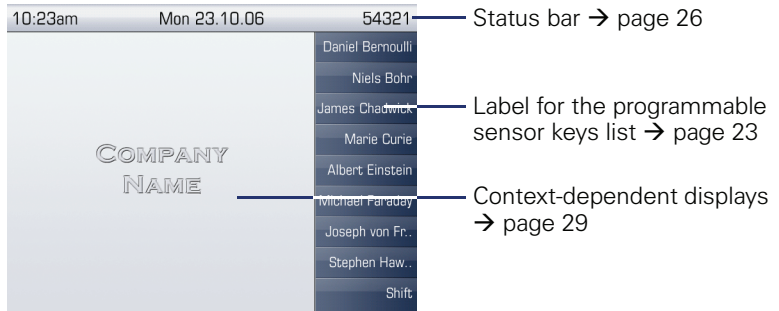

### Idle menu

In idle mode, press **➔** on the TouchGuide → page 21 to display the idle menu. You can call up various functions here. The sequence and status of the entries correspond to the status of the function.

The idle menu may contain the following entries:

- Caller list
- Forwarding on
- Lock phone
- DND on
- Advisory msg. on
- Ringer cutoff on
- Send message
- View callbacks<sup>[1]</sup>
- Directory
- HF answerback on
- Group call on
- Suppress call ID
- Waiting tone off
- DISA intern

[1] Only appears if callback requests are saved

## Telephony dialogs

The dialogs in the lower area of the display prompt you to input data or provide you with information about the call states.

Example: You dialed the phone number of a contact saved in the phone-book.




The pop-up menu (→ page 31) provides functions suited to the situation, which you can select and confirm using the TouchGuide → page 21.

## Messages

The messages displayed in the upper left area of the display advise you of current settings or events.

Example:

- Call forwarding is activated for all calls. All calls are forwarded to the party named "Coco Chanel"<sup>[1]</sup>.
- You received a message while you were absent.
- A call list contains a new entry



Explanation of all message icons:


Icon	Explanation
	You have received one or more new messages
	One or more new entries have been added to the call lists
	Call forwarding is active

[1] The display depends on whether you defined a party from the personal phonebook or the system phonebook as the forwarding destination.

## Context menus

If the arrow icon ➔ appears next to a selected entry, additional menu levels or selection options are available in the form of a context menu. Navigate through these options using the TouchGuide → page 21.

You can set context menus to automatically close in certain situations (for example, during a connection) → page 179. You can also select the display duration → page 179.

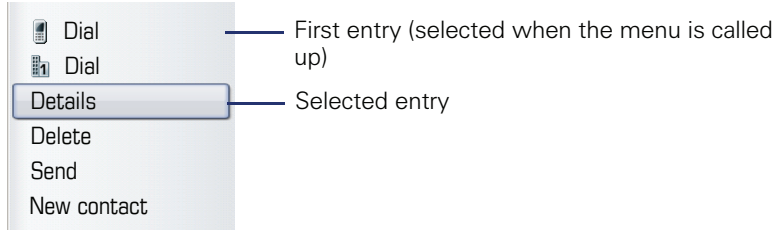

## Pop-up window

In certain situations, a pop-up window opens automatically in the lower third of the display.


### Pop-up menu

You will be prompted to use a pop-up menu to select situation-dependant functions and to confirm them or to make entries.

You can use the TouchGuide to navigate within the pop-up menu → page 21.

Example:

The following pop-up menu opens after you change a setting and press the ↵ key on your TouchGuide.

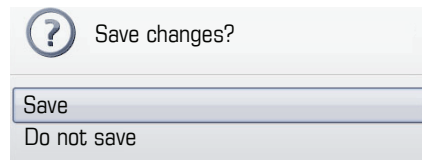


### Pop-up message

Pop-up messages only indicate actions or states for which further action is not required.

Example:


The following pop-up message appears briefly when you change a setting.

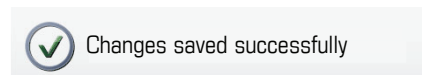







## Application tab

In many cases you can select further content within an application using tabs.



Example: Press the  mode key to open the call lists → page 20. Press this key repeatedly to switch between the various tabs.

The icon displayed to the left of the tab indicates the application you are currently working in.

Icon	Explanation
	Telephony interface → page 34
	Phonebooks → page 35
	Call lists → page 38
	Messages → page 40
	Menu → page 41
	Help function → page 43



## Applications available on your OpenStage phone

The following descriptions provide an overview of the various applications available on your OpenStage phone.

### Application navigation

#### Activating an application

You can switch to the relevant application using the mode keys → page 20.

#### Scrolling through application tabs

If an application has more than one tab, you can press a mode key repeatedly to select the relevant tab → page 32.

#### Scrolling through lists


You can use the TouchGuide to scroll through entries and confirm the functions you want → page 21.

#### Opening context menus

If the arrow ➔ appears beside an entry, a context menu is available for this entry → page 31.


## Telephony interface

Additional information is displayed in the telephony interface when your phone rings, when you dial a number or during a call, for instance.

 The same information is available on multi-line telephones for the selected line in the line overview.

To access the menu: Press the  key.



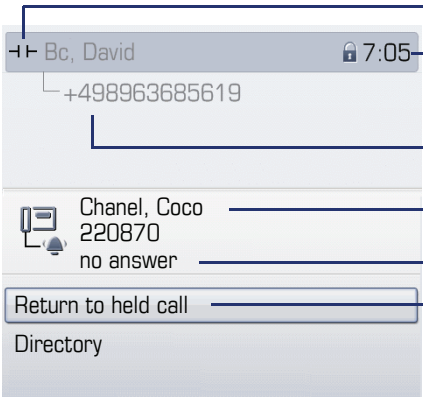



Example:




The screenshot shows a call log entry for 'Bc, David' with a duration of 7:05 and a number +498963685619. Below it is an entry for 'Chanel, Coco' with the number 220870 and the message 'no answer'. A pop-up menu is visible with options 'Return to held call' and 'Directory'.

- Icon indicating call status
- Call duration
- Current call(s) stored in the phonebook (where available, with information)
- Caller information
- System messages
- Pop-up menu with situation-dependent options

### Icons for frequent call states

Icon	Explanation
	The call is active.
	The call has been disconnected.
	You have placed the call on hold (e.g. consultation hold).
	Your call partner has placed the call on hold.
	You are conducting a call via a secure connection.
	You are conducting a call via an unsecured connection.


 Detailed descriptions of the various functions can be found in the sections "Making calls – basic functions" → page 45 and "Making calls – enhanced phone functions" → page 56.

## Phonebooks






In addition to the personal phonebook, this application contains entries from other directory services such as an LDAP corporate directory and the company's internal phonebook.

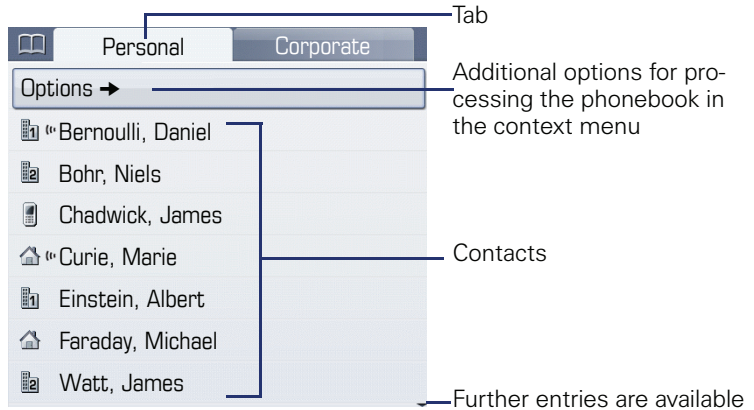To access the menu: Press the  key until the required tab is active.

Example:




### Phonebook icons

Icon	Explanation
	Primary business number
	Secondary business number
	Mobile phone number
	Private phone number
	The phone number is not saved in the personal phonebook.

### Search contacts

When in the phonebook or directory list view, press the keypad key that corresponds to the first letter of your search term. A field opens for you to enter the search term:



Enter your search term using the keypad → page 25.

The cursor jumps to the first entry in the list that matches the character you entered in the search field.

### Personal phonebook

The "Personal" tab contains your personal phonebook. You can store up to 1000 contacts in this phonebook. The entries are sorted in alphabetical order in the phonebook list and displayed with the icon for the specified default phone number.

There are two ways of creating new contacts:

- Via the phonebook list context menu → page 98
- Accept entry from LDAP search → page 104

### Contact details

The type of data displayed for a call in the telephony interface → page 34 is dependent on the information you have stored for the contact in your personal phonebook.

A contact consists of the entry in the "First name" or "Last name" fields and at least one phone number → page 98.

In addition, you can store non-telephony-specific data (e.g. address, function, etc.) for each entry.

You can store several phone numbers for each contact. In this case, however, you should define a preferred number → page 98.

Classify your contacts into groups → page 102.

Store a picture of the contact → page 99.

### Managing contacts

All saved contacts are listed in alphabetical order in the "Personal" tab.

You can use the "Options" context menu to

- create new contacts → page 98
- define contact display format → page 101
- sort contacts into groups → page 102
- delete the entire phonebook list → page 101



To manage your contact data professionally and to synchronize your data with the Outlook e-mail program, we recommend using OpenStage Manager → page 17.

---

### Using contacts

The following functions are available via the context menu of a selected contact:

- Calling a contact → page 60
- Editing a contact → page 100
- Deleting a contact → page 101

## LDAP directory

If you have access to an LDAP directory (contact the responsible service personnel), you can search contacts in a company-wide directory.

Both a simple and an advanced search function are available for this in the "Corporate" tab. You can transfer any entries found to your local phonebook.

### Searching for a contact

- Searching for an entry → page 104

### Using a contact

- Call contact → page 62
- Importing an entry into the personal phonebook → page 104

## System phonebook

The "System" tab contains the central speed-dial directory, which is configured and maintained by your service personnel. This directory contains all internal phone numbers and speed-dial numbers that were assigned a name.

- Dialing from the system phonebook → page 62
- Dialing with system speed-dial numbers → page 63

## Call lists

All calls and numbers dialed on your phone are logged in chronological order in call lists.

Callers with suppressed numbers cannot be saved in the call lists.

The following call lists are displayed individually on separate tabs:

- "Missed" tab: missed calls
- "Received" tab: answered calls
- "Dialled" tab: dialed numbers

Callers with suppressed numbers cannot be saved in the call lists.

When new entries are added to the call lists, a message appears (→ page 30) on the idle display and the LED of the mode key (Ⓢ) (→ page 20) lights up white.

To access the menu: Press the (Ⓢ) key until the required tab is active.

## Managing call lists

Each call list may contain up to 30 entries. Once this limit is reached, the oldest entry in the log is deleted.

Multiple calls from the same number are only listed once. The number of call attempts is logged in the "Details" context menu.

Example: "Missed" tab

The screenshot shows a mobile phone interface with two tabs: 'Missed' and 'Received'. The 'Missed' tab is active. Below the tabs is an 'Options' menu. The call list contains the following entries:

Name	Date	Attempts
Bernoulli, Daniel	18.10.	(1)
Curie, Marie	18.10.	(2)
Bohr, Niels	17.10.	(2)


Annotations on the right side of the screenshot:

- Additional tabs (pointing to the 'Missed' and 'Received' tabs)
- Selected new entry with context menu (pointing to the 'Bernoulli, Daniel' entry)
- Date of call (pointing to '18.10.')
- Number of call attempts (pointing to '(1)')
- Old entry (pointing to 'Bohr, Niels')

You can select the following function in the "Options" context menu:

- Delete all → page 106

Example: "Dialled" tab

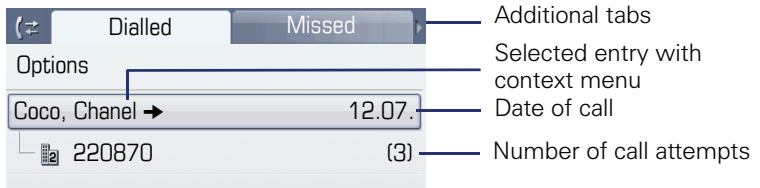


The following functions are available via the context menu of a selected entry:

- Dial → page 60
- Details → page 106
- Delete → page 106
- Transfer entry to personal phonebook → page 107


## Entry details

Up to ten call attempts/calls can be stored under "Details" for each entry.

Example: entry in the "Missed" tab

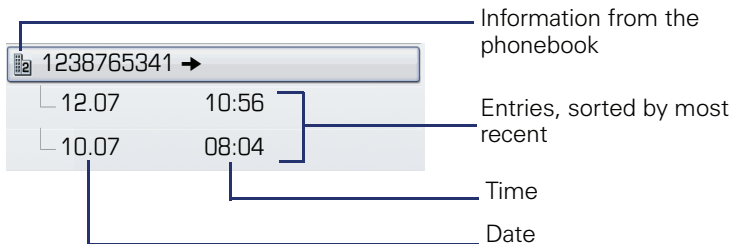


Example: entry in the "Dialled" tab

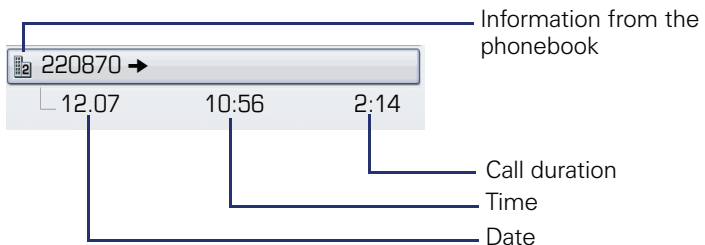

In this view, the context menu contains the following entry:

- Dial → page 60

 If a caller is already entered as a contact in the local phonebook, the stored data is displayed.

## Mailbox

Depending on the type and configuration of your communications platform (contact the relevant service personnel), messages from services such as HiPath Xpressions are displayed in this application in addition to messages received.

The following messages are displayed individually on separate tabs:

- "Messages" tab: Messages
- "Voice Mail" tab: Voicemail

## Messages


You can send short text messages to individual internal stations or groups.

In idle mode (→ page 29) the following signals alert you to the presence of new messages:

- ☑ key LED illuminates
- Display → page 30.

To access the menu: Press the ☑ key until the "Messages" tab is active.

Example:

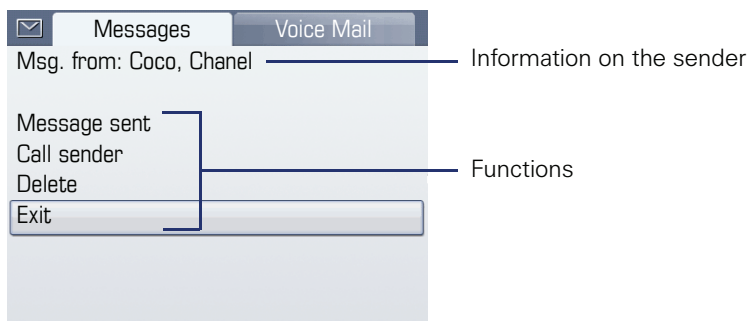

---

➡ For a description of how to edit the entries → page 122.

---

## Voicemail

If your telephone is connected to a voicemail system (such as Entry Voice Mail), the Mailbox key will also light up to alert you to any messages that have arrived.


An appropriate message also appears on the display (for instance, in Entry Voice Mail: "<x> new messages").


To play back your voicemail, follow the instructions on the display.



## Menu

This menu includes a configuration area for users and administrators, as well as an area for any available applications (contact service personnel).


To access the menu: Press the  key.

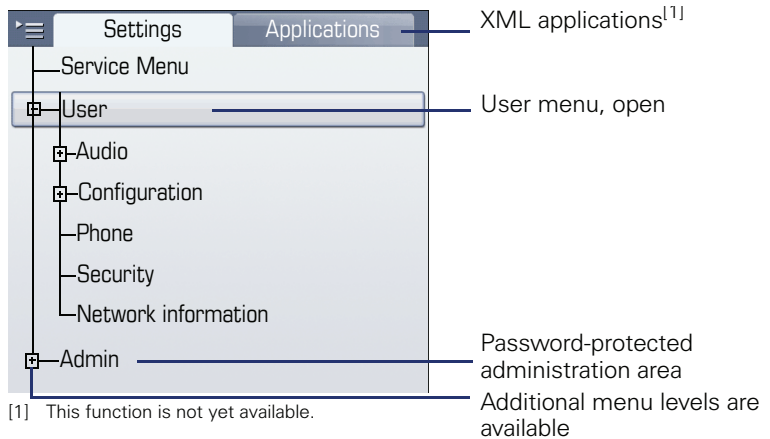


## Settings – Service Menu

Open the Program/Service menu in your communication system and use the comprehensive functions it offers.

To access the menu: Press the  key until the "Settings" tab is active.

Confirm the "Service Menu" entry by pressing .

 An overview of the maximum functions available can be found at [→ page 205.](#)

## Settings – telephone user menu


Here you can configure settings for your OpenStage.

To access the menu: Press the  key until the "Settings" tab is active.

Select and confirm the "User" entry using the TouchGuide [→ page 21.](#)

If necessary, enter the user password [→ page 112.](#)

The menu structure comprises several levels.

 You can also configure some of the settings using the Web interface ([→ page 196](#)) on your OpenStage. Go to the page references next to the menu entries below to view descriptions of the corresponding parameters.

### Audio

Optimize the volumes, audio settings and ring tones of your OpenStage for your environment and according to your personal requirements.

#### Volumes



Adjust the settings on your telephone → page 166.

#### Settings



Adjust the settings on your telephone → page 167.



Make settings via the Web interface → page 196.

### Configuration

#### Call forwarding

Set up call forwarding for your telephone.



Adjust the settings on your telephone → page 80.



Adjust the settings on your telephone → page 166

#### Context menu

Define whether context menus should close automatically, and define the display duration.



Adjust the settings on your telephone → page 179.



Make settings via the Web interface → page 196.

#### Bluetooth

Prepare your phone for Bluetooth operation.



Adjust the settings on your telephone → page 172.



Make settings via the Web interface → page 196.

### Phone

Adjust the display design settings and program the sensor keys on your OpenStage.

Backup/Restore



Adjust the settings on your telephone → page 190.

Screensaver



Adjust the settings on your telephone → page 159.



Make settings via the Web interface → page 196.

Display



Adjust the settings on your telephone → page 159.



Make settings via the Web interface → page 196.

#### Key programming



Adjust the settings on your telephone → page 89.

### Security

Protect your settings and data by assigning a password.



Adjust the settings on your telephone → page 112.



Make settings via the Web interface → page 196.

### Network information

View status information for the network environment.



Viewing settings on your telephone → page 181.

### Reset user data

Delete all personal settings here → page 182.

## Settings – administration

You can access the administration area via the "Admin" menu and by entering the administration password.

Refer to the administration manual for your phone for more detailed information on this topic.


## Applications<sup>[1]</sup>

In the "Applications" tab, you can start a number of practical XML applications. These XML applications must first be configured by your service personnel.

## Help function

You can call up the "Help" function at any time, even during a call.

### Calling up the "Help" function

Press . The "Help" function is activated.

[1] This function is not yet available.

### Control and monitoring function


A control or monitoring function can be activated on your phone for service purposes by remote maintenance.

#### Control function


Service personnel have the option to activate and deactivate features of the phone via remote maintenance. During maintenance the handset, microphone, loudspeaker and headset are deactivated. You are additionally informed on the display that the control function is active.

#### Monitoring function

In order to detect malfunctioning of a phone for example, the service personnel install a monitoring function. You can use your phone as normal during monitoring. However you will first be informed about the operation with a message on the display and prompted to allow monitoring.

If service personnel have activated a function on your phone, which continuously transmits operating data to a server, you will see the flashing icon  in the upper display line.


## Basic functions

 Please read the introductory chapters "Getting to know your OpenStage phone" → page 15 and "Applications available on your OpenStage phone" → page 33 carefully before performing any of the steps described here on your phone.


### Answering a call

Your OpenStage phone rings with the tone signal set when an incoming call is received. The call is also visually signaled on the call display.

- When you receive an internal call, your telephone rings once every four seconds (single-tone sequence).
- When you receive an external call, your telephone rings twice in rapid succession every four seconds (dual-tone sequence).
- When you receive a call from the entrance telephone, your telephone rings three times in rapid succession every four seconds (triple-tone sequence).
- If a call is waiting, you hear a short tone (beep) every six seconds.

 Your service personnel can adjust the ring cadence for external and internal calls for you. In other words, different ring cadences can be set for different internal callers.

If transmitted, calling party information (name, phone number) appears on the graphic display.

 An incoming call will interrupt any ongoing telephone setting operations.

### Answering a call via the handset

The phone is ringing. The caller is displayed. Pay attention to the notes on voice encryption → page 111.

Lift the handset.

if nec.



Set the call volume.

## Step by Step

### Answering a call via the loudspeaker (speakerphone mode)

#### Suggestions for using speakerphone mode

- Tell the other party that speakerphone mode is active.
- Adjust the call volume while speakerphone mode is active.
- The ideal distance between the user and the phone in speakerphone mode is about 50 cm.

The phone is ringing. The caller is displayed. Pay attention to the notes on voice encryption → page 111.



Press the key shown. The LED lights up.

or

Answer

Confirm.

The speakerphone function is activated. Set the call volume.

if nec.

#### Ending a call



Press the key shown. The LED goes out.

or



Press the key shown.

### Accepting a call via the headset

**Prerequisite:** A headset is connected.



Make sure your headset port is set up properly → page 168.

The phone rings. The key flashes.



Press the key shown.

if nec.

Set the call volume.

## Step by Step

## Switching to speakerphone mode

People present in the room can participate in your call.

**Prerequisite:** You are conducting a call via the handset.



if nec.

Hold down the key and replace the handset. Then release the key and proceed with your call. Set the call volume.

### U.S. mode

If your communication system is set to US mode (contact your service personnel), you do not have to hold down the speaker key when replacing the handset when switching to speakerphone mode.



if nec.

Press the key shown. Replace the handset. Proceed with your call.

Set the call volume.

## Switching to the handset

**Prerequisite:** You are conducting a call in speakerphone mode.



Lift the handset.



The LED key goes out.

## Open listening

People present in the room can silently monitor your call.

**Prerequisite:** You are conducting a call via the handset.

### Activating



Press the key shown. The LED lights up.

### Deactivating



Press the lit key. The LED goes out.

## Step by Step

### Making calls

#### Off-hook dialing



Lift the handset.



Internal calls: Enter the station number.  
External calls: Enter the external code and the station number.

Pay attention to the notes on voice encryption  
→ page 111.

#### The called party does not answer or is busy



Replace the handset.

#### En-bloc dialing

If "en-bloc dialing" (→ page 171) is activated, the connection to the entered number is only set up when you have confirmed "Dial".



Internal: Enter the station number.  
External calls: Enter the external code and the station number.

if nec.

Delete existing characters.

Dial

Confirm. The connection is set up.



The speaker key lights up. The party you are calling answers via loudspeaker. You can use speakerphone mode.



You can pick up the handset before or after dialing.



## Step by Step

## On-hook dialing



Internal calls: Enter the station number.  
External calls: Enter the external code and the station number.



Your system may also be programmed so that you have to press the "internal" key before you dial an internal number.

To call an external party, you have to enter an external code before dialing the party's telephone number (Prime Line is not active; contact your service personnel).

Pay attention to the notes on voice encryption  
→ page 111.

### The other party answers with speaker:



Lift the handset.

or

On-hook dialing: Speakerphone mode.

### The called party does not answer or is busy:



Press the key shown. The LED goes out.

## Dialing with the headset connected



**Prerequisite:** The headset is connected.

Internal calls: Enter the station number.  
External calls: Enter the external code and the station number.



The headset key lights up.

The connection is established as soon as your input is complete.

Pay attention to the notes on voice encryption  
→ page 111.



Make sure your headset port is set up properly  
→ page 168.

## Step by Step

### Dialing with DDS keys

**Prerequisite:** You have saved a number on a sensor key → page 95.



Press the programmable redial key.

If the required phone number is on a different level, first press the programmed sensor key "Layer X" to shift levels.



You can press the DDS key during a call and automatically initiate a callback → page 52.

Pay attention to the notes on voice encryption → page 111.

### Ending a call



Replace the handset.



Press the key shown.

or



Press the key shown.

### Rejecting a call

The phone is ringing. The caller is displayed.

Select and confirm the option shown.

The connection is cleared down. The caller receives the message "Currently not possible".

Reject call

## Step by Step

## Turning the microphone on and off

To prevent the other party from listening in while you consult with someone in your office, you can temporarily switch off the handset microphone or the handsfree microphone. You can also switch on the handsfree microphone to answer an announcement via the → page 57 telephone speaker.

**Prerequisite:** A connection is set up, the microphone is activated.



Press the key shown. The LED lights up.

or



Press the lit key. The LED goes out.

## Step by Step

if nec. →

Consultation



Return to held call

or

Quit and return

Toggle/Connect

Conference

Leave conference

## Calling a second party (consultation)

You can call a second party while a call is in progress. The first party is placed on hold.

Open the context menu → page 31.

Confirm.

Call the second party.

Pay attention to the notes on voice encryption → page 111.

### Returning to the first party

Confirm.

Select and confirm the option shown.

## Switching to the held party (alternating)

Select and confirm the option shown.

Pay attention to the notes on voice encryption → page 111.

### Initiating a three-party conference

Select and confirm the option shown.



If voice encryption is not active or not available on a conference party's phone, the entire conference is unsecured. If necessary, more information about unsecured connections is available here: → page 111.

### Joining calling parties from a conference

Select and confirm the option shown.



For more information on conferences, see → page 72.

## Step by Step

## Transferring a call

If the person you are speaking to wants to talk to another colleague of yours, you can transfer the call that colleague.

**if nec. →**

Consultation



Open the context menu → page 31.

Confirm.

Enter the number of the party to which you want to transfer the call.



Announce the call, if necessary.



Replace the handset.

**or**

Transfer

Select and confirm the option shown.

## Step by Step

Callback



or



or

Answer



## Using callback

You can request a callback if the station called is busy or if nobody answers. This feature saves you from having to make repeated attempts to reach the user.

You receive a callback,

- When the other party is no longer busy,
- When the user who did not answer has conducted another call.



When configured (contact your service personnel), all callback requests are automatically deleted over night.

## Storing a callback

**Prerequisite:** You have reached a busy line or no one answers.

Confirm.

## Accepting a callback

**Prerequisite:** A callback was saved. Your telephone rings. "Callback: ..." appears on the display.

Lift the handset.

Press the key shown. The LED lights up.

Confirm.

You hear a ring tone.

Pay attention to the notes on voice encryption  
→ page 111.

## Step by Step



View callbacks

Next callback

Delete

Exit

**or**



## Viewing and deleting a stored callback

Open the idle menu → page 29.

Select and confirm the option shown<sup>[1]</sup>.

Select and confirm to display additional entries.

### Deleting a displayed entry

Confirm.

### Ending retrieval

Select and confirm the option shown.

Press the key shown. The LED goes out.

[1] "Differing display view in a HiPath 4000 environment" → page 193

## Step by Step

# Enhanced phone functions

## Answering calls

### Accepting calls via the Headset

**Prerequisite:** You have connected a headset or are using a Bluetooth headset → page 187.



Make sure your headset port is set up properly → page 168.



The LED flashes when a call is received. Press the key shown.

**or**

Answer

Confirm.

**if nec.**

Set the call volume.

Pay attention to the notes on voice encryption → page 111.

### Ending a call



Press the key shown. The LED goes out.

**or**



Press the key shown. The LED goes out.

## Answering a call for another phone

You hear another telephone ring.



Press the flashing key.

**or**



Open the Program/Service menu → page 41.

Calls →

Select and confirm the option shown.

Pickup - directed

Select and confirm the option shown.

Answer

Confirm.

**or**




If you know the number of the telephone that is ringing, enter it directly.



## Step by Step

Pay attention to the notes on voice encryption  
→ page 111.

 Accepting a call in a team → page 148.

## Using the speakerphone

A colleague addresses you directly over the speaker with a speaker call. You hear a tone before the announcement. The other party's name or station number appears on the screen.

You can conduct the call with the handset or in speakerphone mode.



or

Mute off


Lift the handset and answer the call.

Press the "OK" key to confirm your selection and answer the call.

or



Press the key and answer the call.

 If "handsfree answerback" is enabled (see below), you do not need to switch on the microphone - you can answer directly. You can answer immediately in speakerphone mode. If handsfree answerback is disabled (default setting), follow the procedure described above.

Placing a speaker call to a colleague → page 65.

## Enabling and disabling handsfree answerback



Open the idle menu → page 29.

HF answerback on

Select and confirm the option shown

or

HF answerback off

select and confirm the option shown.

## Step by Step

### Answering calls from the entrance telephone and opening the door

If an entrance telephone has been programmed, you can use your telephone to speak to someone at the entrance telephone and to activate a door opener. If you have the proper authorization (contact your service personnel), you can activate the door opener, enabling visitors to open the door themselves by entering a 5-digit code (using a DTMF transmitter or the keypad installed).

#### Speaking to visitors via the entrance telephone

**Prerequisite:** Your telephone rings.



Lift the handset within 30 seconds. You are connected to the entrance telephone immediately.

or



Lift the handset and answer the call.



Dial the entrance telephone number.

#### Opening the door from your telephone during a call from the entrance telephone

Open door

Confirm.

#### Opening the door from your telephone without calling the entrance telephone

Open door




Open the Program/Service menu → page 41.

Select and confirm the option shown.



Dial the entrance telephone number.

---

 Special features must be taken into consideration if your telephone operates with HiPath 5000 (system networking via PC network) → page 158!

---

#### Opening the door with a code (at the door)



After ringing the bell, enter the five-digit code (using the keypad or a DTMF transmitter). Depending on how the door opener has been programmed, a doorbell call signal may or may not be forwarded.

## Step by Step



More features →

Open the Program/Service menu → page 41.

Select and confirm the option shown.

Door opener on

Select and confirm the option shown.



Dial the entrance telephone number.



Confirm the five-digit code to change the code.

or

3=change password

Select the displayed function and press the "OK" dialog key to change the code.

1=enable with ring

Select and confirm the option shown.

or

2=enable w/o ring

Select and confirm the option shown. You can also open the door without a doorbell ring.

### Deactivating the door opener



More features →

Open the Program/Service menu → page 41.

Select and confirm the option shown.

Door opener off

Select and confirm the option shown.

### Accepting a call from an answering machine

**Prerequisite:** An answering machine is configured (consult your service personnel).



The LED lights up. Press the key shown.

For a more detailed description of how this function works, see → page 40.

## Step by Step

### Making calls

#### Redialing from a call list

For information about the call lists as well as sample entries, refer to → page 38.

 Press the key until the call list you want is active.

Niels, Bohr → 18.10.

Select and confirm the entry you want.  
The phone number is dialed immediately.

**or**



Open the context menu.

Dial

Confirm.  
The phone number is dialed.

**or**



Open the context menu.

Details

Select and confirm the option shown.



Open the context menu.

Dial


Confirm.  
The phone number is dialed.

Pay attention to the notes on voice encryption  
→ page 111.

#### Using a personal phonebook

For information about the personal phonebook as well as sample entries, refer to → page 35. For a description of how to create contacts, see → page 98.


#### Calling a contact from the phonebook list

 Press the key shown until the "Personal" tab is active.  
Search for a contact → page 35

**or**

 Niels, Bohr →

Select with the TouchGuide.

 Confirm. The phone number defined as the default number (→ page 98) is dialed.

## Step by Step

or



Open the context menu.




Select and confirm the required phone number using the icons.

Explanation of the icons → page 35.

Pay attention to the notes on voice encryption → page 111.

**Calling a contact from a group**

Press the key shown until the "Personal" tab is active.



Select and confirm the option shown.



Open the context menu.



Select and confirm the option shown.



Select the required group.



Open the context menu.



Confirm.



Select group member.



Confirm. The phone number defined as the default number (→ page 98) is dialed.

or



Open the context menu.



Select and confirm the required phone number using the icons.

Explanation of the icons → page 35.

Pay attention to the notes on voice encryption → page 111.

## Step by Step

### Using a system phonebook

For information about the system phonebook, see → page 37.

 Press the key shown until the "System" tab is active.

**or**

 Open the idle menu → page 29.

Directory

Select and confirm the option shown.

1=internal

**if nec.**


If the system phonebook contains multiple directories: Confirm.

Search for a contact → page 35

**or**

Marie, Curie →

Select with the TouchGuide.

 Confirm. The phone number is dialed immediately.

**or**



Open the context menu.

Call

Select and confirm the option shown.

Pay attention to the notes on voice encryption → page 111.

### Using the LDAP directory

For information about the LDAP directory, refer to → page 37.

**Prerequisite:** You searched for and selected a contact in an LDAP database (→ page 104).

Isaac, Newton →

Confirm; the phone number is dialed immediately.

**or**



Open the context menu.

Dial

Confirm.

**or**

Call

Select and confirm the option shown.

Pay attention to the notes on voice encryption → page 111.

## Step by Step

## Making calls using system speed-dial numbers

**Prerequisite:** You know the system speed-dial numbers (consult your service personnel).



Open the Program/Service menu → page 41.

Use speed dialing



Select and confirm the option shown.

Enter a three-digit speed-dial number.

Pay attention to the notes on voice encryption → page 111.

if nec.

### Suffix-dialing



If necessary, you can suffix-dial additional digits (for example, the user's extension) at the end of the saved station number.

If this feature is configured, a suffix is automatically dialed (for example, "0" for the exchange) if no entries are made within 4 or 5 seconds.

### Dialing with speed-dial keys

**Prerequisite:** You have configured speed-dial keys → page 63.



Open the Program/Service menu → page 41.

Use speed dialing



Select and confirm the option shown.



Press the key shown.



Press the required speed-dial key.

Pay attention to the notes on voice encryption → page 111.

### Configure a speed-dial key

You can program the keys  to  with ten frequently used phone numbers.



Open the Program/Service menu → page 41.

Destinations →

Confirm.

Change Speed Dial

Select and confirm the option shown<sup>[1]</sup>.



Press the key shown.

[1] "Differing display view in a HiPath 4000 environment" → page 193

### Step by Step



Press the required speed-dial key. If the key is already in use, the programmed phone number appears on the screen.

Change

Confirm.



First enter the external code and then the external station number.

Save

Confirm.

**or If you make a mistake**

previous

Select and confirm the option shown. This deletes all entered digits.

Next

Confirm.

**or**

Change

Select and confirm the option shown.

**or**

Delete

Select and confirm the option shown.

**or**

Exit

Select and confirm the option shown.



## Step by Step

**Talking to your colleague with a speaker call**

You can make a loudspeaker announcement through a loudspeaker if connected (ask your service personnel), or to an internal user with a system telephone without any action on their part.



Open the Program/Service menu → page 41.

Calls →

Select and confirm the option shown.

Speaker call

Select and confirm the option shown.



Enter the station number.



Responding to a speaker call → page 57.

**Talking to your colleague with discreet calling**

If this function has been configured (ask your service personnel), you can join an ongoing call conducted by an internal user at a system telephone with display. You can listen in unnoticed and speak to the internal user without being overheard by the other party (discreet calling).



Lift the handset.

\* 9 wxyz 4 ghi 5 jkl

Enter the code.



Enter your internal station number.



Your service personnel can protect your telephone against discreet calling.

## Step by Step

### Automatic connection setup/hotline

If this function is configured (contact your service personnel), the system automatically sets up a connection to a preset internal or external destination.



Lift the handset.

Depending on the setting, the connection is either set up **immediately** or only **after** a preset **period of time** (hotline after a timeout).

### Reserving a trunk

If configured (ask your service personnel), you can reserve an occupied trunk for yourself. When the line is free, you receive a call and a note on the display.

**Prerequisite:** "Currently busy" appears on the display.

Confirm.

Reserve trunk

### Reserved line is free



Your telephone rings. "Trunk is free" appears on the display.



Lift the handset.



You will hear the dial tone.



Enter the external phone number.

## Step by Step

## Assigning a station number (not for U.S.)

If this function has been configured (contact your service personnel), you can selectively assign a specific number (DID number) to your telephone before making an external call. The assigned number then appears on the called party's display.



Open the Program/Service menu → page 41.

Calls →

Select and confirm the option shown.

Temporary MSN

Select and confirm the option shown.



Enter the DID number you wish to use.



Enter the external phone number.

## Associated dialing/dialing aid

If this function has been configured (contact your service personnel), you can use a dialing aid to dial numbers and set up calls for your telephone.

The operating procedure depends on whether the dialing aid is connected to the **S<sub>0</sub> bus** or the **a/b (T/R) port**.

You can also use your system telephone as a dialing aid for other telephones.

### Dialing aid on the S<sub>0</sub> bus:

On the PC, select a destination and start dialing.

The speaker on your telephone is switched on. Lift the handset when the other party answers.



### Dialing aid at the a/b (T/R) port:

On the PC, select a destination and start dialing.

"Lift the handset" appears on the PC screen.

Lift the handset.



## Associated dialing from your telephone for another telephone



Open the Program/Service menu → page 41.

Associated dial

Select and confirm the option shown.



Enter the internal station number ("Dial for:").



Enter the number you wish to dial.

## Step by Step

### During a call

#### Using call waiting (second call)

You can be reached by a caller even if you are already conducting a call. The call waiting tone signals a second call.

You can ignore or accept the second call.

When you accept the waiting call, you can either end the first call or place it on hold and resume the call later on.

You can block the second call or the signal tone (→ page 69).

**Prerequisite:** You are conducting a call and hear the camp-on tone (approximately every six seconds).

#### Ending the first call and answering the second call



Replace the handset. Your telephone rings.

Pay attention to the notes on voice encryption  
→ page 111.



Answer the second call. Lift the handset.

#### Placing the first call "on hold" and answering the second call

Call waiting

Select and confirm the option shown.

Pay attention to the notes on voice encryption  
→ page 111.

You are immediately connected to the second caller. The first party is placed on hold.

Quit and return

#### Ending the second call and resuming the first one

Confirm.

or



Replace the handset. "Recall" appears on the display.



Lift the handset.

You are reconnected with the first party.

## Step by Step

## Preventing and allowing a second call (call waiting)

If this function has been configured (ask your service personnel), you can prevent or allow a second call → page 68 from being signaled by automatic camp-on during an ongoing call.




Open the Program/Service menu → page 41.

Select and confirm the option shown<sup>[1]</sup>,


**or**

select and confirm the option shown.

## Activating/deactivating the camp-on tone

You can suppress the camp-on tone (every six seconds) for external calls. A one-time special dial tone then alerts you to the waiting call.


### Activating the call waiting tone




Open the idle menu → page 29.

Select and confirm the option shown.

### Deactivating the call waiting tone




Open the idle menu → page 29.

Select and confirm the option shown.

[1] "Differing display view in a HiPath 4000 environment" → page 193

## Step by Step

### Parking a call

You can park up to ten calls, either internal, external, or both. Parked calls can be displayed on and picked up from another telephone. This feature is useful if you want to continue a call at another phone.

**Prerequisite:** You are conducting a call.




Open the Program/Service menu → page 41.

Calls →

Select and confirm the option shown.

Park a call

Select and confirm the option shown.



Enter the number of the park slot (0 - 9) and make a note of it. If the park slot number you entered is not displayed, it is already in use; enter another one.

### Retrieving a parked call

**Prerequisite:** One or more calls have been parked. The phone is idle.




Open the Program/Service menu → page 41.

Calls →

Select and confirm the option shown.

Retrieve call

Select and confirm the option shown.



Enter the park slot number you noted earlier. If the park slot number you enter is not in use, you cannot retrieve the call.




If a parked call is not picked up, after a specific period of time the call is returned to the telephone from where it was parked (recall).

## Step by Step

## Placing an external call on hold

If you have programmed a hold key on your phone → page 89, you can put external calls on hold. Then all other stations can accept the call on the assigned trunk.

Press the "Hold" key.




Held on line: 801

The message of the relevant trunk appears (e.g. 801) and note the trunk number.

If available, the LED of the assigned trunk key flashes slowly.

if nec.



Replace the handset or press the key shown.

Depending on the configuration, this may be necessary so other members can also pick up the call on hold.

## Picking up a held call:

**Prerequisite:** One or more calls are on hold. The phone is idle.



Open the Program/Service menu → page 41.



Retrieve line

Select and confirm the option shown.

or



If the "Retrieve" key is available → page 89, press it.



Enter the noted trunk number.

or




If there is a "Line:" key available for the relevant trunk, it flashes slowly. Press the key shown.

## Step by Step

### Conducting a conference

In a conference call, you can talk to as many as four other parties at the same time. These may be internal or external users.

 You can only add parties to or remove them from a conference if you initiated the conference.



**if nec.** →

Start conference



**if nec.**

Return to held call

Conference



You are conducting a call.

Open the context menu → page 31.

Select and confirm the option shown.

Call a third party.


If the third party does not answer:

Confirm.

Inform this party that you are initiating a conference.

Select and confirm the option shown.

A tone sounds every 30 seconds to indicate that a conference is in progress.

 If voice encryption is not active or not available on a conference party's phone, the entire conference is unsecured. If necessary, more information about unsecured connections is available here: → page 111.

### Adding up to five parties to a conference

**if nec.** →

Add party



Conference

Open the context menu → page 31.

Confirm.

Call the new party.

Select and confirm the option shown.

### Removing parties from the conference



Remove party

Select a station.

Open the context menu → page 31.

Select and confirm the option shown.



## Step by Step



If a participant that was connected to the conference via an unencrypted line leaves, the conference remains unsecured.

**Ending a conference**

Open the context menu → page 31.

End conference

Select and confirm the option shown.

or



Replace the handset, if this feature is configured (contact your service personnel).

**Removing a party from a conference**

Select a station.



Open the context menu → page 31.

Drop last conf. party

Select and confirm the option shown.

**Leaving a conference**

Open the context menu → page 31.

Leave conference

Select and confirm the option shown.

or



Replace the handset, if this feature is configured (contact your service personnel).

## Step by Step

Calls →

DTMF dialing



### Activating tone dialing/DTMF suffix-dialing

You can transmit dual-tone multifrequency (DTMF) signals to control devices such as an answering machine or automatic information system.

Open the Program/Service menu → page 41.

Select and confirm the option shown.

Select and confirm the option shown.



You can use the keys  through ,  and  to transmit DTMF signals.



Ending the call also deactivates DTMF suffix dialing.

Your system may be configured so that you can start DTMF suffix-dialing immediately after setting up a connection.

## Step by Step

### Recording a call

If configured (contact your service personnel), you can record an ongoing call.

**Prerequisite:** You are on a call, the "Recording" key is configured → page 89.

 Press the "Recording" key. The LED lights up.

You and the other party hear an acoustic announcement, indicating that recording has started, and an acoustic signal is emitted approx. every 15 seconds during the entire recording session.



During recording, it is not possible to add further call parties.

### Stopping recording

 Press the illuminated "Recording" key. The LED goes out.

### Listening to a recording

Playback of the recording depends on the voice recording system used (see the associated user guide).

## Step by Step

Consultation



Calls →

Speaker call



or

Transfer

### Transferring a call after a speaker call announcement in a group

If this function has been configured (contact your service personnel), you can use a speaker call (announcement, → page 148) to announce a call in progress to a group of users → page 65.

After a member of the group has accepted the call request, you can transfer the waiting party.

**Prerequisite:** You are conducting a call.

Confirm. The other party is placed on hold.

Open the Program/Service menu → page 41.

Select and confirm the option shown.

Select and confirm the option shown.

Enter the group's station number.

Announce the call.

When a member of the group accepts the call → page 57, you are connected to this party.

Replace the handset.

Select and confirm the option shown.



If the connection between the two other parties is not established within 45 seconds, the call from the first part returns to you (recall).

## Step by Step

## Sending a trunk flash

To activate ISDN-type services and features through the network carrier's analog trunks or those of other communications platforms (such as "consultation hold"), you must send a signal to the trunks before dialing the service code or telephone number.

**Prerequisite:** You have set up an external connection.



Open the Program/Service menu → page 41.

Calls →

Select and confirm the option shown.

Trunk flash

Select and confirm the option shown.



Enter the service code and/or telephone number.

## Step by Step

Camp-on

Override

## If you cannot reach a destination

### Call waiting (camp-on)

**Prerequisite:** You have dialed an internal number and hear a busy signal. It is important that you reach the called party.

Wait (approx. 5 seconds) until "Camp-on" appears on the display and the busy tone is followed by the ring tone.

The called party can then respond → page 68.



The called party can prevent automatic call waiting → page 69.

If this feature is configured (contact your service personnel), you will hear the ring tone and the message "Camp-on" is immediately displayed.

### Busy override – joining a call in progress

This function is only possible if configured by your service personnel.

**Prerequisite:** You have dialed an internal number and hear a busy signal. It is important that you reach the called party.

Select and confirm the option shown.

The called party and person to whom this party is talking hear an alerting tone every two seconds.

If the called party has a system telephone with display, the following appears on the screen: "Override: (Number or name)".

You can now start talking.

## Step by Step

## Using night answer

When night answer mode is active, for example during a lunch break or after office hours, all external calls are immediately forwarded to a specific internal telephone (night station). The night station can be defined by service personnel ( standard night answer service) or by you ( temporary night answer service).

### Activating

Select and confirm the option shown.

Press the "OK" dialog key to confirm ( standard night answer service).

or



Enter the destination number (temporary night answer service).

Confirm.

### Deactivating

Select and confirm the option shown.

Service personnel can also configure an "automatic night answer service". The automatic night answer service activates at specific times for your telephone depending on how it is programmed.

You can deactivate the automatic night answer service or replace it with a night answer service you configured.

### Step by Step

## Call forwarding

You can immediately forward internal or external calls to different internal or external telephones (destinations). (An external destination requires special configuration in the system.)

Select your preferred method:

- "Call forwarding key" → page 81
- "Activating call forwarding via the Program/Service menu" → page 84

You can program additional call forwarding instructions via the Program/Service menu, "Using system forwarding instructions" → page 86.



When call forwarding is active, a special dial tone sounds when you lift the handset.

If DID DTMF is active (contact your service personnel), you can also forward calls to this destination.

The call forwarding key → page 19 flashes if you are a call forwarding destination.

## Active call forwarding indication

An active call forwarding instruction is indicated on the display when your phone is idle → page 29:



The LED lights up.

The call forwarding icon, the station number and, where applicable, the name of the forwarding destination are displayed on the first line below the status bar.

The name of the party is used if stored in the phonebook.



220870 Dalai Lama

If call forwarding is activated for internal or external calls, the number is preceded by the abbreviation "INT" or "EXT".



INT Dalai, Lama



## Step by Step

## Overview of call forwarding types

Different input masks are displayed depending on how you program call forwarding (call forwarding key → page 81 or Program/Service menu → page 84). The entries in the relevant menus correspond as explained in the following table:

Call forwarding key	Program/Service menu
Variable: All calls	1=all calls
All calls are forwarded, the saved phone number is deleted after deactivation.	
Variable: External calls	2=external calls only
Only external calls are forwarded.	
Variable: Internal calls	3=internal calls only
Only internal calls are forwarded.	

## Call forwarding key



The call forwarding key offers a quick way to activate/deactivate call forwarding instructions → page 84 and open the "Forwarding" page where you can edit these instructions → page 81.

## Editing call forwarding instructions

Press the call forwarding key to open the "Forwarding" page. It provides an overview of all call forwarding types → page 81.

You can select a call forwarding type here and set station numbers as forwarding destinations.



You can also configure this setting via the Web interface → page 196.



Press the key quickly. The LED lights up.

Edit call forwarding

Select and confirm the option shown.

Variable: All calls →

The "Forwarding" page opens.

Select a call forwarding type → page 81



Confirm the option shown to enter a forwarding destination directly → page 82.

or



Enter the station number via a context menu → page 82.

The forwarding destination is automatically deleted when call forwarding is deactivated → page 85.




All changes made here take effect immediately after a short timeout.

## Step by Step

### Editing forwarding destinations

#### Entering a station number directly

**Prerequisite:** The cursor is in a station number input field.

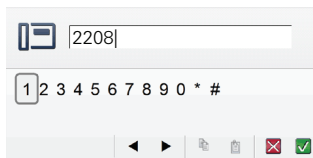

Enter the station number.



or



Select and confirm the option shown to insert the station number just copied → page 82.



Select and confirm the option shown.

#### Entering a station number via a context menu

**Prerequisite:** You selected a call forwarding type → page 81.



Open the context menu.

Enter destination

Select and confirm the option shown.



Enter the station number.



Select and confirm the option shown.

or

Paste

Select and confirm the option shown to insert the station number just copied → page 82.

or

220870

Select and confirm a forwarding destination in the list of favorites → page 83.

#### Copying a station number

**Prerequisite:** The cursor is in an input field that contains a station number:



Select and confirm the option shown to copy the station number.



The station number copied remains in the clipboard until you copy another station number or you finish editing call forwarding.


## Step by Step

**Saving a station number as a favorite for call forwarding**

You can save up to five station numbers as favorites. These station numbers then appear in the context menu when you are programming a call forwarding destination.

If you use a station number for a contact that is already stored in the personal phonebook, the submenu for the call forwarding type selected shows the relevant name with the appropriate icon rather than the station number.

Example:



You can also configure this setting via the Web interface → page 196.



Press the key shown.

Edit call forwarding

Select and confirm the option shown.

Variable: All calls →

The "Forwarding" page opens.

Select a call forwarding instruction of your choice.



Open the context menu.

Edit favorites

Select and confirm the option shown.

The "Edit favorite numbers" page opens. Existing station numbers are displayed.

Select and confirm the station number input field, e.g. "1".



Enter the station number → page 82.



Select the "Options" entry.

Save & exit →

Select and confirm the option shown.

Save & exit

Confirm the option shown in the context menu.

### Step by Step



Press the key quickly. The LED lights up.



Enter the forwarding destination → page 82.

Set forwarding

Confirm.

**or**

The last forwarding destination saved for "all calls" is the first entry in the pop-up menu:

1 Dalai, Lama

Select and confirm the option shown.

Call forwarding is now active for all calls. The forwarding destination is automatically deleted when call forwarding is deactivated → page 85.

## Activating call forwarding via the Program/Service menu

### Configuration via the Program/Service menu



Open the idle menu → page 29.



Special features must be taken into consideration if your telephone operates with HiPath 5000 (system networking via PC network) → page 154!

Forwarding on

Select and confirm the option shown.

1=all calls

Confirm.

**or**

2=external calls only

Select and confirm the option shown.

**or**

3=internal calls only

Select and confirm the option shown.



Save

Enter the destination number.

Confirm.

**Step by Step****Deactivating call forwarding**

Press the lit key. The LED goes out.

**or**



Open the idle menu → page 29.

Forwarding off

Select and confirm the option shown.

## Step by Step

### Using system forwarding instructions

#### Call forwarding no reply (CFNR)

Calls that are not answered after three rings (=default, can be adjusted by service personnel) or that are received while another call is ongoing can be automatically forwarded to a specified telephone.



Open the Program/Service menu → page 41.

Destinations →

Confirm.

CFNR on

Select and confirm the option shown.

**if nec.**

If a phone number is already entered:

Change

Confirm.



Enter the destination phone number.

- Enter the internal station number for internal destinations.
- Enter the external code and the external station number for external destinations.

Save

Confirm.



Open the Program/Service menu → page 41.

Destinations →

Confirm.

CFNR off

Select and confirm the option shown.

Delete

Confirm the option shown to deactivate and delete the forwarding destination.

**or**

Exit

Select and confirm to deactivate but not delete the forwarding destination.



If CFNR is activated, "CFNR on" appears briefly on the display when you hang up.

## Step by Step

## Call forwarding in the event of telephone failure (CFSS)

If configured (consult your service personnel), you can define an internal or external call forwarding destination that activates in the event of telephone failure.



Open the Program/Service menu → page 41.

Destinations →

Confirm.

CFSS on

Select and confirm the option shown.

**if nec.**

If a phone number is already entered:

Change

Confirm.



Enter the destination number.

Save

Confirm.

## Deactivating call forwarding/deleting a destination



Open the Program/Service menu → page 41.

Destinations →

Confirm.

CFSS off

Select and confirm the option shown.

Delete

Confirm the option shown to deactivate and delete the forwarding destination.

**or**

Exit

Select and confirm to deactivate but not delete the forwarding destination.

## Step by Step

### Call forwarding in the carrier network and forwarding multiple subscriber numbers (MSN) (not for U.S.)

If this function has been configured (contact your service personnel), you can forward calls to your assigned multiple subscriber number (MSN) (DID number) directly within the carrier network.

For example, you can forward your phone line to your home phone after business hours.

Trunk FWD on

Select and confirm the option shown.

1=immediate

Select and confirm the call forwarding type required.

or

2=on no answer

or

3=on busy



Enter your DID number.



Enter the destination number (without the external code).

Save

Confirm.

### Deactivating call forwarding

Trunk FWD off

Select and confirm the option shown.

Confirm the displayed call forwarding type.

or

1 or 2 or 3

Enter the activated call forwarding type.



Enter your DID number.



## Step by Step

## Programming sensor keys

You can program frequently used functions, phone numbers or procedures on your OpenStage 60/60 G/80/80 G's sensor keys.

### Configuring function keys

See also → page 23.

#### Example: Programming the Shift key

Assign functionality



Press and hold the required sensor key.

Confirm.

or



Open the Program/Service menu → page 41.

Prog. feature key

Select and confirm the option shown.



Press the required sensor key.

If the key is already in use, the programmed phone number appears on the screen.

Assign functionality

Confirm.

Change key

Confirm.



A list of all available functions is displayed, see the overview → page 91.

More features →

Select and confirm the option shown.

Shift Key

Confirm.

if nec.

Save incomplete

Select and confirm the option shown.

Some functions (e.g. with "Call forwarding") cannot be saved completely. This means that when later initiating the function by pressing the button, further inputs are required.

Save

Confirm.

### Step by Step



---

The programmed function is activated by briefly touching the key. For functions that can be switched on/off such as "Do not disturb", press once to switch the function on and press again to switch the function off. When the function is switched on, the LED lights up.

---

The label appears automatically and can be altered  
→ page 96.

The LED displays show the status of the function  
→ page 23 and → page 91.

## Step by Step

## Overview of functions

The functions are split into the following menus:

- Destinations
- Feature Settings
- PIN and Authorization
- Calls
- More features



The available functions depend on your configuration. If a function is missing, contact your service personnel.

### Saved function LED messages

**Call forwarding, Forwarding - trunk, Forward Line, Night answer, Do not disturb, Telephone lock, Advisory message, Ringer cutoff, HF answerback on/off, Join/leave group, Caller ID suppression, Call wait.term., Waiting tone off, Ring Transfer, Recording, Door opener on/off, Control Relay (only for HiPath 3000), Ringing group on, Shift Key, UCD (Available on/off, Work on/off), Night answer on/off, MULAP Privacy Release:**



Saved function is not activated.



Saved function is activated.

#### Callback:



You have no entry for callback.



You have an entry for callback.

#### Redial key (Internal), Direct station select:



Party not on a call.



Party is on a call or has activated DND.



Flashing quickly - I'm being called, please accept.

Flashing slowly - another party is being called and has not yet answered.

#### Call key, General call key, Trunk key, MULAP Key, Temporary MSN:



No call via corresponding trunk.



Active call via the corresponding trunk.



Flashing quickly - call on the relevant trunk, call pickup is possible by pressing the sensor key.

Flashing slowly - a call is placed on hold on the relevant trunk.

### Step by Step



#### Trunk group key:

At least one trunk is free.



All lines in this trunk group are occupied.



#### View call charges:

No chargeable calls have been set up since the last check.



Chargeable calls have been set up since the last check.



#### Call forwarding, Forward Line:

Flashing slowly - your line is a call forwarding destination.



#### Fax details:

No fax received or no message on the answering machine.



Fax received or message on the answering machine.



#### View number of calls:

No waiting callers.



Flashing quickly - callers waiting (certain number is exceeded).

Flashing quickly - callers waiting (certain number is reached).



#### Data I/O Service:

No connection to an application.



Active connection to an application.



Flashing slowly, connection to an application is temporarily interrupted.

#### The following functions programmed on keys do not have a LED function:

Redial key, Procedure key, Trace call, Speed dial, Clear, Lock all phones, Send message, Directory (1=internal, 2=LDAP), Call waiting, Toggle/Connect, Conference, Speaker call, Retrieve line, Reserve trunk, Release trunk, Temporary Phone, Override, Park a call, Pickup - directed, Pickup - group, Account code, Show call charges, Page, Answer page, Timed reminder, Open door, DTMF dialing, Recall-key, Room monitor, Hold key, Consult internal, Consultation, Associated dial, Associated serv., Tel. data service, Mobile Login, Discreet Call.

Step by Step

## Programming a procedure key

Numbers and functions which require further input, i.e. which contain several operating steps, can be saved on a key on your telephone.

Assign functionality

Press and hold the required sensor key.

Select and confirm the option shown.

or

Prog. feature key



Open the Program/Service menu → page 41.

Select and confirm the option shown.

Change key

Press the required sensor key.

If the key is already in use, the programmed phone number appears on the screen.

Confirm.

More features →

Select and confirm the option shown.

Procedure key

Confirm.



Enter procedure. Example:

\* 6 mno 7 pqrs

Code for associated dialing.

2 abc 3 def 1

Number of the phone for which the call should be made.

0+ 1 2 abc 3 def 4 ghi

the number to be called.

if nec.

Press "Pause" to enter pauses (a "P" appears on the display).

Save

Confirm.

or

previous

If you make a mistake:

Select and confirm the option shown.  
This deletes all entered digits.

if nec.

Key label

Select and confirm the option shown → page 96.

Exit

Confirm.

or

Another key

Select and confirm the option shown.

### Step by Step



---

Select the stored procedure by clicking the sensor key.

Procedures with activatable/deactivatable functions are activated by pressing the sensor key once and deactivated by pressing it again.

You can press the procedure key during a call to automatically send the saved digits as DTMF signals → page 74.

---

Step by Step

## Configuring repdial keys

You can also program internal and external station numbers on the second level. The LED function is not available for internal station numbers on the second level. To program the second level, you must program a "Shift" key → page 89.

See also → page 23.



Press and hold the required sensor key.

Assign functionality

Select and confirm the option shown.

or



Open the Program/Service menu → page 41.

Prog. feature key

Select and confirm the option shown.



Press the required sensor key.  
If the key is already in use, the programmed phone number appears on the screen.

if nec.

Next layer

Select and confirm to save the phone number on the second level.

Change key

Confirm.

Destinations →

Confirm.

Redial key

Confirm.



Enter the station number.

or

Speed dial

Select and confirm the option shown.



Enter the speed-dial number (the speed-dial numbers correspond to the system phonebook → page 37).

if nec.

Key label

Select and confirm the option shown → page 96.

Exit

Confirm.

or

Another key

Select and confirm the option shown.

## Step by Step

### Changing the label retrospectively

The label set when a repdial key was programmed can also be subsequently changed.

#### Changing the label



Open the Program/Service menu → page 41.

Prog. feature key

Select and confirm the option shown.



Press the required sensor key.  
The seizure is displayed on the screen.

Change key

Confirm.

**if nec.**

Next layer

Select and confirm to make the change on the second level.

Key label

Select and confirm the option shown.

Change

Confirm.



Enter the required key label text → page 24.

Change

Confirm.

**or**

Default label

Select and confirm to reset to the default label.

Save

Select and confirm the option shown.

**or**

Previous

Select and confirm to cancel the entry.

Exit

Confirm.



**Step by Step****Deleting sensor key programming**

Hold down the required key.

Assign functionality

Select and confirm the option shown.

**if nec.**

Next layer

Select and confirm the option shown to delete the entries on the second level.

Clear key

Select and confirm the option shown.

Exit

Select and confirm the option shown.

## Step by Step

# Phonebooks and call lists

## Personal phonebook

For a detailed description of this function, see  
→ page 35.

### Creating a new contact

 Press the key until the "Personal" tab is active.

Options →

Confirm.

New contact

Confirm.


Last name

The form for entering contact data opens.

Confirm.



Enter and confirm text → page 27.

 Business 1

Select and confirm the option shown.



Enter and confirm the phone number → page 25.

**if nec.** 

Select and fill out additional fields.



Select the "Options" entry.

Save & exit

Select and confirm the option shown.

**or**



Press the key shown.

Save

Confirm.

### Defining the default number

If you have multiple numbers saved for a contact, you can define the default number here that should be used when dialing directly using the phonebook → page 60.



Press the key until the "Personal" tab is active.

 Niels, Bohr →

Select a contact.



Open the context menu.


Details

Select and confirm the option shown.

## Step by Step

 Business 1 →

Select the "Default No." entry.

 Mobile

The phone displays the current setting.  
Confirm.



Select and confirm the required phone number.

Save & exit

Select the "Options" entry.

Select and confirm the option shown.

or



Press the key shown.

Save

Confirm.

### Saving a picture for a contact

**Prerequisite:** Your service personnel have loaded pictures to the OpenStage.



Press the key until the "Personal" tab is active.

 Niels, Bohr →

Select a contact.



Open the context menu.


Details

Select and confirm the option shown.

Select the "Picture" entry.

No picture →

The phone displays the current setting.  
Confirm.

 Image 1

Select and confirm the picture you wish to use.



Select the "Options" entry.

Save & exit

Select and confirm the option shown.

or



Press the key shown.

Save

Confirm.

## Step by Step

### Changing contact data



Press the key until the "Personal" tab is active.

1 Niels, Bohr →

Select a contact.



Open the context menu.

Details

Select and confirm the option shown.



Select the required field.

**if nec.** ↶

Delete existing text.



Enter and confirm the new text → page 27.

**if nec.** ↶

Select and edit additional fields.



Select the "Options" entry.

Save & exit

Select and confirm the option shown.



Press the key shown.

Save

Confirm.

## Step by Step

## Managing the phonebook

**Defining the contact display format**

Press the key until the "Personal" tab is active.

Options →

Confirm.

Display

Select and confirm the option shown in the context menu.



Select and confirm the display format.

Example	Option
Miller, Peter	Lastname, Firstname
Peter Miller	Firstname Lastname
Miller, P	Lastname, F
P Miller	F Lastname



Press the key shown.

The display format is changed immediately.

**Deleting contacts from the phonebook**

Press the key until the "Personal" tab is active.

Niels, Bohr →

Select a contact.



Open the context menu.

Delete

Select and confirm the option shown.

Delete

Confirm in the pop-up menu.

The selected entry is deleted.

**Deleting all phonebook entries**

Press the key until the "Personal" tab is active.

Options →

Confirm.

Delete all

Select and confirm the option shown in the context menu.

Delete all entries

Confirm in the pop-up menu.

All entries are deleted.

## Step by Step

### Managing groups

#### Creating a group

Press the key until the "Personal" tab is active.

Confirm.

Select and confirm the option shown in the context menu.

Confirm.

Confirm the option shown in the context menu.

Select the "Group name" entry.

Confirm.

Give the group a name → page 27.

Select the "Options" entry.

Select and confirm the option shown.

or



Press the key shown.

Confirm.

The new group is stored.

#### Adding a contact to a group

Press the key until the "Personal" tab is active.

Select a contact.



Open the context menu.

Select and confirm the option shown.

Select the "Groups" entry.

Confirm.

In the context menu, select and confirm a group.

Select the "Options" entry.

Select and confirm the option shown.



Options →

Groups

Options →

New group



Save & exit

Save



Niels, Bohr →

Details

No group →

VIP



Save & exit

## Step by Step

or



Press the key shown.

Save

Confirm.



### Deleting a contact from a group

Press the key until the "Personal" tab is active.

Niels, Bohr →

Select a contact.



Open the context menu.

Details

Select and confirm the option shown.

Select the "Groups" entry.

VIP →

Confirm.

No group

Select and confirm the option shown in the context menu.



Select the "Options" entry.

Save & exit

Select and confirm the option shown.

or



Press the key shown.

Save

Confirm.



### Deleting a group

Press the key until the "Personal" tab is active.

Options →

Confirm.

Groups →

Select and confirm the option shown in the context menu.

VIP →

Select and confirm a group.

Delete

Select and confirm the option shown.

Delete

Confirm in the pop-up menu.

The group is deleted and, if necessary, any assigned contacts remain saved in the phonebook.

## Step by Step

### LDAP database

Information about the LDAP directory can also be found on → page 37.

#### Finding an LDAP entry

Pay attention to the notes on voice encryption → page 111.



Press the key shown until the "Corporate" tab is active.

Options →

Confirm.

Find

Confirm the option shown in the context menu.

Scroll to the required search field (for example, "First name").

Confirm.



Enter search text → page 27.



Select the "Options" entry.

Find

Confirm.

Find

Confirm the option shown in the context menu.

If several entries match your search criteria, all are displayed in alphabetical order.

#### Viewing information about an LDAP entry

Coco, Chanel →

Select an entry.



Open the context menu.

Details

Select and confirm the option shown in the context menu.

All available information is displayed.

#### Importing an LDAP entry into the local phonebook

Coco, Chanel →

Select an entry.



Open the context menu.

Save

Select and confirm the option shown in the context menu. The entry is copied with all details into the personal phonebook. The "Contact created" message appears.

The view changes to the personal phonebook.



## Step by Step






Press the key as often as required until the "Corporate" (LDAP) tab is active.




Enter the initial letter of the surname you need, e. g. "K".

K

A single-line search window appears at the lower edge of the display.

Do not enter any further characters. After a predefined period of time or after pressing the  key all available names with the corresponding initial letter are displayed. You can restrict the output by entering the second and other letters. The  key is used to switch between letters and numbers. The  key is used to delete individual characters.

When entering extended characters you can control the search individually. For the selection of extended characters firstly press the  key.

Rule list:

Extended character	Description
#	Searches for the exact string before the extended character
,	You can enter first and last name separately using a comma. A search is carried out for the last name (possibly using a wildcard) and the first first name with the first character after the comma.
*	Wildcard. This searches for the character entered and all possible subsequent characters

## Step by Step

### Call lists

For a detailed description of this function, see → page 38.

### View details

Ⓢ Press the key until the call list you want is active.

Niels, Bohr 18.10.

Select the entry you want.



Open the context menu → page 31.

Details

Select and confirm the option shown.

For illustrated examples and descriptions of the displayed information, refer to → page 39.

### Deleting entries

#### Deleting an individual entry

Ⓢ Press the key until the call list you want is active.

📞 Niels, Bohr 18.10.

Select the entry you want.



Open the context menu → page 31.

Delete

Select and confirm the option shown.

The entry is deleted.

#### Deleting all entries in a list

Ⓢ Press the key until the call list you want is active.

Options →

Confirm.

Delete all

Confirm the option shown in the context menu.

All entries in the list displayed are deleted.

## Step by Step

### Copying entries from the call logs into the personal phonebook



Press the key until the call list you want is active.

Niels, Bohr 18.10. 07:06am

Select the entry you want.

Copy as contact

Select and confirm the option shown in the context menu.

You have the following options for "Create contact":

- Saving and changing
- Saving without changing
- Exiting (without saving)

#### Saving and changing

Saving and changing

Select and confirm the option shown.

The mask to edit a contact in the personal phonebook opens → page 100. Fill out the relevant fields accordingly and save the new contact.

#### Saving without changing

Saving without changing

Select and confirm the option shown.

An entry is created and the message "Contact created" is displayed. If you open the phonebook, you will be prompted to update the directory. For this type of entries a group "Copied contacts" is created so that you can find them more easily.

## Step by Step

# Displaying and assigning call charges

## Displaying call charges (not for U.S.)

### For the current call

Call charges are shown by default on the display when a call ends.

If you want to display call charges as they occur during a chargeable call, your service personnel must request this option from the network operator.

Call charge display must be requested from the network operator and configured by the relevant service personnel.

Depending on the setting, call charges are displayed during or after a call.

Depending on the network operator, free external calls are also displayed. The message "Free of Charge" appears on the screen either before or during the call.

If the cost indication facility has not been installed, the display will show the dialed number and/or the length of the telephone call.



If a call is forwarded, call charges are assigned to the destination of the call transfer operation.

### For all calls and for the last call

Connection charges for the last chargeable call made are displayed first. After five seconds, the accumulated connection charge (total) is displayed.



Open the Program/Service menu → page 41.

More features →

Select and confirm the option shown.

Show call charges

Select and confirm the option shown<sup>[1]</sup>.

[1] "Differing display view in a HiPath 4000 environment" → page 193

Step by Step


### Displaying call charges for another telephone (not for U.S.)

If configured (contact your service personnel), you can also display and print out information on chargeable calls for other phones (such as a pay phone).

**Prerequisite:** You have programmed the function "Show call charges" on a key → page 89.

The LED lights up to indicate that a you have conducted a chargeable call since the last time you viewed the charges.

 Press the "Call Charges" key. Chargeable calls are displayed.

 Select a connection.

Print

Select and confirm the option shown

or

Delete

select and confirm the option shown

or

Add l information

select and confirm the option shown

or

Exit

select and confirm the option shown.

## Step by Step

### Dialing with call charge assignment

You can assign external calls to certain projects.

**Prerequisite:** Your service personnel have defined account codes for you.



Open the Program/Service menu → page 41.

Calls →

Select and confirm the option shown.

Account code

Select and confirm the option shown.



Enter the account code.

if nec. #→

Press the key shown

or

#=Save

Confirm.

Must be configured (consult your service personnel):



Enter the external phone number.



You can also enter the account code during a call.

## Step by Step

## Privacy/security

### Voice encryption (only for HiPath 2000/3000/5000/OpenOffice EE)



Please see also the explanations on → page 13.

#### Notes on voice encryption

##### Unencrypted connection warning

Your service personnel can define at the communication system whether you are notified of unencrypted calls and how.



and/or

Warning tone.



Standard Call

Display.

You will then receive a warning tone and/or a message on the display when you accept a call, accept a consultation call or are connected to a conference and the connection to a station is unencrypted.

 23189 Coco →  01:39

A closed padlock symbol appears next to the caller ID.

 23133 Yves →  01:63

##### Notification of an encrypted connection

A closed padlock symbol appears next to the caller ID.


A struck-through padlock symbol appears next to the caller ID.

##### Notification of an unencrypted connection

## Step by Step

### User password

The user password protects access to the user menu  
→ page 41.

 The preset password "000000" is a blank password, that is, the "User" menu is freely accessible.



You can also configure this setting via the Web interface  
→ page 196.



Press the key shown until the "Settings" tab is active.

User

Confirm.



Enter and confirm the user password → page 25.

Security

Select and confirm the option shown.

\*\*\*\*\*

Select the "Set password" entry.

Confirm.



If applicable, delete the old password.



Enter a new password (at least six digits) and confirm your entry.

\*\*\*\*\*

Select the "Confirm password" entry.

Confirm.



Re-enter and confirm the password.

Select the "Phone lock" entry.

Disabled →

The phone displays the current setting.

Confirm.

Enabled

Select and confirm the option shown in the context menu.



Select the "Options" entry.

Save & exit

Select and confirm the option shown.

or



Press the key shown.

Save

Confirm.



## Step by Step

## Turning ringer cutoff on and off

If you do not wish to take calls, you can activate the ringer cutoff function. Calls are only identified by **one** ring signal, an indication on the display, and a key which has been programmed to flash (such as a trunk key).

### Activating



Open the idle menu → page 29.

Ringer cutoff on

Select and confirm the option shown.

### Deactivating



Open the idle menu → page 29.

Ringer cutoff off

Confirm.

## Deactivating the ring tone

You can deactivate your ring tone if you do not want to be disturbed by your phone ringing.

### Deactivating



Press the key shown until the icon for the deactivated ringer appears on the display → page 26.

### Activating



Press the key shown until the icon for the deactivated ringer disappears on the display.

## Step by Step

DND on

DND off

Suppress call ID

Restore caller ID

## Do not disturb

If you do not wish to take calls, you can activate do not disturb. Internal callers hear the busy tone, external callers are connected to another phone, which you can specify (contact your service personnel).



In multi-line telephones, "Do not disturb" can only be used for the primary line → page 139.

### Activating

Open the idle menu → page 29.

Select and confirm the option shown. The DND icon appears on the status bar → page 26.

### Deactivating

Open the idle menu → page 29.

Confirm.



When you lift the handset, you will hear a special tone (continuous buzzing) reminding you that "Do not disturb" is activated.

Authorized internal callers automatically override the DND feature after five seconds.

## Suppressing your phone number on the called party's phone

You can prevent your station number or name from appearing on the displays of external parties you call. This setting remains active until you deactivate it.

### Activating

Open the idle menu → page 29.

Select and confirm the option shown.

### Deactivating

Open the idle menu → page 29.

Select and confirm the option shown.



Your service personnel can activate/deactivate caller ID suppression for all phones.

## Step by Step

Room monitor

## Monitoring a room

You can use a phone to monitor a room. This function must be enabled on the monitoring phone.

When you call this phone, you can immediately hear what is happening in that room.

### Activating the telephone to be monitored



Open the Program/Service menu → page 41.

Select and confirm the option shown.

You can either leave the telephone in speakerphone mode or lift the handset and leave it directed towards the noise source.

### Deactivating the telephone to be monitored



Press the lit key. The LED goes out.

**or**



Replace the handset.

### Monitoring the room



Enter the internal station number of the phone located in the room that you wish to monitor.

## Step by Step

### Trace call: identifying anonymous callers (not for U.S.)

You can identify malicious external callers. You can record the caller's phone number during a call or up to 30 seconds after a call. In this case, you should not hang up.



Open the Program/Service menu → page 41.

Trace call

Select and confirm the option shown.



If the trace is successful, the transmitted data is stored by your network operator. Contact your service personnel.

---

## Step by Step

## Locking the telephone to prevent unauthorized use

You can prevent unauthorized parties from using your phone during your absence.

### Locking the phone



Open the idle menu → page 29.

Lock phone

Select and confirm the option shown.

or



Press the key shown.



Enter code (telephone lock) → page 119.

The padlock icon appears on the status bar → page 26.

### Unlocking the phone



Open the idle menu → page 29.

Unlock phone

Select and confirm the option shown.

or



Press the key shown.



Enter code (telephone lock) → page 119.



When the phone is locked, a special dial tone sounds when the handset is lifted. Within the system, users can make calls as normal.

Your phone can also be locked or unlocked by an authorized party → page 118.

## Step by Step

### Locking another telephone to prevent unauthorized use

If configured (contact your service personnel), you can lock and unlock other telephones to prevent unauthorized access.

If a phone user locks his or her phone and forgets the personal lock code, you can use this function to unlock the phone.



Open the Program/Service menu → page 41.

Lock all phones

Confirm.



\*=lock phone

Enter the internal station number of the phone you wish to lock/unlock.

Confirm.

**or**

#=unlock phone

Select and confirm the option shown.

## Step by Step

## Saving your PIN

Enter the lock code to use the functions

- for locking the phone → page 117
- for using another telephone like your own → page 125.

You can change this lock code on your own.



If you forget your code, contact your service personnel to have the default code restored.

The default code is "00000".



Open the Program/Service menu → page 41.

PIN and Authorization →

Select and confirm the option shown.

Change PIN

Select and confirm the option shown.



Enter the current five-digit PIN.  
If you have not yet set a PIN, use "00000" the first time.



Enter the new PIN.



Re-enter the new PIN.

## Step by Step

# More functions/services

## Appointments function

You can program your telephone to send you a timed reminder call.

You must save the relevant time of the call for this. You can enter a single appointment that will take place in the next twenty four hours or you can enter a daily recurring appointment.

### Saving appointments



Open the Program/Service menu → page 41.

Timed reminder on

Select and confirm the option shown.



Enter a 4-digit time such as 0905 for 9.05 (= 9.05 am) or 1430 for 14.30 (= 2.30 pm).

possibly **2**abc or **7**pqrs

If the selected language is "US English" → page 171, you can enter the code 2 for "am" or 7 for "pm" (standard = "am").

one time only

Confirm.

**or**

Daily

Select and confirm the option shown.

Save

Confirm.



Open the Program/Service menu → page 41.

Timed reminder off

Select and confirm the option shown.

Delete

Confirm.  
The reminder is deleted.

**or**

Exit

Select and confirm the option shown.  
The reminder is not deleted.



## Step by Step

Reminder at 1200



or



## Using timed reminders

**Prerequisite:** You have saved a reminder → page 120.  
The saved time arrives.

The phone is ringing. The appointment time is displayed.

Press key twice.

Lift the handset and replace it again.



If you do not answer the timed reminder, it is repeated five times and then deleted.

## Step by Step

### Sending a message

You can send short text messages to individual stations or groups of stations with system telephones.

#### Creating and sending a message



or



Send message

Open the idle menu → page 29.

Open the context menu during a call

select and confirm the option shown.



0=Please callback

Enter the internal station number of the recipient or group.

Select predefined text (can be changed by service personnel) and confirm.

or



Enter the code.

The code is shown on your display with the corresponding message.

or

Enter message text

Select and confirm, for information on how to enter text → page 25.

Send

Confirm.



Transmitted text messages are saved as callback requests on system telephones with no display and on ISDN, pulse or tone dialing telephones.

#### Displaying and deleting messages you have sent

**Prerequisite:** The recipient has not yet accepted a sent message.



Open the idle menu → page 29.

View sent message

Select and confirm the option shown.

Message sent

Confirm.

The text message is displayed.

Delete

Select and confirm the option shown.

The message is deleted.

## Step by Step



**or**

View messages

Message sent

Time/date sent

Call sender

Delete

### Viewing and editing incoming messages

Pay attention to the notes on → page 40.

The LED lights up. Press the key shown.

Confirm.

The sender's caller ID appears on the display.

Confirm.

The text message appears on the display.

### Viewing the transmission time

Confirm.

### Calling the sender

Select and confirm the option shown.

### Deleting messages

Select and confirm the option shown.

## Step by Step

### Leaving an advisory message

You can leave messages/advisory messages on your phone's display for internal callers that wish to contact you in your absence.

When you receive a call, the message appears on the caller's display.



Open the idle menu → page 29.

Advisory msg. on

Select and confirm the option shown.

0=Will return at:

Select predefined text (can be changed by service personnel) and confirm.

or



Enter the code directly.

The code is shown on your display with the corresponding message.



Predefined messages with a colon can be completed by entering a digit.

or

Enter message text

Select and confirm, for information on how to enter text → page 25.

Save

Confirm.

### Deleting advisory messages



Open the idle menu → page 29.

Advisory msg. off

Confirm.

or



The LED lights up if the "Advisory message" key is available → page 89. Press the key shown.

## Step by Step

## Displaying the number of waiting calls/ overload display

You can show the number of external waiting calls on the display by pressing the "View number of calls" key → page 89.



Press the " Calls in Q" key.

If the number of waiting calls exceeds a preset limit while you are engaged in another call (overload), the LED on the key lights up. Contact your service personnel to find out the waiting call limit.



LED off: There are no waiting calls.



- LED is flashing slowly:  
The set limit has been reached.
- LED is flashing quickly:  
The limit has been exceeded (overload).

## Using another telephone like your own for a call

Other parties can temporarily use your phone like their own for an outgoing call.



Open the Program/Service menu → page 41.

PIN and Authorization →

Select and confirm the option shown.

Temporary Phone

Select and confirm the option shown.



Enter the number of the other user.



Enter the other user's lock code → page 112.

**if nec.**

Change PIN

If the other user has not set a PIN, he or she is prompted to do so on his or her phone.



Enter the external phone number.

## Step by Step

### Using a mobile connection at another phone

You can configure a mobile phone connection that was set up especially for you by your service personnel at a OpenStage prepared for this purpose in the system. The original "guest telephone" setting is deactivated. The mobile connection remains available until you log off on the "guest telephone".

Once you have logged on, most of the functions and features (phone number, key assignments, authorizations) of your mobile connection are available.

### Mobility variants

Three Mobility variants are available:

- Basic
- Data Privacy
- Data Mobility

Configuration is performed by the service personnel. In the case of OpenStage 60/80, data backup to a USB memory stick is generally recommended (see → page 188), in order to prevent possible loss of data.

### Basic

When "logging onto" the "guest telephone", the following mobile connection settings are transferred:

- Key assignments
- Authorizations
- Call forwarding

Waiting messages are also signaled (mailbox lamp or MWI).

The phonebook and the caller list for the "guest telephone" are displayed and can be used.

## Step by Step

### Data Privacy

When "logging onto" the "guest telephone", the following mobile connection settings are transferred:

- Key assignments
- Call forwarding
- Authorizations (other than user password)

Waiting messages are also signaled (mailbox lamp or MWI).

The user password is not transferred. For this reason, you must create a new password on the telephone if you wish to use OpenStage Manager, for example. An empty phonebook and an empty caller list are available. The phonebook and the caller list of the "guest telephone" are not displayed. You can load your own phonebook and caller list via the restore function from a USB memory stick (see → page 188). Data modified in the phonebook and caller list is lost on logoff. You should therefore repeat data backup to a USB memory stick before logging off.

### Data Mobility

When "logging onto" the "guest telephone", the following mobile connection settings are transferred:

- Key assignments
- Call forwarding
- Authorizations
- User password
- Phonebook
- Group designation
- Images (phonebook)
- Caller list
- Canonical settings

Waiting messages are also signaled (mailbox lamp or MWI).

The user password, the canonical settings, the group designation, caller list and images for the phonebook are saved to a DLS server for the "guest telephone". The data for the mobile connection is always saved to the DLS server and regularly updated. The saved data for the mobile connection is then transferred from the DLS server to the "guest telephone". The transfer status is shown in the display or can be read from an icon in the status bar (see → page 26).

## Step by Step

### Logging on to the "guest telephone"

Log the mobile connection on to the "guest telephone".

**Prerequisite:** A mobile connection with a separate phone number and a password has been configured for you (contact your service personnel). The key "Mobile Login" is configured on your OpenStage where required.

Press the "Mobile Login" key

or



Enter the code for "Mobile Login (log on)" (see → page 205).

The request "New number." is output.



Enter the "Mobile phone number".

The request "Code for IP number **nnn** (e.g. 834) is output:



Enter the password, then



Press the key shown.

or

Entry complete

Confirm.

The logon procedure begins.

Your mobile phone number will appear, preceded by the mobility icon, on the status bar when you are correctly logged on → page 26.

#### Basic

You can no longer see the original user settings for the "guest telephone", however you can now use your connection, with the exception of your personal phonebook and the call lists.

#### Data Privacy

You can no longer see the original user settings for the "guest telephone", however you can now use your connection, an empty phonebook and an empty caller list.

#### Data Mobility

Your connection and your "Mobility phonebook and caller list" are now available. If you modify your phonebook for example, or its images, these are immediately updated on the server (see status bar → page 26). Changes to the caller list are not saved until logoff.



## Step by Step

### Moving the connection to the next telephone

If you want to move your connection from the first "guest telephone" to a second "guest telephone", log onto the second "guest telephone" in the usual fashion (see → page 128). The following message appears on the first "guest telephone": "Saving data relating to previous user".

Where required, save current changes to the phonebook or caller list and settings beforehand to the USB memory stick (see → page 188).

### Logging off the "guest telephone"

If you no longer need your connection on the "guest telephone" or if you want to switch to another telephone, log off on the "guest telephone". Where required, save current changes to the phonebook or caller list to the USB memory stick (see → page 188).



Press the "Mobile Login" key.

or



Enter the code for "Mobile Login (log off)" (see → page 205).

The logoff procedure begins.

The "guest telephone" is now available again with its original phone number, features and functions.

In the case of the "Data Mobility" variant, the caller list from the "guest telephone" is only now transferred to the DLS server. The "guest telephone" data is restored via the DLS server. It is now available again with its original phone number, features and functions. Any call forwarding instruction set can now be deleted.


If transfer of the caller list is interrupted, for example because the server is temporarily unavailable, you can cancel the procedure completely. A corresponding icon is shown in the status bar → page 26. If the cause of the interruption cannot be resolved, you should cancel the procedure. In this case, an empty caller list is available.

## Step by Step

### Fax details and message on answering machine

If a fax or answering machine is connected to your system and you have assigned the "Fax details" function to a programmable key → page 89, the key lights up when a fax or a message has been received.

#### Deactivating signaling

 Press the flashing "Fax service" key. The LED goes out.

### Resetting services and functions (system-wide cancellation for a telephone)

A general reset procedure is available for initiated functions. The following functions are deleted, if enabled:

- Forwarding on
- Advisory msg. on
- Ringing group on
- Hunt group off
- Suppress call ID
- Call waiting tone off
- Do not disturb on
- Ringer cutoff on
- Received messages:
- View callbacks

 Open the Program/Service menu → page 41.

More features →

Select and confirm the option shown.

Reset services

Select and confirm the option shown.

## Step by Step

## Activating functions for another telephone

If configured (contact your service personnel), you can activate and deactivate the following functions for other phones (associated service):

- Do not disturb,  
code: \*97/#97 → page 114
- Call forwarding,  
code: \*11, \*12, \*13/#1 → page 84
- Lock and unlock phone,  
code \*66/#66 → page 117
- Ringing group,  
code \*81/#81 → page 148
- Leave an advisory message,  
code \*69/#69 → page 122
- Group call,  
code \*85/#85 → page 148
- Reset services and functions,  
code #0 → page 130
- Control relays,  
code \*90/#90 → page 137
- Night answer,  
code \*44/#44 → page 79
- Timed reminders,  
code \*46/#46 → page 120



Open the Program/Service menu → page 41.

Associated serv.

Select and confirm the option shown.



Enter the internal station number of the phone where you wish to activate the function.



Enter code (for example, \*97 for "Do not disturb on").

For any additional input, follow the instructions on your display.

## Step by Step

## Using system functions from outside DISA (direct inward system access)

If configured (contact your service personnel), you can use an external phone like an internal station to set up an outgoing external connection via the system. You can also activate or deactivate the following system functions:

- Reset services and functions, code #0 → page 130
- Call forwarding, code \*1/#1 → page 84
- Lock and unlock phone, code \*66/#66 → page 117
- Save your PIN, code \*93 → page 119
- Send a message, code \*68/#68 → page 122
- Leave an advisory message, code \*69/#69 → page 124
- Ringing group, code \*81/#81 → page 148
- Group call, code \*85/#85 → page 148
- Caller ID suppression, code \*86/#86 → page 114
- Camp-on tone, code \*87/#87 → page 69
- Open door, code \*61 → page 58
- Release door opener, code \*89/#89 → page 59
- Control relays, code \*90/#90 → page 137
- Do not disturb, code \*97/#97 → page 114
- Ringer cutoff, code \*98/#98 → page 113
- Dial using speed dial, code \*7 → page 63
- Associated service, code \*83 → page 131

**Prerequisite:** Your phone supports tone dialing (DTMF) or you can switch your phone to tone dialing. The phone is not connected to the system.



Establish a connection to the system. Enter the station number (contact your service personnel).



Wait for the continuous tone (if necessary, switch phone to tone dialing) and enter the internal number assigned to you and the corresponding PIN.



Enter the code (only required if programmed in the system).

## Step by Step



Wait for the dial tone and enter the code for example, \*97 for Do not disturb on. If necessary, make further entries; refer also to the user guide for dial pulse/DTMF phones.

**or**



Dial the external number.



---

You can only perform one function/establish one outgoing connection at a time.  
The connection is cleared as soon as the function is successfully activated.  
In the case of an external call, the connection is cleared as soon as one of the call partners hangs up.

---

## Step by Step

### Keypad dialing

## Using functions in ISDN via code dialing (keypad dialing)

If authorized (contact your service personnel), you can access ISDN functions in some regions using codes.



Open the Program/Service menu → page 41.

Select and confirm the option shown.



Enter the required trunk number (contact your service personnel).



Entering a code for required ISDN function (contact your service personnel).



Contact your network provider to find out which ISDN functions can be code-operated in your country.

Siemens Enterprise Communications GmbH & Co. KG shall not be liable for damages/ costs which may be incurred by fraudulent activities or remote operation (such as toll fraud).

## Step by Step

## Controlling Connected Computer or Their Programs/Tel. Data Service

If this function has been configured (contact your service personnel), you can control connected computers or programs running on them, such as hotel services or information systems, from your telephone.

If this function has been configured (contact your service personnel), you can control connected computers or programs running on them, such as hotel services or information systems, from your telephone. You have set up a connection.



Open the Program/Service menu → page 41.

Tel. data service

Confirm.

For entering data, you are guided by the connected computer. However, depending on configuration (contact your service personnel), you must activate your entries in one of the following ways:

### Inputs in en-bloc mode



Enter data.



Complete entry.

or

Entry complete

Select and confirm the option shown.

### Inputs in online mode

The connected computer processes your entries directly.



Complete entry.



Enter data.

## Step by Step

### Communicating with PC applications over a CSTA interface


If configured (contact your service personnel), you can use your phone to communicate with PC applications (CSTA = **C**omputer **S**upported **T**elecommunications **A**pplications). You send information to the application and receive information from the application, for example, via your phone display.



Press the "Data I/O" key, key programming → page 89.



Enter the three-digit ID for the application you wish to control.



Use the TouchGuide and the keypad for communication with the application.

#### Temporarily interrupting communication with the application



The phone is ringing. You answer the call.



The LED on the "Data I/O" key flashes: Communication to the application is automatically interrupted.



#### Resuming communication with the application

Press the flashing "Data I/O" key. The LED lights up.

#### Ending communication with the application

Select and confirm the relevant CSTA message.

or



Lift the handset and replace it again.



## Step by Step

## Controlling relays (only for HiPath 3000)

If this function has been configured (contact your service personnel), you can use up to four relays to enable/disable different devices (such as a door opener). Depending on how you program the relays, you can activate and deactivate them manually them or configure them to activate and deactivate automatically (after timeout).



Special features must be taken into consideration if your telephone operates with HiPath 5000 (system networking via PC network) → page 157!

or

Select and confirm the option shown

select and confirm the option shown.

...

Enter the relay.

## Sensors (HiPath 33x0/35x0 only)

If configured (consult your service personnel), sensors are able to recognize signals, call your phone, and display an appropriate message on the screen.

## Step by Step

### Radio paging (not for U.S.)

If radio paging equipment (PSE) is connected to your system (contact your service personnel), you can locate people via their pocket receivers.

Pocket receivers signal a call request to the person you want to page. This person can then answer the page at the nearest phone.

#### Paging persons

To ensure that you can be found, you must have enabled a ringing group → page 148, call forwarding → page 80 or call forwarding-no answer to the internal station number of your PSE.  
A call request is signaled automatically.

#### Answering the page from the nearest telephone



Lift the handset.



Enter the code.



Enter own station number.

## Step by Step

# Making calls in the team/ executive/secretary configuration

If configured (consult your service personnel), you belong to a team of subscribers with multiple lines (multi-line → page 14). Your phone features trunk keys (MULAP keys) → page 140.

## Lines

A distinction is made between primary and secondary lines. Each of these line types can be used on a private or shared basis → page 139.

### Primary line

All multi-line telephones have a primary line. This line can be reached in the usual manner via your public phone number. Incoming calls are signaled on this line.

### Secondary line

The secondary line on your phone is used as a primary line by another subscriber. Your primary line, which is configured on another telephone, simultaneously functions as the secondary line on that telephone.

## Line utilization

### Private line

A line that is used by a single telephone. This line cannot be used as a secondary line by another telephone.

### Shared line

A line that is configured on multiple telephones. The line status (if configured) is displayed for all telephones that share this line. If, for example, a shared line is being used by a telephone, a status message indicating that this line is busy is displayed on all other telephones.

### Direct call line

A line with a direct connection to another telephone.

You can see the status of the line from the LED.

## Step by Step

### Line seizure

Line seizure must be configured (consult your service personnel). If automatic line seizure is configured, a trunk is automatically assigned when you lift the handset or press the trunk key.

### Trunk keys




The programmable sensor keys on multi-line phones function as trunk keys. Every sensor key programmed as a "Trunk key" (key label: Transfer Trk) corresponds to a trunk with the result that you can configure up to nine trunks in OpenStage 80/80 G and up to eight trunks in OpenStage 60/60 G.

As a team member, you can independently program the following functions on sensor keys → page 89:

- Direct station select
- Join/leave group  
(not available on executive phone in an executive/secretary team)
- Ring Transfer: On/Off  
(only in an executive/secretary team)

You can also program a sensor key with the function "Forward Line" (call forwarding) for each line.

### LED displays on trunk keys


LED	Explanation
 Off	- The line is in idle mode.
 Flashing <sup>[1]</sup>	- Incoming call on the line. - Hold reminder is activated. - The line is on "Hold".
 On	- The line is busy.

[1] In this manual, flashing sensor keys are identified by this icon, regardless of the flashing interval. The flashing interval represents different statuses, which are described in detail in the corresponding sections of the manual.

## Step by Step

### Answering calls with the trunk keys

**Prerequisite:** You can see an incoming call on a trunk.

**if nec.**  Press the trunk key that is flashing quickly (only if Prime Line → page 140 is not active).




Lift the handset.

**or**

Speakerphone mode.

### Dialing with trunk keys

**if nec.**  Select a line (only if Prime Line → page 140 is not active).



Enter the station number.



Lift the handset.

**or**

Speakerphone mode.

### Placing a call on hold on a trunk key and retrieving the held call

**Prerequisite:** You are conducting a call via one of your group's trunks. The "Hold" key has been programmed on your telephone → page 89.

#### Hold



Press the "Hold" key.

**if nec.**



**or**



Replace the handset or press the key shown. Depending on the configuration (contact your service personnel), this may be necessary so other team members can also pick up the call on hold.

#### Retrieving the call



Press the trunk key flashing slowly.

### Step by Step

#### Making calls on multiple lines alternately

**Prerequisite:** You are conducting a call via one of your group's trunks. Another trunk key is flashing.



Press the flashing trunk key. The first call party is on hold on the other trunk.



Press the trunk key flashing slowly. The second call party is on hold.

You can switch between lines as often as you wish. Press the trunk key flashing slowly each time.

#### MULAP conference release

If configured (consult your service personnel), you can program a sensor key on your phone with the function "MULAP Privacy Release" → page 89. The default label is "Priv Release".

If you program this key, you do not have to use the menu to set up a conference. Your team partner only has to press the flashing trunk key associated with your trunk on his or her phone to immediately join the conference.



You are conducting a call.



Press the "Priv Release" key. The LED lights up.

Up to three team members can now join the conference.

**Prerequisite:** The trunk on which you are speaking is configured on the other phone as a trunk key.






Press the flashing trunk key.

Step by Step

## Direct station selection key

Your phone features a programmable sensor key configured for direct station selection for every team member.


### Meaning of LED displays on DSS keys


LED	Meaning of function key	
 Off	Team party not on a call.	
 Flashing <sup>[1]</sup>	<p><b>Quickly:</b> I am being called, please accept.</p> <p><b>Slowly:</b> Another party is being called and has not yet answered.</p>	
 On	Team party is on a call or has activated DND.	


[1] In this manual, flashing sensor keys are identified by this icon, regardless of the flashing interval. The flashing interval represents different statuses, which are described in detail in the corresponding sections of the manual.

## Using DSS keys to answer calls


**Prerequisite:** Your telephone rings or the DSS key flashes.


if nec.  Press the flashing DSS key.


 Lift the handset.

or  Press the key shown.

## Calling a team member directly

 Press the DSS key.

or  If the team member you wish to reach is engaged in another call, the DSS key on your telephone is lit. You can still make the call in this case.

 Lift the handset.

or  Speakerphone mode.

## Step by Step

### Transferring a call in progress



Press the DSS key and announce the call if necessary.



Replace the handset.

**or**



Press the key shown.

### Accepting a call for another team member



Press the flashing DSS key or trunk key.



Lift the handset.

**or**

Speakerphone mode.



Step by Step

## Forwarding calls on trunks

You can immediately forward internal or external calls to different internal or external telephones (destinations). (External destinations require special configuration in the system).

Activating call forwarding for one trunk activates the function for all trunk keys assigned to this trunk in your group.



Open the Program/Service menu → page 41.

Destinations →

Confirm.

Forward MULAP on

Select and confirm the option shown.



Press the required line key.

or



Enter the required trunk number.

or



If available. Press the "CFW MULAP" key. (You have programmed a key with the incomplete "CFW MULAP" function, excluding the call forwarding type and destination → page 89.)

1=all calls

Confirm

or

2=external calls only

select and confirm the option shown

or

3=internal calls only

select and confirm the option shown.

or

1 or 2<sub>abc</sub> or 3<sub>def</sub>

Enter the code.



Enter the destination phone number.

Confirm.

or



If available. Press the "CFW MULAP" key. (You have programmed the "CFW MULAP" key with the call forwarding type and destination, → page 89.)

### Step by Step

Forward Line: Off



#### Deactivating call forwarding

Open the Program/Service menu → page 41.

Select and confirm the option shown.



Press the required trunk key.

or



Enter the required trunk number.

or



If available. Press the "CFW MULAP" key.



If you have activated call forwarding for a trunk, a special dial tone sounds when the line is seized.

#### Understanding the LED displays on the sensor key for "CFW MULAP"



The LED on the "CFW MULAP" key is off - call forwarding is not active for this trunk.



The LED on the "CFW MULAP" key lights up - call forwarding is active for this trunk.



The LED on the "CFW MULAP" key is flashing **slowly**, the trunk is the call forwarding destination.

Step by Step

## Transferring calls directly to the executive phone

Normally, all calls for the executive are audibly signaled only by the secretary phone.

You can set audible signaling so calls are signaled only by the executive phone or by a second phone assigned to it.

**Prerequisite:** On your phone there is a sensor key programmed with the function "Ring Transfer". The default label is "Ring xfer".



This function is only available for the executive/secretary configuration.

### Activating



Press the "Ring xfer" key. The LED lights up.

or



Open the Program/Service menu → page 41.

Ring Transfer: On

Select and confirm the option shown.



Press the required trunk key.

or



Enter the required trunk number.

### Deactivating



Press the "Ring xfer" key. The LED goes out.

or



Open the Program/Service menu → page 41.

Ring Transfer: Off

Select and confirm the option shown.



Press the required trunk key.

or



Enter the required trunk number.

## Step by Step

## Using team functions

If configured (consult your service personnel), your telephone is part of a team. The team consists of internal phones that are able to use certain functions.

### Activating/deactivating a group call

If configured (consult your service personnel), you belong to one or more groups of stations, which can be reached via hunt group or group call station numbers. Incoming calls are signaled one after the other (= hunt group) or simultaneously (= group call) on all phones in the group, until a group member answers the call. You can also belong to a team (including executive/secretary configurations) in which station numbers are programmed on trunk keys → page 139.

Every group member can still be reached at his or her personal phone number.

You can activate and deactivate the audible signal for a hunt group, group call or individual trunks in a group (including executive/secretary).

If the LED on a programmed "Hunt group" key is illuminated → page 89, this means that the audible tone was activated for at least one group.



This function is not available for the executive phone in team/executive/secretary configurations.



Special features must be taken into consideration if your telephone operates with HiPath 5000 (system networking via PC network) → page 153!



Open the idle menu → page 29.

Leave group


Select and confirm the option shown<sup>[1]</sup>.

or

Join group

Select and confirm the option shown.

or



Press the "Hunt group" key.

[1] "Differing display view in a HiPath 4000 environment" → page 193

## Step by Step

**You belong to multiple groups or to one group with trunk keys (including executive/secretary configuration).**

Leave group

Open the idle menu → page 29.

Select and confirm the option shown<sup>[1]</sup>,

or

Join group

select and confirm the option shown.

 or 

Press the "Hunt group" key.

301 X Group name

If an "X" appears between group/trunk number (such as 301) and group name, the audible tone is active for this group or trunk.

or

301 Group name

No "X" means that the audible tone is deactivated.

Next

Confirm. The next group/trunk number is displayed with a group name.

or

Leave group

Select and confirm the option shown<sup>[1]</sup>.  
The audible tone for the group/trunk displayed is deactivated.

or

Join group

Select and confirm the option shown<sup>[1]</sup>.  
The audible tone for the group/trunk displayed is activated.

or

#=Leave all groups

Select and confirm the option shown<sup>[1]</sup>.  
The audible tone for all groups and trunks is deactivated.

or

\*=Rejoin all groups

Select and confirm the option shown<sup>[1]</sup>.  
The audible tone for all groups and trunks is activated.

If you have activated the audible tone for another group/trunk or deactivated the audible tone for all groups/trunks you belong to, you will hear a special dial tone when you lift the handset.

<sup>[1]</sup> "Differing display view in a HiPath 4000 environment" → page 193

## Step by Step

Pickup - group

Destinations →

Ringing group on

Ringing group off

## Accepting a call for another member of your team


You can use your own telephone to accept calls for other telephones in your team, even while engaged in an ongoing call. To do this, contact your service personnel to find out if a pickup group has been configured.

**Prerequisite:** Your telephone rings briefly. "Call for:" appears on the upper display line with the station number/name of the originator; the station number/name of the caller appears on the lower line.

Select and confirm the option shown.

## Ringing group

You can have calls for your telephone signaled audibly at up to five other internal phones. The phone that answers the call first receives the call.

 Special features must be taken into consideration if your telephone operates with HiPath 5000 (system networking via PC network) → page 156!


## Saving, displaying, and deleting telephones for the ringing group

Open the Program/Service menu → page 41.

Confirm.

Select and confirm the option shown.

Follow the display prompts (enter the internal station number).

 If your phone belongs to a ringing group, your display will show the station number or the name of the originator on the upper line and that of the caller on the lower line.

## Removing all telephones in a call ringing group

Open the idle menu → page 29.

Select and confirm the option shown.

## Step by Step

## Uniform Call Distribution (UCD)

If configured (consult your service personnel), you may belong to a group of stations (agents), to which calls are distributed.

An incoming call is always assigned to the agent idle the longest.

### Logging on and off at the beginning and end of your shift



Open the Program/Service menu → page 41.

Destinations →

Confirm.

UCD →

Select and confirm the option shown.

Log on

Confirm

**or**

Log off

select and confirm the option shown.



To log on, enter your identification number ("Agent:"). Contact your service personnel to find out what it is.

### Logging on and off during your shift



Open the Program/Service menu → page 41.

Destinations →

Confirm.

UCD →

Select and confirm the option shown.

Not available

Confirm

**or**

Available

select and confirm the option shown.

## Step by Step

### Requesting and activating a work time

You can request/activate work time to ensure you have enough time to wrap up the last call. Your phone is excluded from call distribution for a set period or until you log back on.



Open the Program/Service menu → page 41.

Destinations →

Confirm.

UCD →

Select and confirm the option shown.

Work on

Confirm

**or**

Work off

select and confirm the option shown.

### Turning the night service on and off for UCD



Open the Program/Service menu → page 41.

Destinations →

Confirm.

UCD →

Select and confirm the option shown.

UCD night on

Confirm

**or**

UCD night off

select and confirm the option shown.

### Display the number of waiting calls



Open the Program/Service menu → page 41.

Destinations →

Confirm.

UCD →

Select and confirm the option shown.

Calls in queue

Confirm.



## Step by Step

## Special functions in the LAN

If your telephone is operating in a HiPath 5000 environment, multiple HiPath 2000/HiPath 3000/HiPath OpenOffice EE systems are interconnected via a LAN (Local Area Network, such as a proprietary PC network). You are conducting a call via the LAN (PC network).

In this instance, you must note certain particularities for some functions. These are described in this section.

 HiPath OpenOffice ME can not be operated in a HiPath 5000 environment.

### Leaving hunt group/group call

**Prerequisite:** You are part of a hunt group/group call → page 148 in another HiPath 2000/HiPath 3000/HiPath OpenOffice EE.



Open the idle menu → page 29.

DISA intern

Select and confirm the option shown.



Enter the (DISA) station number of the other HiPath 2000/HiPath 3000/HiPath OpenOffice EE.

OK or



Confirm your entry.



Enter the (DISA) station number of your phone.

OK or



Confirm your entry.

Leave group

Confirm

or

Join group

select and confirm the option shown.

**You belong to multiple groups associated with another HiPath 2000/HiPath 3000/HiPath OpenOffice EE**



Enter group number for "directed joining/leaving".

## Step by Step

### Setting up "follow me" call forwarding

You can activate/deactivate call forwarding HiPath 5000 for your phone from other phones in the → page 84 environment.




Open the idle menu → page 29.

DISA intern

Select and confirm the option shown.




(DISA) station number of your HiPath 2000/HiPath 3000/HiPath OpenOffice EE.



Confirm your entry.



Enter the (DISA) station number of your phone.



Confirm your entry.

#### Activating



Open the idle menu → page 29

Forwarding on

Select and confirm the option shown.

1=all calls

Confirm

or

2=external calls only

select and confirm the option shown

or

3=internal calls only

select and confirm the option shown.



Enter the destination phone number.

Save

Confirm.

#### Deactivating



Open the idle menu → page 29.

Forwarding off

Select and confirm the option shown.

## Step by Step

## Using night answer

If authorized (contact your service personnel), you can set telephones in other HiPath 2000/HiPath 3000/HiPath OpenOffice EE communications platforms as the night answer → page 79.



Open the idle menu → page 29.

DISA intern

Select and confirm the option shown.



Enter the (DISA) station number of the HiPath 2000/HiPath 3000/HiPath OpenOffice EE where the night answer phone is connected.



or



Confirm your entry.



Enter the (DISA) station number of the phone you are using to activate/deactivate night answer.



or



Confirm your entry.

### Activating



Open the idle menu → page 29.

Night answer on

Select and confirm the option shown.



Enter the destination number (= temporary night answer service).

Save

Select and confirm the option shown.

### Deactivating



Open the idle menu → page 29.

Night answer off

Select and confirm the option shown.

## Step by Step

### Ringling group

You can have calls for your telephone signaled audibly at external telephones or at telephones in other HiPath 2000/HiPath 3000/HiPath OpenOffice EE communications platforms → page 148.

#### Saving, displaying, and deleting telephones for the ringing group



Open the Program/Service menu → page 41.

Destinations →

Confirm.

Ringling group on

Select and confirm the option shown.

Add to ringing group

Confirm

**or**

Add another station

select and confirm the option shown

**or**

Display/remove

select and confirm, then follow the operating instructions.



Enter the station number.

Entry complete

Confirm.

Save

Confirm.

Exit

Select and confirm the option shown.

#### Removing all telephones in a call ringing group



Open the idle menu → page 29.

Ringling group off

Select and confirm the option shown.

## Step by Step

## Controlling relays (only for HiPath 3000)

If this feature is configured (contact your service personnel), you can also control relays → page 137 in other HiPath 3000 communications platforms.




Open the idle menu → page 29.

DISA intern

Select and confirm the option shown.




Enter the (DISA) station number of the HiPath 3000 where you wish to control the relay.



Confirm your entry.



Enter the (DISA) station number of the phone you wish to use to control the relay.



Confirm your entry.

Control Relay On

Confirm

or

Control Relay Off

select and confirm the option shown.



Enter the relay.

## Step by Step

### Opening a door

If configured (contact your service personnel), you can also activate the door opener → page 58 in other HiPath 2000/HiPath 3000/HiPath OpenOffice EE communications platforms.




Open the idle menu → page 29.

DISA intern

Select and confirm the option shown.



Enter the (DISA) station number of the HiPath 2000/HiPath 3000/HiPath OpenOffice EE where you wish to control the relay.



Confirm your entry.



Enter the (DISA) station number of the phone you wish to use to control the relay.



Confirm your entry.

Open door

Select and confirm the option shown.



Dial the entrance telephone number.

## Step by Step

## Individual phone configuration

### Adjusting display settings

#### Adjusting the display to a comfortable reading angle

You can swivel the display unit. Adjust the display unit so that you can clearly read the screen.

#### Screensaver

Activate a screensaver for the telephone idle state.



You can also configure this setting via the Web interface → page 196.

#### Activating the screensaver

**Prerequisite:** Your service personnel have loaded pictures to the OpenStage.



Press the key shown until the "Settings" tab is active.

Confirm.

if nec.



Enter and confirm the user password.

Select and confirm the option shown.

Select and confirm the option shown.

Select the "Enabled" entry.

The phone displays the current setting.

Confirm.

Select and confirm the option shown in the context menu.



Select the "Options" entry.

Select and confirm the option shown.

or



Press the key shown.

Confirm.

### Step by Step

#### Automatic screensaver activation

Set how long OpenStage should be idle before the screensaver automatically activates.



You can also configure this setting via the Web interface → page 196.



Press the key shown until the "Settings" tab is active.

User

Confirm.

**if nec.**

Enter and confirm the user password.

Phone

Select and confirm the option shown.

Screensaver

Select and confirm the option shown.

Inactivity delay (mins)

Select

30

Confirm<sup>[1]</sup>.

**or**

20

Select and confirm the value you want in the context menu.



Select the "Options" entry.

Save & exit

Select and confirm the option shown.

**or**



Press the key shown.

Save

Confirm.

[1] The phone displays the current setting.



## Step by Step

**Screensaver fade-in time**

Set the speed at which the screensaver images change here (5 - 60 seconds).



Press the key shown until the "Settings" tab is active.

User

Confirm.

**if nec.**



Enter and confirm the user password.

Phone

Select and confirm the option shown.

Screensaver

Select and confirm the option shown.

Select the "Transition delay (secs)" entry.

10 →

The phone displays the current setting.

Confirm.

15

Select and confirm the value you want in the context menu.



Select the "Options" entry.

Save & exit

Select and confirm the option shown.

**or**



Press the key shown.


Save

Confirm.

## Step by Step

### Color scheme

Select your preferred appearance for the menu display here.

 For sample display themes, see → page 26.



You can also configure this setting via the Web interface → page 196.



Press the key shown until the "Settings" tab is active.

User

Confirm.

**if nec.** 

Enter and confirm the user password.

Phone

Select and confirm the option shown.

Display

Select and confirm the option shown.

Crystal Sea →

Select the "Set skin" entry.

The phone displays the current setting.  
Confirm.

Warm Grey

Select and confirm the option shown in the context menu.



Select the "Options" entry.

Save & exit

Select and confirm the option shown.

**or**



Press the key shown.

Save

Confirm.

## Step by Step

## Lamp brightness for TouchSlider

Adjust the brightness of the TouchSlider → page 19 by choosing one of the six settings available.



You can also configure this setting via the Web interface → page 196.



Press the key shown until the "Settings" tab is active.

User

Confirm.

if nec.



Enter and confirm the user password.

Phone

Select and confirm the option shown.

Display

Select and confirm the option shown.

Select the "Slider brightness" entry.

Confirm.



Setting contrast.



Confirm.



Select the "Options" entry.

Save & exit

Select and confirm the option shown.

or



Press the key shown.

Save

Confirm.

## Step by Step

### Set the sensitivity of the TouchGuide



Press the key shown until the "Settings" tab is active.

User

Select and confirm the option shown.

**if nec.**

Enter and confirm the user password.

Phone


Select and confirm the option shown.

TouchGuide

Select and confirm the option shown.

Touchguide setting

Select the option shown.



Confirm.



By sliding

**or**



by pressing you can choose one of four levels for the sensitivity.



Confirm.

Save & exit

Select and confirm the option shown.

## Step by Step

## Contrast for the OpenStage Key Module

If you have connected an OpenStage Key Module, you can adjust the key label contrast to suit your ambient lighting.



You can also configure this setting via the Web interface → page 196.



Press the key shown until the "Settings" tab is active.  
Confirm.

if nec.



Enter and confirm the user password.

Select and confirm the option shown.

Select and confirm the option shown.

Select the "Sidecar contrast" entry.

Confirm.



Setting contrast.



Confirm.



Select the "Options" entry.

Select and confirm the option shown.



Press the key shown.


Confirm.

## Step by Step

### Adjusting audio settings

Optimize the audio settings on your OpenStage for your environment and according to your personal requirements.

#### Volumes

 Use the TouchSlider to adjust the current volume settings → page 19.

You can preset different volumes for the following microphones and signals in eight levels:

- Loudspeaker
- Ringer
- Handset
- Headset
- Handsfree
- Rollover
- Warning tone

 Press the key shown until the "Settings" tab is active.

User

Confirm.

**if nec.** 

Enter and confirm the user password.

Audio

Select and confirm the option shown.

Volumes

Select and confirm the option shown.

Select the entry you want (e.g. "Ringer").

Confirm.



Set volume.



While setting the volume, you will hear corresponding audio feedback.



Confirm.



Select the "Options" entry.

Save & exit

Select and confirm the option shown.

**or**



Press the key shown.

Save

Confirm.

## Step by Step

## Room character

Configuring the appropriate acoustic settings for your environment:

- Normal
- Echoing
- Muffled



You can also configure this setting via the Web interface → page 196.



Press the key shown until the "Settings" tab is active. Confirm.

if nec.



Enter and confirm the user password.

Select and confirm the option shown.

Select and confirm the option shown.

Select the "Room character" entry.

The phone displays the current setting. Confirm.

Select and confirm the required setting (e.g. "Echoing").



Select the "Options" entry.

Select and confirm the option shown.

or



Press the key shown.

Confirm.

## Step by Step

### Setting headset port use

Here you set whether you are using a wired or cordless DECT headset.



You can also configure this setting via the Web interface → page 196.



Press the key shown until the "Settings" tab is active.

User

Confirm.

**if nec.**



Enter and confirm the user password.

Audio

Select and confirm the option shown.

Settings

Select and confirm the option shown.

Headset port

Select

Wired headset

From the following setting<sup>[1]</sup> select and confirm the option shown in the context menu.

- Wired headset
- Wireless headset
- Conference phone



Select the "Options" entry.

Save & exit

Select and confirm the option shown.

**or**



Press the key shown.

Save

Confirm.

[1] The phone displays the current setting.



## Step by Step

## Ringtone

Select your preferred ringtone from the available audio files. To upload your own files in ".mp3" or ".wav" format, please contact your service personnel.



You can also configure this setting via the Web interface → page 196.



Press the key shown until the "Settings" tab is active.

User

Confirm.

if nec.



Enter and confirm the user password.

Audio

Select and confirm the option shown.

Settings

Select and confirm the option shown.

Select the "Ringer file" entry.

xxx.mp3 →

The phone displays the current setting.  
Confirm.

xxx.mp3

Select and confirm the required file in the context menu. You will immediately hear the associated ringer melody. Confirm the selected ringtone file.



Select the "Options" entry.

Save & exit

Select and confirm the option shown.

or



Press the key shown.

Save

Confirm.

Select your preferred ringtone from the available audio files. To upload your own files in ".mp3" or ".wav" format, please contact your service personnel.



You can also configure this setting via the Web interface → page 196.



Press the key shown until the "Settings" tab is active.

User

Confirm.

### Step by Step

if nec. 

Audio

Select and confirm the option shown.

Settings

Select the "Ringer file" entry.

No audio file →

The phone displays the current setting.  
Confirm.

if nec.

Play tone

Select and confirm the option shown.



The current melody is played back.

xxx.mp3 →

The phone displays the current setting.  
Confirm.

xxx.mp3

Select and confirm the required file in the context menu.



Select the "Options" entry.

Save & exit

Select and confirm the option shown.

or



Press the key shown.

Save

Confirm.

### Activating/deactivating the ringer

You can see whether the function is activated or deactivated from the corresponding icon in the status bar on the display → page 26.



Hold down the key shown.

### Adjusting the volume during a call



You are conducting a call.



Set the volume using the TouchSlider → page 19.

## Step by Step

## En-bloc dialing

If "en-bloc dialing" is activated, you can delete characters with the return key and re-enter them when entering a number. The connection is only set up when you have confirmed "Dial".



You can also configure this setting via the Web interface → page 195.



Press the key shown until the "Settings" tab is active.  
Confirm.

User

if nec.

Enter and confirm the user password.

Configuration

Select and confirm the option shown.

Outgoing calls

Select and confirm the option shown.

Deactivated →

Select the "en-bloc dialing" entry.

The current setting is shown on the display.

Activated →

Select and confirm the option shown in the context menu.

Save &amp; exit

Select and confirm the option shown.

or

Press the key shown.

Save

Confirm.

## Language for system functions



Open the Program/Service menu → page 41.

More features →

Select and confirm the option shown.

Select language

Confirm.

Spanish

Select the language you wish to use (such as "Spanish") and press the "OK" dialog key to confirm.

## Step by Step

### Configuring Bluetooth



Bluetooth is only available on OpenStage 60/60 G/80/80 G when the function is activated by your service personnel.

You can use the following description to prepare your OpenStage 60/60 G/80/80 G for Bluetooth connection with another Bluetooth device.

For a brief explanation of function and key terms, see → page 184.

For sample applications, see → page 185.

### Bluetooth settings



You can also configure this setting via the Web interface → page 196.



Press the key shown until the "Settings" tab is active.

User

Confirm.

if nec.

Enter and confirm the user password.

Configuration

Select and confirm the option shown.

Bluetooth

Select and confirm the option shown.

Configuration

Select and confirm the option shown.

The "Bluetooth settings" page opens.

### Activating/deactivating Bluetooth

**Prerequisite:** The "Bluetooth settings" page opens → page 172.

Select the "Active" entry.

No →

The phone displays the current setting.  
Confirm.

Yes

Confirm the option shown in the context menu.

## Step by Step

No →

Yes

OpenStage (08:0...

if nec. ↶



No →

No

or

Prompt

**Discoverability**

Set whether your OpenStage should be discoverable for other Bluetooth devices.

For more information, see → page 184.

**Prerequisite:** The "Bluetooth settings" page opens → page 172.

Select the "Discoverable" entry.

The phone displays the current setting.  
Confirm.

Confirm the option shown in the context menu.

**Bluetooth name**

Here you can determine which name your OpenStage should use to register at other Bluetooth devices.



By factory default, the Bluetooth name is: OpenStage [MAC address of your telephone].

**Prerequisite:** The "Bluetooth settings" page opens → page 172.

Select the "Phone name" entry.  
The phone displays the current setting.  
Confirm.

Delete preconfigured setting.

Specify and confirm the required name.

**Linking**

Select how the linking should be implemented here.  
For more information, see → page 184.

**Prerequisite:** The "Bluetooth settings" page opens → page 172.

Select the "Pairing mode" entry.  
The phone displays the current setting.  
Confirm.

Select and confirm the option shown in the context menu

select and confirm the option shown

### Step by Step

or

Automatic

select and confirm the option shown.

#### PIN

The PIN contains at least four alphanumeric characters.

**Prerequisite:** The "Bluetooth settings" page opens  
→ page 172.

Select the "Pairing password" entry.

The phone displays the current setting.  
Confirm.

\*\*\*\*

if nec. ↩

Delete current entry.



Enter and confirm the PIN.



Select the "Options" entry.

Save & exit

Select and confirm the option shown.

or




Press the key shown.

Save

Confirm.

### Connecting/disconnecting a Bluetooth device

**Prerequisite:** The linking manager list contains entries  
→ page 175.

 XYZ →

Select and confirm the required device.

Connect

Select and confirm the option shown in the context menu

or

Disconnect

select and confirm the option shown.

## Step by Step

## Managing Bluetooth devices

### Linking manager list

Once you have scanned the area for Bluetooth-enabled devices, you can link your OpenStage to another device → page 184. Once linked, these devices are added to the list.

### Black list

Once you have scanned the area for Bluetooth-enabled devices, you can add Bluetooth-enabled devices that you do not wish to connect to your OpenStage to this list.

You cannot establish connections via Bluetooth with devices in this list, until they have been deleted from the list.

### Create list/scan area



Press the key shown until the "Settings" tab is active.

User

Select and confirm the option shown.

if nec.



Enter and confirm the user password.

Configuration

Select and confirm the option shown.

Bluetooth

Select and confirm the option shown.

Paired devices

Select and confirm the option shown.

or

Blacklist

Select and confirm the option shown.

Options →

Confirm.

Add device

Select and confirm the option shown in the context menu.

The search starts automatically.

You receive a list of all Bluetooth devices in the area.

XYZ →

Select and confirm the required device.

## Step by Step



### Only for the linking manager list

Enter and confirm the agreed PIN → page 174.

If the linking request is confirmed on the corresponding Bluetooth device and the password entered, the link is performed and the device is permanently entered in the list.

### Open the list

**Prerequisite:** The linking manager list or the black list contains entries → page 175.



Press the key shown until the "Settings" tab is active.

User

Select and confirm the option shown.

if nec.



Enter and confirm the user password.

Configuration

Select and confirm the option shown.

Bluetooth

Select and confirm the option shown.

Paired devices

Select and confirm the option shown.

or

Blacklist

Select and confirm the option shown.

### Delete all entries from the list.

Options →

Confirm.

Delete all

Select and confirm the option shown in the context menu.

Delete

Confirm.



## Step by Step

**Changing an entry name**

A Bluetooth device is entered in the list with the name set in the device. This is often the device type. You can change this name.

Open the required list → page 176.

Select and confirm the required device.



Select and confirm the option shown in the context menu.



if nec. ↶

Delete preconfigured setting.



Enter and confirm the new name.


**Deleting a specific entry from a list**

Open the required list → page 176.


Select and confirm the required device.



Select and confirm the option shown in the context menu.



Confirm.



## Step by Step

### Tone and indication with an unsecured voice connection

The pop-up menu which indicates an unsecured voice connection can be switched on and off with this option (→ page 111).

**Prerequisite:** The service personnel has activated the notification about unencrypted connections for this phone.



Press the key shown until the "Settings" tab is active.

User

Confirm.

**if nec.**

Enter and confirm the user password.

Configuration

Select and confirm the option shown.

Connected calls

Select and confirm the option shown.

Secure call alert

Select and confirm the option shown.

Yes

Select and confirm the option shown in the context menu.



Select the "Options" entry.

Save & exit

Select and confirm the option shown.

**or**



Press the key shown.

Save

Confirm.

## Step by Step

## Context menu

Here you can define whether context menus  
→ page 31 should close automatically, and define the display duration.

## Closing automatically



You can also configure this setting via the Web interface  
→ page 196.



Press the key shown until the "Settings" tab is active.

User

Confirm.

**if nec.**



Enter and confirm the user password.

Configuration

Select and confirm the option shown.

Context menu

Select and confirm the option shown.

Select the "Auto hide allowed" entry.

No →

The phone displays the current setting.  
Confirm.

Yes

Select and confirm the option shown in the context menu.



Select the "Options" entry.

Save & exit

Select and confirm the option shown.

**or**



Press the key shown.

Save

Confirm.

## Step by Step

### Setting the automatic display duration

Here you can define how long context menus should remain open.



You can also configure this setting via the Web interface → page 196.



Press the key shown until the "Settings" tab is active.

User

Confirm.

**if nec.**

Enter and confirm the user password.

Configuration

Select and confirm the option shown.

Context menu

Select and confirm the option shown.

10 →

Select the "Auto hide time" entry.

The phone displays the current setting.  
Confirm.

20

Select and confirm the value you want in the context menu.



Select the "Options" entry.

Save & exit

Select and confirm the option shown.

**or**



Press the key shown.

Save

Confirm.

## Step by Step

## Displaying network information

Here you will find the information you need to access the Web interface → page 194.

You will also find real-time information on network activity which could be important for debugging by the administrator.



Press the key shown until the "Settings" tab is active.

Confirm.

**if nec.** 

Enter and confirm the user password.

Select and confirm the option shown.

"IP address" entry:

IP address or name of the phone<sup>[1]</sup>.

"Phone Web Page" entry:

Address for accessing the Web interface<sup>[1]</sup>.

"Domain" entry:

Phone domain in the network environment<sup>[1]</sup>.



Information about additional parameters can be obtained from your service personnel or the administration manual.

[1] The displayed information is an example.

## Step by Step

### Resetting user data

The following user-specific settings changed via the phone menu or the Web interface can be reset to factory settings.

- Display settings
- Screensaver



Personal images for the screensaver are deleted and deleted default images are restored (administration e.g. using the OpenStage Manager).

- Audio settings
  - Volumes
  - Settings



Personal ringtone files are deleted and deleted default ringtone files are restored (administration e.g. using the OpenStage Manager).

- Configuration
  - Context menu
- Bluetooth
  - Configuration and Listen
- Phonebook
  - All entries are deleted
- Call lists
  - All entries are deleted

**Attention:** All listed data are reset without a warning tone. If necessary back up your data on a USB memory stick (→ page 188).



Press the key shown until the "Settings" tab is active.

User

Confirm.

if nec.

Enter and confirm the user password.

Reset

Select and confirm the option shown.

All data

Select and confirm the option shown in the context menu. The user data listed above is reset to factory settings.

## Step by Step

## Phone test

To check the functionality of your phone, you can open the device test. One after another the LEDs of the function keys, the display and the ringtone are tested.

**Prerequisite:** The phone is in idle mode → page 29.



Open the Program/Service menu → page 41.

Phone test

Select and confirm the option shown.

### Step by Step

## Bluetooth

Bluetooth is an open standard for high-performance technology and allows wireless communication between PCs, PDAs, mobile telephones, etc.

In contrast to infrared connections, Bluetooth does not require a visual contact for communication purposes and can be used over distances of up to 10 meters.

To exchange data between Bluetooth-enabled devices, the devices need to undergo a once-off discovery procedure.



For information on how to configure OpenStage for connection to a Bluetooth device  
→ page 172.

---

## Discoverability

When first enabling a connection to a Bluetooth device, this function must be switched on → page 173.

The OpenStage is discoverable for other Bluetooth devices by default.

To prevent unauthorized access, we recommend deactivating discoverability once you have enabled the connection to a new Bluetooth device.



A connection is established for devices that are already connected even if the "Discoverable" function is deactivated.

---

## Linking

Linking is the process used by two Bluetooth-enabled devices to "see" one another and to "recognize" that they can exchange data. It is therefore used for checking the access authorization of a Bluetooth device in a Bluetooth network. To do this, a 128 Bit linking key is created for subsequent identification.



Linking is only performed the first time contact is established between a Bluetooth device and your OpenStage. If the Bluetooth device is successfully linked, no further access authorization checks are necessary. Instead, each subsequent check uses the previously created connection key.

---



## Step by Step

## Transferring contacts

The Bluetooth function on your OpenStage allows you to transfer contacts in **vCard format** (file extension: .vcf) from other Bluetooth devices to your OpenStage and save them in the phonebook. You can also send phonebook entries as vCards to other Bluetooth-enabled devices.



Due to the diverse range of PCs, mobile telephones and PDA devices currently available, we are unable to provide universal instructions on how to transfer vCard files in this manual.

The instructions for data transfer via Bluetooth provided in the relevant manufacturer documentation should be observed.

## Receiving a vCard

**Prerequisite:** The Bluetooth connection is configured between your OpenStage and one other device → page 172. A vCard file is saved on the other device.

Launch the data transfer wizard for Bluetooth and follow the instructions.

Once the vCARD is transferred, a message confirming the successful transfer is displayed on your OpenStage.

Confirm.

Confirm.

The data is added automatically to the phonebook → page 98.

## Step by Step

### Sending a vCard

**Prerequisite:** The Bluetooth connection is configured between your OpenStage and one other device → page 172. A vCard file is saved on the OpenStage.

In the phonebook (→ page 98), select the entry you wish to send.



Press the key until the "Personal" tab is active.

Niels, Bohr →

Select a phonebook entry.



Open the context menu.

Send

Select and confirm the option shown.

The "Send vCard via Bluetooth" page is displayed.

Paired devices →

Select and confirm the option shown.

XYZ →

Select and confirm the option shown in the context menu for device.

or

#### Sending to an unconnected device

Options →

Select and confirm the option shown.

Search

Select and confirm the option shown in the context menu.

A search is started and detected devices listed.

XYZ →

Select and confirm the relevant device in the list.

The vCard is sent.

Perform the necessary steps on the destination device to save the vCard data.

Detected devices are then deleted from the list.

## Step by Step

## Using a Bluetooth headset

You can use any commercial Bluetooth headset with your OpenStage 60/60 G/80/80 G.

Prepare your Bluetooth headset for connection with your OpenStage by following the instructions in the relevant user manual.

Proceed as following to prepare your OpenStage:

- Activate the Bluetooth function → page 172.
- Enter the headset in the linking list<sup>[1]</sup> → page 175.
- Establish the Bluetooth connection → page 174.

## Testing a Bluetooth headset

**Prerequisite:** OpenStage and the Bluetooth headset are connected (see procedure above).



Press the key shown.



You hear the on-hook signal.



Enter the station number.

The connection is established as soon as your input is complete.

**if nec.** 

Set the call volume.



Make sure your headset port is set up properly  
→ page 168.

[1] only necessary the first time

## Step by Step

# Data backup to USB memory stick

You can save your OpenStage 60/60 G/80/80 G user settings and personal phonebook entries as files on a USB memory stick and download (restore) all or, where applicable, selected data to your or another OpenStage 60/60 G/80/80 G.

Every backup is given a separate name and is password-protected. Setting the password encrypts the content of the backup. Data can only be restored after entering the password set.

### Backup scope

- Entries and referenced data (e.g. image) from the personal phonebook → page 36
- Call list entries → page 38
- User menu settings → page 41
- Screensavers → page 159
- Photos
- Ringtones
- Call forwarding instructions with default destinations → page 80



The settings must be enabled for your phone.

### Connecting a USB memory stick

Use a USB extension cable to connect the USB memory stick to the USB master port on the underside of the phone → page 16. The following message appears briefly.




New USB detected

The phone returns to idle mode after a few seconds and you can start to back up/restore your data → page 189, → page 190.

The following steps are only necessary if you respond to the pop-up menu before the automatic timeout.

Confirm.

if nec. 

Enter and confirm the user password.

You can remove the USB memory stick by simply pulling it out.

Backup/Restore

## Step by Step

## Saving user data

**Prerequisite:** The USB memory stick is correctly plugged in → page 188.



Press the key shown until the "Settings" tab is active.

Confirm.

if nec.



Enter and confirm the user password.

Select and confirm the option shown.

Select and confirm the option shown.

Confirm.

Select and confirm the option shown in the context menu.



Select and confirm the entry "Backup name".



Enter and confirm a name for the backup.

or

### Replacing an existing backup

Select and confirm the required phone number.

Select and confirm the option shown in the context menu.



Select and confirm the entry "Backup password".



Enter a password.



Select and confirm the entry "Confirm password".



Re-enter the password.

Select and confirm the option shown.

You can follow the transfer status on the display. A confirmation message appears in a pop-up window when the transfer operation is complete.

## Step by Step

### Restoring user data

#### Selecting a backup

**Prerequisite:** The USB memory stick is correctly plugged in → page 188 and you have created at least one data backup → page 189.



Press the key shown until the "Settings" tab is active.

User

Confirm.

if nec.

Enter and confirm the user password.

Phone

Select and confirm the option shown.

Backup/Restore

Select and confirm the option shown.

17.08.07 14:42 3770 →

Select and confirm the backup you want.

#### Restoring all user data

This operation overwrites all current user settings → page 188 - irrespective of the status set → page 191 - with the selected backup.



This can result in the loss of settings made since the last backup.

Restore

Confirm the option shown in the context menu.

The "Restore {1}:" page is displayed.



Select and confirm the entry "Backup password".



Enter the password set during the backup.

Restore all →

Select and confirm the option shown to start the data transfer.

## Step by Step

## Restoring selected user data

This operation only overwrites data in "Restore" status with the selected backup.

**Prerequisite:** You have selected a backup and opened the context menu → page 190.

Restore

Confirm the option shown in the context menu.

Ignore →

The "Restore {1}:" page is displayed.

Select an entry, such as "Phone book":

Restore →

The phone displays the current setting. Confirm.

Select and confirm the option shown in the context menu to replace the phonebook data with the data back-up.

Set or check the status for all other options:

- "Call logs" (for call lists)
- "Menu data" (for the user menu, incl. call forwarding)
- "Screensaver images"
- "All clip images"
- "All ringer tones"
- "All midlet data"<sup>[1]</sup>



Select and confirm the entry "Backup password".



Enter the password set during the backup.

Restore selected →

Select and confirm the option shown to start the data transfer.

You can follow the transfer status on the display. A confirmation message appears in a pop-up window when the transfer operation is complete.

[1] No midlets available yet.

## Step by Step

Full ID

Delete

Delete

### Checking backups

Check which backups are stored on the USB memory stick.

**Prerequisite:** You have selected a backup and opened the context menu → page 190.

Select and confirm the option shown in the context menu.

The available information is indicated in a pop-up message.

### Deleting backups

You can delete invalid or old backups on your USB memory stick.

**Prerequisite:** You have selected a backup and opened the context menu → page 190.

Select and confirm the option shown in the context menu.

A security prompt is displayed:

Confirm.

Backup deletion is the responsibility of the user and is therefore not password-protected.



## Differing display view in a HiPath 4000 environment

Depending on the system configuration, some functions may not always be offered in the display as described in this document.

In addition, display texts may differ from those described in this document according to the system configuration.

The following table provides an overview:

<b>HiPath 2000/ HiPath 3000/ HiPath OpenOffice display</b>	<b>HiPath 4000 display</b>	<b>Description</b>
In/Out of hunt group	All hunt groups on/off	→ page 148
Call wait.term.?	Camp-on termination?	→ page 69
Call wait.term.off?	Camp-on deact.?	→ page 69
Join/leave group	Hunt group on/off?	→ page 148
Change Speed Dial	Speed dial?	→ page 63
View callbacks	Show callback destinations?	→ page 55

# Web interface

You can configure a number of settings for your phone via the Web interface. Communication is via a secure HTTPS connection.

## User Pages

All entries in the Web interface user menu can also be found in your phone's user menu → page 41.



Before you make changes via the Web interface, please study the button functions → page 195. If necessary, go to the page references next to the menu entries on → page 196 to view descriptions of the corresponding parameters.

---

## Administrator Pages


This area lets you configure settings for administering your phone and the network environment. Access to the Administrator Pages is protected by the admin password. For more information, contact your service personnel or refer to the administration manual.

# Configuring settings on the User Pages


## Calling up the Web interface

Open a Web browser on a LAN-based PC and enter the address provided in the "Phone Web Page" entry in the "Network information" → page 181 menu.

Example: `https://192.168.1.22/`  
or `https://[name of the phone]`

 You will be prompted to configure a user password the first time you call up the Web interface → page 112. You must log on with this password in future every time you want to open the User Pages.

Example: Home page with expanded user menu:

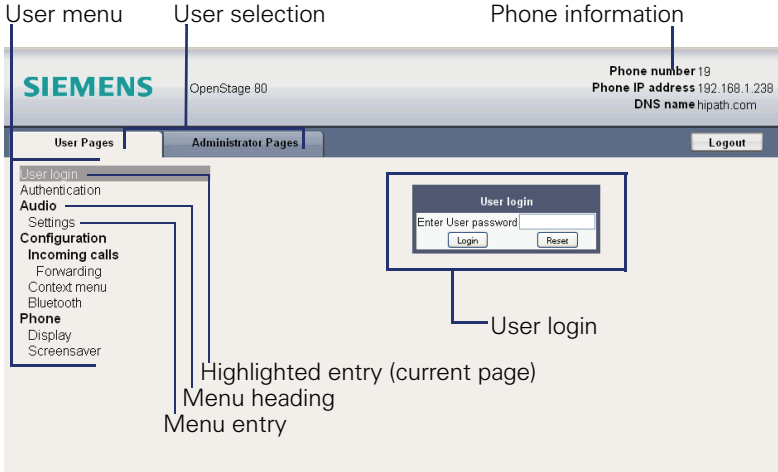


The screenshot shows the Siemens OpenStage 80 web interface. At the top, there is a header with the Siemens logo, the model name 'OpenStage 80', and phone information: 'Phone number 19', 'Phone IP address 192.168.1.238', and 'DNS name hpath.com'. Below the header is a navigation bar with 'User Pages', 'Administrator Pages', and 'Logout' buttons. The 'User Pages' menu is expanded, showing a list of options: 'User login', 'Authentication', 'Audio', 'Settings', 'Configuration', 'Incoming calls', 'Phone', 'Display', and 'Screensaver'. A 'User login' dialog box is also visible, containing the text 'Enter User password', a 'Login' button, and a 'Reset' button. Labels with lines pointing to the interface identify 'User menu', 'User selection', 'Phone information', 'Highlighted entry (current page)', 'Menu heading', and 'Menu entry'.

1. Click a menu heading to display the individual menu entries. Click the menu heading again to close the menu.
2. Click a menu entry to open the corresponding Web page.
3. Make the desired changes.
4. Click the corresponding button → page 195 to save or discard your changes.

### Button functions

- "Login": Log on to the phone after you have entered the user password
- "Submit": Apply changes
- "Reset": Reset original values
- "Refresh": Update values (for example, under "Bluetooth" - "Last connected device")
- "Logout": Log off the phone



## Overview of the Web interface user menu

 Before you make changes via the Web interface, please study the button functions → page 195. If necessary, go to the page references next to the menu entries below to view descriptions of the corresponding parameters.









User login  → page 112

Authentication  → page 112


### Audio

- Settings
  - Ring file  → page 169
  - Room Character  → page 167
  - Headset port → page 168

### Configuration

- Outgoing calls
  - Block dialing → page 171
- **Incoming calls**
  - Forwarding  → page 80
  - Forwarding Favorites → page 83
- Context menu
  - Auto hide time (sec.)  → page 180
  - Auto hide allowed  → page 179
- Bluetooth
  - Bluetooth device address<sup>[1]</sup>
  - Phone name  → page 173
  - Status<sup>[1]</sup>
  - Active  → page 172
  - Discoverable  → page 173
  - Pairing mode  → page 173
  - PIN for pairing  → page 174
  - Last connected device<sup>[1]</sup>
    - Device address
    - Device name
    - Device class

### Phone

- Display
  - Levels
    - Slider brightness  → page 163
    - Sidecar contrast  → page 165
  - Miscellaneous
    - Display theme  → page 162
- Screensaver
  - Screensaver enabled  → page 159
  - Start (minutes)
  - Transition delay  → page 161

[1] Information - read only

## Step by Step

## Fixing problems

## Responding to error messages on the screen

Invalid entry

**Possible cause:**

Station number is incorrect.

**Possible reaction:**

Enter correct station number.

Not authorized

**Possible cause:**

Locked function selected.

**Possible reaction:**

Apply to service personnel for authorization for relevant function.

Currently not possible

**Possible cause:**

Dialed a non-existent station number. Called phone is unplugged.

**Possible reaction:**

Enter correct station number. Call this station again later.

Invalid station number

**Possible cause:**

Dialed your own station number.

**Possible reaction:**

Enter correct station number.

Key memory is full

**Possible cause:**

The system currently has no free space for external station numbers.

**Possible reaction:**

Try again later.

### Step by Step

Key affects other layer

#### **Possible cause 1:**

If "Clear other layer" appears on the menu: you tried to program a function or internal station number with LED on a key that is already programmed on the second layer (for example, external station number).

#### **Possible reaction:**

Confirm "Clear other layer" to save the station number/function.

#### **Possible cause 2:**

If "Clear LED support" appears on the menu: you tried to program a station number without LED display or an external station number on a key that already is already programmed with an internal phone number with LED display.

#### **Possible reaction:**

Confirm "Clear LED support" to save the station number. The existing internal station number remains on the other layer without LED display.

### **Contact partner in the case of problems**

Contact your service personnel if a fault persists for more than five minutes, for example.

## Step by Step

## Troubleshooting

**Pressed key does not respond:**

Check if the key is stuck.

**Telephone does not ring:**

Check whether the "Do not disturb" function is activated on your telephone ("Do not disturb" appears on the screen → page 26). If so, deactivate it.

**You cannot dial an external number:**

Check whether your telephone is locked ("Not authorized" appears on the screen). If the phone is locked, enter your PIN to unlock it → page 117.

**To correct any other problems:**

First contact the relevant service personnel. If the service personnel are unable to correct the problem, they must contact Customer Service.

## Caring for your telephone

- Never allow the telephone to come into contact with coloring, oily or aggressive agents.
- Always use a damp or antistatic cloth to clean the telephone. Never use a dry cloth.
- If the telephone is very dirty, clean it with a diluted neutral cleaner containing surfactants, such as a dish detergent. Afterwards remove all traces of the cleaner with a damp cloth (using water only).
- Never use aggressive or alcohol-based cleansers on plastic parts. The use of scouring agents is also forbidden.

# Index

## A

Agents .....	151
Answering machine .....	130
Application tab .....	26
Applications .....	33
activating an application .....	33
opening the context menu .....	33
selecting an application tab .....	33
selecting an entry .....	33
Audio controls .....	19
Automatic line seizure .....	49

## B

Basic .....	128
Bluetooth .....	172, 184
Busy	
forwarding calls .....	81

## C

Call	
accepting .....	45
accepting, group .....	150
distributing .....	151
ending .....	50
forwarding .....	84
forwarding in a team .....	145
holding .....	71
in a team with trunk keys .....	141
incoming .....	45
parking .....	70
pickup, directed .....	56
retrieving from park .....	70, 71
transferring .....	53, 144
Call charges	
for another telephone .....	108
for your telephone .....	108

Call duration .....	108
Call forwarding	
express activation .....	84
MSN in CO .....	88
Call forwarding key .....	81
Call forwarding type .....	81
Call forwarding, activating	
call forwarding key .....	84
Program/Service menu .....	84
Call forwarding, deactivating	
call forwarding key .....	85
Call lists .....	38, 104
Call logs	
copying into phonebook .....	107
Call volume .....	170
Call waiting	
accepting .....	68
allowing .....	69
preventing .....	69
preventing and allowing .....	69
Call waiting (camp-on)	
tone off .....	69
Call waiting on/off .....	69
Call waiting tone on/off .....	69
Callback .....	54
Calling a second party .....	52
Calls in queue .....	125, 151
CE marking .....	2
Charges	
for another telephone .....	108
for your telephone .....	108
Code dialing in ISDN .....	134
Conference .....	52
Connection options .....	16
Consultation .....	52
Contact	
display format .....	101
Context menus .....	29
Control relays .....	137



**D**

Data Mobility .....	127, 128, 129
Data Privacy .....	127
Debugging .....	181
Details, fax .....	130
Dial keypad .....	15
Dialing	
internal/external calls .....	48
on-hook dialing .....	49
with DDS keys .....	50
with speed dialing .....	63
Dialing aid	
S0 bus .....	67
Direct inward system access (DISA) ....	132
Direct station select .....	91
DISA .....	132
Display angle .....	159
Display design .....	162
Display icons .....	210
application tab .....	32
call status .....	34
message icons .....	30
phonebook entries .....	35
status bar .....	26
Display settings	
idle mode for display .....	160
Display view for	
HiPath 4000 environment .....	193
Displaying network information .....	181
Distributing calls .....	151
Do not disturb .....	114

**F**

Favorite for call forwarding, setting .....	83
Fax details .....	130
Fixed call forwarding .....	81
Forwarding	
MSN in CO .....	88
multiple subscriber number (MSN) ....	88
Forwarding all calls .....	81
Forwarding destination .....	82
Forwarding external calls .....	81
Forwarding internal calls .....	81

Forwarding MSN in CO .....	88
Forwarding type .....	81
Free keys	
programming .....	89
Function keys .....	15, 19
Functions	
using from the outside .....	132

**G**

General information .....	12
Graphic display .....	26
call lists .....	38, 39
icon indicating call status .....	34
messages .....	40
phonebook icons .....	35
Graphic display settings	
idle mode for graphic display .....	160
Group call .....	148

**H**

Handsfree answerback .....	57
Headset .....	49, 56
Help function .....	43
HiPath 5000	
opening a door .....	158
relays .....	157
Hold .....	71
Hotline delayed .....	66
Hunt group .....	148

**I**

Icons .....	210
application tab .....	32
call status .....	34
message icons .....	30
phonebook entries .....	35
status bar .....	26
Important information .....	3
Indication	
active call forwarding .....	80
IP telephony .....	153
IP-Address, WBM URL .....	181

**K**

Key modules .....	18
Keypad .....	25
Keypad dialing .....	134
Keys	
programming .....	89
saving incomplete .....	89

**L**

LAN telephony .....	153
LDAP .....	104
quick search .....	105
LED	
trunk keys .....	140
LED display	
direct station selection keys .....	23
function keys .....	23
LED displays, understanding .....	91
direct station selection key .....	143
forward line .....	146
Line seizure, automatic .....	49
Line utilization .....	139
Lists (for phone numbers and contacts) .....	98
Location of the telephone .....	3
Locking/unlocking .....	117

**M**

Menu "User" .....	41
Mobile phone number,	
guest telephone .....	126
Mobility .....	126
Mobility variants .....	126
Mode keys .....	15, 20
MULAP keys, trunk keys .....	139
Multi-line telephone .....	14
Multiple subscriber number (MSN)	
forwarding .....	88

**N**

No reply	
forwarding calls .....	81
Number	
saving .....	95

**O**

Open listening .....	47
OpenStage Key Module .....	18
Operating instructions .....	2
Overload .....	125

**P**

Parking a call .....	70
Personal identification number .....	119
Phone number directories .....	98
Phone settings .....	159
Phonebook .....	35
LDAP .....	37, 104
local phonebook .....	36
changing contact data .....	100
group administration .....	102
new contact .....	98
saving a picture .....	99
voice recognition .....	103
system phonebook .....	37
Pickup (call) .....	56, 150
PIN .....	119
for a telephone .....	117
PIN, saving .....	119
Placing a call on hold	
in the team .....	141
Pop-up menu .....	30, 34
Pop-up window .....	31
Primary line .....	139
Privacy .....	111
Private line .....	139
Programmable sensor keys .....	23
Programming a sensor key	
with a function .....	89
Programming free keys .....	89

**Q**

Quick search	
LDAP .....	105

**R**

Recall .....	76
Receiving volume .....	170
Relays .....	137
Ring transfer	
in an executive/secretary team .....	147
Ringer cutoff .....	113
Ringer off .....	113
Ringling group .....	150

**S**

Safety precautions .....	2
Screensaver .....	159
Search contacts .....	35
Second call	
accepting .....	68
Secondary line .....	139
Secure Call .....	13, 111
connection status .....	111
notification .....	111
Secure connection .....	13, 111
Security .....	111
Sensors .....	137
Set headset port .....	168
Settings .....	159
Shared line .....	139
Single-line telephone .....	14
Speakerphone distance .....	3
Speakerphone mode .....	46, 47
Special dial tone .....	114
Speed-dialing	
dialing .....	63
suffix-dialing .....	63
system .....	63
Station number for call forwarding .....	82
Status icons .....	26
Suffix-dialing	
automatic .....	63
System speed-dialing .....	63

**T**

Tel. data service .....	135
Telephone	
locking .....	117
locking/unlocking .....	117
Telephone maintenance .....	199
Text input (via the display keyboard) .....	27
Theme .....	162
Three-party conference .....	52
Timed reminder .....	120
Timed reminder, answering .....	121
Toggle/Connect .....	52
TouchGuide .....	15, 21
TouchSlider .....	19
Trace call .....	116
Transfer (call) .....	53, 144
Troubleshooting .....	199
Trunk keys .....	140

**U**

UCD .....	151
Unencrypted call .....	111
Unsecured connection .....	13, 111
USB memory stick .....	126
backup scope .....	188
checking backups .....	192
connecting .....	188
deleting backups .....	192
removing .....	188
USB stick .....	127
User data	
restoring .....	190
restoring all data .....	190
restoring selected data .....	191
saving .....	188, 189
User interface	
OpenStage 60/60 G/80/80 G .....	15
User menu .....	41, 196
User password .....	112
User support .....	12
Using Ethernet switches .....	17
Using network ports more efficiently .....	17

**V**



Variable call forwarding ..... 81  
Voice encryption ..... 13, 111  
    connection status ..... 111  
    notification ..... 111



**W**

Waiting calls ..... 125

## Overview of functions and codes



The following table lists all available functions, as shown on the display. If configured (contact your service personnel), functions can be activated interactively (select + confirm), via the Program/Service menu (select + confirm or enter a code) or with function keys.

Functions (=display)	... Interactively	... Via the Program/Service menu → page 41	... With a key
		 Code	
Account code		✓	*60 X
Advisory msg. on	✓	✓	*69 X
Advisory msg. off	✓	✓	#69 X
Associated dial		✓	*67 X
Associated serv.		✓	*83 X
Call waiting	✓	✓	*55 X
Waiting tone off	✓	✓	*87 X
Waiting tone on	✓	✓	#87 X
Call wait.term.on		✓	*490 X
Call wait.trm.off		✓	#490 X
Callback	✓	✓	*58 X
View callbacks/Delete	✓	✓	#58
Conference	✓	✓	*3 X
Start conference	✓		
Add party	✓		
End conference	✓	✓	#3
Remove party	✓	✓	
Drop last conf. party			*491
Consultation	✓		X
Return to held call	✓	✓	*0
Quit and return	✓	✓	*0
Transfer/Accept call	✓		
Control Relay On (only for HiPath 3000)		✓	*90 X
Control Relay Off (only for HiPath 3000)		✓	#90 X



Functions (=display)	... Interac- tively	... Via the Program/Service menu → page 41	... With a key
		 Code	
Data I/O Service			*494 X
Directory			
1=internal	✓		*54 X
2=LDAP	✓		*54 X
DISA			
DISA intern	✓	✓	*47 X
Discreet Call			*945
DND on	✓	✓	*97 X
DND off	✓	✓	#97 X
Door opener on		✓	*89 X
Door opener off		✓	#89 X
DTMF dialing		✓	*53 X
Forwarding on	✓	✓	*1 X
1=all calls	✓	✓	*11 X
2=external calls only	✓	✓	*12 X
3=internal calls only	✓	✓	*13 X
Forwarding off	✓	✓	#1 X
CFNR on		✓	*495 X
CFNR off		✓	#495 X
Trunk FWD on	✓	✓	*64 X
Trunk FWD off	✓	✓	#64 X
Forward Line: On		✓	*501 X
Forward Line: Off		✓	#501 X
Headset			X
Answer (a call)	✓		
HF answerback on	✓	✓	*96 X
HF answerback off	✓	✓	#96 X
Hotline			

Functions (=display)	... Interac- tively	... Via the Program/Service menu → page 41	Code	... With a key
				
Join group	✓	✓	*85	X
Leave group	✓	✓	#85	X
In hunt group	✓	✓	*85*	X
Out of hunt group	✓	✓	#85#	X
Keypad dialing		✓	*503	
Lock all phones		✓	*943	X
Lock phone	✓	✓	*66	X
Unlock phone	✓	✓	#66	X
Change PIN		✓	*93	
Mobile Login				✓
Mute on			*52	X
Mute off			#52	X
Night answer on	✓	✓	*44	X
Night answer off	✓	✓	#44	X
Open door		✓	*61	X
Override	✓	✓	*62	X
Page				
Answer page (not for U.S.)		✓	*59	
Park a call		✓	*56	X
Retrieve call		✓	#56	
Phone test		✓	*940	
Pickup - directed		✓	*59	X
Pickup - group	✓	✓	*57	X
Accept call	✓			
Prog. feature key		✓	*91	X
Recording				X
Redial	✓			
Reject calls	✓			
Release				X
Reserve trunk	✓			X
Reset services		✓	#0	X



























## Overview of functions and codes






Functions (=display)	... Interactively	... Via the Program/Service menu → page 41		... With a key
			Code	
Retrieve line		✓	*63	X
Ring Transfer: On		✓	*502	X
Ring Transfer: Off		✓	#502	X
Ringer cutoff on	✓	✓	*98	X
Ringer cutoff off	✓	✓	#98	X
Ringling group on		✓	*81	X
Ringling group off		✓	#81	X
Room monitor		✓	*88	X
Select language		✓	*48	
Send message	✓	✓	*68	X
View sent message	✓	✓	#68	X
View messages	✓	✓	#68	X
Mailbox				X
Shift Key				X
Show call charges (own telephone)		✓	*65	X
View call charges (other party's telephone)				X
Speaker call		✓	*80	X
Suppress call ID	✓	✓	*86	X
Restore caller ID	✓	✓	#86	X
Tel. data service		✓	*42	
Temporary MSN (not for U.S.)	✓	✓	*41	X
Temporary Phone		✓	*508	X
Timed reminder on		✓	*46	X
Timed reminder off		✓	#46	X
Toggle/Connect	✓	✓	*2	X
Trace call		✓	*84	X
Transfer	✓			
Trunk flash		✓	*51	X



Functions (=display)	... Interac- tively	... Via the Program/Service menu → page 41	... With a key	
			Code	
UCD				
Log on		✓	*401	X
Log off		✓	#401	X
Available		✓	*402	X
Not available		✓	#402	X
Work on		✓	*403	X
Work off		✓	#403	X
UCD night on		✓	*404	X
UCD night off		✓	#404	X
Calls in queue		✓	*405	X
Use speed dialing		✓	*7	X
Change Speed Dial (individual)		✓	*92	X

# Display icons

<b>Application tab</b>	
	Telephony interface → page 34
	Phonebooks → page 35
	Call lists → page 38
	Messages → page 40
	Menu → page 41
	Help function → page 43
<b>Status bar</b>	
	The ringtone is deactivated → page 113
	Operating data is sent to the server → page 44
	The "Do not disturb" function is activated → page 114
	The phone lock is activated → page 117
	The Bluetooth function is activated → page 172
	A mobility user is logged on to the phone → page 126
	Save the user data when logged off → page 129
	The data for the new user is retrieved → page 128
	Saving user changes → page 128
	Error during transfer via DLS server → page 128
	Transfer of caller list is aborted → page 129
<b>Messages</b>	
	You have received one or more new messages
	One or more new entries have been added to the call lists
	Call forwarding is active
<b>Connection status</b>	
	The call is active
	The call has been disconnected
	You have placed the call on hold (e.g. consultation hold)
	Your call partner has placed the call on hold
	You are conducting a call via a secure connection
	You are conducting a call via an unsecured connection

<b>Phonebook entries</b>	
	Primary business number
	Secondary business number
	Mobile phone number
	Private phone number
	The phone number is not saved in the personal phonebook

## Communication for the open minded

**Siemens Enterprise Communications**  
[www.siemens.com/open](http://www.siemens.com/open)

Copyright © Siemens Enterprise  
Communications GmbH & Co. KG  
Hofmannstr. 51  
80200 München  
Deutschland

Siemens Enterprise  
Communications GmbH & Co. KG  
is a Trademark Licensee of Siemens AG

Reference No:  
A31003-S2000-U109-7-7619

The information provided in this document contains merely general descriptions or characteristics of performance which in case of actual use do not always apply as described or which may change as a result of further development of the products.

An obligation to provide the respective characteristics shall only exist if expressly agreed in the terms of contract. Availability and technical specifications are subject to change without notice. OpenScape, OpenStage and HiPath are registered trademarks of Siemens Enterprise Communications GmbH & Co. KG. All other company, brand, product and service names are trademarks or registered trademarks of their respective holders.