

# Gigaset

## SL780 - SL785



Issued by  
Gigaset Communications GmbH  
Schlavenhorst 66, D-46395 Bocholt  
Gigaset Communications GmbH is a trademark licensee of Siemens AG

© Gigaset Communications GmbH 2008  
All rights reserved.  
Subject to availability. Rights of modifications reserved.

[www.gigaset.com](http://www.gigaset.com)

**SIEMENS**

## Brief overview



- 1 **Display** in idle status
- 2 **Battery charge status** (→ page 17)
- 3 **Display keys** (→ page 20)



- 4 **Message key** (→ page 37)  
Access to calls and message lists;  
Flashes: new message or new call
- 5 **End call key, On/Off key**  
End call, cancel function, go back one menu level (press briefly), back to idle status (press and hold), activate/deactivate handset (press and hold in idle status)
- 6 **Hash key**  
Keypad lock on/off (press and hold in idle status);  
toggles between upper/lower case and digits
- 7 **Call-by-call list key** (→ page 32)  
Open call-by-call list
- 8 **Charging socket**
- 9 **Microphone**
- 10 **Flash key**  
- Consultation call (flash)  
- Insert a dialling pause (press and hold)
- 11 **Star key**  
Ring tone on/off (press and hold);  
with an open connection: switch between dial pulsing/touch tone dialling (press briefly);  
Text input: Open table of special characters
- 12 **Key 1**  
Dial answering machine (SL785 only)/  
Network mailbox (press and hold)
- 13 **Talk key**  
Accept a call; open last number redial list (press briefly); start dialling (press and hold)  
When writing an SMS: send SMS
- 14 **Handsfree key**  
Switch between earpiece and handsfree mode;  
Lights up: handsfree activated;  
Flashes: incoming call
- 15 **Control key** (→ page 19)
- 16 **Signal strength** (→ page 17)
- 17 **Answering machine symbol** (SL785 only)  
Answering machine switched on;  
Flashes: Answering machine is recording a message or is being operated by another internal party

### Gigaset service contact numbers:

For personal advice on our range of products and for repairs or guarantee/warranty claims call:

Service Centre UK:     08453 6708 12  
                                  (local call cost charge)

Please have your proof of purchase ready when calling.

## Brief overview

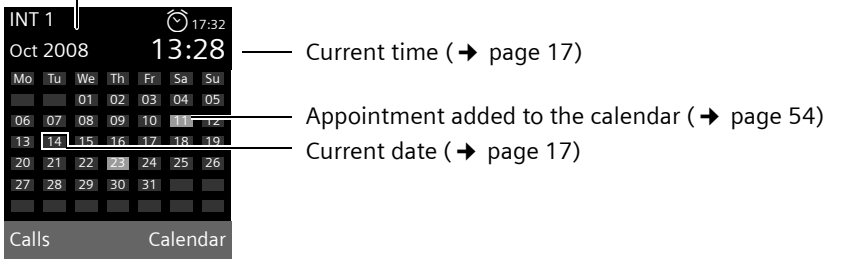

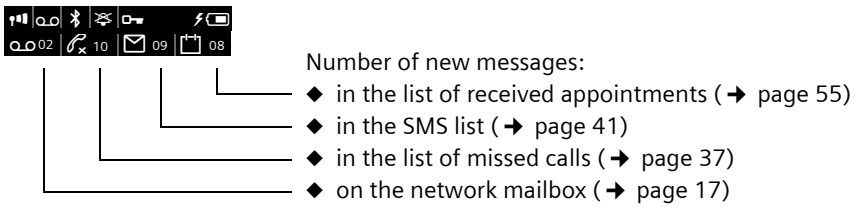
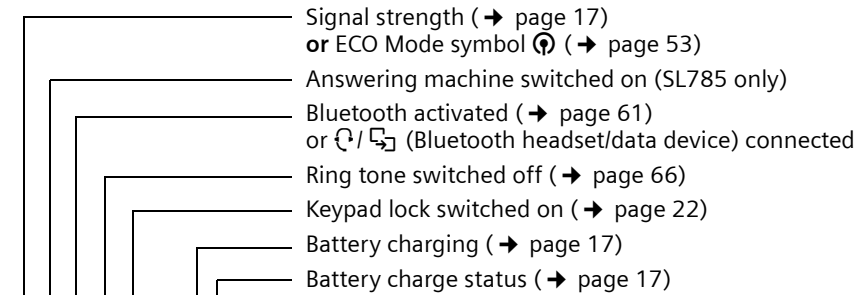
### Base station



Registration/  
Paging key  
( → page 56)

# Display symbols

The following symbols are displayed independently from the settings and the operating status of your telephone:




## Signalling

External call ( → page 28)



Alarm clock ( → page 56)



Internal call ( → page 57)



Appointment ( → page 54) / Anniversary ( → page 35)



Answering machine is recording ( → page 47)



# Contents

---

<b>Brief overview</b> .....	<b>1</b>
<b>Safety precautions</b> .....	<b>7</b>
<b>Gigaset SL780/SL785 – more than just a telephone</b> .....	<b>8</b>
<b>First steps</b> .....	<b>9</b>
Check the pack contents .....	9
Connecting the base station .....	10
Installing the base station and charging cradle .....	11
Setting up the handset for use .....	12
Setting the date and time .....	15
Connecting the USB data cable .....	17
What would you like to do next? .....	18
<b>Using the phone</b> .....	<b>19</b>
Control key .....	19
Display keys .....	20
Keys on the keypad .....	20
Correcting incorrect entries .....	20
Menu guidance .....	21
Activating/deactivating the handset .....	22
Activating/deactivating the keypad lock .....	22
Illustration of operating steps in the user guide .....	23
<b>Menu tree</b> .....	<b>25</b>
<b>Making calls</b> .....	<b>28</b>
Making an external call .....	28
Ending a call .....	28
Accepting a call .....	28
Calling Line Identification .....	28
Handsfree talking .....	29
Switch to mute .....	29
<b>Making calls using network services</b> .....	<b>30</b>
Calling Line Identification .....	30
Ringback .....	30
Call waiting during an external call .....	30
Call divert (CD) .....	31
Consultation call, toggling .....	31
<b>Using the directory and lists</b> .....	<b>32</b>
Directory/call-by-call list .....	32
Last number redial list .....	36
Incoming SMS message list .....	36
Answering machine list (Gigaset SL785 only) .....	36

Call lists	36
Opening lists with the message key	37
<b>Making cost-effective calls</b>	<b>38</b>
Linking call-by-call numbers with one number	38
Automatic network provider code (preselection)	38
<b>SMS (text messages)</b>	<b>40</b>
Writing/sending an SMS	40
Receiving an SMS	41
SMS with vCard	43
Notification by SMS	43
SMS mailboxes	43
Setting SMS centres	44
SMS on a PABX	45
Activating/deactivating first ring tone muting	45
Activating/deactivating SMS function	45
SMS troubleshooting	46
<b>Operating the answering machine of the Gigaset SL785 base station</b>	<b>47</b>
Operation via the handset	47
Activating/deactivating call screening	50
Setting the recording parameters	50
Resetting fast access for the answering machine using key 1	50
Operating when on the move (remote operation)	51
<b>Using the network mailbox</b>	<b>52</b>
Configuring fast access for the network mailbox	52
Viewing the network mailbox message	52
<b>ECO DECT</b>	<b>53</b>
<b>Setting an appointment (calendar)</b>	<b>54</b>
Displaying missed appointments, anniversaries	55
<b>Setting the alarm clock</b>	<b>56</b>
<b>Using several handsets</b>	<b>56</b>
Registering handsets	56
De-registering handsets	57
Locating a handset ("paging")	57
Changing the base station	57
Making internal calls	57
Listening in to an external call	58
Changing the name of a handset	59
Changing a handset's internal number	59
<b>Using a handset as a room monitor</b>	<b>59</b>
<b>Using Bluetooth devices</b>	<b>61</b>

<b>Handset settings</b> .....	<b>63</b>
Quick access to functions and numbers .....	63
Changing the display language .....	64
Setting the display .....	64
Activating/deactivating auto answer .....	64
Changing the handsfree/earpiece volume .....	65
Changing ring tones .....	65
Activating/deactivating advisory tones .....	66
Setting your own area code .....	67
Restoring the handset default settings .....	67
<b>Base station settings</b> .....	<b>68</b>
Protecting against unauthorised access .....	68
Activating/deactivating music on hold .....	68
Repeater support .....	68
Restoring the base station to the factory settings .....	68
<b>Connecting the base station to the PABX</b> .....	<b>69</b>
Dialling modes and recall .....	69
Saving an access code (outside line code) .....	69
Setting pauses .....	69
Switching temporarily to touch tone dialling (DTMF) .....	70
<b>Service (Customer Care)</b> .....	<b>71</b>
Questions and answers .....	71
Authorisation .....	72
Guarantee Certificate United Kingdom .....	73
<b>Environment</b> .....	<b>74</b>
<b>Appendix</b> .....	<b>75</b>
Care .....	75
Contact with liquid .....	75
Specifications .....	75
Writing and editing text .....	76
<b>Additional functions via the PC interface</b> .....	<b>77</b>
<b>Mounting the base station to the wall</b> .....	<b>80</b>
<b>Index</b> .....	<b>81</b>

# Safety precautions

## Warning

Read the safety precautions and the user guide before use.

Explain their content and the potential hazards associated with using the telephone to your children.



Only use the mains adapter supplied, as indicated on the underside of the base station.



Only use the **recommended, rechargeable batteries** (→ page 75) as this could otherwise result in significant health risks and personal injury.



The operation of medical appliances may be affected. Be aware of the technical conditions in your particular environment, e.g. doctor's surgery.



Do not hold the rear of the handset to your ear when it is ringing or when the handsfree function is activated. Otherwise you risk serious and permanent damage to your hearing.

The handset may cause an unpleasant humming noise in hearing aids.



Do not install the base station or charging cradle in bathrooms or shower rooms. The base station and charging cradle are not splashproof (→ page 75).



Do not use your phone in environments with a potential explosion hazard (e.g. paint shops).



If you give your Gigaset to someone else, make sure you also give them the user guide.



Please remove faulty base stations from use or have them repaired by our Service, as they could interfere with other wireless services.

## Please note

Not all of the functions described in this user guide are available in all countries.



## Gigaset SL780/SL785 – more than just a telephone

---

Your telephone sets new standards for the way you communicate at home.

The configuration and user interface of the cordless phone are unique, providing you with first-class voice quality in handsfree mode, while the various ports (Bluetooth, USB) offer you high flexibility.

The large TFT display, user-friendly keypad and clearly laid out menu are very simple to use.

It can do a whole lot more:

- ◆ You can use Bluetooth™ for wireless communication with other devices (e.g. headsets) that also use this technology.
- ◆ Synchronise your address books on your telephone, mobile phone and PC with Bluetooth™ or via the USB port using the Gigaset QuickSync software.
- ◆ You can save appointments and anniversaries in your phone and it will remind you of them in advance.
- ◆ You can designate important people as VIPs so you can identify important calls from the ring tone.
- ◆ If you do not wish to be disturbed, you can simply set up a time control so that your phone will only ring when it is convenient. VIP calls will still be connected.
- ◆ You can programme the keys of your phone with important numbers or frequently used functions. The number is then dialled or the function started by simply pressing a key.
- ◆ Gigaset Green Home – Be environmentally aware when using your phone. For more information, see [www.gigaset.com/customercare](http://www.gigaset.com/customercare).

You can find additional information on your telephone at [www.gigaset.com/gigasetSL78H](http://www.gigaset.com/gigasetSL78H).

**Have fun using your new phone!**

# First steps

---

## Check the pack contents



- 1** one Gigaset SL780/SL785 base station
- 2** one base station cover stand
- 3** one mains adapter for the base station
- 4** one Gigaset SL78H handset
- 5** one battery
- 6** one battery cover
- 7** one belt clip
- 8** one charging cradle with mains adapter
- 9** one phone cord
- 10** one user guide
- 11** USB data cable
- 12** CD-ROM (Driver for USB data cable)

## Connecting the base station

- ▶ Connect the mains adapter **1** and phone jack **2** to the base station and place the cables in the cable recesses.



- ▶ Place the cover in the notches on the back of the base station and click into place (**not if mounting on the wall**).

- ▶ **First** connect the mains adapter **3**.
- ▶ **Then** connect the phone jack **4**.



### Please note:

- ◆ The mains adapter must **always be connected**, as the phone will not operate without mains connection.
- ◆ Only use the mains adapter and phone cord **supplied**. Pin connections on telephone cables can vary (pin connections → page 76).

## Installing the base station and charging cradle

The base station and charging cradle are designed for use in enclosed dry rooms with a temperature range of +5°C to +45°C.

- ▶ Install the base station on a level, non-slip surface in a central location in your house or flat or mount the base station on the wall → page 80.

### Please note

Pay attention to the range of the base station. This is up to 300 m in unobstructed outdoor areas and up to 50 m inside buildings. The range is reduced when Eco Mode ( → page 53) is activated.

The phone's feet do not usually leave any marks on surfaces. However, due to the multitude of different varnishes and polishes used on today's furnishings, the occurrence of marks on the surfaces cannot be completely ruled out.

### Please note:

- ◆ Never expose the telephone to the influence of heat sources, direct sunlight or other electrical devices.
- ◆ Protect your Gigaset from moisture, dust, corrosive liquids and vapours.

## Setting up the handset for use

The display and keypad are protected by a plastic film.  
**Please remove the protective film!**

### Inserting the battery and closing the battery cover

#### Warning

Use only the rechargeable batteries (→ page 75) recommended by Gigaset Communications GmbH \*, as this could otherwise result in significant health risks and damage to property. For example, the outer casing of the batteries could be destroyed or the batteries could explode. The phone could also malfunction or be damaged as a result of using batteries that are not of the recommended type.

\* Gigaset Communications GmbH is a trademark licensee of Siemens AG.



- ▶ First insert the battery at the top **a**.
- ▶ Then press the battery downwards **b** until it clicks into place.



- ▶ First, align the protrusions on the side of the battery cover with the notches on the inside of the casing.
- ▶ Then press the cover until it clicks into place.

If you need to **reopen the battery cover** to connect the USB data cable or change the battery:

- ▶ Remove the belt clip (if attached).
- ▶ Place your fingernail into the notch at the bottom of the casing and pull the battery cover upwards.



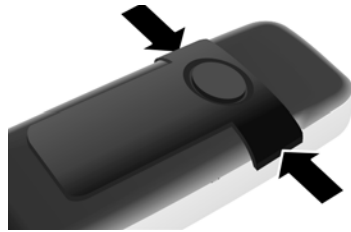
To **change the battery**, place your fingernail in the cavity in the casing and pull the battery upwards.



### Attaching/removing the belt clip

The handset has notches on each side to attach the belt clip.

- ▶ **To attach** – press the belt clip onto the back of the handset so that the protrusions on the belt clip engage with the notches.
- ▶ **To remove** – using your right thumb apply pressure to the centre right of the belt clip, push the fingernail of your left index finger between the clip and the casing and lift the clip upwards.



### Placing the handset in the charging cradle

- ▶ Insert the mains adapter of the charging cradle into the mains socket.
- ▶ Place the handset in the charging cradle with its **display facing forward**.

The handset is registered with the base station at the factory. You do not need to complete a registration. If you wish to use your handset with a different base station or use further handsets with your base station, you will have to register the handset manually → page 56.

To charge the battery, leave the handset in the charging cradle.

**Please note**

Only place the handset in the charging cradle that is intended for it.

### First battery charge and discharge

The correct charge status can only be displayed if the battery is first fully charged **and** discharged.



- ▶ Place the handset in the charging cradle for **six** hours.



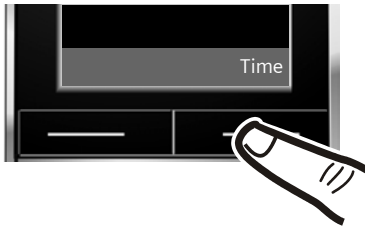
- ▶ Once the battery is fully charged, remove the handset from the charging cradle and do not put it back again until the battery is fully discharged.

**Please note**

- ◆ After the first battery charge **and** discharge, you may place your handset in the charging cradle after every call.
- ◆ Always repeat the charging and discharging procedure if you remove the battery from the handset and reinsert it.
- ◆ The battery may heat up during charging. This is not dangerous.
- ◆ After a time, the charge capacity of the battery will decrease for technical reasons.

## Setting the date and time


Set the date and time so that the correct date and time can be assigned to incoming calls, and so that the alarm and the calendar can be used.

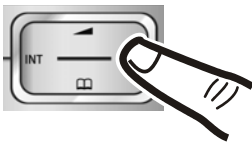


- ▶ Press the key below **Time** on the display screen to open the input field. (If you have already set the time and date, open the input field via the menu → page 27.)

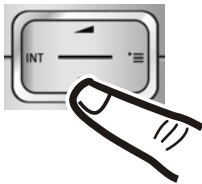


The *Date/Time* submenu is shown on the display.


- ▶ The active input position flashes. Enter day, month and year as an 8-digit number via the keypad, e.g.  for 14/10/2008.



Press the **right** or **left** control key to change the input position and correct an entry.



- ▶ Press **down** on the control key to switch to the time input field.

- ▶ Enter the hours and minutes as four digit numbers via the keypad, e.g.  for 07:15 am. Change the input position with the control key if necessary.







- ▶ Press the key below **Save** on the display screen to confirm your entry.




The display shows *Saved*. You will hear a confirmation tone.
















- ▶ Press the key below **Back** on the display screen to return to idle status.

## Display in idle status

Once the phone is registered and the time set, the idle display is shown as in this example. If the answering machine is activated, the answering machine icon  will be displayed in the header.

The following is displayed after successful registration:

- ◆ the strength of the reception signal between base station and handset:
  - good to poor:    
  - no reception:  flashes
- ◆ battery charge status:
  -     (flat to full)
  -  flashing: battery almost empty
  -    (charging)



Your answering machine is set with a pre-recorded announcement.

### Please note

- ◆ The range icon is only displayed in idle status if Eco Mode+ (→ page 53) is deactivated.
- ◆ The display of the calendar in idle status can be activated or deactivated (→ page 54).

Your phone is now ready for use!

## Connecting the USB data cable

To connect your telephone with a PC (→ page 77) you can connect the supplied USB data cable to the back panel of your phone.

- ▶ Remove the belt clip (if attached) (→ page 13).
- ▶ Remove the battery cover (→ page 13).
- ▶ Connect the USB data cable to USB socket **1**.



## What would you like to do next?

Now you have successfully started your Gigaset, you will probably want to adapt it to your personal requirements. Use the following guide to quickly locate the most important subjects.

If you are unfamiliar with menu-driven devices such as other Gigaset telephones you should first read the section entitled "Using the phone"



→ page 19.

Information on ...	... is located here.
Setting the ring tone and volume	▶ page 65
Setting the handset volume	▶ page 65
Recording your own announcement for the answering machine	▶ page 47
Setting Eco Mode / Eco Mode+	▶ page 53
Preparing the telephone for SMS reception	▶ page 40
Operating the telephone on a PABX	▶ page 69
Registering existing Gigaset handsets to a base station	▶ page 56
Transferring directory entries from existing Gigaset handsets to the new handset(s)	▶ page 34
Using Bluetooth devices	▶ page 61
Connecting the phone to the PC	▶ page 77

If you have any questions about using your phone, please read the tips on troubleshooting (→ page 71) or contact our Customer Care team (→ page 71).

# Using the phone





## Control key

Below, the side of the control key that you must press in the respective operating situation is marked in black (top, bottom, right, left, centre), e.g.  for "press right on the control key" or  for "press the centre of the control key".





The control key has a number of different functions:





### When the handset is in idle status

-  Open the directory.
-  Open the main menu.
-  Open the list of handsets.
-  Call up the menu for setting the handset's call volume (→ page 65), ring tones (→ page 65) and advisory tones (→ page 66).




### In the main menu, in submenus and lists

-  /  Scroll up/down line by line.

### In input fields

You can use the control key to move the cursor up , down , right  or left .

### During an external call

-  Open the directory.
-  Initiate an internal consultation call.
-  Adjust the loudspeaker volume for earpiece and handsfree mode.

### Functions when pressing the middle of the control key

Depending on the operating situation, the key has different functions.

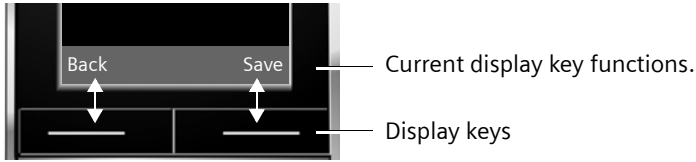
- ◆ **In idle status** the key opens the main menu.
- ◆ **In submenus, selection and input fields** the key takes on the function of the display keys **OK**, **Yes**, **Save** or **Change**.

#### Please note

In these instructions functions are explained using the right control key and the display keys. However, if you prefer, you can use the control key as described above.

## Display keys



The function of the display keys changes depending on the particular operating situation. Example:



Some important display keys:

Options	Open a context-dependent menu.
OK	Confirm selection.
< C	Delete key: backspace delete one character at a time.
Back	Go back one menu level or cancel operation.
Save	Store entry.
→→	Open the last number redial list.

## Keys on the keypad

-  etc.  
Press the matching key on the handset.
-   
Enter digits or letters.

## Correcting incorrect entries


You can correct incorrect characters in the input fields by navigating to the incorrect entry using the control key. You can then:

- ◆ Press **<C** to delete the character to the left of the cursor.
- ◆ Insert characters to the left of the cursor.
- ◆ Overwrite the highlighted (flashing) character, e.g. when entering time and date.

## Menu guidance


Your telephone's functions are accessed using a menu that has a number of levels.


### Main menu (first menu level)

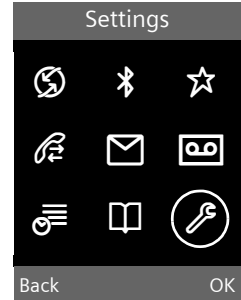
- ▶ When the handset is in idle status press the **right**  control key to open the main menu.

The main menu functions are shown in the display with icons. The selected function is marked by an orange circle around the symbol and the corresponding name is shown in the display header.

To access a function, i.e. to open the corresponding submenu (next menu level):

- ▶ Use the control key  to select the required function and press the display key **OK**.


**Briefly** press the display key **Back** or the end call key  to revert back to idle status.




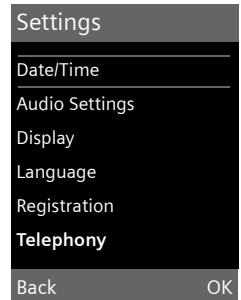
### Submenus

The functions in the submenus are displayed as lists (example on the right).

To access a function:


- ▶ Scroll to the function with the control key  and press **OK**.

**Briefly** press the display key **Back** or the end call key  to return to the previous menu level/cancel the operation.



### Reverting to idle status

You can revert to idle status from anywhere in the menu as follows:

- ▶ Press and **hold** the end call key .

Or:

- ▶ Do not press any key: after 2 minutes the display will **automatically** revert to idle status.

Settings that have not been saved by selecting the display key **OK**, **Yes**, **Save** or **Change** will be lost

An example of the display in idle status is shown on page 17.

## Activating/deactivating the handset



With the phone in idle status, press and **hold** the end call key (confirmation tone) to switch off the handset.  
Press and **hold** the end call key again to switch the handset on.

### Please note


When the handset is switched on, an animation of a clock will be displayed for several seconds.

## Activating/deactivating the keypad lock

The keypad lock prevents any inadvertent use of the phone.



Press and **hold** the hash key in idle status to activate or deactivate the keypad lock. You will hear the confirmation tone.

When the keypad lock is activated you will see the  icon on the display and a message when you press a key.

The keypad lock is deactivated automatically if someone calls you. It is reactivated when the call is finished.

## Illustration of operating steps in the user guide

The operating steps are shown in abbreviated form.


**Example:**

The illustration:


 → Settings → Telephony → Auto Answer (☑ = on)

means:




- ▶ Press **right** on the control key  to open the main menu.



- ▶ Use the right, left, down and up control key  to navigate to the Settings submenu.

- ▶ Press the display key **OK** to confirm your selection.



- ▶ Press down on the control key  until the **Telephony** menu appears on the display.

- ▶ Press the display key **OK** to confirm your selection.





The Auto Answer function has already been selected.


- ▶ Press the display key **Change** to activate/deactivate the function.




Changes are effective immediately and do not have to be confirmed.

- ▶ Press the key below **Back** on the display to jump back to the previous menu level.

**or**

Press and **hold** the end call key  to return to idle status.

# Menu tree

With the telephone in **idle status**, press  (open main menu):

## Select Services

Withhold Number	→	page 30
All Calls	→	Call Divert → page 31 Call Waiting → page 30
Ringback Off	→	page 30

## Bluetooth

Activation	→	page 61
Search for Headset	→	page 61
Search for DataDevice	→	page 61
Known Devices	→	page 62
Own Device	→	page 62

## Additional Features

Room Monitor	→	page 59
--------------	---	---------

## Call Lists

All Calls	→	page 36
Outgoing Calls	→	page 36
Accepted Calls	→	page 36
Missed Calls	→	page 36

## SMS

**You have activated an SMS mailbox (general or private) without a PIN**

New SMS	→	page 40
Incoming	→	page 42
Draft	→	page 40

**You have activated an SMS mailbox with a PIN or 2-3 mailboxes**

Mailbox	→	New SMS → page 40 Incoming → page 42 Draft → page 40
Mailbox 1 Mailbox 2 Mailbox 3	→	New SMS → page 40 Incoming → page 42 Draft → page 40
Settings	→	Service Centres → page 45 SMS Mailboxes → page 43 Notification → page 43

## Answering Machine

Play Messages	Network Mailbox	→ page 52
	Answering Machine *	→ page 47
Activation *	→ page 47	
Announcements *	Record Announcemnt. *	→ page 47
	Play Announcement *	→ page 47
	Delete Announcemnt. *	→ page 47
	Record Advisory Msg. *	→ page 47
	Play Advisory Message *	→ page 47
	Delete Advisory Msg. *	→ page 47
Recordings *	→ page 50	
Call Screening *	→ page 50	
Network Mailbox		
Set Key 1	Network Mailbox	→ page 52
	Answering Machine *	→ page 47

\*Only base station with answering machine

## Organizer

Calendar	→ page 54
Alarm Clock	→ page 56
Missed Alarms	→ page 55

 Settings

Date/Time	→ page 15
Audio Settings	Handset Volume → page 65
	Ringer Settings → page 65
	Advisory Tones → page 66
	Music on hold → page 68
Display	Screensaver → page 64
	Backlight → page 64
Language	→ page 64
Registration	Register Handset → page 56
	De-register Handset → page 57
	Select Base → page 57
Telephony	Auto Answer → page 64
	Area Codes → page 67
	Listening In → page 58
	Preselection → page 39
	Access Code → page 69
	Dialling Mode → page 69
	Recall → page 69
System	Eco Mode → page 53
	Eco Mode+ → page 53
	Repeater Mode → page 68
	System PIN → page 68
Reset	Handset Reset → page 67
	Base Reset → page 68



## Making calls

---




### Making an external call


---

External calls are calls using the public telephone network.

  Enter the number and press the talk key.

Or:

  Press and **hold** the talk key  and then enter the number.

You can cancel the dialling operation with the end call key .

You are shown the duration of the call while the call is in progress.

#### Please note

Dialling using the directory, the call-by-call list (page 1, page 32) or the calls and last number redial list (page 36/ page 36) saves you from having to re-enter numbers and network provider prefixes ("call-by-call numbers").

### Continuing a call on a Bluetooth headset


**Precondition:** Bluetooth is activated; a connection has been established between the Bluetooth headset and the handset (→ page 61).

Press the talk key on the Bluetooth headset; it may take up to 5 seconds to establish a connection to the handset.

For further details about your headset, see the user guide issued with it.


### Ending a call

---





 Press the end call key.

## Accepting a call

---

The handset indicates an incoming call in three ways: by ringing, by a display on the screen and by the flashing hands-free key .

You can accept the call by:

- ▶ Pressing the talk key .
- ▶ Pressing the handsfree key .
- ▶ Gigaset SL780: Press the display key  **Accept**.
- ▶ Gigaset SL785: Press the display key  to divert the call to the answering machine (→ page 49).

If the handset is in the charging cradle and the **Auto Answer** function is activated (→ page 64), the handset will take a call automatically when you lift it out of the cradle.

To deactivate the ring tone, press the **Silence** display key. You can take the call as long as it is displayed on the screen.

### Accepting a call on a Bluetooth headset

**Precondition:** Bluetooth is activated; a connection has been established between the Bluetooth headset and the handset (→ page 61).

**Only press the talk key on the headset when the headset rings;** it can take up to 5 seconds.

For further details about your headset, see the user guide issued with it.

## Calling Line Identification

---

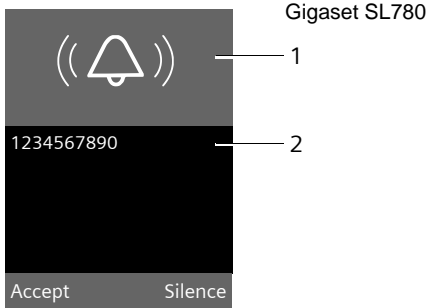
When you receive a call, the caller's number is displayed on the screen if the following conditions are met:

- ◆ Your network provider supports CLIP, CLI.
  - CLI (Calling Line Identification): the caller's number is transmitted.
  - CLIP (Calling Line Identification Presentation): the caller's number is displayed.

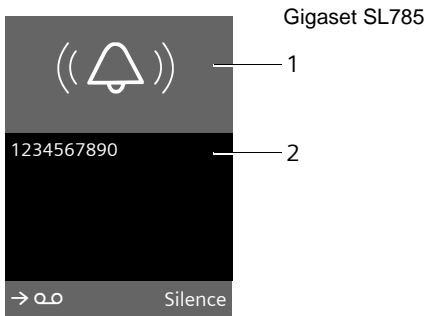
- ◆ You have arranged CLIP with your network provider.
- ◆ The caller has requested CLI from the network provider.

## Call display with CLIP/CLI

If the caller's number is saved in your directory, the caller's name will be displayed.



or



- 1 Ring tone icon
- 2 Number or name of caller

The following is displayed in place of the number:



- ◆ External, if no number is transmitted.
- ◆ Withheld, if the caller has withheld Calling Line Identification (→ page 30).
- ◆ Unavailable, if the caller has not arranged Calling Line Identification.

## Handsfree talking

In handsfree mode, instead of holding the handset to your ear you can put it down, for example on the table in front of you. This allows others to participate in the call.


## Activating/deactivating handsfree mode

### Activating while dialling

  Enter the number and press the handsfree key.



- ▶ You should inform your caller before you use the handsfree function so that they know someone else is listening.

### Switching between earpiece and handsfree mode

 Press the handsfree key.

During a call and when listening to the answering machine (Gigaset SL785 only), activate or deactivate handsfree mode.

If you wish to place the handset in the charging cradle during a call:

- ▶ Press and hold the handsfree key  while placing the handset in the charging cradle. If handsfree key  does not light up, press the key again.

For instructions on how to adjust the loudspeaker volume, → page 65.

## Switch to mute

You can deactivate the microphone in your handset during an external call.

**Mute** Press the display key to mute the handset. The display shows *Microphone is off*.

**Mute off** Press the display key to reactivate the microphone.

## Making calls using network services

---

Network services are functions that your network provider makes available to you. You have to request these services from your network provider.

- ▶ **If you require assistance, please contact your network provider.**

## Calling Line Identification


---


### Withhold Calling Line Identification once (CLIR)

If you make a call, your number is shown in the display of the call recipient if that person has activated CLIP (→ page 29).

If you do not wish to have your number displayed, you can withhold your number for the next call (CLIR).

 →  → Withhold Number

 Enter phone number.

 Press the talk key.

## Ringback


---

### Initiating ringback

If the number you have called is engaged, you can initiate ringback. As soon as the line of the person you called is free, your handset will ring.


You hear the busy tone.

**Options** → Ringback

 Press the end call key.

### Cancelling ringback

You can cancel ringback that has already started.

 →  → Ringback Off

## Call waiting during an external call

---

If the function is activated during an **external** call you will hear a call waiting tone to signal that another external caller is trying to get through. If you have CLIP (→ page 29) the number of the waiting caller or the corresponding directory entry is shown in the display.

## Activating/deactivating call waiting

---

 →  → All Calls → Call Waiting

Status      Activate/deactivate.

**Dial**      Press the display key.

## Accepting a waiting call

---

You are making an external call and hear the call waiting tone.

You have the following options:

**Options** → Accept Waiting call

**or**

(only if the phone number or name of the caller is displayed)

**Accept**      Press the display key.

Once you have accepted the waiting call you can switch between the two callers ("toggling" → page 31).

## Call divert (CD)

When diverting a call, the call is forwarded to another connection.

The following options are available:

- ◆ **All Calls:** Calls are diverted immediately. No more calls are signalled on your phone.
- ◆ **No Answer:** Calls are diverted if no one accepts the call within several rings.
- ◆ **When Busy:** Calls are diverted when your line is busy. Call is diverted without a call waiting tone.

 →  → All Calls → Call Divert

▶ Change multiple line input:


When:

Select All Calls / No Answer / When Busy.

To Phone No.:

Enter the number to which the call is to be diverted


Or:

Press . Select number from the directory and press **OK**.

Status:

Activate/deactivate call divert.

**Dial** Press the display key.

 After the announcement, press the end call key.

## Consultation call, toggling

These functions enable you to

- ◆ Call a second external caller (consultation call)
- ◆ Switch between two calls (toggling)

### Consultation call

You can call a second external caller.

The first call is placed on hold.

**During** an external call:

**Options** → External Call

The previous call is placed on hold. The other participant hears an announcement.



Enter the second participant's telephone number.

The phone number is dialled. You are connected to the second participant.

If the caller does not answer, select the display key **End** to return to the first participant.

#### Please note

You can also select the second participant's phone number from the directory (→ page 35) or the calls list (→ page 36).

### Ending a consultation call

**Options** → End Active Call


You are reconnected to the first caller.

You can also end the consultation call by selecting the end call key. The connection is briefly interrupted and you will receive a call back. Once you have pressed the talk key you are reconnected to the first caller.

### Toggling

You can speak to both callers one at a time (toggling).

**Precondition:** You are conducting an external call and have called a second participant (consultation call) or have accepted a waiting call.

- ▶ Use  to toggle between the participants.

The caller you are currently speaking to is marked with the  icon.

### End the current call

**Options** → End Active Call

You are re-connected to the waiting caller.



## Using the directory and lists

---

The options are:

- ◆ Directory
- ◆ Call-by-call list
- ◆ Last number redial list
- ◆ Incoming SMS message list
- ◆ Call lists
- ◆ List of missed appointments
- ◆ Answering machine list  
(Gigaset SL785 only)

You create the directory and call-by-call list for your own individual handset. You can also send lists/entries to other handsets (→ page 34).

### Directory/call-by-call list

---

You can save a total of 500 entries in the directory and call-by-call list.

#### Please note


For quick access to a number from the directory or the call-by-call list (using quick dial keys), you can assign the number to a key (→ page 63).

### Directory

---

In the **directory**, you can save

- ◆ Up to three numbers and associated first names and surnames
- ◆ E-mail address
- ◆ Anniversaries with reminder
- ◆ VIP ring tone with VIP symbol.

You open the directory in idle status using the  key.

#### Length of the entries

3 numbers: each max. 32 digits


First name and surname:  
each max. 16 characters

E-mail address: max. 60 characters

### Call-by-call list

---

The **call-by-call list** is used to store the access codes for network providers ("Call-by-call numbers").

- ▶ Open the call-by-call list in idle status by pressing the  key.


#### Length of the entries

Number: max. 32 digits

Name: max. 16 characters

### Storing a number in the directory

---

 → New Entry

- ▶ Change multiple line input:




First Name: / Surname :

Enter a name in at least one of the fields.

(For instructions on how to enter text and special characters, please see → page 76.)

Phone (Home): / Phone (Office): /  
Phone (Mobile):

Enter a number in at least one of the fields.

When scrolling through the directory, the entries are highlighted by a prefixed symbol:  /  / .

E-Mail:

Enter e-mail address.

Anniversary:


Select On or Off.

With setting On:

Enter Anniversary (Date) and Anniversary (Time) Anniversary (Signal) and select reminder type → page 35.

Caller Melody (VIP) :

Mark a directory entry as a **VIP** (Very Important Person) by assigning a specific ring tone to it. VIP calls are recognised by the ring tone.

When scrolling through the directory, VIP entries are highlighted by the  symbol.

**Precondition:** Calling Line Identification (→ page 28).

 Save

Press the display key.

## Storing a number in the call-by-call list

 → New Entry

▶ Change multiple line input:

Name :

Enter name.

Number:

Enter the number.

**Save** Press the display key.

## Order of directory entries



Directory entries are generally sorted alphabetically by surname. Spaces and digits take first priority. If only the first name was entered in the directory, this is incorporated into the sort order instead of the surname.

The sort order is as follows:



1. Space
2. Digits (0–9)
3. Letters (alphabetical)
4. Other characters

To get round the alphabetical order of the entries, insert a space or a digit in front of the first letter of the surname. These entries will then move to the beginning of the directory.

## Selecting entries in the directory and call-by-call list

 /  Open the directory or call-by-call list.


You have the following options:

- ◆ Use  to scroll through the entries until the required name is selected.
- ◆ Enter the first letters of the name (max. 8), if necessary scroll to the entry with the  key.

The directory searches for the surname. If a surname has not been added, then it will search for the first name.

## Dialling with the directory/call-by-call list

 /  →  (Select entry).

 Press the talk key. The number is dialled.


## Managing directory/call-by-call entries

### Viewing entries


 /  →  (Select entry).

**View** Press the display key.  
The entry is displayed.

**Options** Press the display key.

The following functions can be selected with :

#### Display Number

To edit or add to a saved number, or to save it as a new entry, press  after the number is displayed.

#### Delete Entry

Delete selected entry.

#### Copy Entry

to Internal: Send a single entry to a handset (→ page 34).

vCard via SMS: Send a single entry in vCard format via SMS.

vCard via Bluetooth: Send a single entry in vCard format via Bluetooth.

## Editing entries

 /  →  (Select entry).


**View Edit** Press the display keys one after the other.

- ▶ Carry out changes and save.



## Using other functions

 /  →  (Select entry)

→ **Options** (Open menu)

The following functions can be selected with :

#### Display Number

Save or modify a saved number and then dial with  or save as a new entry; to do so, press  after the number appears on the display.

## Using the directory and lists

### Edit Entry

Edit selected entry.

### Delete Entry

Delete selected entry.

### Copy Entry

to Internal: Send a single entry to a handset (→ page 34).

vCard via SMS: Send a single entry in vCard format via SMS.

vCard via Bluetooth: Send a single entry in vCard format via Bluetooth.

### Delete All

Delete **all** entries in the directory/call-by-call list.

### Copy All

to Internal: Send the complete list to a handset (→ page 34).

vCard via Bluetooth: Send the complete list in vCard format via Bluetooth.

### Available Memory

Display the available entries in the directory and call-by-call list (→ page 32).

## Using quick dial keys

---




- ▶ Press and **hold** the required quick dial key (→ page 63).


## Sending the directory/call-by-call list to another handset

---

### Preconditions:

- ◆ The sending and receiving handsets must both be registered to the same base station.
- ◆ The other handset and the base station can send and receive directory entries.

 /  →  (Select entry)  
→ **Options** (Open menu) → Copy Entry / Copy All → to Internal

 Select the internal number of the receiving handset and press **OK**.

You can transfer several individual entries one after the other by responding **Yes** to the Entry copied - Copy next entry? prompt.

A successful transfer is confirmed by a message and confirmation tone on the receiving handset.



### Please note:

- ◆ Entries with identical numbers are not overwritten on the receiving handset.
- ◆ The transfer is cancelled if the phone rings or if the memory of the receiving handset is full.
- ◆ Entered anniversary reminders, pictures and sounds are not sent.


## Transferring the directory as a vCard with Bluetooth

---

In Bluetooth mode (→ page 61), you can transfer directory entries in vCard format, e.g. to exchange entries with your mobile phone.

 →  (Select entry) → **Options**  
(Open menu) → Copy Entry / Copy All  
→ vCard via Bluetooth

The list of "Known Devices " (→ page 62) is displayed.


 Select device and press **OK**.

## Receiving a vCard with Bluetooth

---

If a device from the "Known Devices " list (→ page 62) sends a vCard to your handset, this occurs automatically. You are informed about it via the display.

If the sending device does not appear in the list, you will be asked on the display to enter the device PIN for the sending device:

 Enter the PIN for the **sending** Bluetooth device and press **OK**.

The transferred vCard is available as a directory entry.

## Copying a displayed number to the directory

Numbers displayed in a list, e.g. the calls list or the last number redial list, in an SMS or during a call can be copied to the directory.

A number is displayed:



**Options** → Copy to Directory


▶ Complete the entry → page 32.

Gigaset SL785: The message playback is interrupted during the number transfer from the answering machine list.

## Copying a number or e-mail address from the directory

In some operating situations, you can open the directory to copy a number or e-mail address, for example. Your handset need not be in idle status.



▶ Depending on the operating situation, open the directory with  or .

 Select entry ( → page 33).


## Saving an anniversary in the directory


For each number in the directory, you can save an anniversary and specify a time at which a reminder call should be made on the anniversary (default setting: Anniversary: Off).

Anniversaries are automatically recorded in the calendar ( → page 54).

 →  (Select entry)

**View** **Edit** Press the display keys one after the other.

 Scroll to the Anniversary line.

 Select On.

▶ Change multiple line input:

**Anniversary (Date)**

Enter day/month/year in 8-digit format.

**Anniversary (Time)**

Enter the hour/minute for the reminder call in 4-digit format.

**Anniversary (Signal)**



Select the type of signal for the reminder.

**Save** Press the display key.


### Please note

A time must be specified for reminder calls. If you select a visual signal, a time is not required and is automatically set to 00.00.

## Deactivating anniversaries

 →  (Select entry)

**View** **Edit** Press the display keys one after the other.

 Scroll to the Anniversary line.

 Select Off.

**Save** Press the display key.

## Reminder call on an anniversary

**In idle status**, a reminder call is shown in the display of the handset ( → page 3) and signalled with the selected ring tone.

You can:

**SMS** Write an SMS.

**Off** Press the display key to acknowledge and end the reminder call.

**When you are on the phone** a reminder call is indicated on the handset with a **single** advisory tone.

Anniversaries that are indicated during a call and that are elapsed, are entered in the **Missed Alarms** list ( → page 55).




## Last number redial list

---

The last number redial list contains the twenty numbers last dialled with the handset (max. 32 digits). If a number is in the directory or the call-by-call list, then the appropriate name will be displayed.

### Manual last number redial



---


-  Press the key **briefly**.
-  Select entry.
-  Press the talk key again.  
The number is dialled.

When a name is displayed, you can display the corresponding phone number by pressing the display key **View**.

### Managing entries in the last number redial list

---

-  Press the key **briefly**.
-  Select entry.
- Options** Open menu.

The following functions can be selected with :

#### Copy to Directory

Copy an entry to the directory (page 32).

Display Number (as in the directory, page 33)

Delete Entry (as in the directory, page 34)

Delete All (as in the directory, page 34)

## Incoming SMS message list

---

All received SMS messages are saved in the incoming message list → page 41.

## Answering machine list (Gigaset SL785 only)

---

You can use the **answering machine list** to listen to the messages that are on the answering machine.

## Call lists

---


**Precondition:** Calling Line Identification (CLIP, page 28)

Your telephone stores various types of calls:

- ◆ Answered calls
- ◆ Outgoing calls
- ◆ Missed calls
- ◆ Calls recorded by the answering machine (Gigaset SL785 only)

You can view each type of call separately or gain an overview of all calls. Each call record contains the last 20 numbers in its category.

When in idle status, open the call lists by selecting the **Calls** display key or via the menu:







## List entry

New messages are displayed at the top.

Example of list entries:



- ◆ List type (in header)
- ◆ Status of entry
  - Bold:** New entry
- ◆ Number or name of caller
- ◆ Date and time of call (if set, page 15)
- ◆ Type of entry:
  - Accepted calls (  )
  - Missed calls (  )
  - Outgoing calls (  )
  - Calls recorded by the answering machine ( , Gigaset SL785 only)

Select the **View** display key to access additional information, including for example the number linked to the name

Select the **Options** display key to select the following options:

### Copy to Directory

Copying a displayed number to the directory.

### Delete Entry


Delete selected entry.

### Delete All


Delete all entries.

When you quit the calls lists, all entries are set to the status "old", i.e. the next time you call the list up they will no longer be shown in bold.


## Opening lists with the message key


You can use the message key  to open the following list selection:


- ◆ Answering machine list (Gigaset SL785 only) or network mailbox, if your network provider supports this function and the fast access is set for the network mailbox ( → page 52).
- ◆ List of missed calls
- ◆ Incoming SMS message list ( → page 41)
  - If **several** mailboxes are set up ( → page 43), several lists are displayed.
- ◆ List of missed appointments ( → page 55)

An advisory tone sounds as soon as a **new message** arrives in a list. The  key flashes (it goes off when the key is pressed). In **idle status**, the display shows an icon for the new message:

### Icon      New message...

 ... in the answering machine list (Gigaset SL785 only) or on the network mailbox

 ... in the **missed calls** list

 ... in the SMS list

 ... in the **Missed Alarms** list


The number of new entries is displayed to the right of the corresponding icon.





### Please note

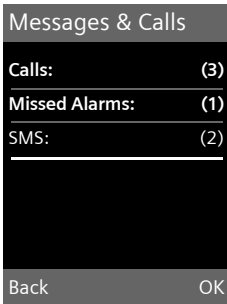
If calls are saved in the network mailbox, you will receive a message if the appropriate settings have been made (see your network provider user guide).

### List selection

The lists displayed after pressing the message key  depend on whether there are any new messages.

- ◆  **key does not flash (no new messages):** All the lists containing messages and the network mailbox list are displayed.
- ◆  **key flashes (new messages received):** You see all the lists containing **new** messages. If only one list contains new messages, this will be opened automatically.

Lists containing new messages are at the top of the list and are marked in a bold font.



Select a list with . To open, press **OK**.

## Making cost-effective calls

Sign up with a network provider who offers particularly low-cost call rates (call-by-call). You can manage the numbers in the call-by-call list.

### Linking call-by-call numbers with one number

You can insert the dialling code of a network provider ahead of the number ("linking").



Open call-by-call list.



Select entry (call-by-call number).



Press the display key.

Display Number

Select and press **OK**.



Enter number or select number from the directory (→ page 35).



Press the talk key. Both numbers are dialled.

### Automatic network provider code (preselection)

You can store a call-by-call number (preselection number), which is **automatically** placed in front of numbers when you dial them.

In the "**With Preselection**" list, specify the dialling codes or the first digits of the dialling codes with which you wish the preselection number to be used.

In the "**Without Preselection**" list enter the exception to the "With Preselection" list.

Example:


Preselection Number	0999
With Preselection	08
Without Preselection	081 084

All numbers that start with 08 except for 081 and 084, are dialled with the preselection number 0999.

Phone number	Dialled number
07112345678 →	07112345678
<b>0891</b> 2345678 →	<b>0999</b> 08912345678
<b>0841</b> 2345678 →	08412345678

### Saving preselection numbers

 →  → Telephony → Preselection  
→ Preselection Number

 Enter or change the preselection number (call-by-call number).

**Save** Press the display key.


### Save or change entries in the preselection lists

Each of the two lists can contain 20 entries, each with 6 digits.

Numbers may be prefixed according to the country in the "**with preselection**" list. This means, for example, that all national calls or calls to the mobile network are **automatically** linked to the preselection number you have saved previously.

 →  → Telephony → Preselection  
→ With Preselection / Without Preselection

 Select entry.

 Enter or edit first digits of number.

**Save** Press the display key.

### Temporarily cancelling preselection

 (press and hold) → **Options**  
→ Preselection off →  (Select number)

### Permanently deactivating preselection

 →  → Telephony → Preselection  
→ Preselection Number

**<C** Press and hold the display key until the preselection number is deleted.

**Save** Press the display key.



## SMS (text messages)

Your phone is supplied ready for sending SMS messages immediately.

### Preconditions:

- ◆ Calling Line Identification is enabled for your phone line.
- ◆ Your network provider supports SMS on the fixed line network (information on this can be obtained from your network provider).
- ◆ You are registered with your service provider to send and receive SMS.
- ◆ To have reception you must be registered with your service provider. This is completed automatically when you send your first SMS.

#### Please note

If your phone is connected to a PABX, please read → page 45.

## Writing/sending an SMS

### Writing an SMS



Mailbox 2 Select mailbox if necessary and press **OK**.



Enter mailbox PIN if necessary and press **OK**.

New SMS Select and press **OK**.



Write an SMS.

#### Please note

- ◆ For instructions on how to enter text and special characters, please see page 76.
- ◆ An SMS can be up to 612 characters. If there are more than 160 characters, the SMS is sent as a **linked SMS** (up to 4 SMS messages with 153 characters each).

### Sending an SMS



Press the talk key

Or:



Press the display key.

Send

Select and press **OK**.

SMS

Select and press **OK**.



Select number with area code (even if you are in that area) from the directory or call-by-call list, or enter number directly. For sending SMS to an SMS mailbox: add the mailbox ID to the **end** of the number.



Press the display key. The SMS is sent.

#### Please note

- ◆ If you are interrupted by an external call while writing an SMS, the text is automatically saved in the draft message list.
- ◆ If the memory is full, or if the SMS function on the base station is being used by another handset, the operation is cancelled. An appropriate message appears in the display. Delete SMS messages you no longer require or send the SMS later.

### Draft message list

You can save an SMS in the draft message list, and edit and send it later.

#### Saving an SMS in the draft message list

▶ Writing an SMS (→ page 40).






Press the display key.


Save

Select and press **OK**.

## Opening the draft message list

 →  → if necessary  (Mailbox, mailbox PIN) → Draft

The first list entry is displayed, e.g.





Saved  
10.10.08 15:07

The number will be displayed in the first line, if the entry has been saved with the phone number, i.e. when the SMS was saved from the incoming message list.

## Reading or deleting SMS messages

► Open the draft message list and then:

 Select SMS.

**Read** Press the display key. The entry will be displayed. Scroll line by line using .

Or delete the SMS with

**Options** → Delete Entry → **OK**.

## Writing/changing an SMS

► You are reading an SMS in the draft message list.

**Options** Open menu.

You have the following options:

Send

Send stored SMS.

Edit

Edit the text of the saved SMS and then send it (→ page 40).

Character Set

Display text in the selected character set.

## Deleting draft message list

► Open the draft message list and then:

**Options** Open menu.

Delete All Select, press **OK** and confirm with **Yes**. The list is cleared.

## Receiving an SMS

All received SMS messages are saved in the incoming message list. Linked SMS messages are displayed as **one** message. If this is too long or is not transferred completely, it is split into individual messages. Since an SMS remains in the list even after it has been read, you should **regularly delete SMS messages from the list**.

The display tells you if the SMS memory is full.



### Please note

Each incoming SMS is signalled by a single ring (ring tone as for external calls). If you accept such a "call", the SMS will be lost. To prevent this ring, mute the first ring tone for all external calls (→ page 45).

## Incoming message list

The incoming message list contains:


- ◆ All received SMS messages, starting with the most recent.
- ◆ SMS messages that could not be sent due to an error.

New SMS messages are signalled on all Gigaset SL78H handsets by the  icon in the display, the flashing message key  and an advisory tone.

## Opening the incoming message list with the key

 Press.

The incoming message list is indicated by the mailbox name and the number of entries (example):



SMS: (2)


**bold:** new entries

**normal font:** read entries

If necessary select a mailbox and open list by selecting **OK** (if necessary enter mailbox PIN and confirm by pressing **OK**).



## SMS (text messages)

The number and date of receipt are displayed in the entry list.



0123727859362922  
10.10.08 09:07

### Opening the incoming message list via the SMS menu

 →  → if necessary select mailbox, enter mailbox PIN) → Incoming

### Deleting the incoming message list

All **new and old** SMS messages in the list are deleted.


▶ Open the incoming message list.


**Options** Open menu.

Delete All Select, press **OK** and confirm with **Yes**. The list is cleared.

### Reading or deleting SMS messages

▶ Open the incoming message list, then:

 Select SMS.

**Read** Press the display key.  
The entry will be displayed.  
Scroll line by line using .

Or delete the SMS with

**Options** → Delete Entry → **OK**.

After you have read a new SMS, it is given the status "Old" (is no longer shown in bold).

### Changing the character set

▶ Reading an SMS

**Options** Press the display key.

Character Set

Text is shown in the selected character set.

## Replying to or forwarding text messages

▶ Reading an SMS

**Options** Press the display key.

You have the following options:

Reply

Write and send a new SMS in reply to the sender ( → page 40).

Edit

Edit the text in the SMS and return it to the sender ( → page 40).

Forward

Forward the SMS to another number ( → page 40).

## Copy number in the directory

### Copying the sender's number

▶ Open the incoming message list and select entry ( → page 41).

**Options** → Copy to Directory

▶ Complete the entry → page 35.


#### Please note

An attached mailbox identifier is added to the directory.

### Copying/dialling numbers from an SMS text


▶ Read the SMS and scroll to the telephone number.

The digits are highlighted.

 Press the display key.

Complete the entry → page 35.


Or:

 Press the talk key to dial the number.

If you wish to use the number to send an SMS:

▶ Save the number with the local area code (dialling code) in the directory.

## SMS with vCard

The vCard is an electronic business card. It is displayed by the  symbol in the body of the SMS.

A vCard can include:

- ◆ Name
- ◆ Private number
- ◆ Business number
- ◆ Mobile phone number
- ◆ Birthday

Entries in a vCard can individually be saved to the directory one after the other.

### Opening the vCard

- ▶ Read the SMS containing the vCard.

**View** Press the display key.  
To return to the body of the SMS, press **Back**.

 Select number.

**Save** Press the display key.

When you save a number, the directory is opened automatically. The number and name are copied. If a birthday is entered on the vCard, the date is copied to the directory as an anniversary.

- ▶ If necessary, edit the entry in the directory and save it. You will return to the vCard automatically.

## Notification by SMS

You can be notified about missed calls or new answering machine messages (Gigaset SL785 only) via SMS.

**Precondition:** For missed calls, the caller's number (CLI) must have been transmitted.

Notification is sent to your mobile phone or another phone with SMS functionality.

You only need to save the telephone number to which you wish the message to be sent.

 →  → Settings → Notification

- ▶ Change multiple line input:

To:

Enter the number to which the SMS should be sent.

On Missed Call:

Select **On** if you require SMS notification.

On Msg. on Answering :  
(Gigaset SL785 only)

Select **On** if you require SMS notification.

**Save** Press the display key.

### Warning

Do **not** enter your own fixed network number for the notification of missed calls. This can lead to chargeable endless looping.

## SMS mailboxes

The **general mailbox** is the default setting. Anyone can access this mailbox and it cannot be protected by a PIN. You can additionally set up three **personal mailboxes** and protect these with a **PIN**. Each mailbox is identified by a name and a "mailbox ID" (a kind of extension number).

**Please note:**

- ◆ If you operate a number of devices (base stations) with SMS functionality on a single phone line, then each SMS mailbox ID may only occur once. In this case you must also change the preset ID of the general mailbox ("0").
- ◆ You can only use personal mailboxes if your service provider supports this function. You can tell whether this is the case by the addition of a star (\*) to the number of a (preset) SMS centre.
- ◆ If you have forgotten your mailbox PIN, you can reset it by restoring the base station's default settings. This will **delete all SMS messages from all mailboxes**.

## Setting up and changing a personal mailbox

---

### Setting up a personal mailbox

 →  → Settings → SMS Mailboxes

 Select mailbox, e.g. Mailbox 2 and press **Edit**.

- ▶ Change multiple line input:

Activation :

Activate or deactivate mailbox.

Name :

Enter name.

Box ID :

Select mailbox ID (0–9). You can only select the available numbers.


Protection:

Activate/deactivate PIN protection.

SMS PIN:

If necessary, enter 4-digit PIN.

**Save** Press the display key.

Active mailboxes are marked with ✓ in the mailbox list. They are shown in the SMS list and can, if necessary, be displayed by pressing the message key .

### Deactivating a mailbox

- ▶ Set **Activation** to Off. Confirm message with **Yes** if necessary.

All SMS messages saved in this mailbox will be deleted.

### Deactivating PIN protection

- ▶ Set **Protection** to Off.

The mailbox PIN is reset to "0000".

### Changing the name of a mailbox




 →  → Settings → SMS Mailboxes →  (Select mailbox)

**Edit** Press the display key.

 Enter new name.

**Save** Press the display key.

### Changing a mailbox's PIN and ID

 →  → Settings → SMS Mailboxes →  (Select mailbox)

 Enter mailbox PIN if necessary and press **OK**.

- ▶ Set **Box ID**, **Protection** and **SMS PIN** (→ page 44).

## Sending an SMS to a personal mailbox

---

To send an SMS to a personal mailbox, the sender must know your ID and enter it after your number.

- ▶ You can send your SMS contact an SMS via your personal mailbox.

Your SMS contact will receive your SMS number with current ID and can save it in their directory. If the ID is invalid, the SMS will not be delivered.

## Setting SMS centres

---

SMS messages are exchanged between SMS centres operated by service providers. You must enter the SMS centre through which you wish to send and receive SMS messages into your phone. You can receive SMS messages from **every** SMS centre that is entered, provided you have registered with your service provider.


Your SMS messages are sent through the SMS centre that is entered as the active send service centre (→ page 45). Only one SMS centre can be the active send service centre at any one time.

If no SMS service centre is entered, the SMS menu only contains the entry **Settings**. Enter an SMS Service Centre (→ page 44).

## Entering/changing SMS centres

- ▶ You should find out about the services and special functions offered by your service provider **before you make a new application** and/or before you delete pre-configured call numbers.

 →  → Settings → Service Centres

 Select SMS centre (e.g. Service Centr. 1) and press **OK**.

- ▶ Change multiple line input:

Active Send :

Select **Yes** if SMS messages are to be sent via the SMS centre.

SMS :

Enter the number of the SMS service and insert a star if your service provider supports personal mailboxes.

**Save** Press the display key.

### Please note

Ask your service provider for details on how to enter service numbers if you wish to use personal mailboxes (pre-condition: your service provider supports this function).

## Sending an SMS via another SMS centre

- ▶ Activate the SMS centre (2 to 4) as the active send service centre.
- ▶ Send the SMS.

## SMS on a PABX


- ◆ You can only receive an SMS when the **Calling Line Identification is forwarded** to the extension of the PABX (CLIP). The CLIP evaluation of the phone number for the SMS centre takes place in your **Gigaset**.
- ◆ Depending on your PABX, you may have to add the access code (external line prefix) before the number of the SMS centre.









If in doubt, test your PABX, e.g. by sending an SMS to your own number: once with and once without the access code.

- ◆ When you send SMS messages, your sender number may be sent without your extension number. In this case the recipient cannot reply to you directly.


Sending and receiving SMS messages on **ISDN PABXs** is only possible via the MSN number assigned to your base station.

## Activating/deactivating first ring tone muting

 Open the main menu.

Press keys.

 **OK** Make the first ring audible.


Or:

 **OK** Mute the first ring.

## Activating/deactivating SMS function

If you deactivate the SMS function, you cannot send or receive any SMS messages with your phone.

The settings you have made for sending and receiving SMS messages (e.g. the numbers of the SMS centres) and the entries in the incoming and draft message lists are saved even after deactivation.


 Open the main menu.

Enter the digits.

 **OK** Deactivate SMS function.

Or:

 **OK** Activate SMS function (default setting).

## SMS troubleshooting

### Error codes when sending

EO	Calling Line Identification permanently withheld (CLIR) or Calling Line Identification not activated.
FE	Error occurred during SMS transfer.
FD	Connection to SMS centre failed; see self-help.

### Self-help with errors

The following table lists error situations and possible causes and provides notes on troubleshooting.

<p>You cannot send messages.</p> <ol style="list-style-type: none"> <li>1. You have not requested the CLIP service (Calling Line Identification Presentation). <ul style="list-style-type: none"> <li>▶ Ask your service provider to enable this service.</li> </ul> </li> <li>2. SMS transmission has been interrupted (e.g. by a call). <ul style="list-style-type: none"> <li>▶ Re-send the SMS.</li> </ul> </li> <li>3. The network provider does not support this feature.</li> <li>4. No number or an invalid number is entered for the SMS centre set as the active send service centre. <ul style="list-style-type: none"> <li>▶ Enter the number ( → page 44).</li> </ul> </li> </ol>
<p>You receive an incomplete SMS.</p> <ol style="list-style-type: none"> <li>1. Your phone's memory is full. <ul style="list-style-type: none"> <li>▶ Delete old SMS messages ( → page 41).</li> </ul> </li> <li>2. The service provider has not yet sent the rest of the SMS.</li> </ol>
<p>You have stopped receiving SMS messages.</p> <ol style="list-style-type: none"> <li>1. You have changed the ID of your mailbox. <ul style="list-style-type: none"> <li>▶ Give your SMS contacts your new ID or undo the change ( → page 44).</li> </ul> </li> <li>2. You have not activated your mailbox. <ul style="list-style-type: none"> <li>▶ Activate your mailbox ( → page 44).</li> </ul> </li> <li>3. Call divert (redirecting) is activated with When: All Calls or for the network mailbox by selecting All Calls. <ul style="list-style-type: none"> <li>▶ Change the call divert.</li> </ul> </li> </ol>

The SMS is played back.

1. The "display call number" service is not activated.
  - ▶ Ask your service provider to activate this function (chargeable).
2. Your mobile phone operator and your fixed line network SMS service provider have not agreed on a co-operation.
  - ▶ Obtain information from your fixed line network SMS service provider.
3. Your terminal has been recorded by your SMS provider as having no fixed line network SMS functionality, i.e. you are not registered with the provider.
  - ▶ Send any SMS to automatically register your telephone to receive SMS.

Messages are only received during the day.

- The terminal is recorded in your SMS provider's database as having no fixed network SMS functionality, i.e. you are not registered with the provider.
- ▶ Obtain information from your fixed line network SMS service provider.
  - ▶ Send any SMS to automatically register your telephone to receive SMS.

## Operating the answering machine of the Gigaset SL785 base station

---

You can access the answering machine via the handset or by remote operation (from another telephone/mobile phone). You can record your own announcement message or advisory message via the handset.


### Answering machine mode

You can use the answering machine in two different modes.

- ◆ In **Answer & Record** mode, the caller hears the announcement and can then leave a message.
- ◆ In **Answer only** mode, the caller hears your announcement but cannot leave a message.

### Operation via the handset

---

The handset loudspeaker activates **automatically** if you receive an acoustic prompt or message while operating. You can switch it off with the handsfree key .

### Activating/deactivating and setting the answering machine mode

---

You can choose between **Answer & Record**, **Answer only** and **Alternating**. By using the **Alternating** setting you can activate the answer and record mode for a set period, outside this period the caller will hear the advisory message.

 →  → **Activation** (✓ = on)

**Edit** Press the display key.

- ▶ Change multiple line input:

**Activation:**

Select **On** or **Off** to activate/deactivate the answering machine.

**Mode:**

Select **Answer & Record**, **Answer only** or **Alternating**.

If the **Alternating** mode is selected:


**Record from:**

Enter hours/minutes for the start of the period in 4-digit format.  
(The time **must** be set on the phone beforehand.)

**Record until:**

Enter hours/minutes for the end of the period in 4-digit format.

**Save** Press the display key.

When you switch the answering machine on, the remaining memory time is announced. If the time has not yet been set an appropriate announcement is made (Set time → page 15). The  icon appears in the display.

The phone is supplied with pre-recorded announcements for answer and record mode and for answer only mode. If a personal announcement has not been recorded, the relevant pre-recorded announcement is used.

If the messages memory is full and **Activation: On** has been selected, saving is interrupted and you will receive an instruction to delete old messages.

### Recording a personal announcement/advisory message

---


 →  → **Announcements** → **Record Announcementt.** / **Record Advisory Msg.**

**OK** Press the display key to start the recording.

You hear the ready tone (short tone).

- ▶ Now speak your announcement (at least 3 secs.).

**End** Press the display key to end the recording.

Cancel recording with  or **Back**.  
Restart the recording with **OK**.



After recording, the announcement is played back for you to check. You can re-record the announcement with **New**.

**Please note:**

- ◆ Recording ends automatically if the maximum recording time of 170 seconds is exceeded or there is a break in speech for more than 2 seconds.
- ◆ If you cancel the recording, the pre-recorded announcement will be used again.
- ◆ If the answering machine's memory is full, it will switch to *Answer only* mode.
  - ▶ Delete old messages and the answering machine will automatically switch back to *Answer & Record* mode. Repeat recording if required.

**Playing back announcements**

---

 →  → **Announcements** → **Play Announcement / Play Advisory Message**

If you have not recorded a personal announcement, the relevant pre-recorded announcement is played.

Record a new announcement while playing back the announcement:

**New** Press the display key.

If the answering machine's memory is full, it will switch to *Answer only* mode.

- ▶ Delete old messages and the answering machine will automatically switch back to *Answer & Record* mode. Repeat recording if required.

**Deleting announcements/advisory messages**

---

 →  → **Announcements** → **Delete Announcemnt. / Delete Advisory Msg.**

**Yes** Press the display key to confirm the prompt.



Once you have deleted your announcement, the relevant pre-recorded announcement will be used again.


**Playing back messages**

---

The date and time of each message is logged (provided this has been set, → page 15) and displayed during the playback. If Calling Line Identification is activated, the caller's number is displayed. If the caller's number is saved in the directory, their name is displayed.

**Playing back new messages**

New messages that have not yet been played back are indicated by the  symbol in the second display line and by the  key flashing on the handset.

 Press the message key.

**Answer. Machine:**

Select and press **OK**.

If there are new messages, playback then begins with the first new message. After the last new message you will hear the end tone and an announcement about how much recording time remains.

If the message has been saved with the date and time, you will hear an appropriate announcement before playback begins.



**Playing back old messages**

You can listen to old message if there are no more new messages. Begin playback as described under "Playing back new messages".

After the entry time and date have been played back (after approx. 3 seconds) a new message assumes the status "old".


**Stopping and controlling playback**

During message playback:


 **abc** Pause playback. Press  **abc** again to resume.  
**or**

**Options** Open menu.

**Pause** Select and press **OK**.  
To continue select **Continue** and press **OK**.



Go to the start of the current message.  
**Press twice** to go back to the previous message.



Skip to next message.  
**Press twice** to skip to the next but one message.

If playback is interrupted for over a minute, the answering machine returns to idle status.

### Marking a message as "new"

A previously played back "old" message is displayed as a "new" message again.

#### During message playback:



Press the star key.

**Or:**




Open menu.

Mark as New

Select and press **OK**.

An announcement informs you of the message's new status.

Playback of the current message is cancelled. Playback of next message starts, if applicable.

The  key on the handset flashes.

### Copying the phone number of a message to the directory

During playback or pause:



→ Copy to Directory

▶ Complete the entry → page 35.

### Deleting messages

You can either delete all old messages together or individually.

#### Deleting all old messages

During playback or pause:



→ Delete Old List



Press the display key to confirm the prompt.



Press the display key to confirm the prompt.

### Deleting individual old messages

During playback or pause:



Press the display key.

### Picking up a call from the answering machine


You can pick up a call while the answering machine is recording or is being operated via remote operation:



/ Accept

Press the talk or display key.

Recording stops and you can speak to the caller.

If 2 seconds of the call have already been recorded when you pick it up, the call will be displayed as a new message. The  key on the handset flashes.

You can answer the call even if it is not signalled on the handset.

### Diverting an external call to the answering machine

You can divert an incoming external call to the answering machine even if it is deactivated.

**Precondition:** Sufficient memory space is available on the answering machine.

An external call is signalled on the handset:



Select display key.

The answering machine immediately starts in recording mode and records the call. The set time for the call acceptance (→ page 50) is ignored.

### Activating/deactivating two-way record

You can record an **external** call with the answering machine.

▶ Inform the caller that the call is being recorded.



Open menu.

Two-Way Record

Select and press **OK**.

Two-way record is indicated on the display by an advisory text and is added to the answering machine list as a new message.

**End** Press the display key to stop two-way record.



The maximum recording time depends on the memory available on the answering machine. If the memory is full you will hear an end tone, the recording is aborted, and the call recorded up to that point is listed in the answering machine list as a new message.

## Activating/deactivating call screening

---

During recording of a message you can screen a call via the loudspeaker of registered handsets.

### Permanently activating/deactivating call screening

 →  → Call Screening (☑ = on)

**Change** Select display key to activate/deactivate the function.

### Deactivating call screening for the current recording


You can switch off the function on the handset during the recording.

**Silence** Press the display key.

## Setting the recording parameters

---

The answering machine has already been preset at the factory. Make individual settings using the handset.

 →  → Recordings

▶ Change multiple line input:

Length:

Select maximum recording time:  
1 Min., 2 Min., 3 Min. or Maximum.

Quality :

Select recording quality **Long Play**, **High** or **Excellent**. If the quality is higher, the maximum recording time is reduced.

Ring Delay:

Select when the answering machine should accept a call:

No delay, after 10 sec., 18 sec., 30 sec. or Automatic.

**Save** Press the display key.

### Information about call acceptance

In **Automatic** mode, the following applies for call acceptance:

- ◆ If there are no new messages, the answering machine answers a call after 18 seconds.
- ◆ If new messages are present, the answering machine answers a call after 10 seconds.


When operating remotely (→ page 51) you can tell after approx. 15 seconds that there are no new messages (otherwise the answering machine would already have accepted your call). There will be no call charges if you hang up now.



Please note:

You can configure your telephone so that the **first** ring tone is **muted** on all calls (→ page 45). This means that the time selected for the call acceptance predetermines how long the caller must wait before the answering machine answers the call.

## Resetting fast access for the answering machine using key 1


---

By default, key  has been assigned for fast access to the integrated answering machine. However, if you have set the network mailbox for fast access (→ page 52), you can reset this setting.

 →  → Set Key 1

Answering Machine

Select and press **OK**.

Once you have selected the answering machine, press and **hold** key . You will be connected directly.

The setting for fast access applies to all registered handsets.

## Operating when on the move (remote operation)

You can check and activate your answering machine from any other telephone (hotel, pay phone etc.), or initiate ringback from the answering machine with an SMS.


### Preconditions:

- ◆ You have set a system PIN other than 0000 (→ page 68).
- ◆ The phone you are using for remote operation has touch tone dialling (DTMF), i.e. you hear different tones when you press the keys. Alternatively, you can use a code transmitter (available from your mobile phone retailer).

## Calling the answering machine and playing back messages



Dial your own number.

When you hear your announcement, press  and enter the system PIN.

You will be informed whether any new messages have been recorded. The messages are now played back. You can now operate the answering machine with the keypad.

The following keys are used for operation:

- 1** To return to the start of the current message.  
Press twice to go back to the previous message.
- 2** Stop playback. Press again to resume.
- 3** Go to the next message.
- 0** Delete current message.

## Activating the answering machine

- ▶ Phone home and let the phone ring until you hear: "Please enter PIN".



Enter system PIN.

Your answering machine is activated. It tells you how much memory time is left.

The messages are now played back.

The answering machine cannot be deactivated remotely.

## Initiating ringback from the answering machine with SMS and listening to messages

**Precondition:** You must have stored a notification number (→ page 43).

You can use the telephone (mobile phone or any other device with SMS functionality) for which you have stored the notification number in your phone to send an SMS to your answering machine when you are away from home. It will then call you back. The message playback begins when you accept the call and press any digit key.

The SMS must contain the following:

\*<System PIN>\*<Ringback number>\*

The ringback number is optional.

Examples:

\*4711\* or \*4711\*089123456\*

If a ringback number is entered, it is dialled; otherwise the notification number is dialled.

You can now operate the answering machine via the keypad, as described in the previous sections.

## Using the network mailbox

---

The network mailbox is your network provider's answering machine within the network. You cannot use the network mailbox unless you have **requested** it from your network provider.

## Configuring fast access for the network mailbox



---

With fast access, you can dial the network mailbox or the integrated answering machine (Gigaset SL785 only) directly.

**Gigaset SL780:** Fast access is preset for the network mailbox. You only need to enter the number of the network mailbox.

**Gigaset SL785:** The integrated answering machine is preset for fast access. You can configure the network mailbox instead. Ask your network provider about this.

## Configuring fast access for the network mailbox and entering the network mailbox number

 →  → Set Key 1

Network Mailbox

Select and press **Select**  
(● = selected).



Enter the number for the network mailbox.

**Save**

Press the display key.


The setting for fast access applies to all Gigaset SL78H handsets.

## Calling the network mailbox



Press and **hold**. You are connected straight to the network mailbox.



Press handsfree key  if required. You will hear the network mailbox announcement.

## Viewing the network mailbox message

---

When a message is recorded, you receive a call from the network mailbox. If you have requested Calling Line Identification, the network mailbox number will be displayed. If you take the call, the new messages are played back. If you do not take the call, the network mailbox number will be saved in the missed calls list and the message key flashes (→ page 37).

## ECO DECT

You are helping to protect the environment with your Gigaset SL780/SL785.

### Reduced energy consumption

Your telephone has a power-saving adapter plug and uses less power.


### Reduced transmission power


The transmission power of your telephone is **automatically** reduced depending on the distance to the base station.

You can reduce the transmission power of the handset and base station even further by using Eco Mode or Eco Mode+:



- ◆ **Eco Mode**  
80% transmission power reduction in standby and talk mode.
- ◆ **Eco Mode+**  
100% transmission power deactivation in standby mode.

### Activate/deactivate Eco Mode / Eco Mode+


 → Settings → System  
→ Eco Mode / Eco Mode+

**Change** Press the display key  
( = on).

### Status displays

Display icon	
 (flashes)	Reception strength: – good to poor – no reception
	<b>Eco Mode+</b> enabled (displayed instead of the reception strength icon when in idle status)

#### Please note

- ◆ With **Eco Mode+** enabled, press and **hold** the talk key  to check base station reachability. You will hear the ring tone if the base station can be reached.
- ◆ When **Eco Mode+** is enabled:
  - call setup will be delayed by approx. 2 seconds.
  - handset standby time will be reduced by approx. 50%.
- ◆ Registering handsets that do not support **Eco Mode+** will cause the mode to be deactivated on the base station and all other handsets.
- ◆ Activating **Eco Mode** reduces the range of the base station.
- ◆ Eco Mode / **Eco Mode+** and repeater support ( → page 68) cancel each other out, i.e. if you use a repeater you cannot use Eco Mode and **Eco Mode+**.

# Setting an appointment (calendar)

You can use your handset to remind yourself of up to thirty appointments. Anniversaries entered in the directory (→ page 35) are automatically recorded in the calendar.

You can select whether the graphic calendar should be displayed in idle status. To do this, select

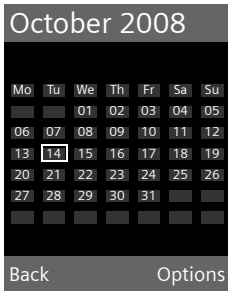
**Calendar** → **Options** → Show cal. in idle (☑ = display)

Press **Change** to activate/deactivate the function (☑ = on).

## Saving an appointment

**Precondition:** The date and time have already been set (→ page 15).

→ → Calendar



- ◆ The current date is highlighted in orange.
- ◆ Days on which appointments have already been saved are highlighted in orange.

/ Select the desired day in the graphic calendar.

The selected day is highlighted in orange. The current date changes to white.

Press the middle of the control key.

- ◆ If appointments have already been entered, this will open the list of

existing appointments on that day. Select <New Entry> → **OK** to open the data input window.

- ◆ If no appointments have been entered, the data input window will open immediately to add the new appointment.
- ▶ Change multiple line input:

**Appointment :**

Select On or Off.

**Date:**

Enter day/month/year in 8-digit format.

**Time:**

Enter hours/minutes in 4-digit format.

**Text :**

Enter text (max. of 16 characters). The text appears as the appointment name in the list and will be displayed on the screen during the appointment reminder. If you do not enter any text, only the date and time of the appointment are displayed.

**Save**

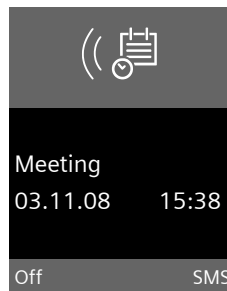
Press the display key.

### Please note

If you have already saved thirty appointments, you will have to first delete an existing appointment before adding a new one.

## Signalling appointments and anniversaries

In idle status, an appointment reminder is signalled with the selected ring tone (→ page 65) and will sound for 60 seconds. The entered text, date and time are displayed.



## You can either deactivate or answer an appointment reminder:

**Off** Press the display key to deactivate the appointment reminder.



Or:




**SMS** Press the display key to accept the appointment reminder with an SMS.


### Please note

During a call, the appointment reminder is signalled by a short tone.

## Managing appointments

 →  → Calendar

 /  Select a day in the graphic calendar and press the control key . (Days on which appointments have already been saved are highlighted in orange in the calendar).

 Select appointment for the day.

**Options** Open menu

You have the following options:

### View Entry

View selected appointment.

Open the **Options** menu for editing, deleting and activating/deactivating.

### Edit Entry

Edit selected appointment.

### Delete Entry

Delete selected appointment.

### Activate / Deactivate

Activate/deactivate the selected appointment.


### Delete all


Delete **all** appointments.



## Displaying missed appointments, anniversaries

Missed appointments/anniversaries (→ page 35) are displayed in the **Missed Alarms** list if:

- ◆ You do not accept an appointment/anniversary.
- ◆ The appointment/anniversary was signalled during a phone call.
- ◆ The handset is deactivated at the time of the appointment/anniversary.

The symbol  and the number of **new** entries are shown in the display. The most recent entry is at the head of the list.

Open the list by selecting the **message key**  (→ page 37) or via the **menu**:

 →  → Missed Alarms

Select appointment/anniversary.

Information about the appointment/anniversary is displayed. A missed appointment is displayed with the appointment name and a missed anniversary is displayed with the last name and first name. The date and time will also be given.

**Delete** Delete appointment

**SMS** Write an SMS.

If 10 entries are already stored in the list, the next appointment reminder will delete the oldest entry.



## Setting the alarm clock

---

**Precondition:** The date and time have already been set ( → page 15).

### Activating/deactivating the alarm clock and setting the wake-up time

---

 →  → Alarm Clock

▶ Change multiple line input:

Activation :

Select On or Off.

Time:

Enter the wake-up time in 4-digit format.

Occurrence:

Select Daily or Monday-Friday.


Volume:

Set the volume (1–6).

Melody:

Select melody.

**Save** Press the display key.

In idle status, the  icon and wake-up time are displayed.

A wake-up call is signalled on the display and with the selected ring tone ( → page 3). The wake-up call sounds for 60 seconds. If no key is pressed, the wake-up call is repeated twice at five minute intervals and then turned off.

During a call, the wake-up call is only signalled by a short tone.

### Deactivating the wake-up call/ repeating after a pause (snooze mode)

---

**Precondition:** A wake-up call is sounding.

**Off** Press the display key. The wake-up call is deactivated.

or

**Snooze** Press the display key or any key. The wake-up call is deactivated and then repeated after 5 minutes. After the second repetition the wake-up call is deactivated completely.

## Using several handsets

---

### Registering handsets

---

You can register up to six handsets to your base station.

A Gigaset SL78H handset can be registered on up to four base stations.

### Manually registering the Gigaset SL78H to the Gigaset SL780/SL785

---

You must activate manual registration of the handset on both the handset and the base station.

Once it has been registered, the handset returns to idle status. The handset's internal number is shown in the display e.g. INT 1. If not, repeat the procedure.


#### On the handset


The handset must not be registered to a base station.

**Register** Press the display key.

The handset is already registered to a base station:

 →  → Registration  
→ Register Handset

 Select base station, e.g. Base 3 and press **OK**.

 If required, enter the system PIN for the base station and press **OK**.

A message displays that a search for a base station that is ready for registration is being carried out.

#### On the base station

Within 60 seconds press and **hold** the registration/paging key on the base station ( → page 2) (approx. 3 seconds).

## Registering other handsets

You can register other Gigaset handsets and handsets for other devices with GAP functionality as follows.

### On the handset

- ▶ Start to register the handset as described in its user guide.


### On the base station


Press and **hold** the registration/paging key on the base station (→ page 2) (approx. 3 sec.).

## De-registering handsets

You can de-register any other registered handset from any registered Gigaset SL78H handset.

 →  → Registration  
→ De-register Handset

 Select the internal subscriber you wish to deregister and press **OK**.  
(The handset you are currently using is highlighted with <).)

 Enter the current system PIN and press **Save**.


**Yes** Press the display key.

## Locating a handset ("paging")

You can locate your handset using the base station.




- ▶ **Briefly** press the registration/paging key on the base station (→ page 2).
- ▶ All handsets will ring simultaneously ("paging"), even if the ring tones are deactivated.

### Ending paging

- ▶ **Briefly** press the registration/paging key on the base station or press the talk key  on the handset.

## Changing the base station



If your handset is registered to more than one base station, you can set it to a particular base station or to the base station that has the best reception (**Best Base**).

 →  → Registration → Select Base  
 Select one of the registered base stations or **Best Base** and press **Select**.




## Making internal calls

Internal calls to other handsets registered to the same base station are free of charge.



### Calling a specific handset

 Initiate internal call.  
 Enter the number of the handset.



Or:

 Initiate internal call.  
 Select handset.  
 Press the talk key.

### Calling all handsets ("group call")


 Initiate internal call.  
 Press the star key.

or

Call All  Select menu option and  
 Press the talk key.


All handsets are called.


### Ending a call

 Press the end call key.

## Transferring a call to another handset


You can transfer an external call to another handset (connect).

 Open the list of handsets. The external participant hears hold music if activated (→ page 68).

 Select a handset or Call All and press **OK**.


When the internal participant answers:

▶ If necessary announce the external call.

 Press the end call key.

The external call is transferred to the other handset.

If the internal participant does **not** answer or the line is busy, press the display key **End** to return to the external call.


When transferring a call you can also press the end call key  before the internal participant answers.


Then, if the internal participant does not answer or the line is busy, the call will automatically return to you.

## Internal consultation/conference calls

When you are conducting an **external** call, you can call an **internal** participant at the same time for consultation or hold a conference call between all 3 participants.

You are conducting an **external** call:

 Open the list of handsets. The external participant hears hold music if activated (→ page 68).

 Select handset and press **OK**. You are connected to the internal participant.


either:


**End** Press the display key. You are reconnected with the external subscriber.

Or:

**Conf.** Press the display key. All 3 participants are connected with each other.

## Ending a conference call

 Press the end call key.

If an **internal** participant presses the end call key , the other handset remains connected to the external participant.

## Accepting/rejecting call waiting

If you receive an **external** call during an **internal** call, you will hear the call waiting tone (short tone). The caller's number will appear in the display if Calling Line Identification is enabled.

### Ending an internal call, accepting an external call

**Accept** Press the display key.

The internal call is **ended**. You are connected to the external caller.

### Rejecting the external call

**Reject** Press the display key.

The call waiting tone is turned off. You remain connected with the internal participant. The ring tone can still be heard on other registered handsets.


## Listening in to an external call

**Precondition:** The Listening In function must be activated.

You are conducting an external call. An internal participant can listen in on this call and take part in the conversation. All the participants are made aware of the "listening in" by a signal tone.

## Activating/deactivating listening in

 →  → Telephony → Listening In

Press **Change** to activate/deactivate the function ( = on).

## Internal listening in

---

The line is engaged with an external call. Your screen will display information to that effect. You want to listen in to the external call.



Press and **hold** the talk key.


You can listen in to the call. All participants hear a signal tone. During this time, this handset displays the **Conference** message and it is not possible to dial another number from this handset.

## Ending listening in



Press the end call key.

All participants hear a signal tone.

If the **first** internal participant presses the end call key , the handset that has "listened in" remains connected to the external participant.

## Changing the name of a handset

---

The names "INT 1", "INT 2" etc. are assigned automatically at registration. You can change these names. The name must be no more than 10 characters. The changed name is displayed in every handset's list.



Open the list of handsets. Your own handset is indicated by ◀.



Select handset.



Open menu.

Rename



Enter name.



Press the display key.

## Changing a handset's internal number

---

A handset is **automatically** assigned the lowest free number when it is registered. If all slots are occupied, number 6 is overwritten if this handset is in idle status. You can change the internal number of all registered handsets (1–6).



Open the list of handsets. Your own handset is indicated by ◀.



Open menu.

Assign Handset No.

Select and press **OK**.



Select number. Only numbers that have not been assigned are displayed.



Press the display key to save the input.

## Using a handset as a room monitor

---

If the room monitor is activated, a previously saved destination number is called as soon as a set noise level is reached. You can save an internal or external number in your handset as the destination number. All of the handset keys are deactivated, with the exception of the display keys.

The room monitor call to an external number stops after around 90 seconds. The room monitor call to an internal number (handset) stops after approx. 3 minutes (depending on the base station). When the room monitor is activated, all keys are locked except the end call key. The handset's speaker is muted.

When the room monitor is activated, incoming calls to the handset are indicated **without a ring tone** and are only shown on the screen. The display and keypad are not illuminated and advisory tones are also turned off.

If you accept an incoming call, the room monitor is suspended for the duration of the call, but the function **remains** activated.

If you deactivate then reactivate the handset, the room monitor remains activated.

### Warning!

- ◆ You should always check the operation of the room monitor before use. For example, test its sensitivity. Check the connection if you are diverting the room monitor to an outside number.
- ◆ When the function is switched on, the handset's operating time is considerably reduced. If necessary, place the handset in the charging cradle. This ensures that the battery does not run down.
- ◆ Ideally the handset should be positioned 1 to 2 metres away from the baby. The microphone must be directed towards the baby.
- ◆ The connection to which the room monitor is diverted must not be blocked by an activated answering machine.

## Activating the room monitor and entering the destination number

 →  → Room Monitor


- ▶ Change multiple line input:


Activation :

Select On to activate.

Alarm to:

Select Internal or External.

**External number:** Select the number from the directory (press display key ) or enter it directly.

**Internal number:** Select display key  → Select handset or Call All if you want to call all registered handsets → **OK**.

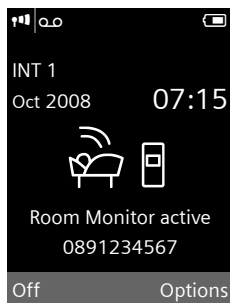
In idle status, the destination number or the internal destination number is displayed.

Sensitivity:

Select noise level sensitivity (Low or High).

- ▶ Press **Save** to save the settings.

When the room monitor function is activated, the idle display looks as shown below:




## Changing the set destination number

 →  → Room Monitor

- ▶ Enter and save number as described in "Activating the room monitor and entering the destination number" (→ page 60).

## Cancel/deactivate room monitor

Press the end call key  to cancel the call when the **room monitor is activated**.

**In the idle status** press the display key **Off** to deactivate the room monitor mode.

## Deactivating the room monitor remotely

**Preconditions:** The phone must support touch tone dialling and the room monitor should be set for an external destination number.

- ▶ Accept the call from the room monitor and press keys  .

The room monitor function will deactivate after the call ends. There will be no further room monitor calls. The other room monitor settings (e.g. no ring tone) on the handset will remain activated until you press the display key **Off** on the handset.

To reactivate the room function with the same phone number:

- ▶ Turn on the activation again and save with **Save** (→ page 60).

## Using Bluetooth devices

Your Gigaset SL78H handset can communicate wirelessly via Bluetooth™ with other devices using this technology.

Before you can use your Bluetooth devices, you must first activate Bluetooth and then register the devices to the handset.

You can register 1 Bluetooth headset to the handset. You can also register up to 5 data devices (PC, PDA) to send and receive directory entries as vCards or exchange data with the computer (→ page 77).



To use the phone numbers, dialling codes (country and area code) must be stored in the directory (→ page 67).

You will find a description of how to operate your Bluetooth devices in the user guides for these devices.


### Please note

- ◆ You can operate headsets on your handset that have the **headset** or **handsfree profile**. If both profiles are available, the handsfree profile will be used to communicate.
- ◆ It can take up to 5 seconds to create a connection between your handset and a Bluetooth headset. This applies both when a call is accepted using the headset or transferred to the headset, and when a number is dialled from the headset.

## Activating/deactivating Bluetooth mode

 →  → Activation

Press **Change** to activate or deactivate Bluetooth mode (☑ = activated).


In idle status, the  icon on the handset shows that Bluetooth mode is activated (→ page 3):

## Registering Bluetooth devices

The distance between the handset in Bluetooth mode and the activated Bluetooth device (headset or data device) should be no more than 10 m.

### Please note

- ◆ If you register a headset, any headset that is already registered will be overwritten.
- ◆ If you would like to use a headset with your handset that is already registered to another device (e.g. to a mobile phone), please **deactivate** this connection before you start the registration process to the Gigaset.


 →  → Search for Headset / Search for DataDevice

The search can take up to 30 seconds.

Once the device has been found, its name will be shown on the display.

**Options** Press the display key.

**Trust Device** Select and press **OK**.

 Enter the PIN for the Bluetooth device you want to **register** and press **OK**.

The device is saved in the list of known devices.

## Using Bluetooth devices

### Cancelling/repeating current search

To cancel search:

**Cancel** Press the display key.

Repeat search if necessary:

**Options** Press the display key.

Repeat Search

Select and press **OK**.



### Editing the list of known (trusted) devices


---

#### Open list

 →  → Known Devices

A corresponding icon appears next to each device name in the list displayed:

Icon	Meaning
	Bluetooth headset
	Bluetooth data device

If a device is connected, the corresponding symbol  is shown in the header of the display.

#### Viewing entries

Open list →  (select entry)

**Options** Press the display key.

View Entry Select and press **OK**.

Device name and address are displayed.  
Back with **OK**.

#### Deregistering Bluetooth devices

Open list →  (select entry)

**Options** Press the display key.

Delete Entry Select and press **OK**.

#### Please note


If you deregister an activated Bluetooth device, it may try to reconnect as an "unregistered device".

### Changing the name of a Bluetooth device

Open list →  (select entry)

**Options** Press the display key.

Edit Name Select and press **OK**.

 Change the name.

**Save** Press the display key

### Rejecting/accepting an unregistered Bluetooth device


---

If a Bluetooth device that is not registered in the list of known devices tries to connect with the handset, you will be prompted on the display to enter the PIN for the Bluetooth device (bonding).

#### ◆ Reject

**Back** Press the display key.

#### ◆ Accept

 Enter the PIN for the Bluetooth device you want to **accept** and press **OK**.

If you have accepted the device, you can use it temporarily (i.e. as long as it is within receiving range or until you deactivate the handset) or save it to the list of known devices.

Once the PIN has been confirmed, save to the list of known devices:

- **Yes** Press the display key.
- **No** Press the display key: use temporarily.


### Changing the Bluetooth name of the handset

---

You can change the handset name used to identify it on the display of another Bluetooth device.

 →  → Own Device

**Change** Press the display key

 Change the name.

**Save** Press the display key

## Handset settings

---

Your handset is preconfigured, but you can change the settings to suit your individual requirements.

### Quick access to functions and numbers

---

You can assign a number or a function to each of the digit keys **[0 +]** and **[2 abc]** to **[www 9]**.

The left and right display keys have a function pre-selected by default. You can change the assignment (→ page 63).

The number is then dialled or the function started by simply pressing a key.

### Assigning digit keys

---

**Precondition:** You have not yet assigned a number or function to the digit key.

- ▶ Press and **hold** the digit key.

The list of possible key assignments is opened. The following can be selected:

#### Quick Dial / Call-by-Call

Assign key to a number from the directory or call-by-call list.

The directory or call-by-call list is opened.

- ▶ Select an entry and press **OK**.

If you delete or edit an entry in the directory or call-by-call list, this has no effect on the assignment to the digit/display key.

#### Room Monitor

Assign menu for setting and activating the room monitor to a key (→ page 59).

#### Alarm Clock

Assign menu for setting and activating the alarm clock to a key (→ page 56).

#### Calendar

Open calendar/enter new appointment.

#### Bluetooth

Assign the Bluetooth menu to a key.

#### Redial

Display the last number redial list.

#### More Functions...

More features are available:

##### INT

Internal calls (→ page 57).

##### SMS

Assign menu for SMS functions to a key (→ page 40).

##### SMS Notification

Assign menu for activating SMS notification to a key (→ page 43).

##### Withhold Number

Suppress Calling Line Identification for the next call (→ page 30).

### Starting the function, dialling the number

---

Press and **hold** the digit key in idle status of the handset, or **briefly** press the display key.

Depending on the key assignment:

- ◆ Numbers are dialled directly.
- ◆ The function menu is opened.

### Changing key assignments

---

#### Display key

- ▶ Press and **hold** the left or right display key.

The list of possible key assignments is opened.

- ▶ Proceed as described when first assigning the digit key (→ page 63).

The selected function or name of the phone number in the directory or call-by-call list is displayed (abbreviated if necessary) in the bottom display line via the display key.



## Handset settings

### Digit key



- ▶ **Briefly** press the digit key.


**Change** Press the display key. The list of possible key assignments is displayed.

- ▶ Proceed as is described when first assigning the key with a quick dial (→ page 63).

## Changing the display language






You can view the display texts in different languages.


 →  → Language

The current language is indicated by a .

 Select language and press **Select**.

If you accidentally choose a language you do not understand:

 →  →  →  →   
Press keys in sequence and confirm by selecting **OK**.


 Select the correct language and press **Select**.

## Setting the display

### Setting the screensaver

In idle status the clock can be displayed as a screensaver. This will replace the idle status display. It may conceal the calendar, date, time and name.

The screensaver is not displayed in certain situations, e.g. during a call or if the handset is deregistered.

If a screensaver is activated, the Screensaver menu option is marked with .

 →  → Display → Screensaver

The current setting is displayed.

- ▶ Change multiple line input:


Activation :

Select On (screensaver is displayed) or Off (no screensaver).


Selection :

Select screensaver **or**

**View** Press the display key. The active screensaver is displayed.

 Select screensaver and press **OK**.

**Save** Press the display key.

When the screensaver conceals the display, **briefly** press  to show the idle display.

### Setting the display backlight

Depending on whether or not the handset is in the charging cradle, you can activate or deactivate the backlight. If it is activated, the display is permanently dimmed.

 →  → Display → Backlight

The current setting is displayed.

- ▶ Change multiple line input:

In Charger

Select On or Off.

Out of Charger


Select On or Off.

— Please note —


With the On setting, the standby time of the handset can be significantly reduced.

**Save** Press the display key.

## Activating/deactivating auto answer

If you activate this function, when you receive a call you can simply lift the handset out of the charging cradle without having to press the talk key .





 →  → Telephony → Auto Answer

**Change** Press display key ( = on).



## Changing the handsfree/earpiece volume

You can set the loudspeaker volume for handsfree talking and the earpiece volume to five different levels.


In idle status:

-  → Handset Volume
-  Set the earpiece volume.
-  Scroll to the **Speaker** line.
-  Set the handsfree volume.
- Save** Press display key if necessary to save the setting permanently.

Setting the volume during a call:

-  Press the control key.
-  Select volume.

The setting will automatically be saved after approx. 3 seconds, if not then press the display key **Save**.



If  is assigned with another function, e.g. toggling (→ page 31):

- Options** Open menu.
- Volume** Select and press **OK**.
- Configure setting (see above).

### Please note

You can also set the call volume, the ring tones and the advisory tones via the menu (→ page 27).

## Changing ring tones

- ◆ **Volume:**  
You can choose between five volumes (1–5; e.g. volume 3 = ) and the "crescendo" ring tone (6; volume increases with each ring = ).
- ◆ **Ring tones:**  
You can select a ring tone from a list of pre-loaded ring tones.






You can set different ring tones for the following functions:

- ◆ **External Calls:** for external calls
- ◆ **Internal Calls:** for internal calls
- ◆ **Appointments:** for set appointments (→ page 54)
- ◆ **All:** the same ring tone for all functions

## Settings for individual functions

Set the volume and melody depending on the type of signalling required.

In idle status:

-  → Ringer Settings
-  Select setting, e.g. **External Calls** and press **OK**.
-  Set volume (1–6).
-  Scroll to the next line.
-  Select melody.
- Save** Press the display key to save the setting.

### Additionally for external calls:

Once you have selected the melody, you can specify a time period when you do not want the telephone to ring, e.g. during the night.

**Time Control:**

Select **On** or **Off**.

**Mute ring tone from:**

Enter the start of the period in 4-digit format.

**Mute ring tone until:**

Enter the end of the period in 4-digit format.

### Please note

During this period, you will continue to receive calls from numbers to which you have assigned a personalised melody in the directory (VIP).

## Same ring tone for all functions

In idle status:

 → Ringer Settings → All

- ▶ Set volume and ring tone (see "Settings for individual functions").

**Save** Press the display key.

**Yes** Confirm the prompt to save your settings.


### Please note


You can also set the call volume, the ring tones and the advisory tones via the menu (→ page 27).

## Activating/deactivating the ring tone


You can deactivate the ring tone on your handset before you answer a call or when the handset is in idle status; the ring tone can be deactivated permanently or just for the current call. The ring tone cannot be re-activated while an external call is in progress.

### Deactivating the ring tone permanently

 Press and **hold** the star key.

The  icon appears in the display.

### Reactivating the ring tone


 Press and **hold** the star key.

### Deactivating the ring tone for the current call

**Silence** Press the display key.


## Activating/deactivating the alert tone

In place of the ring tone you can activate an alert tone. When you get a call, you will hear a **short tone** ("Beep") instead of the ring tone.

 Press and **hold** the star key and **within 3 seconds**:

### Beep

Press the display key. A call will now be signalled by **one** short alert tone.

The  icon appears in the display.

## Activating/deactivating advisory tones

Your handset uses advisory tones to tell you about different activities and statuses. The following advisory tones can be activated/deactivated independently of each other:


◆ **Key click:** every key press is confirmed.

◆ **Acknowledge tones:**

- **Confirmation tone** (ascending tone sequence): at the end of an entry/setting and when an SMS or a new entry arrives in the answering machine list or calls list
- **Error tone** (descending tone sequence): when you make an incorrect entry
- **Menu end tone:** when scrolling to the end of a menu

◆ **Battery low beep:** the battery requires charging.

In idle status:

 → Advisory Tones

- ▶ Change multiple line input:

Key Tones:

Select On or Off.

Confirmation:

Select On or Off.

Battery:

Select On, Off or In Call. The battery warning tone is only activated/deactivated and only sounds during a call.

### Save

Press the display key.

### Please note

You can also set the call volume, the ring tones and the advisory tones via the menu (→ page 27).

## Setting your own area code

In order to transfer phone numbers (e.g. in vCards), it is essential that your area code (international and local area code) is saved on the phone.


Some of these numbers are already pre-set.


 →  → Telephony → Area Codes


Check that the (pre)set area code is correct.


▶ Change multiple line input:

 Select/change input field.

 Navigate in the input field.

 If necessary, delete number: press the display key.


 Enter number.

 Press the display key.

**Example:**

Area Codes

International code:  
00 - 44

Local area code:  
0 -  ]

< C Save


## Restoring the handset default settings

You can reset individual settings and changes that you have made.

The following settings are **not** affected by a reset

- ◆ Registration to the base station
- ◆ Date and time
- ◆ Entries in the calendar
- ◆ Entries in the directory, call-by-call list, call lists and SMS lists

 →  → Reset → Handset Reset

 Press the display key.

## Base station settings

---

The base station settings are carried out using a registered Gigaset SL78H handset.

### Protecting against unauthorised access

---

Protect the system settings of the base station with a PIN known only to you. The system PIN must be entered when, for example, registering/deregistering a handset to/from the base station or when restoring the default settings.


#### Changing the system PIN


---

You can change the 4-digit system PIN set on the base station (default setting: **0000**) to a 4-digit PIN known only by you.

Gigaset SL785: Setting a system PIN facilitates remote operation of the answering machine → page 51.

 →  → System → System PIN

 Enter the current system PIN and press **OK**.

 Enter your new system PIN and press **OK**.

#### Resetting the system PIN

---

If you have forgotten your system PIN you can reset the base station to the original code **0000**:

Disconnect the power cord from the base station. Hold down the registration/paging key on the base station while reconnecting the power cable to the base station. Release the key after a while.

The base station has now been reset and the system PIN **0000** set.

#### — Please note —

All handsets are deregistered and must be re-registered.

## Activating/deactivating music on hold

---

 →  → Audio Settings  
→ Music on hold

Press **Change** to activate or deactivate the music on hold ( = on).

## Repeater support

---

With a repeater you can increase the range and reception strength of your base station. You will need to activate repeater mode. This will terminate any calls that are in progress at the time.

**Precondition:** A repeater is registered. Eco mode is deactivated.

 →  → System → Repeater Mode

Press **Change** to deactivate repeater mode ( = on).

#### — Please note —

Repeater support and eco mode (→ page 53) cancel each other out, i.e. both functions cannot be used at the same time.


## Restoring the base station to the factory settings

---

When the settings are restored

- ◆ date and time will be retained
- ◆ Eco Mode/Eco Mode+ is deactivated
- ◆ handsets are still registered
- ◆ the system PIN is not reset

 →  → Reset → Base Reset

 Enter the system PIN and press **OK**.


**Yes** Press the display key.

## Connecting the base station to the PABX

The following settings are only necessary when your PABX requires them; see the PABX user guide.

You cannot send or receive SMS messages on PABXs that do not support Calling Line Identification.



## Dialling modes and recall



The current setting is indicated by .

### Changing the dialling mode

The following dialling modes can be selected:



- ◆ Touch tone dialling (DTMF)
- ◆ Dial pulsing (DP)



 →  → Telephony → Dialling Mode

 Select dialling mode and press **Select** ( = selected).

### Setting recall

Your phone is preset at the factory for operation on the main connection. For operation on a PABX, you may have to change this value. Please refer to the user guide for your PABX.


 →  → Telephony → Recall

 Select recall and press **Select**. ( = set value). Possible values are:  
80 ms, 100 ms, 120 ms,  
180 ms, 250 ms, 300 ms,  
600 ms, 800 ms.

## Saving an access code (outside line code)

**Precondition:** You may have to enter an access code for external calls in your PABX, e.g. "0".

 →  → Telephony → Access Code

 Enter or change access code, max. 3 digits.


**Save** Press the display key.


If an access code has been saved:










- ◆ The access code is prefixed automatically when you select from the following lists: numbers of the SMS centres, calls list or answering machine list.
- ◆ The access code must be entered when dialling manually and when manually entering directory, emergency/quick dial numbers and SMS centre numbers.
- ◆ If you copy the recipient's number from the directory when sending an SMS, you have to delete the access code.
- ◆ An existing access code is deleted using **<C**.

## Setting pauses


### Changing pause after line seizure

You can change the length of pause that is inserted between pressing the talk key  and sending the number.

 Open the main menu.

 \*  #  +  S  #  1  #  mmo 

Press keys.

 Enter digit for the pause length (1 = 1 sec.; 2 = 3 sec.; 3 = 7 sec.) and press **OK**.

## Changing the pause after the recall key

You can change the length of the pause if your PABX requires this (refer to the user guide for your PABX).



Open the main menu.



Press keys.



Enter a digit for the length of the pause (1 = 800 ms; 2 = 1600 ms; 3 = 3200 ms) and press **OK**.

## Changing a dialling pause (pause after access code)

**Precondition:** You have saved an access code (→ page 69).



Open the main menu.



Press keys.



Enter number for the length of the pause (1 = 1 sec.; 2 = 2 sec.; 3 = 3 sec.; 4 = 6 sec.) and press **OK**.

**To insert a dialling pause:** press and hold **R** for 2 seconds. A P appears in the display.

## Switching temporarily to touch tone dialling (DTMF)

If your PABX still operates with dial pulsing (DP), but you need touch tone dialling (DTMF) for a connection (e.g. to listen to the network mailbox) you must switch to touch tone dialling for the call.

**Precondition:** You are conducting a call or have already dialled an external number.



Press the star key.

After the call is ended, dial pulsing is automatically activated again.

## Service (Customer Care)

We offer you support that is fast and tailored to your specific needs!

Our Online Support on the Internet can be reached any time from anywhere.

[www.gigaset.com/customer-care](http://www.gigaset.com/customer-care)

It provides you with 24/7 support for all our products. It also provides a list of FAQs and answers plus user guides and current software updates (if available for the product) for you to download.

You will also find frequently asked questions and answers in the appendix of this user guide.

For personal advice on our range of products and assistance with repairs or guarantee/warranty claims you can contact us on:

UK helpdesk: 0 84 53 67 08 12.

Please have your proof of purchase ready when calling with regard to guarantee/warranty claims.

Replacement or repair services are not offered in countries where our product is not sold by authorised dealers.

## Questions and answers


If you have any questions about using your phone, visit us at

[www.gigaset.com/customer-care](http://www.gigaset.com/customer-care) at any time. The table below contains a list of common problems and possible solutions.

### Registration or connection problems with a Bluetooth headset.

- ▶ Reset the Bluetooth headset (see the user guide for your headset).
- ▶ Delete registration data from the handset when deregistering the device (→ page 62).
- ▶ Repeat the registration process (→ page 61).

### The display is blank.

1. The handset is not switched on.
  - ▶ Press and **hold** the end call key .
2. The battery is flat.
  - ▶ Charge the battery or replace it (→ page 12).

### "No Base" flashes in the display.

1. The handset is outside the range of the base station.
  - ▶ Move the handset closer to the base station.

The base station's range is reduced because eco mode is activated.

  - ▶ Deactivate eco mode (→ page 53) or reduce the distance between the handset and the base station.
2. The base station is not turned on.
  - ▶ Check the base station's mains adapter (→ page 10).

### "Please register handset" flashes in the display.

Handset has not been registered with the base station or has been deregistered.

- ▶ Register the handset (→ page 56).

### Handset does not ring.

1. The ring tone is deactivated.
  - ▶ Activate the ring tone (→ page 66).
2. Call divert set for "All Calls".
  - ▶ Deactivate call divert (→ page 31).

### You cannot hear a ring tone/dialling tone from the fixed line network.

The phone cord supplied has not been used or has been replaced by a new cord with the wrong pin connections.

- ▶ Please always use the phone cord supplied or ensure that the pin connections are correct when purchasing from a retailer (→ page 10).

### Error tone sounds after system PIN prompt.

You have entered the wrong system PIN.

- ▶ Reset the system PIN to 0000 (→ page 68).

### Forgotten the system PIN.

- ▶ Reset the system PIN to 0000 (→ page 68).



**The other party cannot hear you.**

You have pressed the **Mute** display key.  
The handset is "muted".

- ▶ Activate the microphone again (→ page 29).

**The number of the caller is not displayed despite CLIP.**

Calling Line Identification is not enabled.

- ▶ **The caller** should ask the network provider to release Calling Line Identification (CLI).

**You hear an error tone when keying an input (a descending tone sequence).**

Action has failed/invalid input.

- ▶ Repeat the operation.  
Watch the display and refer to the user guide if necessary.

**You cannot listen to messages on the network mailbox.**

Your PABX is set for dial pulsing.

- ▶ Set your PABX to touch tone dialling.

**Gigaset SL785 only**

**No time is specified for a message in the calls list.**

Date and time have not been set.

- ▶ Set the date/time (→ page 15).

**The answering machine announces "PIN is incorrect" during remote operation.**

1. You have entered the wrong system PIN.
  - ▶ Enter the system PIN again.
2. The system PIN is still set to 0000.
  - ▶ Change the system PIN (→ page 68).

**The answering machine is not recording any messages/has switched over to answer only.**

Its memory is full.

- ▶ Delete old messages.
- ▶ Play back new messages and delete.

## Authorisation

---

This device is intended for analogue phone lines in the UK.

Country-specific requirements have been taken into consideration.

We, Gigaset Communications GmbH, declare that this device meets the essential requirements and other relevant regulations laid down in Directive 1999/5/EC.

A copy of the 1999/5/EC Declaration of Conformity is available at this Internet address:

[www.gigaset.com/docs](http://www.gigaset.com/docs).



Bluetooth  Qualified Design Identity

The Bluetooth QD ID for your Gigaset SL78H is: B013322.

## Guarantee Certificate

### United Kingdom

---

Without prejudice to any claim the user (customer) may have in relation to the dealer or retailer, the customer shall be granted a manufacturer's Guarantee under the conditions set out below:

- ◆ In the case of new devices and their components exhibiting defects resulting from manufacturing and/or material faults within 24 months of purchase, Gigaset Communications shall, at its own option and free of charge, either replace the device with another device reflecting the current state of the art, or repair the said device. In respect of parts subject to wear and tear (including but not limited to, batteries, keypads, casing), this warranty shall be valid for six months from the date of purchase.
- ◆ This Guarantee shall be invalid if the device defect is attributable to improper treatment and/or failure to comply with information contained in the user guides.
- ◆ This Guarantee shall not apply to or extend to services performed by the authorised dealer or the customer themselves (e. g. installation, configuration, software downloads). User guides and any software supplied on a separate data medium shall be excluded from the Guarantee.
- ◆ The purchase receipt, together with the date of purchase, shall be required as evidence for invoking the Guarantee. Claims under the Guarantee must be submitted within two months of the Guarantee default becoming evident.

- ◆ Ownership of devices or components replaced by and returned to Gigaset Communications shall vest in Gigaset Communications.
- ◆ This Guarantee shall apply to new devices purchased in the European Union. For Products sold in the United Kingdom the Guarantee is issued by: Gigaset Communications GmbH, Schlavenhorst 66, D-46395 Bocholt, Germany.
- ◆ Any other claims resulting out of or in connection with the device shall be excluded from this Guarantee. Nothing in this Guarantee shall attempt to limit or exclude a Customer's Statutory Rights, nor the manufacturer's liability for death or personal injury resulting from its negligence.
- ◆ The duration of the Guarantee shall not be extended by services rendered under the terms of the Guarantee.
- ◆ Insofar as no Guarantee default exists, Gigaset Communications reserves the right to charge the customer for replacement or repair.
- ◆ The above provisions does not imply a change in the burden of proof to the detriment of the customer.

To invoke this Guarantee, please contact the Gigaset Communications telephone service. The relevant number is to be found in the accompanying user guide.

## Environment

---

### Our environmental mission statement

---

We, Gigaset Communications GmbH, carry social responsibility and are actively committed to a better world. Our ideas, technologies and actions serve people, society and the environment. The aim of our global activity is to secure sustainable life resources for humanity. We are committed to a responsibility for our products that comprises their entire life cycle. The environmental impact of products, including their manufacture, procurement, distribution, use, service and disposal, are already evaluated during product and process design.

Further information on environmentally friendly products and processes is available on the Internet under [www.gigaset.com](http://www.gigaset.com).

### Environmental management system

---



Gigaset Communications GmbH is certified pursuant to the international standards EN 14001 and ISO 9001.

**ISO 14001 (Environment):** certified since September 2007 by TÜV SÜD Management Service GmbH.

**ISO 9001 (Quality):** certified since 17/02/1994 by TÜV SÜD Management Service GmbH.

### Ecological energy consumption

---

The use of ECO DECT (→ page 53) saves energy and is an active contribution towards protecting the environment.

## Disposal

---

Batteries should not be disposed of in general household waste. Observe the local waste disposal regulations, details of which can be obtained from your local authority or the dealer you purchased the product from.

All electrical and electronic products should be disposed of separately from the municipal waste stream via designated collection facilities appointed by the government or the local authorities.



This crossed-out wheeled bin symbol on the product means the product is covered by the European Directive 2002/96/EC.

The correct disposal and separate collection of your old appliance will help prevent potential negative consequences for the environment and human health. It is a precondition for reuse and recycling of used electrical and electronic equipment.

For more detailed information about disposal of your old appliance, please contact your local council refuse centre or the original supplier of the product.

## Appendix

### Care

Wipe the base station, charging cradle and handset with a **damp** cloth (do not use solvent) or an antistatic cloth.

**Never** use a dry cloth. This can cause static.

### Contact with liquid

If the handset has come into contact with liquid:

1. **Switch off the handset and remove the battery pack immediately.**
2. Allow the liquid to drain from the handset.
3. Pat all parts dry, then place the handset with the battery compartment open and the keypad facing down in a dry, warm place **for at least 72 hours (not in a microwave, oven etc.)**.
4. **Do not switch on the handset again until it is completely dry.**

When it has fully dried out, you will normally be able to use it again.

### Specifications

#### Recommended batteries

Technology: Lithium ion (Li-Ion):

Voltage: 3.7 V

Capacity: 830 mAh

Type: V30145-K1310-X444

The handset is supplied with the recommended battery. Only the original battery may be used.

Due to the constant progression in battery development, the list of recommended batteries in the FAQ section of the Gigaset Customer Care pages is regularly updated:

[www.gigaset.com/customer-care](http://www.gigaset.com/customer-care)

### Handset operating times/charging times

The operating time of your Gigaset depends on the capacity and age of the battery and the way it is used. (All times are maximum possible times and apply when the display backlight is switched off).

Standby time	approx. 200 hours (8 days)
Talktime	approx. 15 hours
Charging time	approx. 3.5 hours

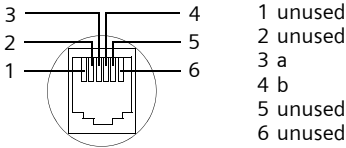
### Base station power consumption

In standby condition	approx. 1.3 W
During a call	approx. 1.5 W

### General specifications

DECT standard	is supported
GAP standard	is supported
No. of channels	60 duplex channels
Radio frequency range	1880–1900 MHz
Duplex method	Time multiplex, 10 ms frame length
Channel grid	1728 kHz
Bit rate	1152 kbit/s
Modulation	GFSK
Language code	32 kbit/s
Transmission power	10 mW, average power per channel
Range	up to 300 m outdoors, up to 50 m indoors
Base station power supply	230 V ~/50 Hz
Environmental conditions in operation	+5°C to +45°C, 20% to 75% relative humidity
Dialling mode	DTMF (touch tone dialling)/DP (dial pulsing)

## Pin connections on the telephone jack



## Writing and editing text

The following rules apply when writing text:

- ◆ Control the cursor with .
- ◆ Characters are inserted to the left of the cursor.
- ◆ Press the star key to show the table of special characters. Select the required character, press the display key **Insert** to insert the character at the cursor position.
- ◆ The first letter of the name of directory entries is automatically capitalised, followed by lower case letters.

## Writing an SMS/names

Press the relevant key several times to enter the corresponding letters/characters.

If you press and **hold** a key, the corresponding digit will be inserted.

## Standard characters

	1x	2x	3x	4x	5x	6x	7x	8x	9x	10x
1	1)	2)	1							
abc	a	b	c	2	ä	á	à	â	ã	ç
def	d	e	f	3	ë	é	è	ê		
ghi	g	h	i	4	ï	í	ì	î		
jkl	j	k	l	5						
mno	m	n	o	6	ö	ñ	ó	ò	ô	õ
pqrs	p	q	r	s	7	ß				
tuv	t	u	v	8	ü	ú	ù	û		
wxyz	w	x	y	z	9	ÿ	ý	æ	ø	å
0 +	.	,	?	!	0					

- 1) Space
- 2) Line break

### Setting upper/lower case or digits

Press the hash key **briefly** to switch from "Abc" mode to "123" and from "123" to "abc" and from "abc" to "Abc" (upper case: 1st letter upper case, all others lower case). Press the hash key **before** entering the letter.

You can see in the display whether upper case, lower case or digits is selected.

## Additional functions via the PC interface

You can connect your handset to your computer via Bluetooth (→ page 61) or via the supplied USB data cable. If you want to use the Bluetooth connection, your computer must be equipped with a suitable dongle. To transfer data via the USB port, you must install the driver software from the supplied CD before connecting the USB data cable (→ page 17).

To enable your handset to communicate with the PC the "Gigaset QuickSync" program must be installed on your PC (free to download at [www.gigaset.com/gigasetSL780](http://www.gigaset.com/gigasetSL780)).

### Please note

- ◆ If Bluetooth is activated and the supplied USB data cable is inserted in the connection socket (→ page 17), Bluetooth is automatically deactivated.
  - If a Bluetooth voice connection has already been established, Bluetooth is not deactivated until it is ended.
  - If a Bluetooth data connection has already been established, the response depends on the receiving device.
- ◆ Bluetooth is automatically reactivated when the USB data cable is removed.
- ◆ If Bluetooth is deactivated and the USB data cable is plugged in, then Bluetooth cannot be activated.

### Transferring data

You can synchronise your telephone directory with Outlook using the "Gigaset QuickSync" program (see the program's help functions).

During the transfer of data between handset and PC, you will see Data transfer in



progress on the display. During this time the keypad is disabled, and incoming calls will be ignored.

### Completing a firmware update

- ▶ Connect your phone to your PC using the **USB data cable** supplied (→ page 17).
- ▶ Start the "Gigaset QuickSync" program on your PC.
- ▶ Establish a connection to your handset.
- ▶ Select **[Settings]** → **[Device properties]** to open the **[Device]** tab
- ▶ Click on **[Firmware update]**

This launches the firmware update.

The data is initially loaded from the update server on the Internet. The amount of time this takes is dependent on the speed of your Internet connection.





The display on your phone is switched off and the message key  and the hands-free key  start flashing.

The update process can take up to 10 minutes (not including the download time).

**Do not interrupt the process or remove the USB data cable.** Once the update is complete, your phone will automatically restart.

### Procedure in case of an error

If your phone does not work properly following the update, repeat the update process. If you cannot establish a connection to the PC, proceed as follows:

- ▶ Remove the USB data cable from the telephone
- ▶ Remove the battery (→ page 13)
- ▶ Press and hold keys  and  simultaneously
- ▶ Replace the battery
- ▶ Reconnect the USB cable
- ▶ Release keys  and  simultaneously

Proceed as described under "**Completing a firmware update**".

# Accessories

---

## Gigaset handsets

Upgrade your Gigaset to a cordless PABX:

### Gigaset SL78H handset

- ◆ Illuminated graphical colour display (256k colours)
- ◆ Illuminated keypad
- ◆ Handsfree talking
- ◆ Polyphonic ring tones
- ◆ Directory for around 500 entries
- ◆ SMS (precondition: CLIP must be enabled)
- ◆ PC interface to manage directory entries
- ◆ Bluetooth
- ◆ Room monitor

[www.gigaset.com/gigasetSL78H](http://www.gigaset.com/gigasetSL78H)



### Gigaset S67H/S68H handset

- ◆ Illuminated graphical colour display (65k colours)
- ◆ Illuminated keypad
- ◆ Handsfree talking
- ◆ Polyphonic ring tones
- ◆ Directory for around 250 entries
- ◆ Picture CLIP
- ◆ SMS (precondition: CLIP must be enabled)
- ◆ Headset socket
- ◆ Bluetooth (Gigaset S68H only)
- ◆ Room monitor

[www.gigaset.com/gigasetS67H](http://www.gigaset.com/gigasetS67H)



## Accessories

### Gigaset SL37H handset

- ◆ Illuminated graphical colour display (65k colours)
- ◆ Illuminated keypad
- ◆ Handsfree talking
- ◆ Polyphonic ring tones
- ◆ Directory for around 250 entries
- ◆ Picture CLIP
- ◆ SMS (precondition: CLIP must be enabled)
- ◆ PC interface e.g. for managing directory entries, ring tones and screensavers
- ◆ Headset socket
- ◆ Bluetooth
- ◆ Room monitor
- ◆ Walky-talky function

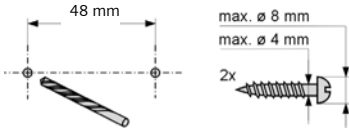
[www.gigaset.com/gigasetSL37H](http://www.gigaset.com/gigasetSL37H)





# Mounting the base station to the wall

---



# Index

---

## A

- Access code . . . . . 69
  - for a PABX . . . . . 69
- Access protection . . . . . 68
- Accessories . . . . . 78
- Acknowledge tones . . . . . 66
- Activating
  - advisory tones . . . . . 66
  - answering machine . . . . . 47
  - answering machine
    - (remote operation) . . . . . 51
  - appointment . . . . . 54
  - call acceptance . . . . . 64
  - handset . . . . . 22
  - internal listening in . . . . . 58
  - keypad lock . . . . . 22
  - muting ring tone . . . . . 45
  - room monitor . . . . . 60
  - two-way record . . . . . 49
- Advisory tones . . . . . 66
- Alarm clock . . . . . 56
- Alert tone . . . . . 66
- Anniversary . . . . . 35
  - deactivating . . . . . 35
  - missed . . . . . 55
  - saving in directory . . . . . 35
- Announcement (answering machine) . 48
- Anonymous calling . . . . . 30
- Answer only mode
  - (answering machine) . . . . . 47
- Answering machine . . . . . 47
  - activating/deactivating . . . . . 47
  - deleting messages . . . . . 49
  - playing back messages . . . . . 48
  - recording a personal announcement/
    - answer only . . . . . 47
  - remote operation . . . . . 51
  - scrolling back . . . . . 48
  - scrolling forward . . . . . 48
- Answering machine list . . . . . 36, 37
- Answering machine, see also
  - Network mailbox

- Appointment . . . . . 54
- Appointment/anniversary
  - display missed . . . . . 55
- Appointments
  - activating/deactivating . . . . . 55
  - deleting . . . . . 55
  - managing . . . . . 55
- Area code
  - setting own area code . . . . . 67
- Assigning a key . . . . . 63
- Assigning a number key . . . . . 63
- Authorisation . . . . . 72
- Automatic
  - call acceptance . . . . . 28, 64
  - network provider preselection . . . . 38

## B

- Base station
  - changing . . . . . 57
  - connecting . . . . . 10
  - connecting to PABX . . . . . 69
  - power consumption . . . . . 75
  - restoring factory settings . . . . . 68
  - setting . . . . . 68
  - setting up . . . . . 11
  - system PIN . . . . . 68
- Battery
  - charging . . . . . 1, 3, 14
  - display . . . . . 1, 3
  - icon . . . . . 1, 3, 17
  - inserting . . . . . 12
  - recommended batteries . . . . . 75
  - tone . . . . . 66
- Best base station . . . . . 57
- Birthday, see Anniversary
- Bluetooth
  - accepting a call . . . . . 28
  - activate . . . . . 61
  - changing device name . . . . . 62
  - deregistering devices . . . . . 62
  - list of known devices . . . . . 62
  - registering devices . . . . . 61
  - setting own area code . . . . . 67
  - transferring directory (vCard) . . . . 34

**C**

Calendar . . . . . 54

Call

- accepting . . . . . 28
- accepting (Bluetooth) . . . . . 28
- diverting (connecting) . . . . . 58
- ending . . . . . 28
- external . . . . . 28
- internal . . . . . 57
- making anonymous call . . . . . 30
- party listening in . . . . . 58
- picking up from answering
  - machine . . . . . 49
- transferring (connecting) . . . . . 59
- two-way record . . . . . 49

Call acceptance . . . . . 50, 64

Call divert . . . . . 31

Call duration . . . . . 28

Call screening during recording . . . . . 50

Call waiting

- accepting/rejecting . . . . . 30
- activating/deactivating . . . . . 30
- external call . . . . . 30
- internal call . . . . . 58

Call-by-call . . . . . 32

Call-by-call list key . . . . . 1

Call-by-call numbers . . . . . 32, 38

Calling

- anonymously . . . . . 30
- external . . . . . 28
- internal . . . . . 57

Calling Line Identification . . . . . 28

cancel once . . . . . 30

Calls list . . . . . 36

Cancelling preselection . . . . . 39

Care of the telephone . . . . . 75

CD, see Call divert

Changing

- destination number . . . . . 60
- device name (Bluetooth) . . . . . 62
- dialling mode . . . . . 69
- display language . . . . . 64
- earpiece volume . . . . . 65
- handsfree volume . . . . . 65
- internal number of a handset . . . . . 59
- name of a handset . . . . . 59

- pauses . . . . . 69
- ring tone . . . . . 65
- system PIN . . . . . 68

Character set . . . . . 41, 42, 76

Charge status display . . . . . 1, 3

CLI, CLIP . . . . . 28

CLIP picture . . . . . 29

CLIR . . . . . 30

Conference (internal) . . . . . 58

Confirmation tone . . . . . 66

Connecting, base station to PABX. . . . . 69

Consultation call . . . . . 31

Consultation call (internal) . . . . . 58

Control key . . . . . 1, 19

Correcting incorrect entries . . . . . 20

Customer Care . . . . . 71

**D**

Deactivating

- advisory tones . . . . . 66
- answering machine . . . . . 47
- appointment . . . . . 54
- call acceptance . . . . . 64
- handset . . . . . 22
- internal listening in . . . . . 58
- keypad lock . . . . . 22
- muting ring tone . . . . . 45
- room monitor . . . . . 60
- two-way record . . . . . 49

Delete key . . . . . 20

Deleting

- announcement for answering
  - machine . . . . . 48
- characters . . . . . 20
- message . . . . . 49

Deregistering (handset) . . . . . 57

Deregistering devices (Bluetooth) . . . . . 62

Destination number (room monitor) . . . . . 60

Dial pulsing . . . . . 69

Dialling

- call-by-call list . . . . . 33
- directory . . . . . 33
- mode . . . . . 69
- pause . . . . . 70
- quick dial . . . . . 63
- using quick dial . . . . . 34

- Directory . . . . . 32
  - copying number from text. . . . . 35
  - managing entries . . . . . 33
  - opening . . . . . 19
  - order of entries. . . . . 33
  - saving anniversary . . . . . 35
  - saving entry . . . . . 32
  - saving the sender's number (SMS). . 42
  - sending entry/list to handset. . . . 34
  - transferring a vCard (Bluetooth) . . 34
  - using to enter numbers. . . . . 35
- Display
  - backlight . . . . . 64
  - changing display language . . . . . 64
  - in idle status. . . . . 21
  - memory (directory/call-by-call) . . . 34
  - missed appointments/anniversaries. 55
  - network mailbox message. . . . . 52
  - number (CLI/CLIP). . . . . 28
  - screensaver . . . . . 64
  - setting . . . . . 64
- Display keys . . . . . 1, 20
  - assigning . . . . . 63
- Disposal . . . . . 74
- DP (dial pulsing) . . . . . 69
- Draft message list (SMS). . . . . 40
- E**
- Earpiece mode. . . . . 29
- Earpiece volume . . . . . 65
- ECO DECT . . . . . 53
- Eco mode . . . . . 53
- Eco mode+ . . . . . 53
- E-mail address
  - copying from the directory . . . . . 35
- End call key . . . . . 1, 28
- Ending, call . . . . . 28
- Entry
  - saving, changing (preselection). . . . 39
  - selecting from directory . . . . . 33
- Environment . . . . . 74
- Error tone . . . . . 66
- External call
  - call waiting. . . . . 30
  - diverting to ans. mach. . . . . 49
- F**
- Fast access
  - answering machine . . . . . 50
  - network mailbox . . . . . 52
- Firmware Update . . . . . 77
- G**
- General troubleshooting . . . . . 71
- Group call. . . . . 57
- Guarantee Certificate . . . . . 73
- H**
- Handset
  - activating/deactivating. . . . . 22
  - advisory tones. . . . . 66
  - changing internal number . . . . . 59
  - changing name . . . . . 59
  - changing the number . . . . . 59
  - changing to a different base station 57
  - changing to best reception. . . . . 57
  - contact with liquid . . . . . 75
  - de-registering . . . . . 56, 57
  - display backlight . . . . . 64
  - display language . . . . . 64
  - diverting a call. . . . . 58
  - earpiece volume . . . . . 65
  - handsfree volume . . . . . 65
  - idle status . . . . . 21
  - list . . . . . 19
  - locating. . . . . 57
  - muting . . . . . 29
  - paging . . . . . 57
  - registering. . . . . 56
  - registering to a different
    - base station . . . . . 57
  - restoring to factory settings . . . . . 67
  - screensaver . . . . . 64
  - setting . . . . . 63
  - setting up . . . . . 12
  - using room monitor. . . . . 59
  - using several . . . . . 56
- Handset operating time
  - in room monitor mode. . . . . 60
- Handsfree
  - key . . . . . 1
  - talking. . . . . 29

## Index

Hash key . . . . . 1, 22  
Headset (Bluetooth) . . . . . 61  
Hearing aids . . . . . 7  
Help . . . . . 71

## I

### Icon

alarm clock . . . . . 56  
answering machine . . . . . 47, 50  
battery . . . . . 17  
display . . . . . 20  
for new messages . . . . . 37  
keypad lock . . . . . 22  
new message . . . . . 48  
new SMS . . . . . 41  
ring tone . . . . . 66

Idle status (display) . . . . . 21

Idle status, returning to . . . . . 21

Incoming message list (SMS) . . . . . 41

Incorrect input (correction) . . . . . 20

Installing, base station . . . . . 11

### Internal

conference . . . . . 58  
consulting . . . . . 58  
listening in . . . . . 58  
making calls . . . . . 57

Internal call . . . . . 57

call waiting . . . . . 58

## K

Key 1 (fast access) . . . . . 1, 50

Keypad lock . . . . . 22

### Keys

call-by-call list . . . . . 1  
control key . . . . . 1, 19  
delete key . . . . . 20  
display keys . . . . . 1, 20  
end call key . . . . . 1, 28  
fast access . . . . . 1, 50  
handsfree key . . . . . 1  
hash key . . . . . 1, 22  
message key . . . . . 1  
on/off key . . . . . 1  
quick dial . . . . . 34  
recall key . . . . . 1  
star key . . . . . 1  
talk key . . . . . 1, 28

## L

Language, display . . . . . 64

Last number redial . . . . . 36

Linking, see SMS

Liquid . . . . . 75

List . . . . . 32

answering machine . . . . . 36, 37

call-by-call list . . . . . 32

calls list . . . . . 36

handsets . . . . . 19

known devices (Bluetooth) . . . . . 62

missed calls . . . . . 36

network mailbox . . . . . 36

SMS draft message list . . . . . 40

SMS incoming message list . . . . . 41

SMS list . . . . . 36

Listening in to a call . . . . . 58

Locating, handset . . . . . 57

### Lock

activating/deactivating keypad lock. 22

## M

Mailbox ID, see SMS

Mailboxes, see SMS

Mains adapter . . . . . 7

### Making calls

accepting a call . . . . . 28

cost-effective calls . . . . . 38

external . . . . . 28

internal . . . . . 57

Manual last number redial . . . . . 36

Medical appliances . . . . . 7

### Memory

directory/call-by-call . . . . . 34

### Menu

end tone . . . . . 66

opening . . . . . 19

overview . . . . . 25

prompting . . . . . 21

Message key . . . . . 1

open list . . . . . 41

opening lists . . . . . 37

Messages . . . . . 47

copy the number to the directory . . 49

deleting . . . . . 49

marking as "new" . . . . . 49

new message icon . . . . . 48

playing back . . . . . 48

- Microphone . . . . . 1
- Missed
  - anniversary . . . . . 55
  - appointment . . . . . 55
  - calls . . . . . 36
- Music on hold . . . . . 68
- Muting
  - first ring . . . . . 45
  - handset . . . . . 29
- N**
- Name of a handset . . . . . 59
- Network mailbox . . . . . 52
- Network provider preselection,
  - automatic . . . . . 38
- Network services . . . . . 30
- Notification by SMS . . . . . 43
- Number
  - as destination for room monitor . . . 60
  - copying from an SMS text . . . . . 42
  - copying from directory . . . . . 35
  - copying to directory . . . . . 35
  - displaying caller's number (CLIP) . . 28
  - entering with directory . . . . . 35
  - saving in the directory . . . . . 32
- O**
- On/Off key . . . . . 1
- Order in directory . . . . . 33
- P**
- PABX
  - connecting base station . . . . . 69
  - pauses . . . . . 69
  - saving access code . . . . . 69
  - setting dialling mode . . . . . 69
  - setting recall . . . . . 69
  - SMS . . . . . 45
  - switching to touch tone dialling . . 70
- Pack contents . . . . . 9
- Paging . . . . . 57
- Paging key . . . . . 2
- Pause
  - after access code . . . . . 70
  - after line seizure . . . . . 69
  - after recall key . . . . . 70
- PC Interface . . . . . 77
- PIN change
  - system PIN . . . . . 68
- Pin connections . . . . . 76
- Playing back
  - announcement (answering machine) . . . . . 48
  - message (answering machine) . . . 48
- Power consumption (base station) . . . 75
- Preselection . . . . . 38
  - cancelling . . . . . 39
- Protecting the phone against access. . 68
- Q**
- Questions and answers . . . . . 71
- Quick dial . . . . . 32, 63
- R**
- Range . . . . . 11
- Recall . . . . . 69
- Recall key . . . . . 1, 70
- Reception booster, see Repeater
- Recording
  - two-way record . . . . . 49
- Recording quality . . . . . 50
- Recording time . . . . . 50
- Redirect, see Call divert
- Registering (handset) . . . . . 56
- Registering devices (Bluetooth) . . . . 61
- Registration key . . . . . 2
- Reminder call . . . . . 35
- Remote operation . . . . . 51
- Repeater . . . . . 68
- Ring tone
  - changing . . . . . 65
  - muting . . . . . 45
  - setting volume . . . . . 65
- Ringback . . . . . 30
- Room monitor . . . . . 59
- S**
- Saving (access code) . . . . . 69
- Screensaver . . . . . 64
- Searching in directory . . . . . 33
- Sending
  - directory entry to handset . . . . . 34
- Sensitivity (room monitor) . . . . . 60
- Service . . . . . 71
- Setting
  - date . . . . . 15, 27
  - screensaver . . . . . 64
  - time . . . . . 15, 27

## Index

Setting up  
  handset . . . . . 12

Signal tone, see Advisory tones

SMS . . . . . 40

  active send service centre . . . . . 44

  changing mailbox . . . . . 44

  deleting . . . . . 41, 42

  diverting . . . . . 42

  draft message list . . . . . 40

  incoming message list . . . . . 41

  linked . . . . . 40

  list . . . . . 36

  mailbox ID . . . . . 43

  mailboxes . . . . . 43

  notification by SMS . . . . . 43

  PIN protection . . . . . 44

  reading . . . . . 41, 42

  receiving . . . . . 41

  replying to or diverting . . . . . 42

  saving number . . . . . 42

  self help with error messages . . . . . 46

  sending to a personal mailbox . . . . . 44

  troubleshooting . . . . . 46

  vCard . . . . . 43

  writing . . . . . 40, 76

SMS centre

  changing number . . . . . 45

  setting . . . . . 44

SMS to PABXs . . . . . 45

Snooze mode . . . . . 56

Sound, see Ring tone

Special functions . . . . . 69

Specifications . . . . . 75

Star key . . . . . 1

System settings . . . . . 68

**T**

Talk key . . . . . 1, 28

Telephone jack, pin connections . . . . . 76

Text message, see SMS

Toggling . . . . . 31

Touch tone dialling . . . . . 69, 70

Troubleshooting (SMS) . . . . . 46

## U

Unknown . . . . . 29

Unknown caller . . . . . 29

Update . . . . . 77

USB connection . . . . . 17

## V

vCard (SMS) . . . . . 43

Viewing the network mailbox

  message . . . . . 52

VIP (directory entry) . . . . . 32

Volume

  earpiece . . . . . 65

  earpiece volume . . . . . 65

  handset handsfree volume . . . . . 65

  loudspeaker . . . . . 65

  ring tone . . . . . 65

  setting . . . . . 65

## W

Warning tone, see Advisory tones

Writing (SMS) . . . . . 40

Writing and editing text . . . . . 76





